
INSTRUCTION MANUAL

GUT 08

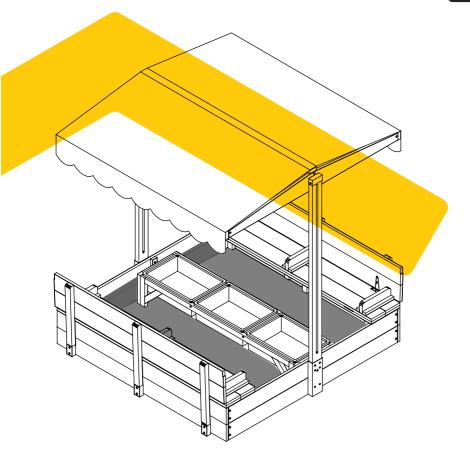



- Firmly secure all bolts, screws and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Fasten screws loosely during initial assembly. Do not fully tighten screws until the item is completely assembled.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- Be aware that moving parts can injure, crush and cut.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

TOOLS REQUIRED









PHILLIPS SCREWDRIVER

DRILL (RECOMMENDED)

2PERSON ASSEMBLY


APPROXIMATELY 45MIN. ASSEMBLY

HARDWARE













PARTS



















PARTS





















Attach three part J seat dividers to a part C bench seat with 6xP3 screws.


Repeat on other bench seat.

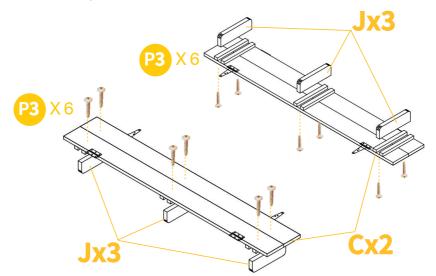


Attach a part B backrest to a part C bench with 6xP5 screws, three screws per hinge. Repeat on other bench seat.

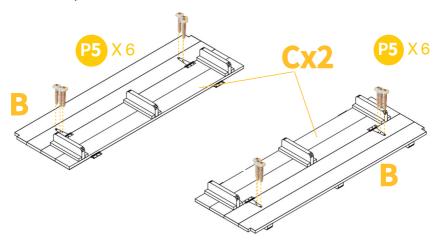


Attach part D and part E together by 8xP3 screws on each side.

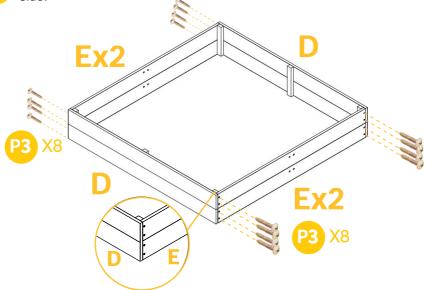


Insert Part F to Part N, then screw from outside by 3xP4. Screw part F to Part E by 4xP2 bolts.

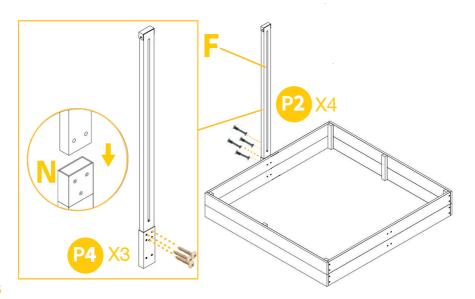


Repeat on other sandbox side.

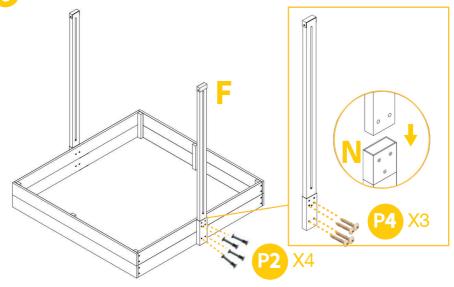


Screw Part G to Part E from inside by 4xP4 screws on each side. Put the sand screen inside of the sandbox.

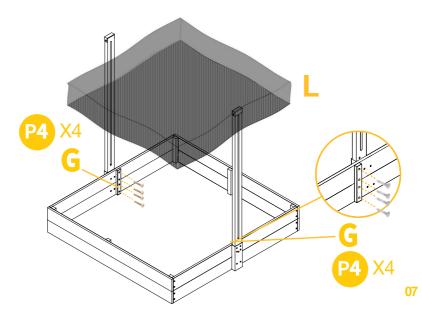


Attach two part A bench frames with 8xP3 screws.

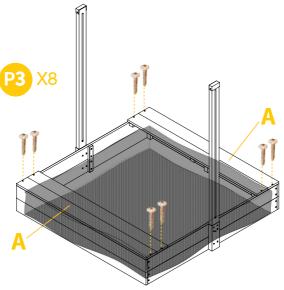

Attach two assembled benches with 12xP5 screws, three screws per hinge.

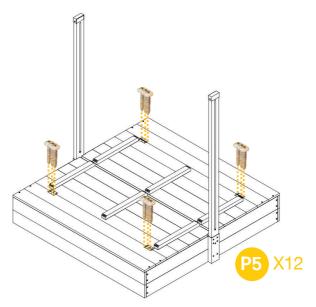


Attach three part K stopper with 6xP3 screws, two screws per stopper.

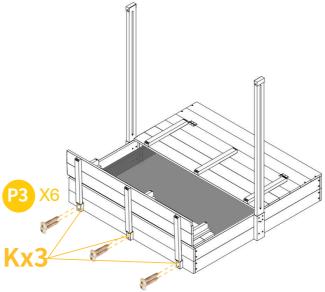


Repeat attach the part K on the other side.

Attach two part I to part F canopy support by 1xP1 each side.

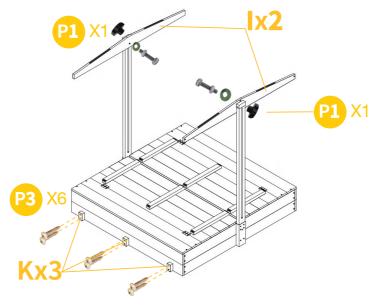


09


Attach three part H to part I with 12xP3 screws.

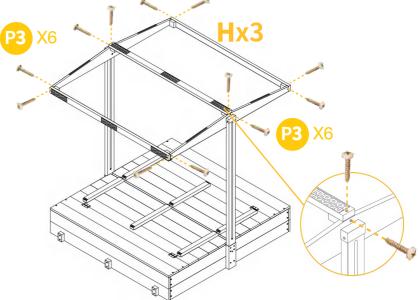


Screw Part Q to Part O by 4xP3, Then Screw Part P & O to complete the assemble of storage frame by 8xP6.

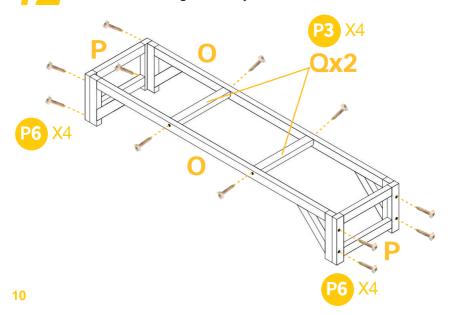

13 Put in the storage bins.

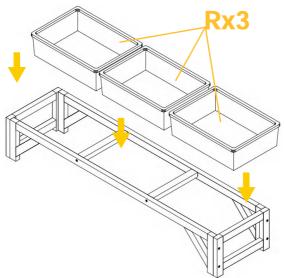


Put the storage bins in the sandbox.

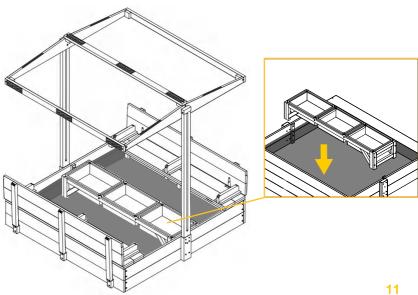

Stick the canopy by the magic sticks.

P.S. The storage bins can put on the side of the sandbox too.

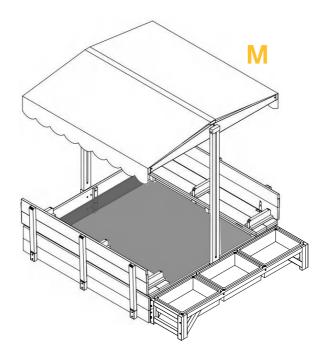



WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury,property damage or loss,whether direct,indirect,or incidental,resulting from the incorrect attachment,improper use,inadequate miantenance,or neglect of this product.