


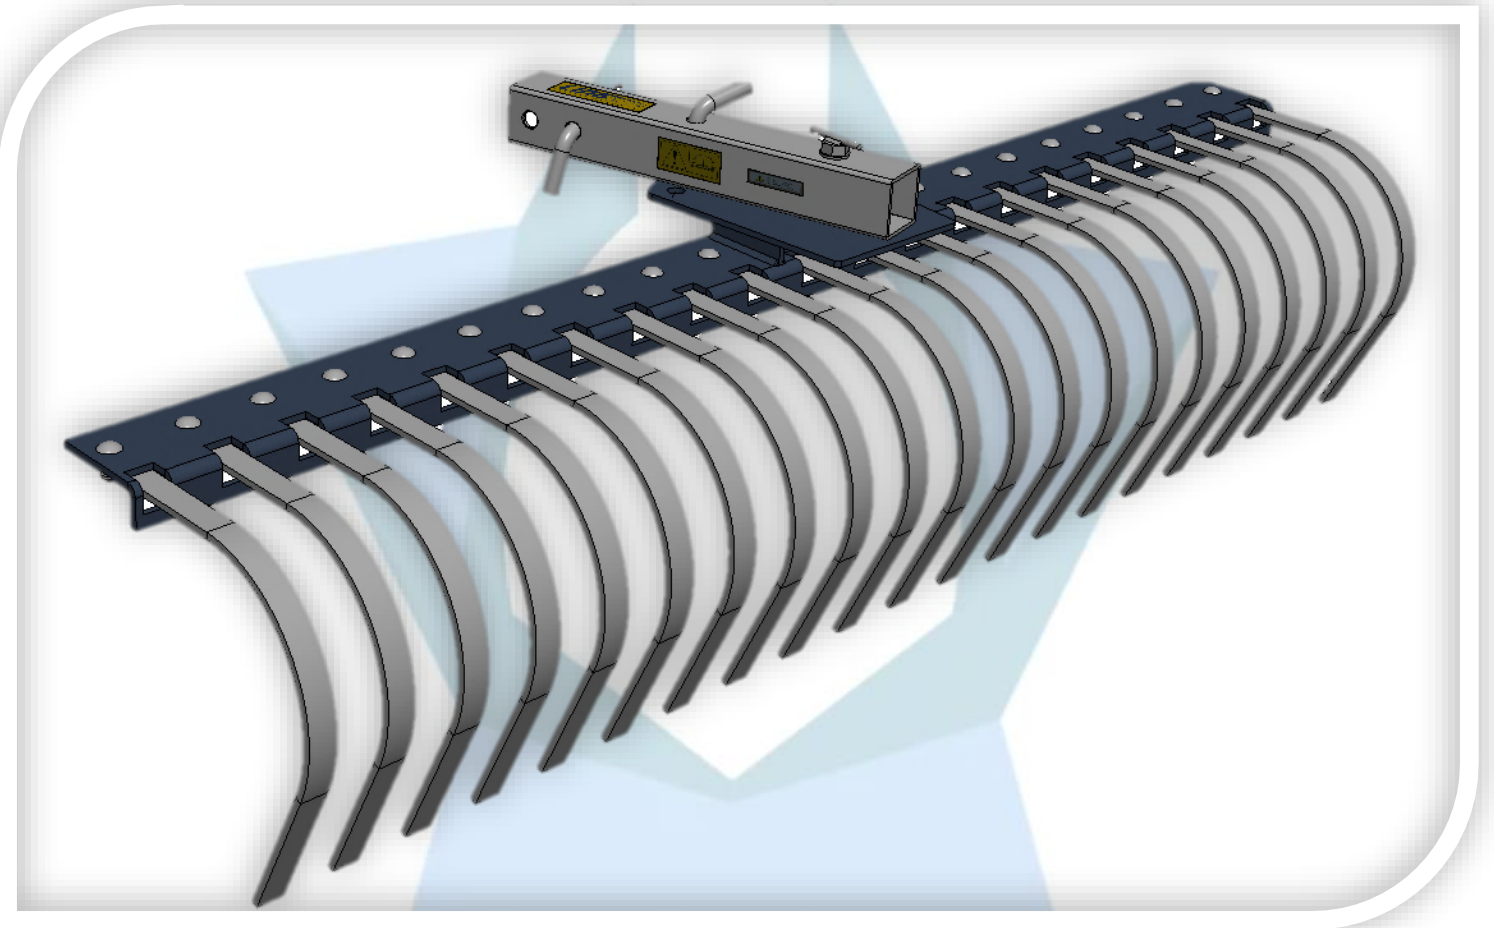

60" LANDSCAPE RAKE ASSEMBLY
MODEL NUMBER – LRA/A001/0023/E
UNIPART ITEM CODE – 53LRAA001

Assembly Manual:-
A00-RD-AM-53LRAA001-E-00



SCAN ME

A00-RD-AR-53LRAA001-E-00


DATE: 05-SEP-2023



Caution

Please Read and Follow all instructions before installation and operation of
60" LANDSCAPE RAKE Assembly

CAUTION

- Read and follow ATV/UTV and implement manual instructions. 
- Attachments change machine handling characteristics. Slow down. Do not exceed a safe travel speed when implement is attached.
- Add ballast on the front frame to keep at least 20% of machine weight on front wheels to maintain steering control.
- Never carry passengers on power unit or implement.
- Keep hands, arms and feet away from frame and implement components.
- Use 2 people when attaching and unhooking implement.
- Do not drive across steep slopes to prevent tipping over.
- Stop power unit, remove ignition key and wait for all moving parts to stop before adjusting or repairing.
- Always use retainers on mounting pins to prevent unexpected separation.
- Do not exceed engine power capacity. Stop to allow engine to cool if overheating. Adjust implement to reduce load before resuming work.















29DCLA010

DATE: 05-SEP-2023



LIST OF KIT ITEMS (53LRAA001)
(All Dimensions are in Inch)


S. NO.	DESCRIPTION	ITEM NUMBER	ORDER ITEM NUMBER	QTY	Images
1	SQUARE TUBE	30USPA847S	30USPA847S	1	
2	FRAME L60"	53MISA020S	53MISA020S	1	
3	TINE 1/4"x1"	53USPA002S	53USPA002S	21+1*	
4.1	CARRIAGE BOLT 3/8"-16 L1"	22SNBA506S	22KITA465	21+1*	
4.2	NYLOCK NUT 3/8"-16	22NYTA532S		21+1*	
4.3	WASHER 3/8"	22FLWA587S		21+1*	
4.4	BOLT ASSY 5/8"-11 L 3-3/4"	22HHBA580S		1	
4.5	WASHER 5/8"	22FLWA084S		1	
4.6	Nylock Nut 5/8"-11	22NYTA040S		1	
4.7	SPLIT PIN 5/32"	22SPL528S		1	
5.1	BENT PIN 5/8"x3"	18BHPA094S	22KITA428	2	
5.2	R-CLIP D 1/8"	22RCIA069S		2	

Note:- * Marked additional qty.1 will be separately packed as spare.

DATE: 05-SEP-2023



EXPLODED VIEW – 60" LANDSCAPE RAKE ASSEMBLY (53LRAA001)

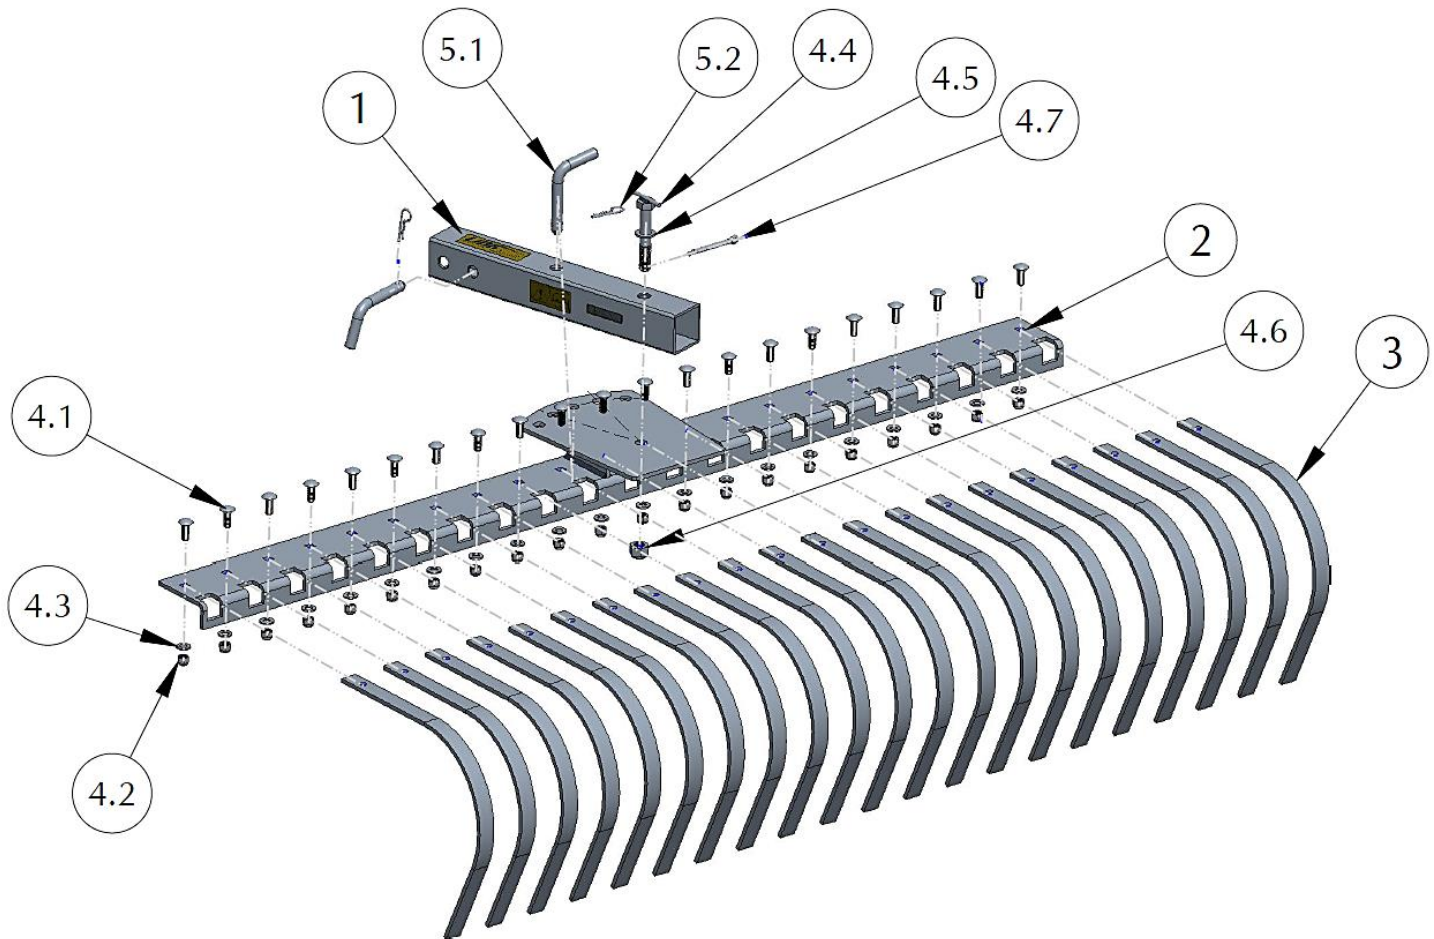

Assembly Instructions:


1. Secure (#3) TINE 1/4"x1" to (#2) FRAME L60" with (#4.1) CARRIAGE BOLT 3/8"-16 L 1", (#4.3) WASHER 3/8", (#4.2) NYLOCK NUT 3/8"-16.
2. Secure (#1) SQUARE TUBE to (#2) FRAME L60" with (#4.4) BOLT ASSY 5/8"-11 L 3-3/4", (#4.5) WASHER 5/8", (#4.6) Nylock Nut 5/8"-11 and (#4.7) SPLIT PIN 5/32".
3. Insert (#5.1) BENT PIN 5/8"x3" and lock it with (#5.2) R-CLIP D 1/8" in the desired location, for angle adjustment of Landscape Rake as shown in the following images.
4. Use (#5.1) BENT PIN 5/8"x3" and lock it with (#5.2) R-CLIP D 1/8" to attach the 60" LANDSCAPE RAKE ASSEMBLY with the TOOL BAR ASSEMBLY of the ATV/UTV.

NOTE:- Before using the product in the field , please ensure each time that there are no loose parts. Tighten them properly.

DATE: 05-SEP-2023


Toolbar to be attached.

TOP VIEW

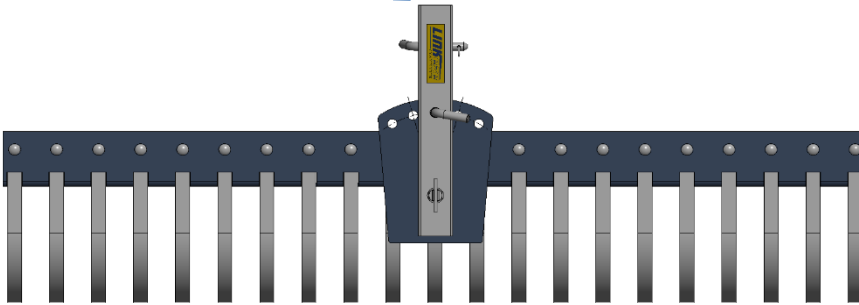

Standard Straight Adjustment for general clean up, levelling, loosening up of soil and removing stones and debris.

Angle adjustment (15°-30°) in left or right directions for moving material in one side.

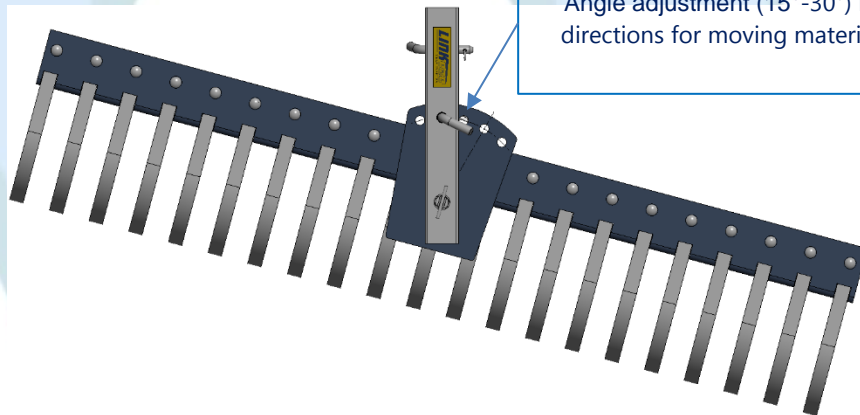

This method is used to clear trails, move material back onto driveway from edges, for crowning gravel driveways.



Uniparts USA Ltd.
1431, Marvin Griffin Road,
Augusta, GA-30906, USA
Phone: 1-706-868-2388
Fax: 1-706-868-4168
technicalsupport@usa.unipartsgroup.com

