




## WHAT SIZE HITCH DO I NEED?

### HOW TO FIND THE PERFECT BULLETPROOF HITCH FOR YOUR VEHICLE

Figure A (below)

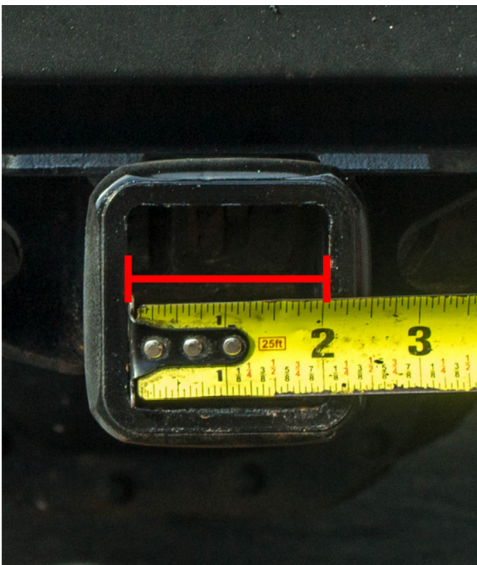

To find out which BulletProof Hitch™ will work best for your vehicle, please follow the steps below:

First, measure the opening of the receiver tube (**Figure A**) to determine what size shank your vehicle requires. It will be 2", 2.5" or 3" (Please note that 3" is applicable to some 2017 & newer Ford Super Duty trucks and some RVs/Semis only)

Next, park your vehicle on level ground and measure from the ground to the bottom inside of the receiver tube (**Figure B**), then take that measurement and apply it to the information below. *As you can see in the example, this truck would require our 6" drop.*

Receiver height as measured:

**Under 13" requires a hitch in the rise position, call us to help you**

**13"-15" requires 2" drop/rise hitch**

**16"-18" requires 4" drop/rise hitch**

**19"-21" requires 6" drop/rise hitch**

**22"-24" requires 8" drop/rise hitch**


**25"-27" requires 10" drop/rise hitch**

**28"-30" requires 12" drop/rise hitch**

**31"-33" requires 14" drop/rise hitch**

**34"-36" requires 16" drop/rise hitch**

Figure B (below)

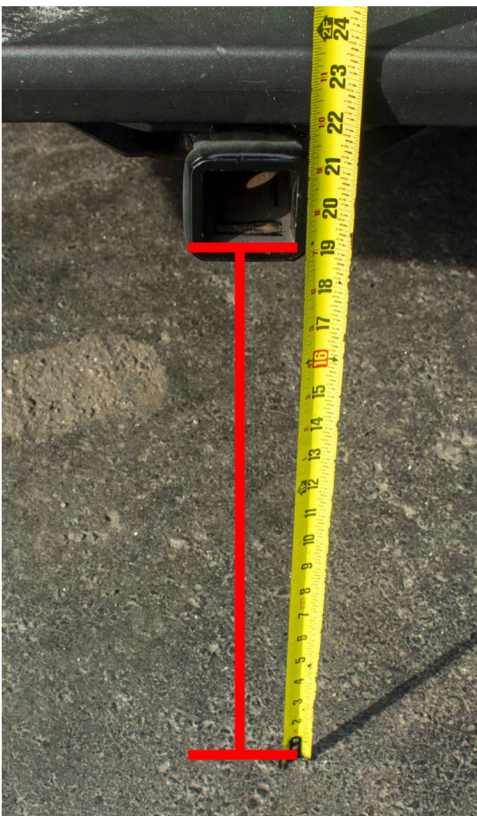

FAQs:

***I fall between two measurements, what should I order?***

Call us for help!

***I tow heavy trailers (in excess of 8,000 pounds), does this impact what hitch I should order?***

Please call us to discuss your exact measurements due to the possible squatting that may occur when your trailer is loaded.

***My truck has helper air bags/air suspension, does this impact what hitch I need?***

Please call us to discuss your measurements and what you are towing.

If you are unsure or have any questions, please contact us at **941-251-8110 or 844-894-6448** and we will be happy to help you select the correct hitch for your vehicle and towing needs!