INSTRUCTION MANUAL

AIR92





- Firmly secure all bolts, screws and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Fasten screws loosely during initial assembly. Do not fully tighten screws until the item is completely assembled.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- Be aware that moving parts can injure, crush and cut.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

TOOLS REQUIRED









PHILLIPS SCREWDRIVER

DRILL (RECOMMENDED)

2PERSON ASSEMBLY

APPROXIMATELY 30MIN. ASSEMBLY

HARDWERE











PARTS















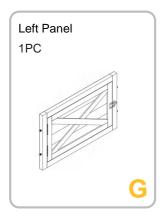

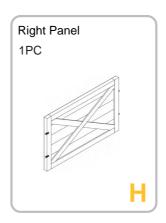




PARTS






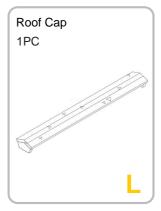




Attach the bottom part.


Attach the bottom legs Part A & B by 8xP2 screws.

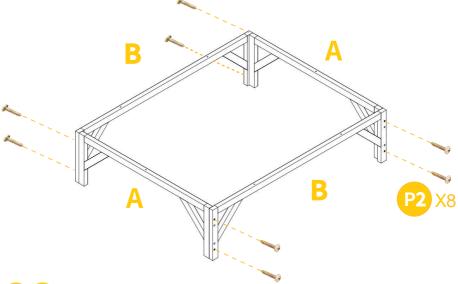


Attach the layer 2xPart C to the bottom frame by 8xP3 screws.

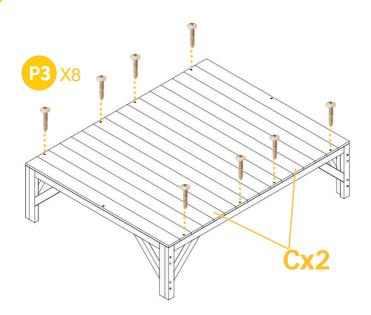


Attach the curtain Part E to front panel Part D from inside by 2xP4 screws.

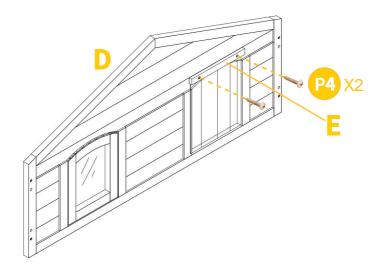


Attach the Part D,F,G,H by 8xP2 screws.

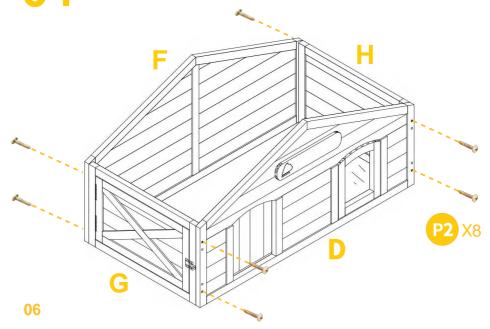


Attach the upper part to bottom part by 4xP1 screws.

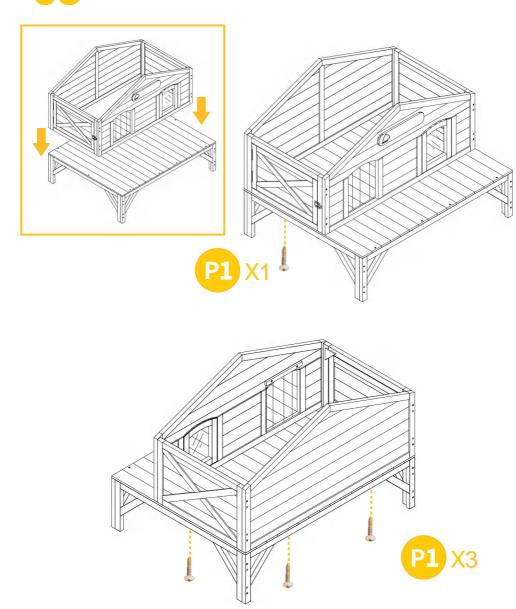


Connect the roof Part I & J with connecting bar Part K by 8xP3 screws each.
(Notice do not confuse the position of Part I & Part J)

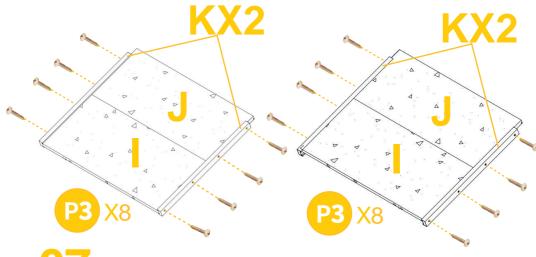

Attach the roof part to house by 6xP5 screws each side.

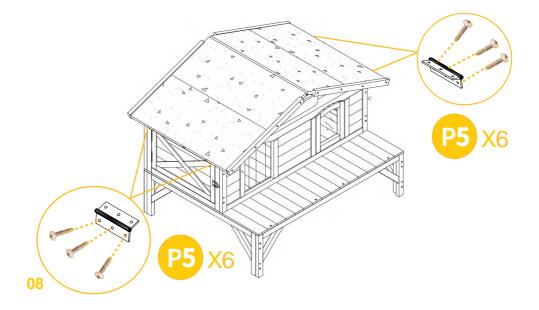

Attach the roof cap Part L to the roof by 2xP4 screws.

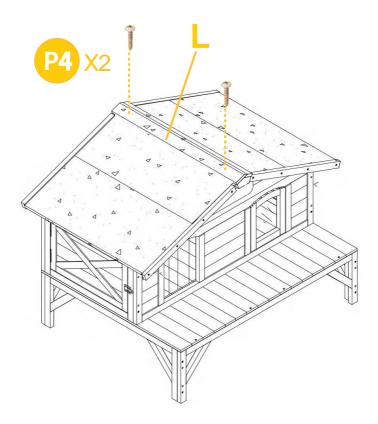

Finish



WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury,property damage or loss,whether direct,indirect,or incidental,resulting from the incorrect attachment,improper use,inadequate miantenance,or neglect of this product.