
Installation Instructions



CAUTION: Risk of personal injury or product damage. Handle with care. Product can break, chip or cause injury if handled carelessly. Get help lifting the lavatory.

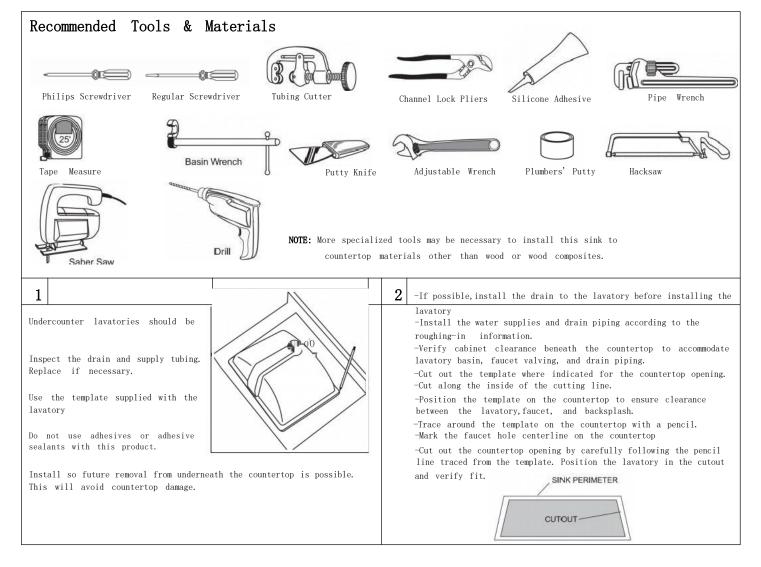

FOR MARBLE/STONE COUNTERTOPS FOR WOOD COUNTERTOPS -Position the countertop upside down on foam padding to protect -Mark and pre-drill the wood screw holes at the locations shown on the template. the surface. -Mark and drill 3/8" holes 5/8"(1.6 cm) deep at the locations -Waterproof any exposed areas of wood. shown on the template. -Use a setting tool and hammer to secure the anchors. Setting Tool Anchor Clip Marble Drill 1/8 dia.x 3/8 deep Padding #10 Wood Screw 5 FOR ALL INSTALLATIONS -If the countertop has not been installed, install it at this time -Drill the faucet holes according to the faucet installation instructions. -Install the faucet and drain according to the manufacturer's instructions. -Apply a continuous bead of quality sealant to the top surface of the lavatory rim where it will contact the countertop. -For Marble/Stone Countertops: Install the lavatory to the countertop with the clamps and anchor screws provided. **-For Wood Countertops**: Install the lavatory to the countertop with the clamps and wood screws provided. -For Other Countertop Materials: Refer to the countertop manufacturer's instructions for recommended fasteners.

IMPORTANT! Risk of product damage. Overtightening the nuts may cause irreparable damage to the lavatory.

- -Position the lavatory squarely under the cutout before tightening the clamps.
- -Draw the lavatory rim up against the countertop until it is snug. Do not overtighten.
- -Immediately wipe away any excess sealant and fill any voids as needed.
- -Allow the sealant to set for 30 minutes before proceeding.
- -Connect and tighten the trap to the drain, and complete the water supply connections to the faucet according to the instructions packed with the faucet.
- -Run water into the lavatory and check for leaks.