


1

Lift chair back from rest of frame.

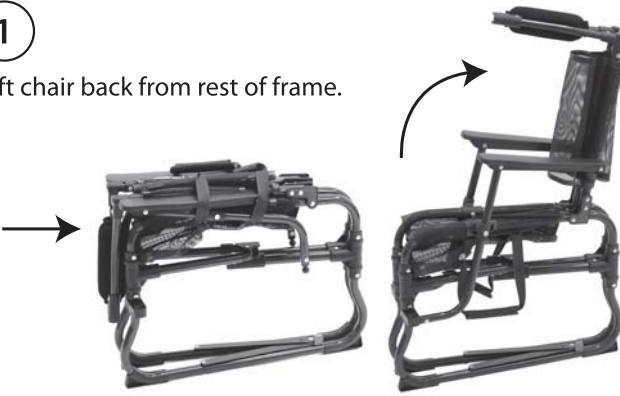

2

Grip from left and right side of seat frame, and pull apart.



3

Push seat back center bar in at the joint until it locks.



4

Push front and back frame support joints until they lock.



5

Shift pad of seat back frame top over the joint for comfort.



\*To Close see otherside.



CAPTURE THE SPIRIT

Philadelphia, PA  
1.800.866.8520  
riobrand.com



Made in China exclusively for RIO Gear