

Thank you for purchasing the Wondurdog Bathtub Spout **Dog Wash Kit**



Wondurdog gives back. When you buy a Wondurdog product we donate 10% of proceeds to ThePetFund.com The Pet Fund saves lives by helping pets and owners who can't afford veterinarian care get the care they need.

Included in the dog wash kit:







for shower pipe

Bathtub spout diverter





Splash jacket

Drawstring storage bag

6 foot hose


Set-up Instructions:

• See reverse side **OR** view a short instructional set-up video at wondurdog.com.

 If you have questions about installation, please contact us at support@wondurdog.com. We're here to help. REALLY!

Features of the Shower brush head:

- To temporarily stop water flow to brush head, move switch to OFF position.*
- The brush head has two key positions:
 - For more control on the direction of water and to prevent splashing, keep rubber shield in DOWN position.
 - For deep cleaning and to remove dirt and debris, flip the rubber shield to UP position.

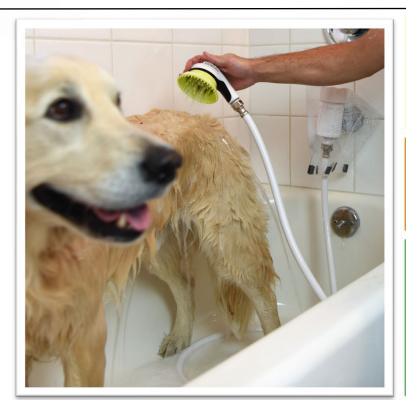

*IMPORTANT: If you leave the water on and the shower brush in the OFF position for an extended period of time, it can cause breakdown such as water leak, head burst, and water flowing backwards.

ALWAYS turn the water off when finished using the product and leave the brush in the ON position.

Questions/Comments?

E-mail us at support@wondurdog.com We'd love to hear from you!

We invite you to post pictures of your muddy puppy and/or your clean Wondurdog pup on social media



facebook.com/wondurdog



instagram.com/wondurdog



Bathtub Spout Dog Wash Instructions

View a short instructional video at www.wondurdog.com or here:





Questions? Contact us at support@wondurdog.com

Indoor Installation

1. Remove existing showerhead with pliers or by hand (righty-tighty; leftyloosey).



2. Install shut off valve on vour shower pipe. Ensure washer is installed. Tighten by hand. Do not over tighten! Over tightening will

cause leaks.



3. Screw showerhead onto the front of shut off valve. Tighten firmly by hand.



4. Keep the valve lever in the ON position (180° or parallel to pipe) to operate your shower normally. This valve stays installed.

5. When it's time for a dog bath, turn the valve lever to the OFF position (90° or perpendicular to pipe) to stop the flow of water to vour shower head. THIS MUST BE DONE for the kit to function properly.



6. Unscrew the top of the tub spout diverter so that it is in two pieces - top and bottom. The top is the smaller piece.



7. Tilt and slide the bottom of the tub spout diverter over your tub spout.



8. Lift the spout diverter all the way up to your tub spout so that the black rubber washer makes firm contact with the bottom of your spout.



Side view:

Top view:



9. Screw top of tub spout diverter onto bottom piece. Firmly tighten over your tub spout's tee. (The tee diverts water to your shower head.) **DO NOT INSTALL HOSE YET.**



10. Water should flow through outtake with no water spilling out the back. If water spills from back reposition and / or reinstall.



11 If water flows with NO back spill, turn water OFF and screw the larger end of the hose onto the outtake of the tub spout diverter.



the smaller end of the hose onto the shower brush head. Tighten firmly by hand.

12. Screw



13. Place the splash jacket over the tub spout diverter and hose. The magnets should be on the inside of the jacket, facing one another.



14. Connect the four magnet pairs with the hose between two of the magnet pairs.



That's it! You're ready for bath time!

Indoor **Operation**

1. Slide switch on shower brush head into the ON position.

2. Turn the shut off valve to the OFF position (90° or perpendicular to pipe).

3. Ensure splash jacket magnets are securely connected to reduce water spray from tub spout and tub spout diverter.

Note When the brush head is in the OFF position more water will spray temperature from your tub spout and tub spout diverter.

4. Turn on water. Adjust to and begin bathing.

5. When finished, turn the valve to the ON position. desired water (180° or parallel to pipe). Shower is ready for normal use. Store kit components in drawstring bag.

Outdoor Installation

1. Screw the large end of the white hose onto the end of vour garden hose.



shower brush head onto smaller end of the white hose.

2. Screw



3. Turn on water from your spigot. You are ready to wash!

Note Leaving the water flow on and the brush head in the OFF position for an extended amount of time will degrade the brush head and lead to leaks or damage.