



# Deluxe Bathtub Spout Dog Wash Instructions

View a short instructional video at [www.wondurdog.com](http://www.wondurdog.com)



Questions? Contact us at [support@wondurdog.com](mailto:support@wondurdog.com)

## Indoor Installation


1. Remove existing showerhead with pliers or by hand (righty-tighty; lefty-loosey).



2. Install shut off valve on your shower pipe. Ensure washer is installed. Tighten by hand. **Do not over tighten!** Over tightening will cause leaks.



3. Screw showerhead onto the front of shut off valve. Tighten firmly by hand.

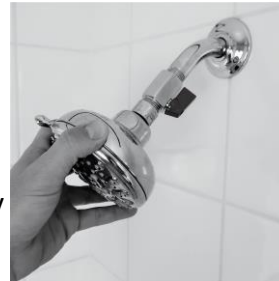

4. Keep the valve lever in the ON position (180° or parallel to pipe) to operate your shower normally. **This valve stays installed.**

5. When it's time for a dog bath, turn the valve lever to the OFF position (90° or perpendicular to pipe) to stop the flow of water to your shower head. **THIS MUST BE DONE for the kit to function properly.**



6. Unscrew the top of the tub spout diverter so that it is in two pieces - top and bottom. The top is the smaller piece.



7. Tilt and slide the bottom of the tub spout diverter over your tub spout.



8. Lift the spout diverter all the way up to your tub spout so that the black rubber washer makes firm contact with the bottom of your spout.

Side view:



Top view:



9. Screw the top of the tub spout diverter back onto the bottom piece. **Firmly tighten over your tub spout's tee.** (The tee is what you pull to divert water to your shower.)



10. Screw the larger end of the hose onto the outtake of the tub spout diverter. (The outtake is on the bottom of the diverter.) Tighten firmly by hand.



11. Screw the smaller end of the hose onto the shower control valve\* attached to the end of the brush head. Tighten firmly by hand.



\*Slide valve at base of brush to adjust water pressure.



12. Place the splash jacket over the tub spout diverter and hose. The magnets should be on the inside of the jacket, facing one another.



13. Connect the four magnet pairs with the hose between two of the magnet pairs.



That's it! You're ready for bath time!

## Indoor Operation

1. Slide switch on shower brush head into the ON position.

2. Turn the shut off valve to the OFF position (90° or perpendicular to pipe).

3. Ensure splash jacket magnets are securely connected to reduce water spray from tub spout and tub spout diverter.


**\*Note\* When the brush head is in the OFF position more water will spray from your tub spout and tub spout diverter.**

4. Turn on water. Adjust to desired water temperature and begin bathing. Adjust pressure as desired.

5. When finished, turn the valve to the ON position. (180° or parallel to pipe). Shower is ready for normal use. Store kit components in drawstring bag.

## Outdoor Installation

1. Screw the large end of the white hose onto the end of your garden hose.

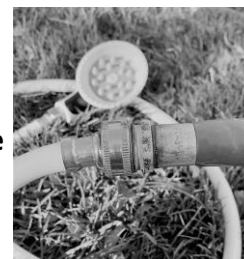

2. Screw shower brush & water pressure control valve onto smaller end of the white hose.



3. Turn on water from your spigot. You are ready to wash!

**\*Note\* Leaving the water flow on and the brush head in the OFF position for an extended amount of time will degrade the brush head and lead to leaks or damage.**