


INSTRUCTION MANUAL

AIR97

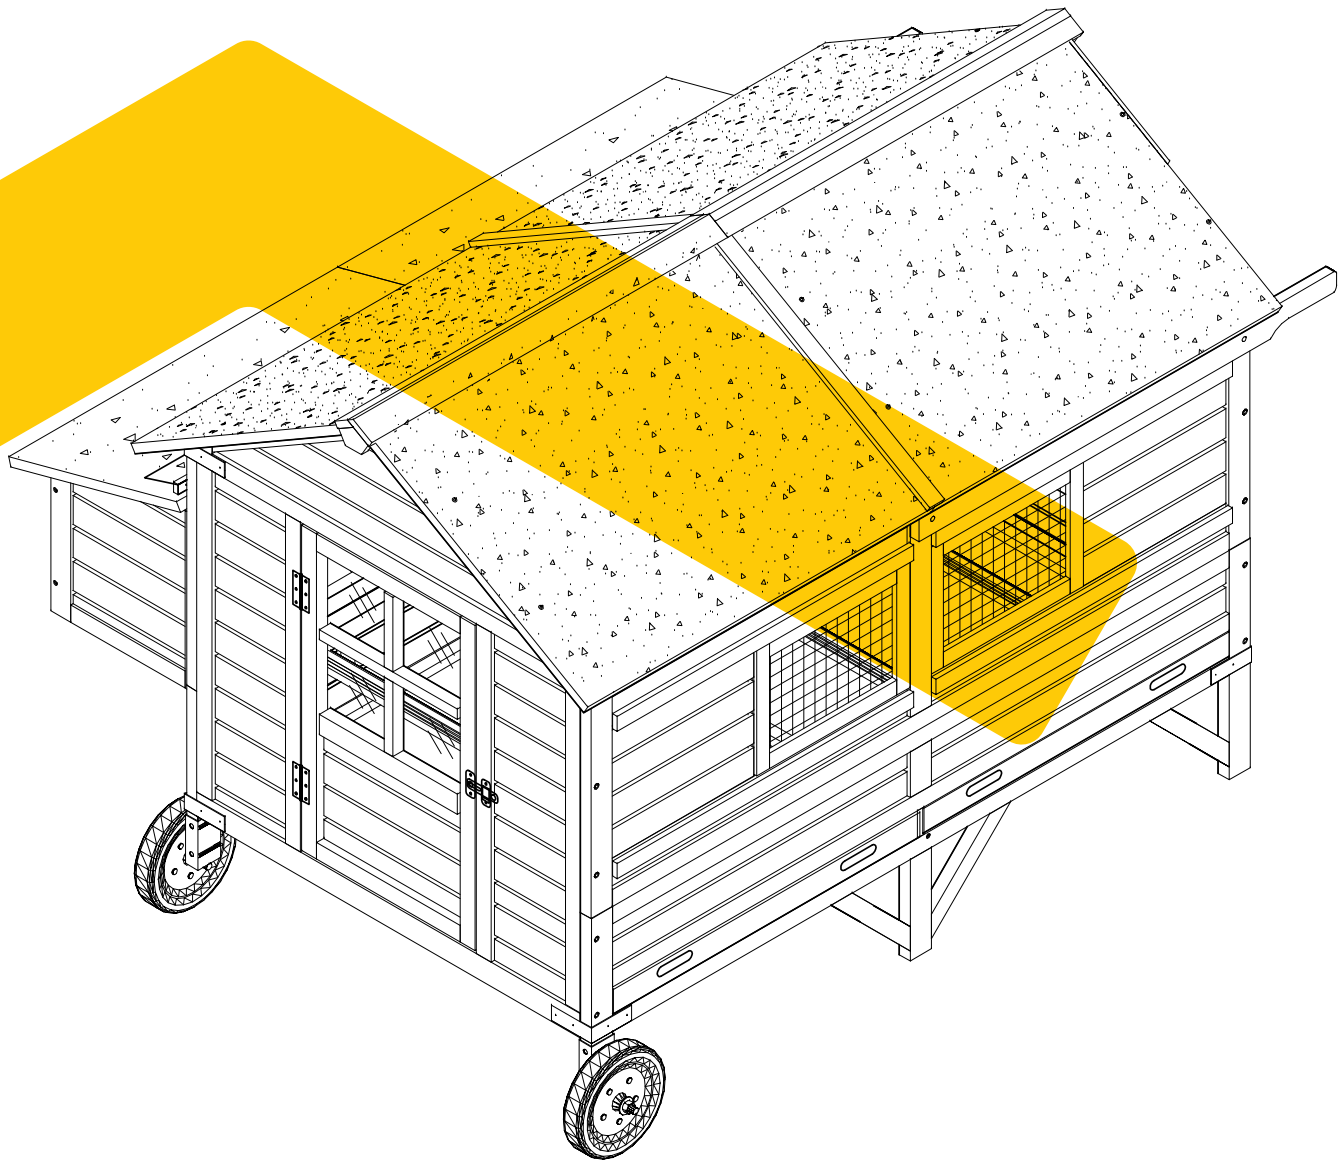



NOTICE


Please retain these instructions for future

- Firmly secure all bolts,screws and knobs before use.
- Reconfirm that all bolts,screws,and knobs are secure every 90 days.
- Fasten screws loosely during initial assembly. Do not fully tighten screws until the item is completely assembled.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- Be aware that moving parts can injure,crush and cut.
- If any parts are missing,broken,damaged,or worn,stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

TOOLS REQUIRED



PHILLIPS
SCREWDRIVER



DRILL
(RECOMMENDED)



2PERSON
ASSEMBLY



APPROXIMATELY
60MIN. ASSEMBLY

HARDWARE

M6.0x60mm BOLT
4 PCS+1 spare




P1

M6.0x55 mm SCREW
12PCS+1 spare



P2

M3.5x60 mm SCREW
4PCS+1 spare

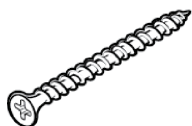

P3

M3.5x45 mm SCREW
34PCS+1 spare



P4

M3.5x35 mm SCREW
16PCS+1 spare



P5

M3.5x30 mm SCREW
2 PCS+1 spare



P6

M3.5x25 mm SCREW
38PCS+1 spare



P7


M3.0x16 mm SCREW
74PCS+1 spare



P8


HARDWARE

Spring latch
1PC

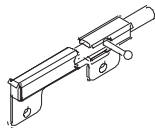


P9

L shape corner bracket
8PCS



P10

Casters
2PCS

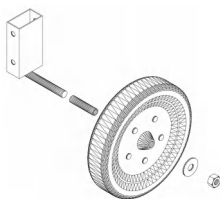


P11

Corner bracket
4PCS




P12

PVC
1PC




P13

Lock
2PC

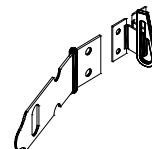

P14

Latch
1PC




P15

PARTS


CARTON 1/3

left side panel-Upper
1PC

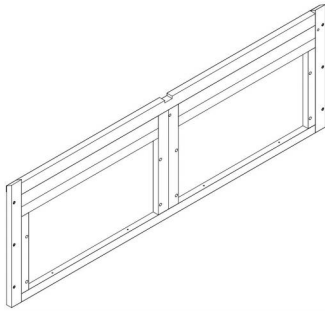


A

left side panel-Down
1PC

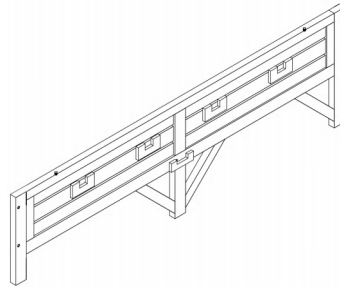


B

Right side panel-Upper
1PC

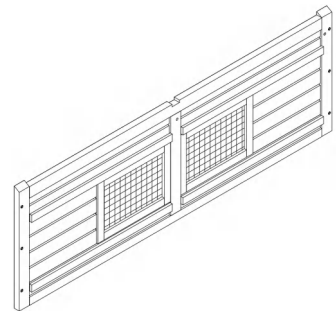


C

Right side panel-Down
1PC

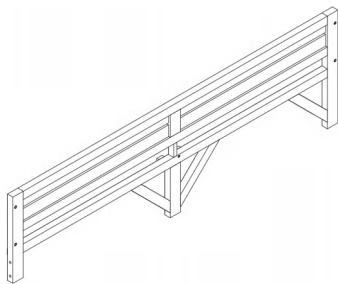


D

Push handle
2PCS

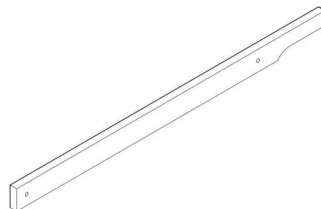


J

Front panel of nesting box
2PCS

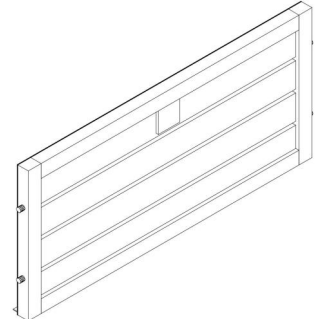

M

Connect Bar
1PC

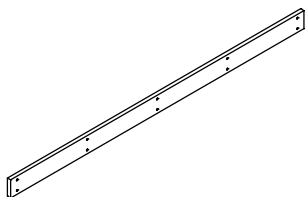


U

Hardware bag




CARTON 2/3

Front panel
1PC

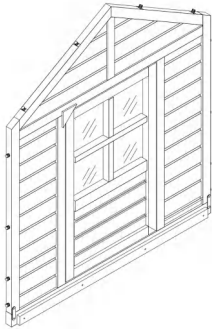


E

Back panel
1PC

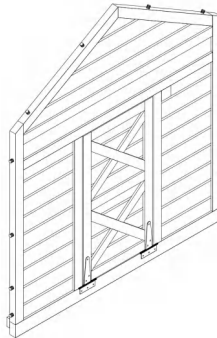

F

Waterproof Strip
2PCS

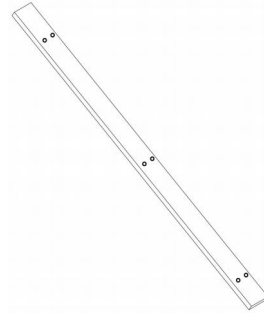


S

Perch
4PCS




H

Bottom panel of nesting box
2PCS

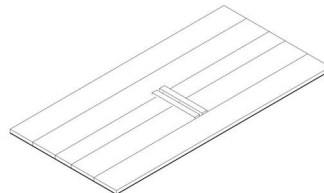


N

Divider
2PCS

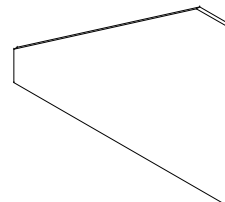


O

Roof of nesting box
2PCS

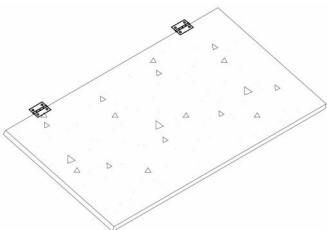


P

PVC Waterproof Strip
2PCS

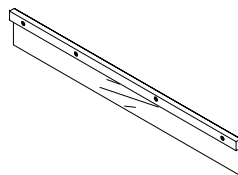

T

Tray Support
1PC

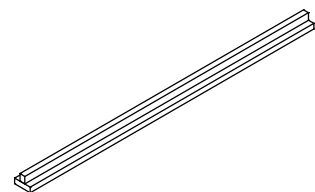


V

PARTS

CARTON 2/3

Support

2PCS




W

PARTS


CARTON 3/3

Tray
2PCS

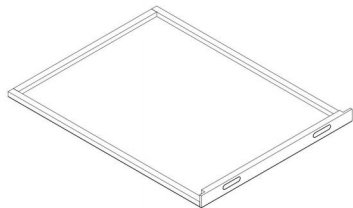


G

Panel of nesting box
2PCS

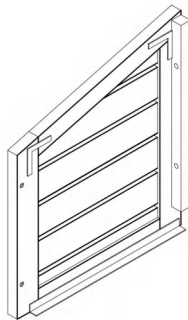


K

Panel of nesting box
2PCS

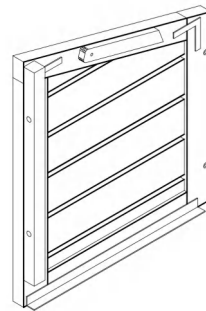


L

Roof support
1PC

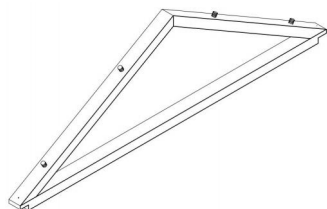


I

Roof
4PCS

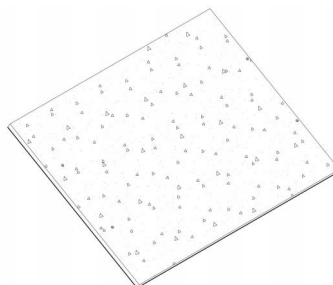

Q

Roof cap
2PCS

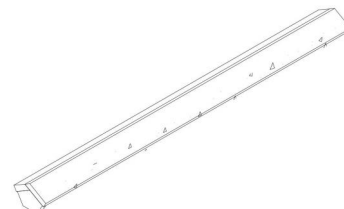

R


PRODUCT ASSEMBLY

01

Attach the side panels.

Attach the Part C, Part D with connect bar Part U by 10 X P7 screws, and then attach the corner bracket P12 by 4 X P8 screws each side.

Attach the Part A, Part B by 4 X P3 screws in middle, and then attach the corner bracket P12 by 4 X P8 screws each side.


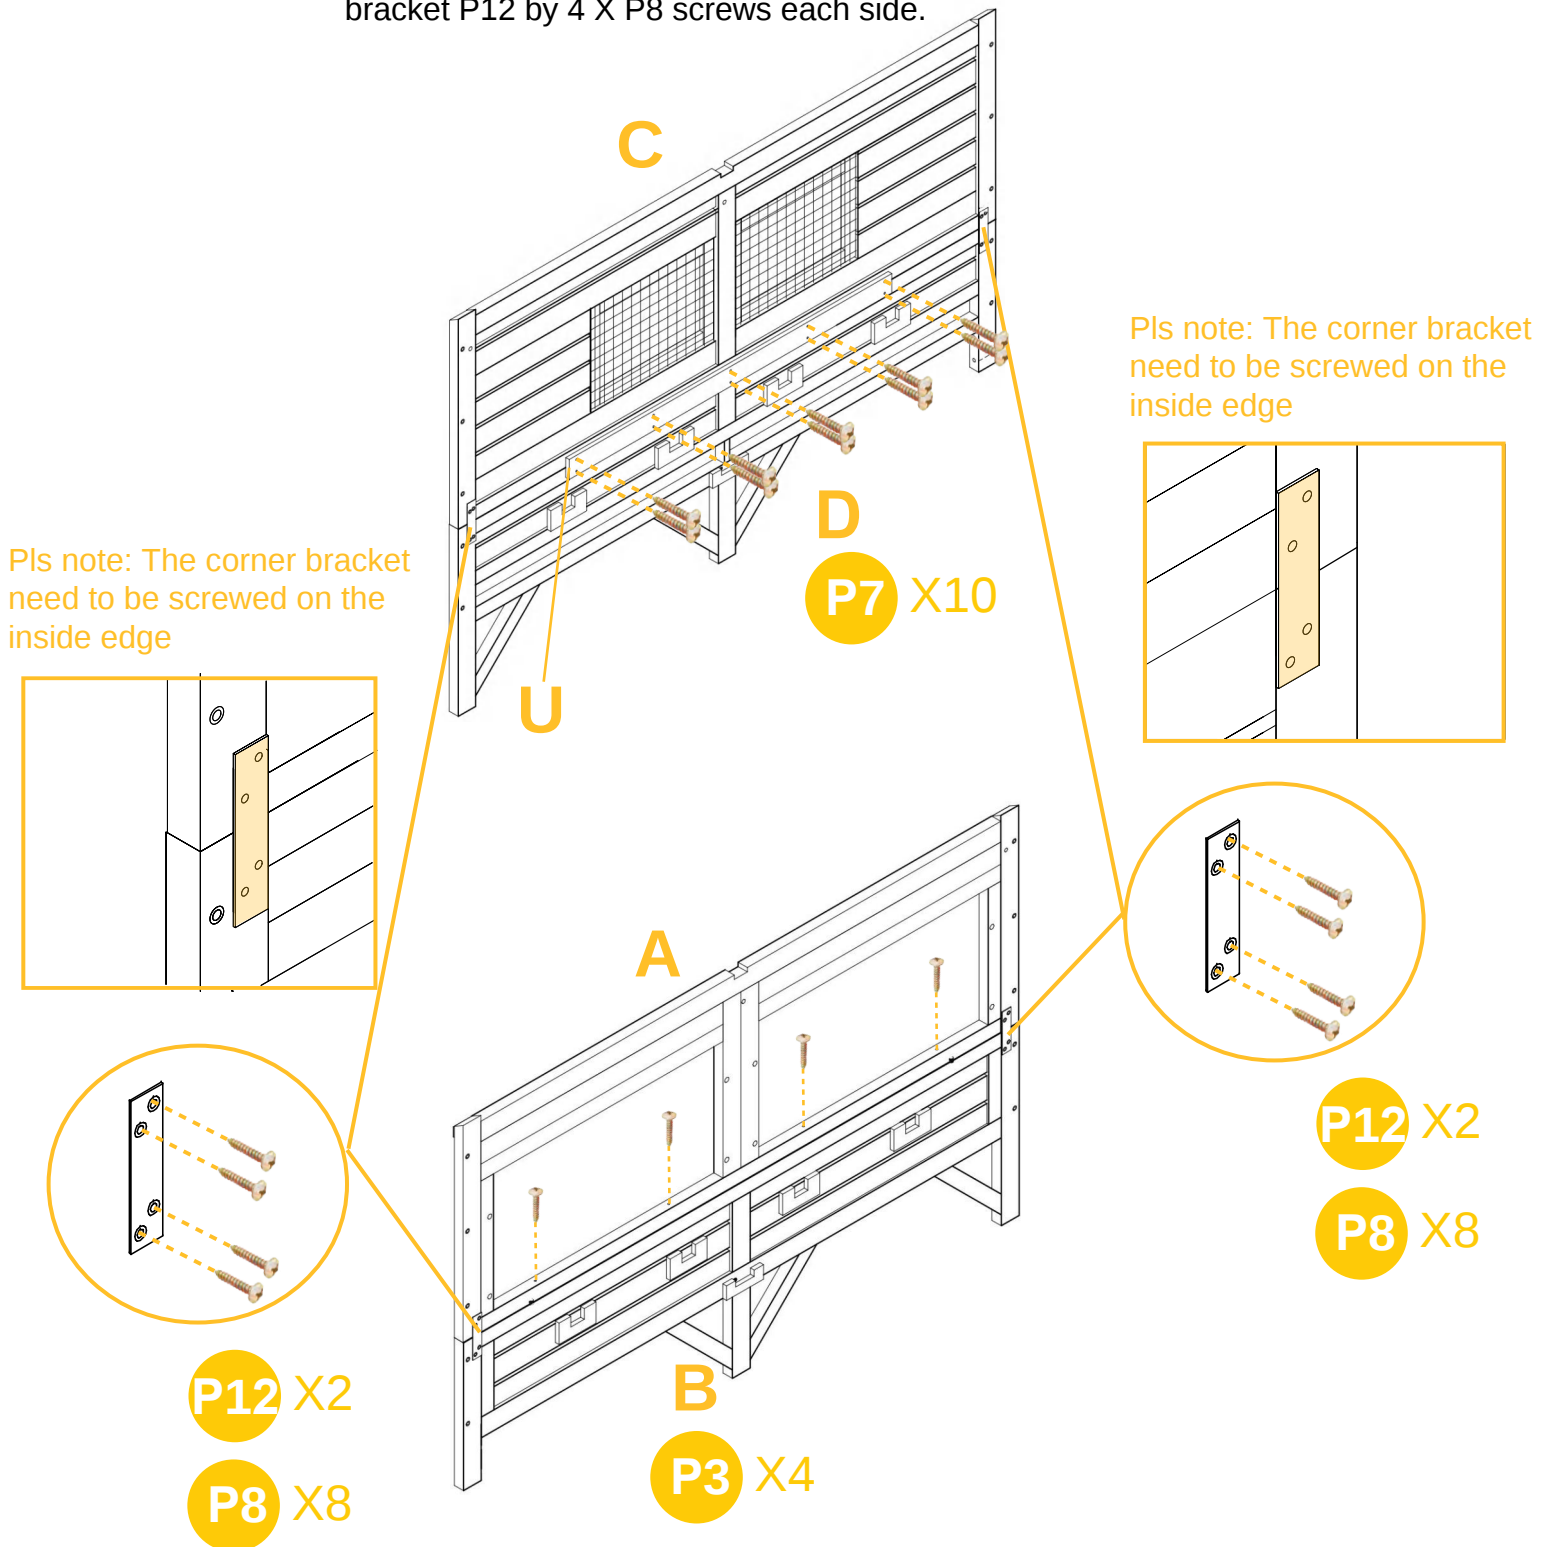


PRODUCT ASSEMBLY

02

Install the casters.

Attach the casters P11 to the side panel by 2 X P1 screws each side.(Notice the direction of side panel Part A & Part C)

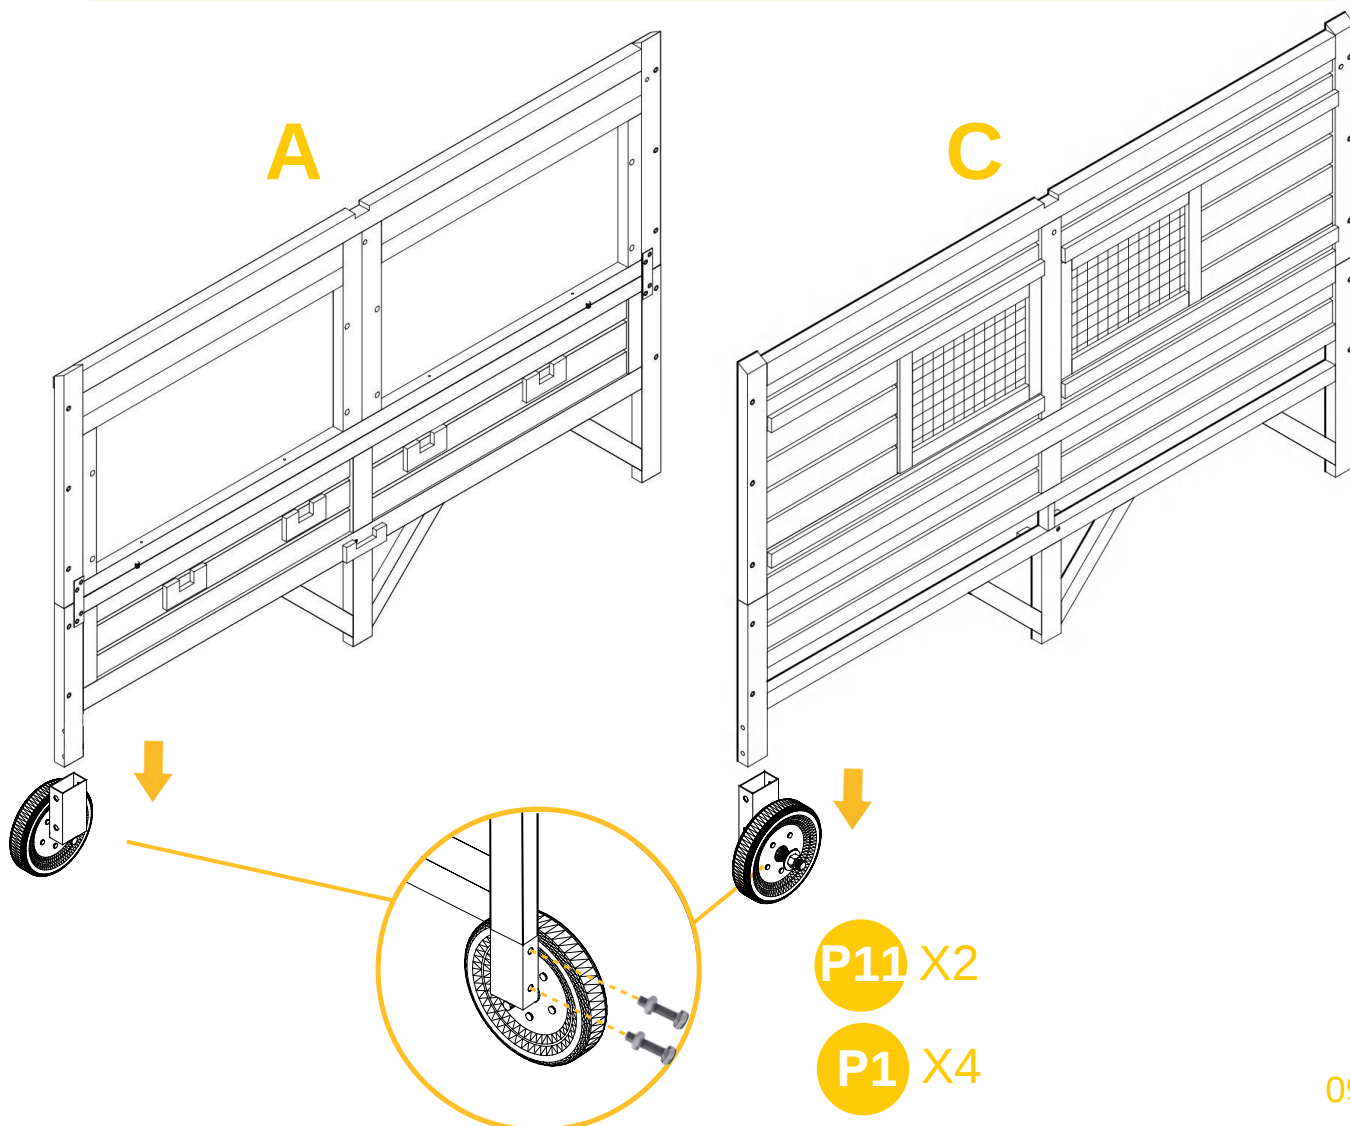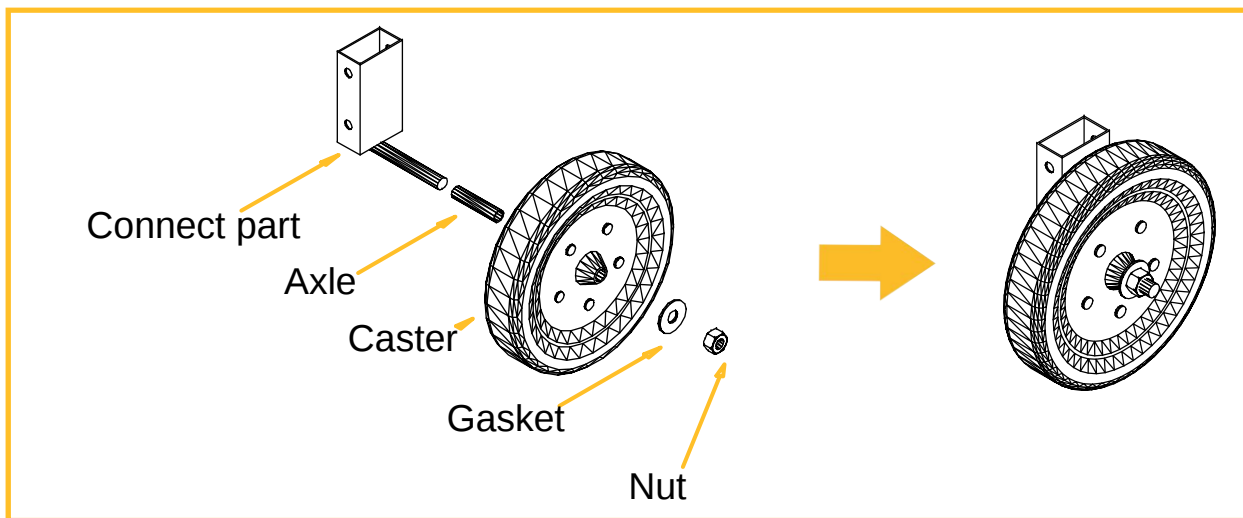

PRODUCT ASSEMBLY


03

Attach the Part E, Part F to Side Panel by 5 X P4 screws each side.

Attach the latch P15 to front door by 4 X P8 screws.

Attach the corner bracket P10 to the corner by 4xP8 each side.


Insert the tray support Part V into the slots inside two side panels, and then screw it by 2 X P4 screws.

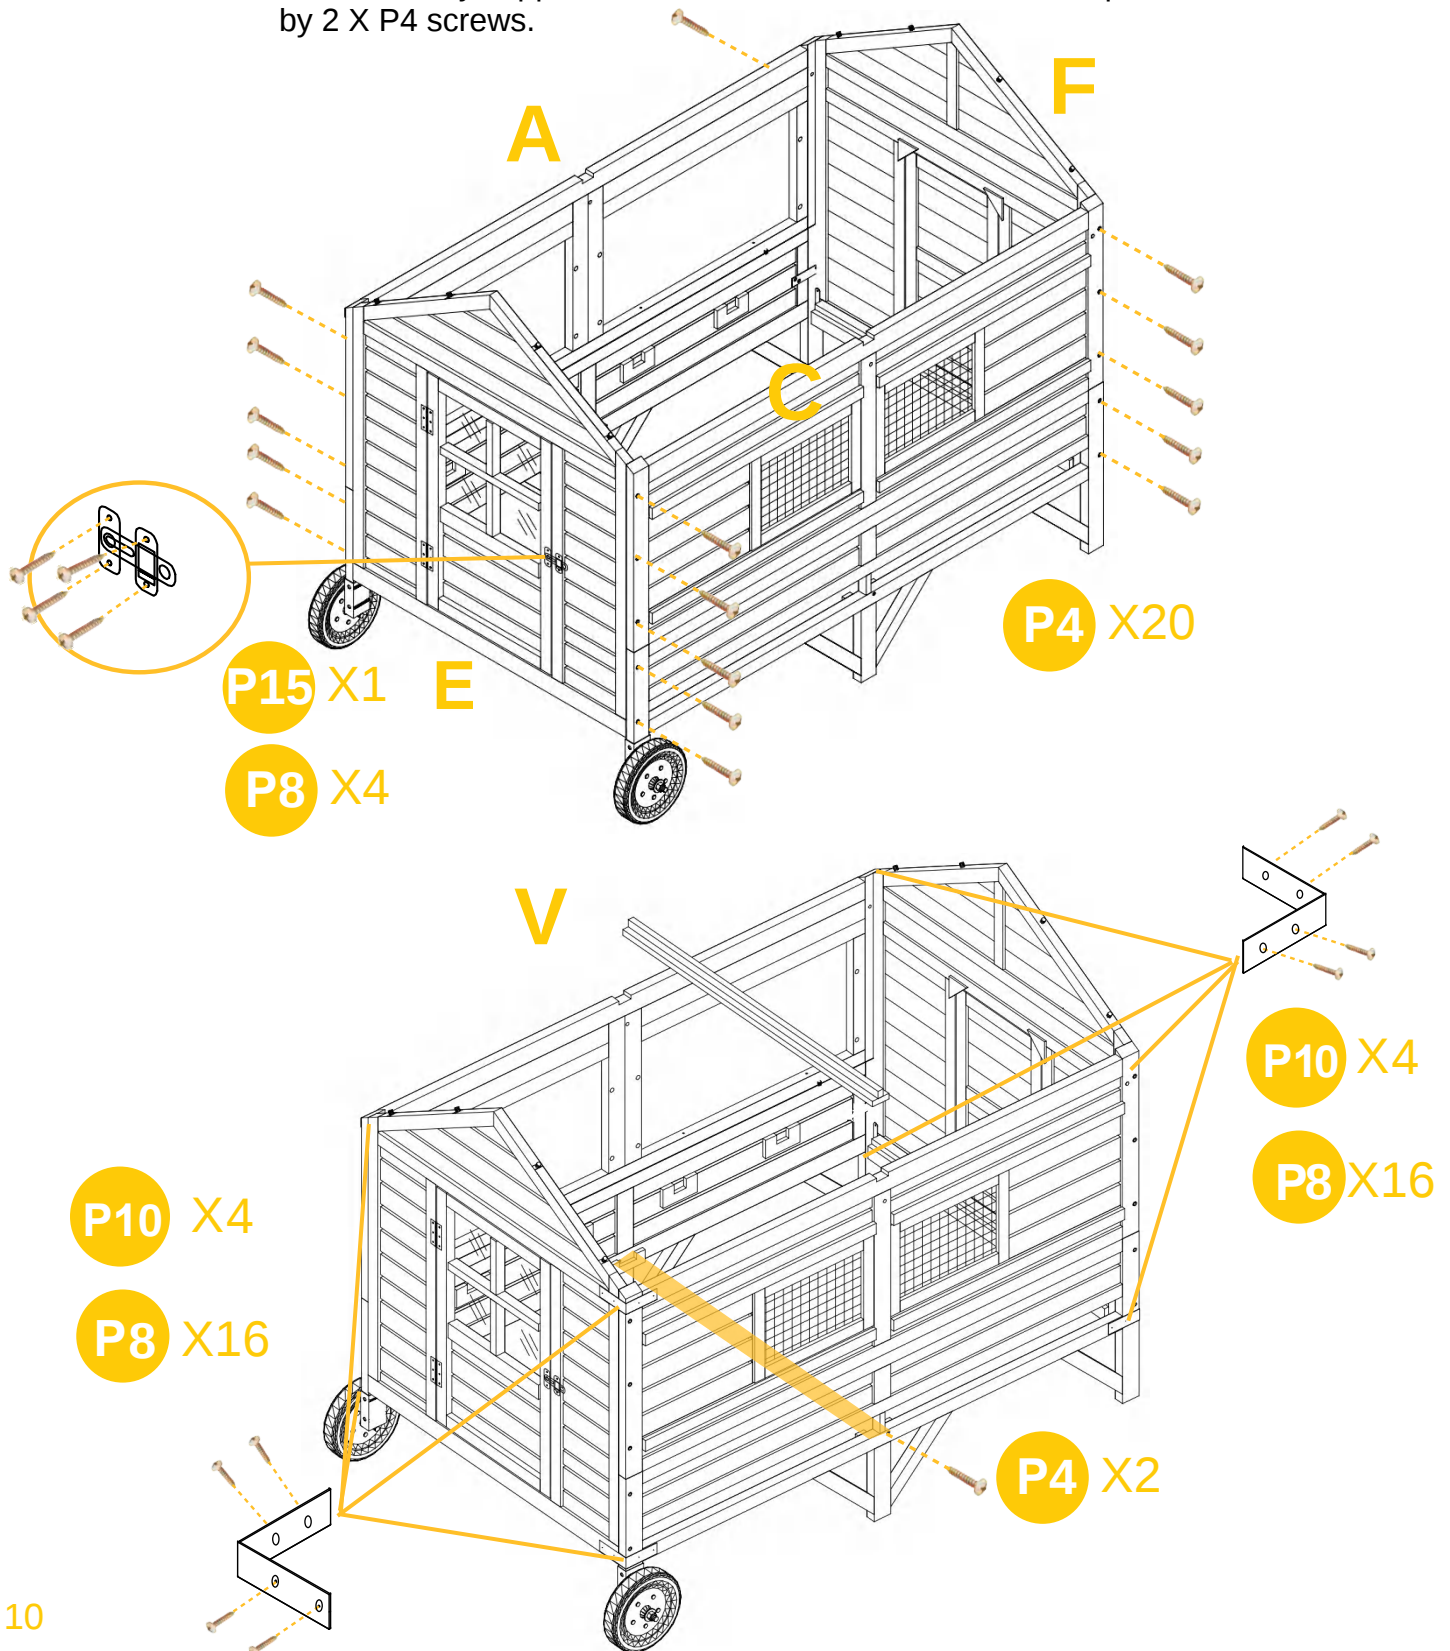

PRODUCT ASSEMBLY


04

Insert 4PCS perches Part H into the slots inside two side panels.
Slide in tray Part G in side.

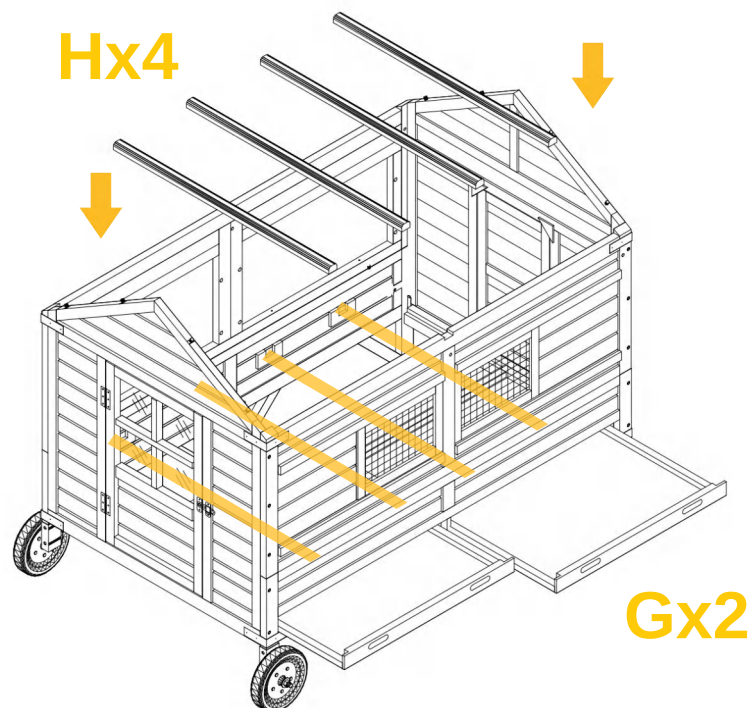


05

Attached the roof support Part I by 2XP6 screws.

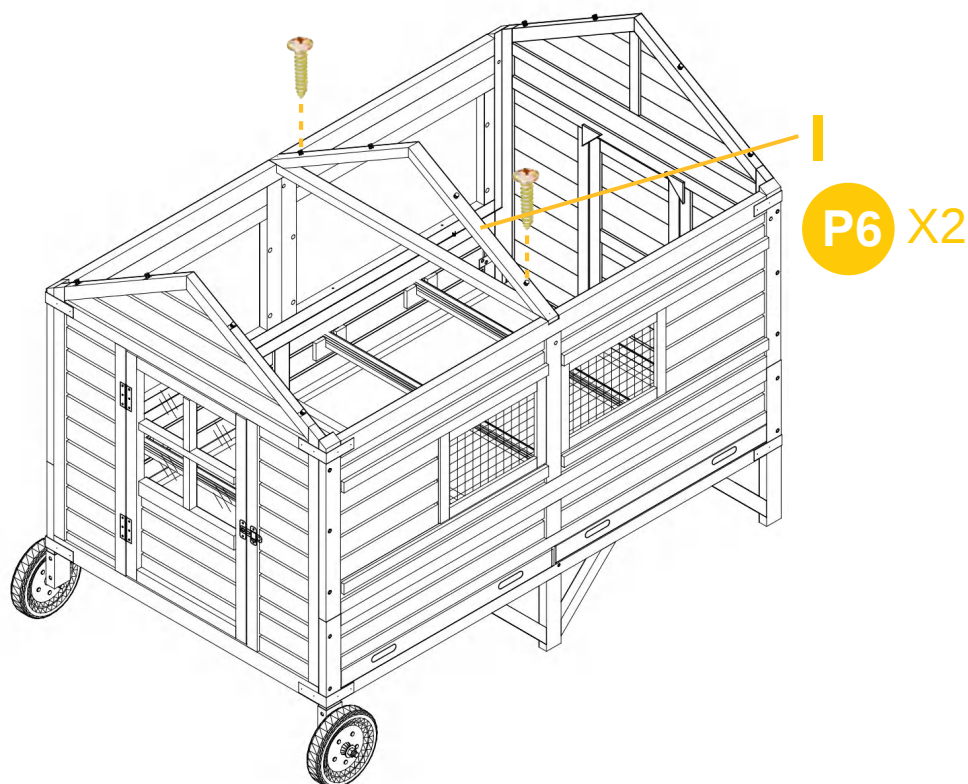


PRODUCT ASSEMBLY

- 06** Attached the push handle Part J to the coop by 2XP2 bolts each side.

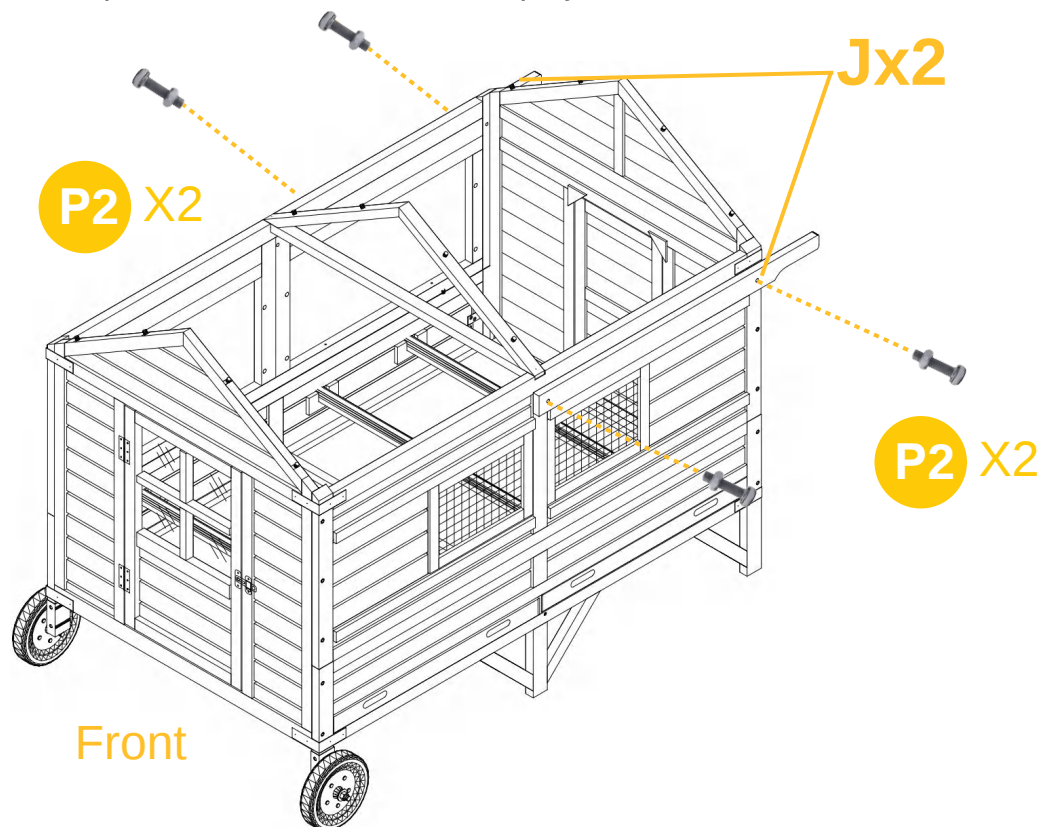


- 07** Attach the nesting box(Two nesting boxes)
Attach the Part K & Part L & Part M by 8XP4 screws.(Notice the direction of Part K & Part L)

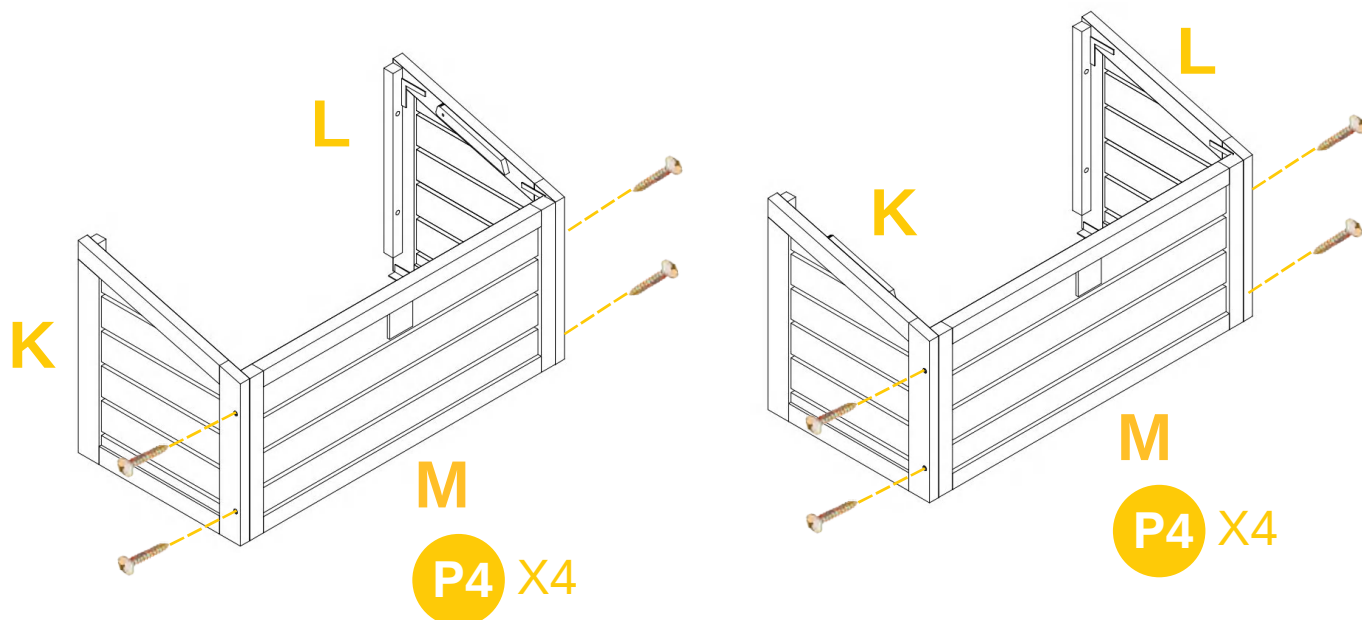

PRODUCT ASSEMBLY


08

Attach the nesting box to the coop by 8XP2 bolts.
Attach the support Part W to coop by 2 X P4 screws each side

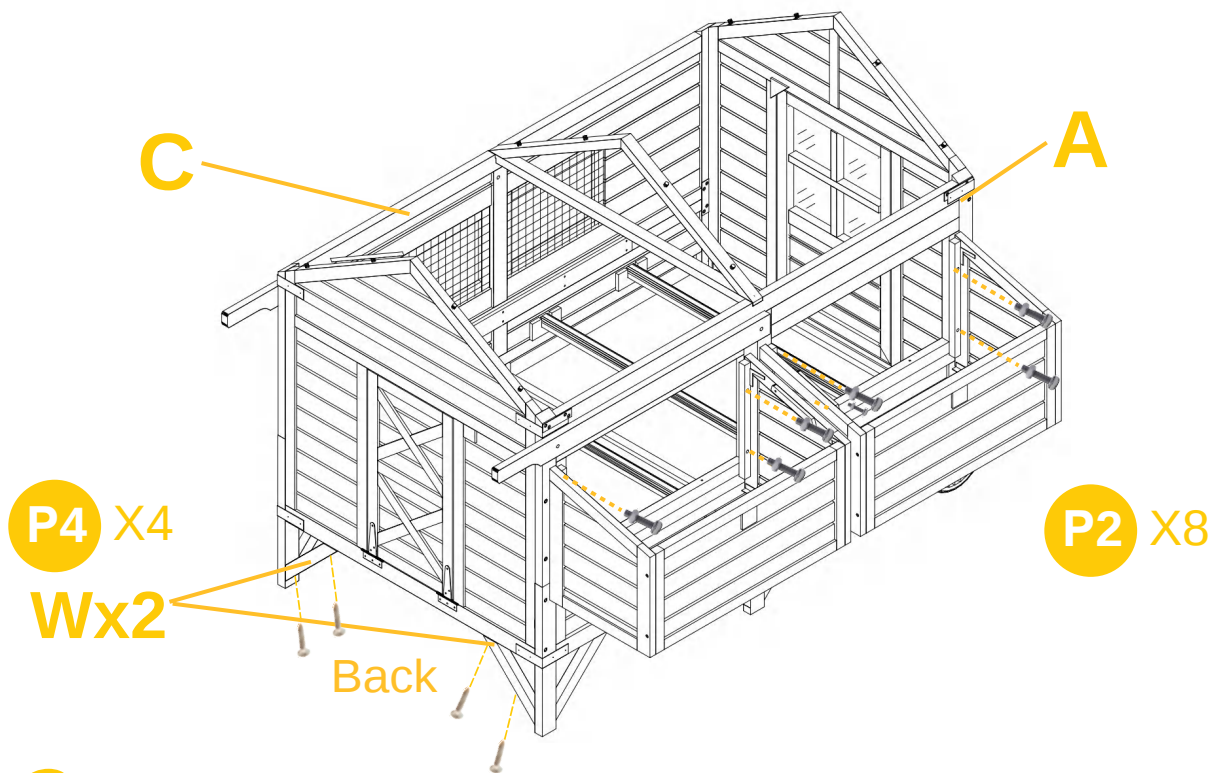


09

Insert the divider Part O into the slots of bottom floor Part N.
Drop in the bottom floor Part N to the nesting box each side.

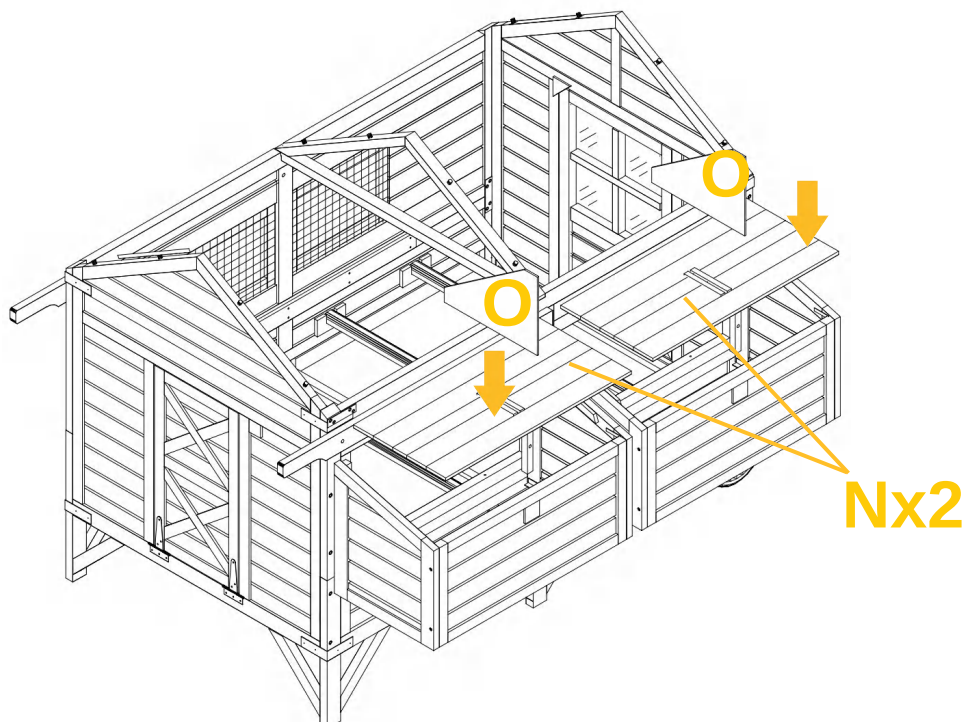


PRODUCT ASSEMBLY

- 10** Attach the nesting box roof Part P by 8XP8 screws.
Attach the latch P9 to back door by 2 X P8 screws.

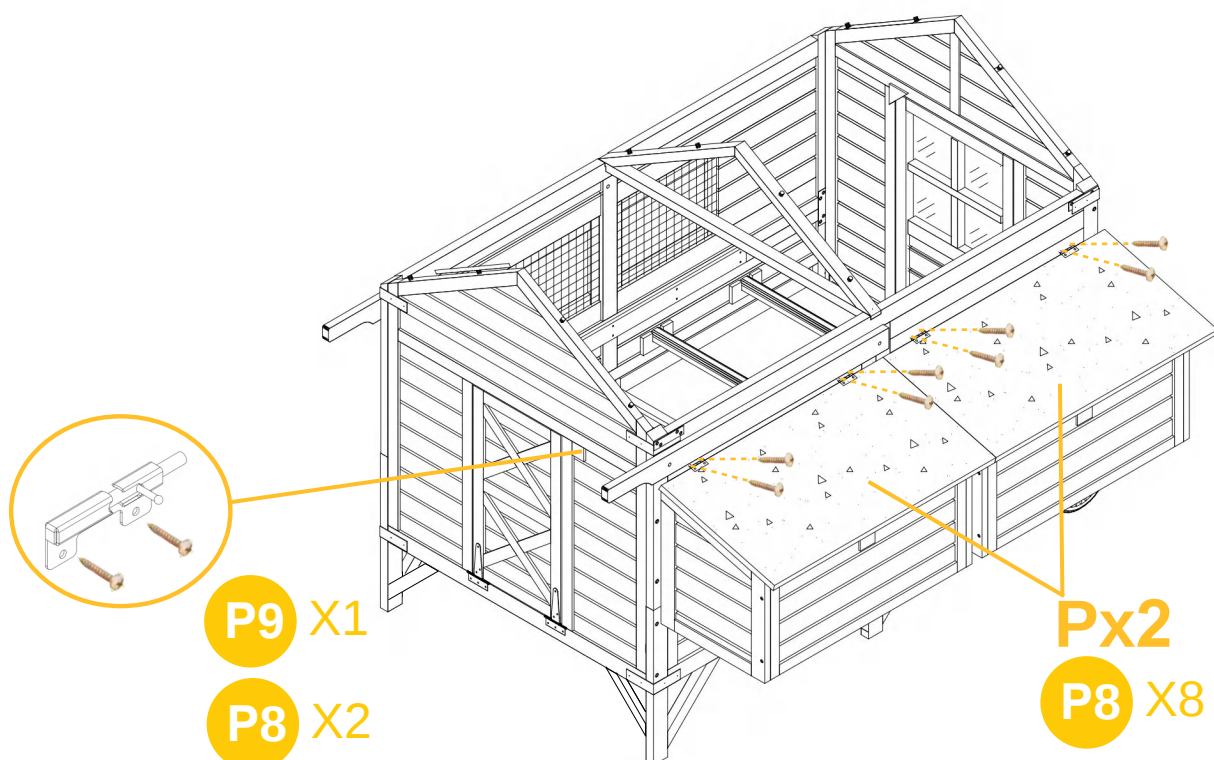


- 11** Attached PVC Waterproof Strip Part T to the nesting box by 8XP7 screws.

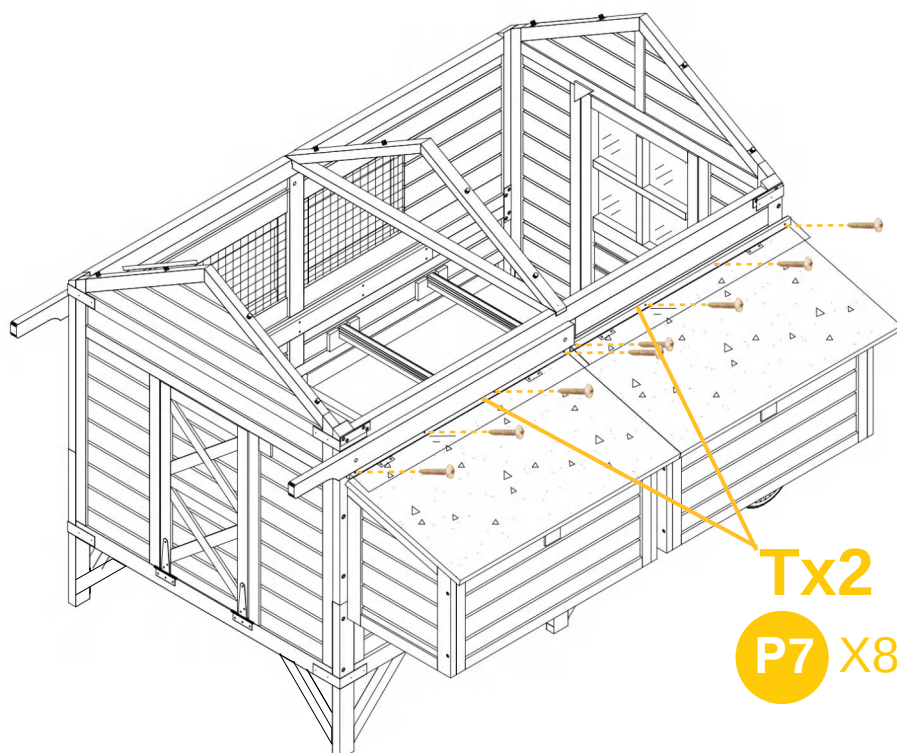

PRODUCT ASSEMBLY

12


Pls reference below 4 steps to screw the lock P14.

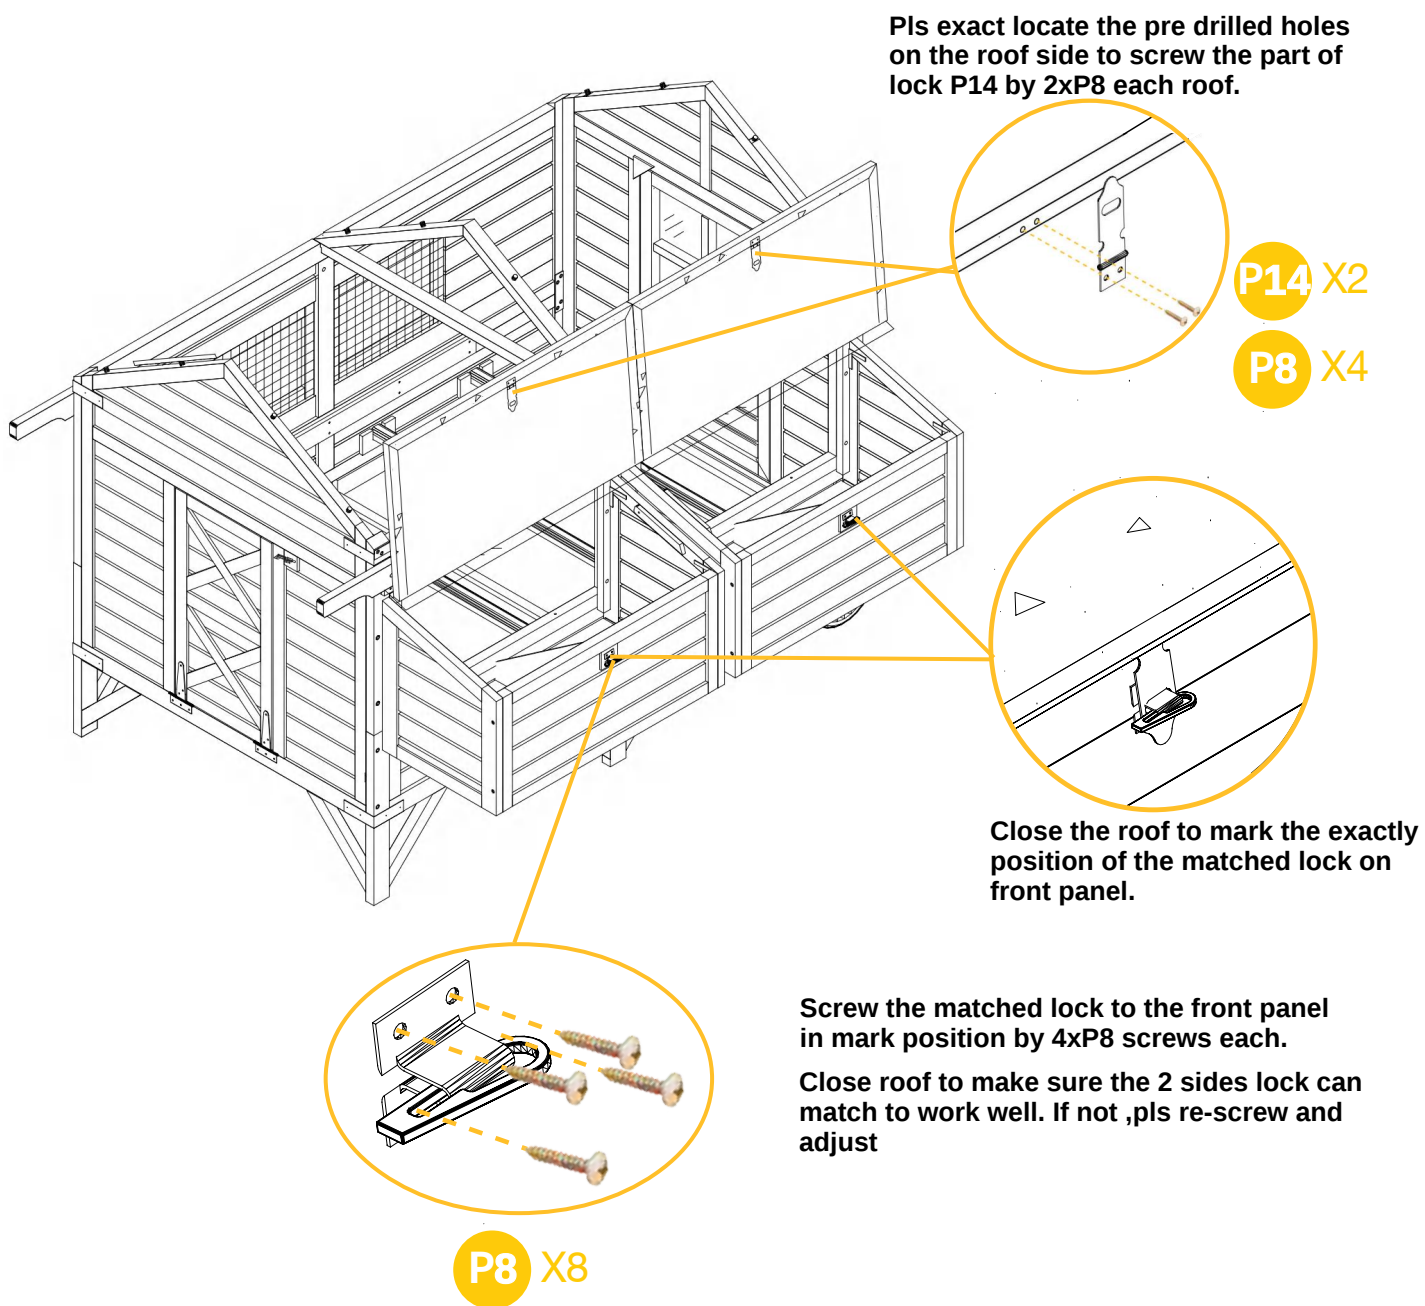

PRODUCT ASSEMBLY


13

Attach the coop roof Part Q by 16XP5 screws.

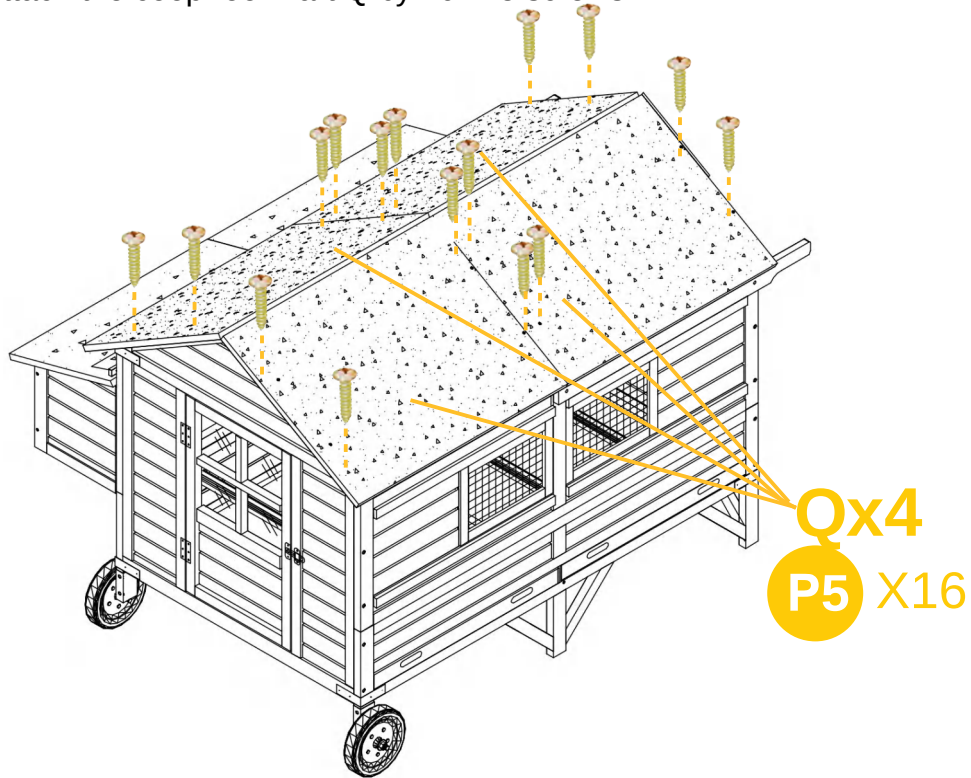

14

Put the Waterproof pvc P13 in the connection position of 2 roof cap to avoid the water leakage.
Ensure top roof panels line up with each other before screwing the cap 2XPart R by 8XP7 Screws.

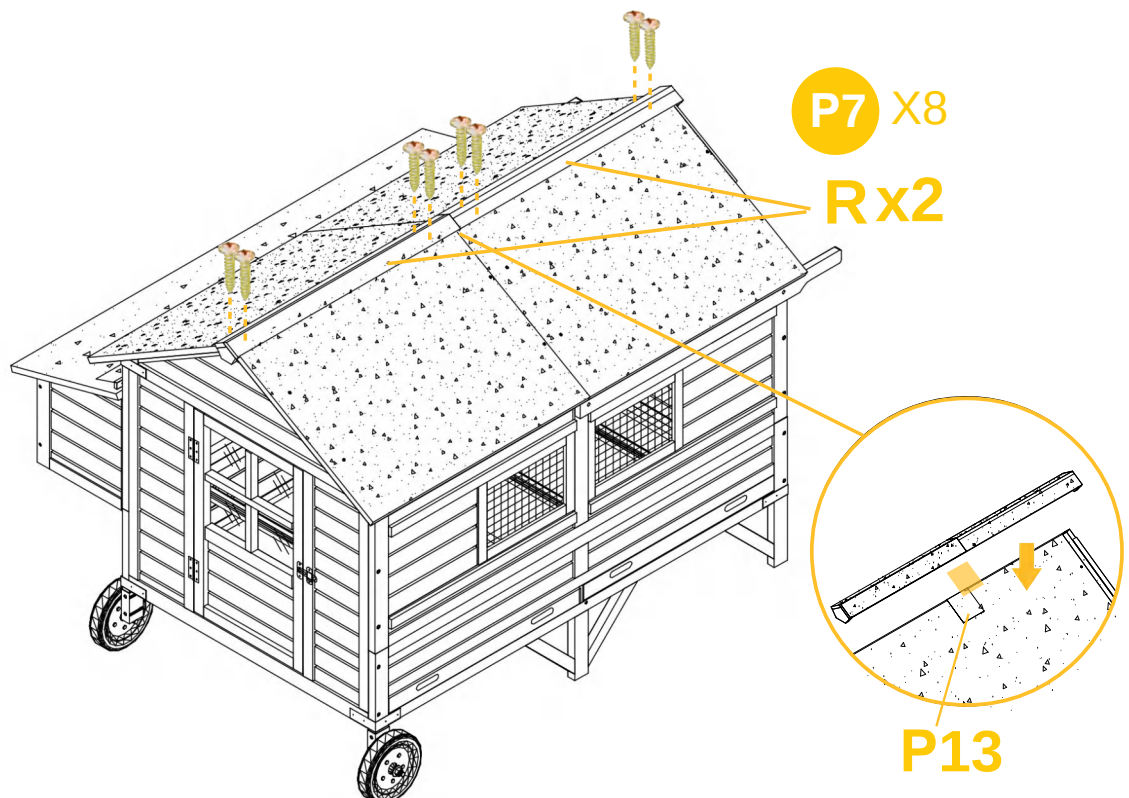


PRODUCT ASSEMBLY

15 Connect the roof with Waterproof Strip 2xPart S by 12xP7 screws..

P7 X12

Sx2

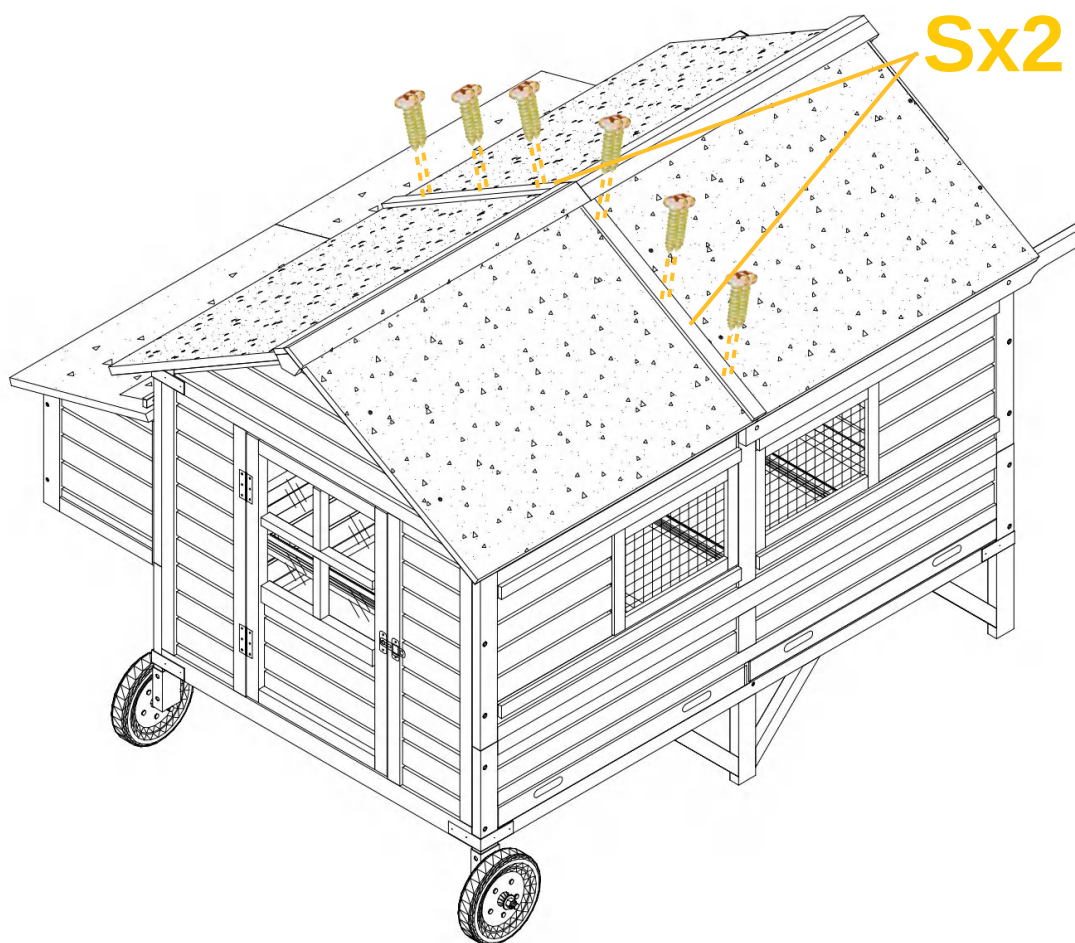

Finish



WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this