
VEIKOUS

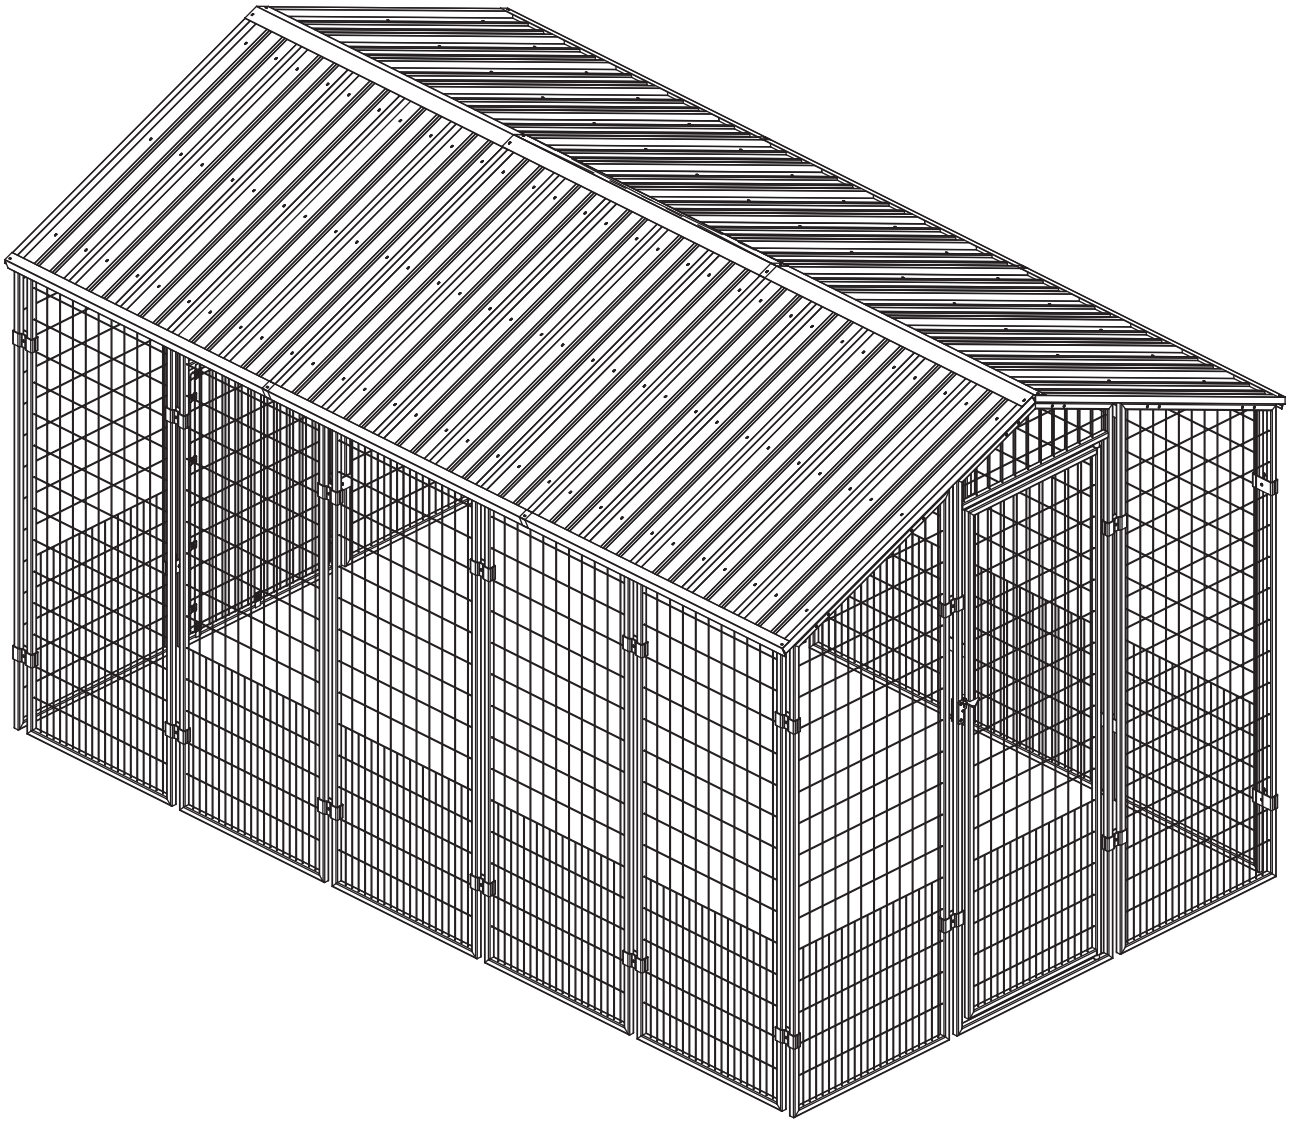

www.veikous.com

customerservice@veikous.com

STOP

MISSING A PART?
CALL US BEFORE GOING BACK TO THE STORE

The store where you made your purchase
Does not stock parts for this item.
If you have assembly questions or you are missing or have damaged parts,please call

1-858-324-1911

(Mon - Sun, 10:00 am to 7:00 pm EST)

you can also e-mail customerservice@veikous.com

or visit www.veikous.com

Please prefer email contact. Due to busy lines, there may be a wait for calls to be answered.

Please have the following information ready when you contact us, so we can assist you promptly.

- Order number or PO number (you can find the info on your invoice, receipt or platform account).
- The model number of the product (printed on the package box).
- Description of the part from the parts list.

- Read entire assembly manual,paying special attention to the important tips and safety information .
- Ensure there are no missing pieces by first separating and identifying all parts.
- Make sure to check packing material for small parts that may have fallen out during shipment.
- Structures are not intended for public use.The Company does not warranty any of its residential structures subjected to commercial use such as:Daycare,Preschool,Nursery School,Recreational Park,or any similar Commercial Application.
- This manual contains helpful information concerning assembly preparation,installation procedure and required maintenance.
- Always keep safety in mind as your structure is being built.
- Keep these instructions for future reference.



1. Two or more people are required for assembly.



2. You will need one or more stepladders.

3. Wearing protective gloves is recommended.





4. You may need a safety hat.



5. You may need to use a hex key.



6. Please use a Phillips screwdriver.




7. Do not fully tighten screws prior to complete assembly.




8. For ease of construction, you may need to use a drill.


Parts List

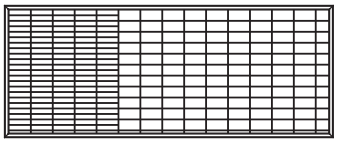


Ⓐ x8

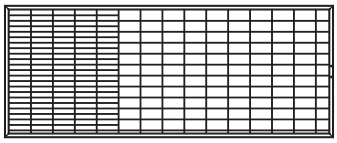


Ⓑ x2

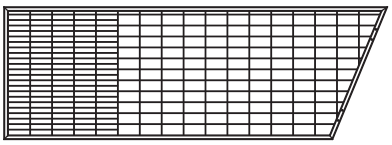


Ⓒ x4

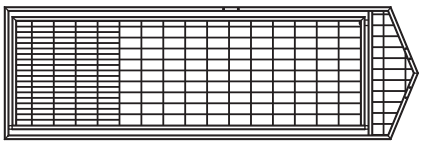

Ⓓ x1

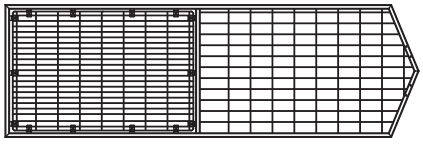

Ⓔ x1

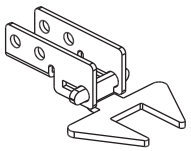


Ⓕ x1




Ⓖ x12




Ⓗ x2

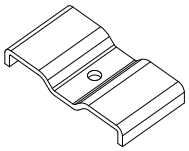

Ⓘ x32

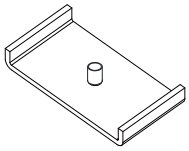


Ⓙ x32




Ⓚ x1

Hardware




M6x25mm

Ⓐⓐ x32(+3)




M6x30mm

Ⓒⓒ x28(+3)




M6x45mm

Ⓓⓓ x12(+2)



M6x35mm

Ⓔⓔ x2



(in box 3)

Ⓕ1 x196

Steel Components



PE4 14PCS



PE7 2PCS




M11 6PCS




M13 3PCS

Step 1

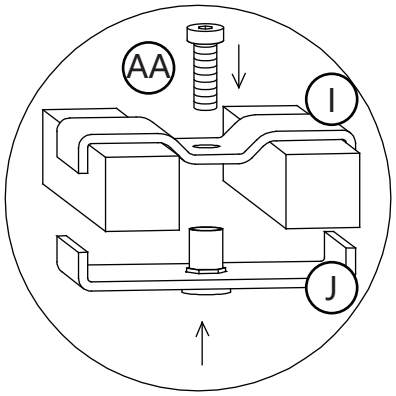


Use I/J to tighten AA and connect two A panels together.

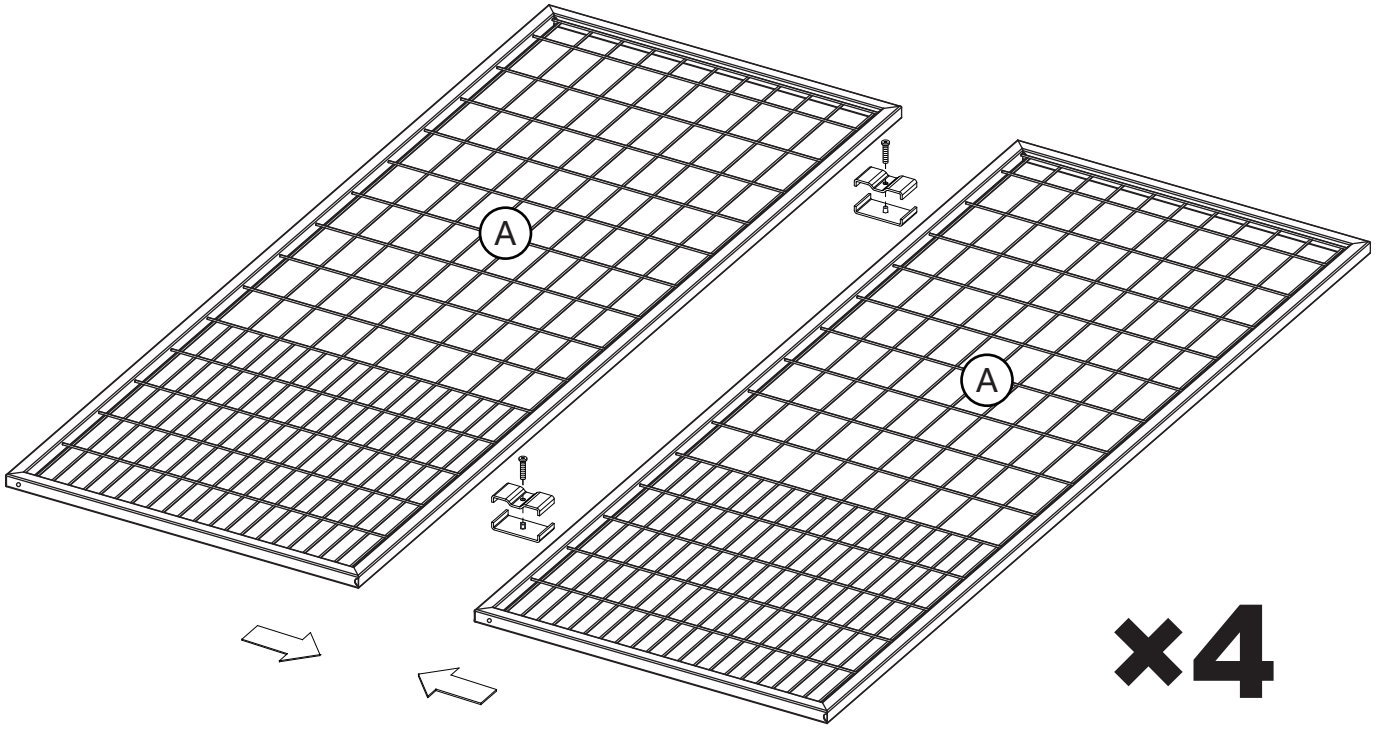


×4

Note: When fixing the upper part #I/#J (the wider end of the wire mesh), please do not install it between the first row of wire mesh, as this will affect the installation of other components. In addition, for the sake of appearance, all components #I/#J must be installed flush.

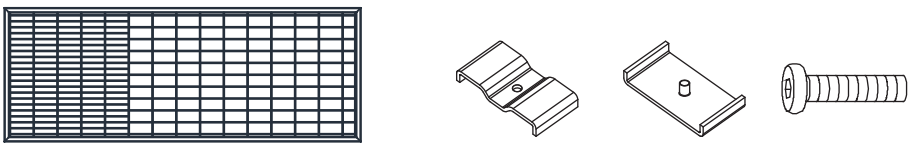


A x8 I x8 J x8 AA x8

Step 2

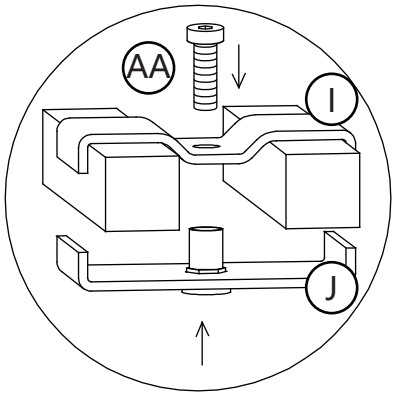


Use I/J to tighten AA and connect A B A panels together.

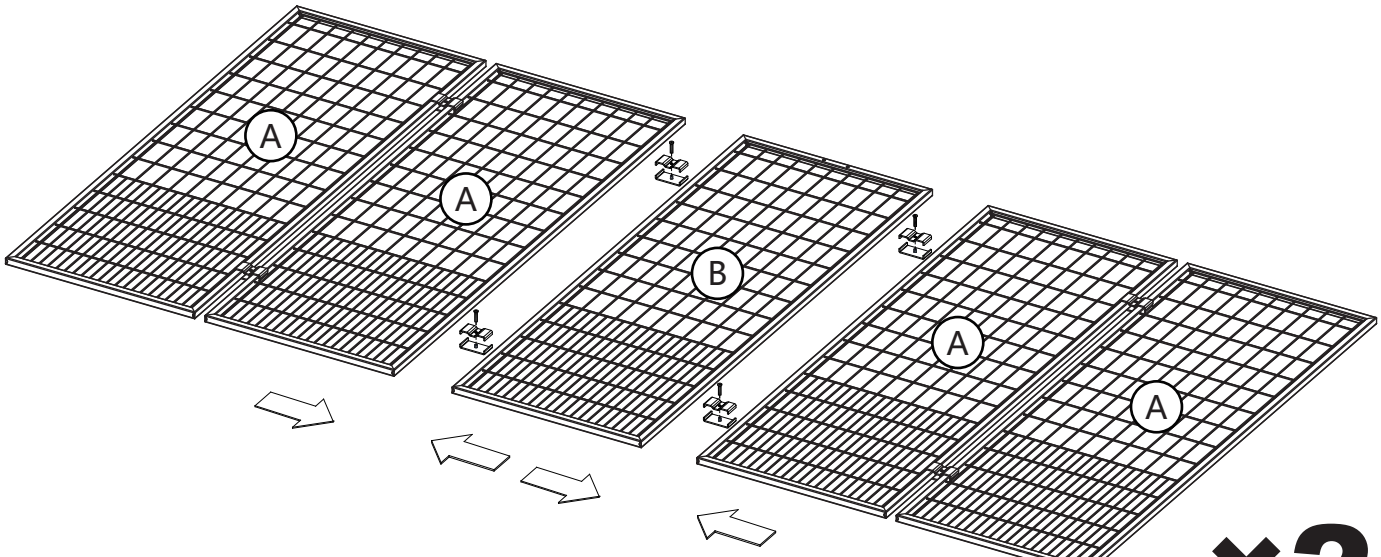


×2

Then arrange the assembled A-A from the previous step in the order of A-A-B-A-A with B, and secure them using I/J by tightening AA.

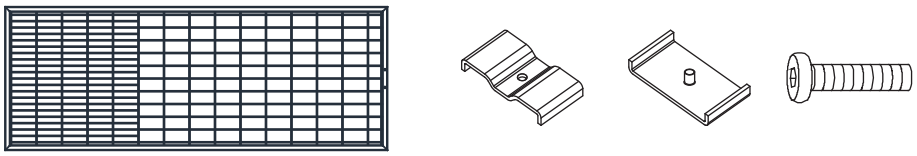


B x2 I x8 J x8 AA x8


Step 3

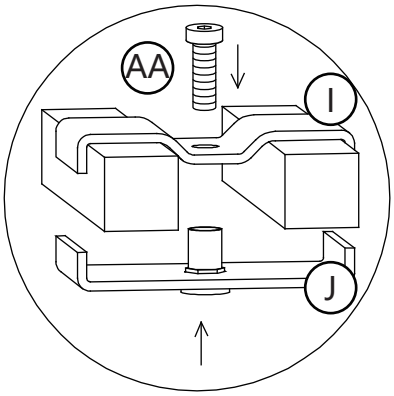

Use I/J to tighten AA and connect C D C panels together.

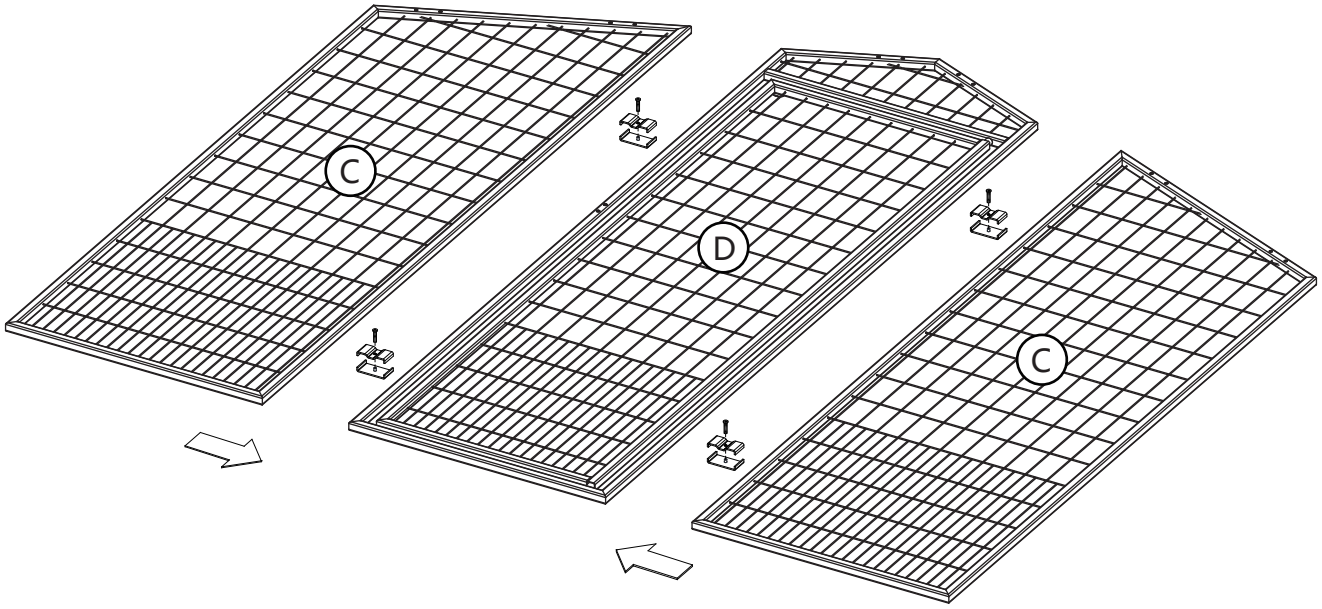


Arrange the wire panels in the order of C-D-C, and connect them using I/J by tightening AA.

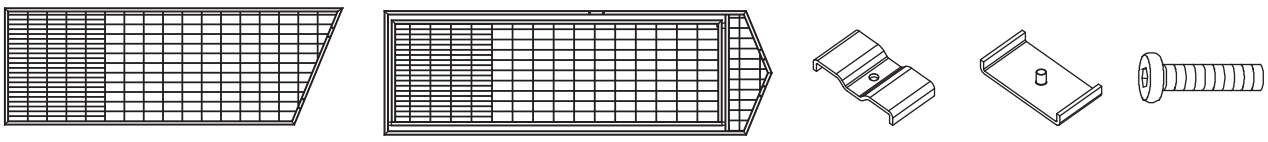


C x2 D x1 I x4 J x4 AA x4


Step 4-1

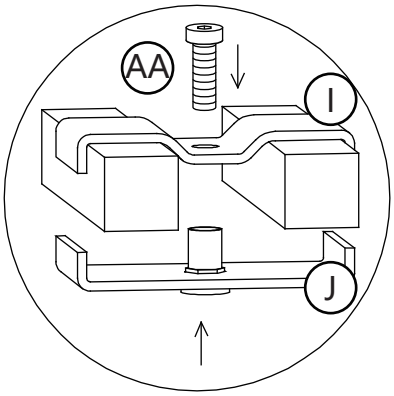

Use I/J to tighten AA and connect C E C panels together.

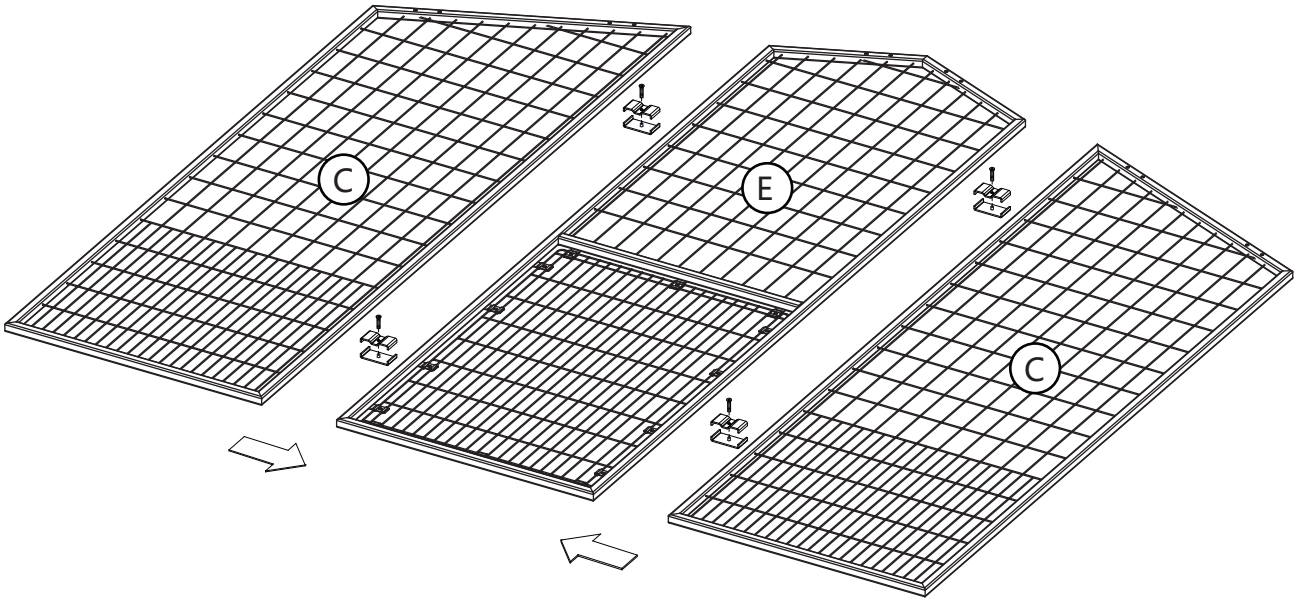


Arrange the wire panels in the order of C-E-C, and connect them using I/J by tightening AA.

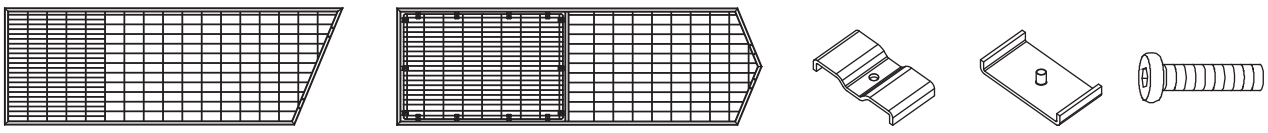


C x2 E x1 I x4 J x4 AA x4


Step 4-2

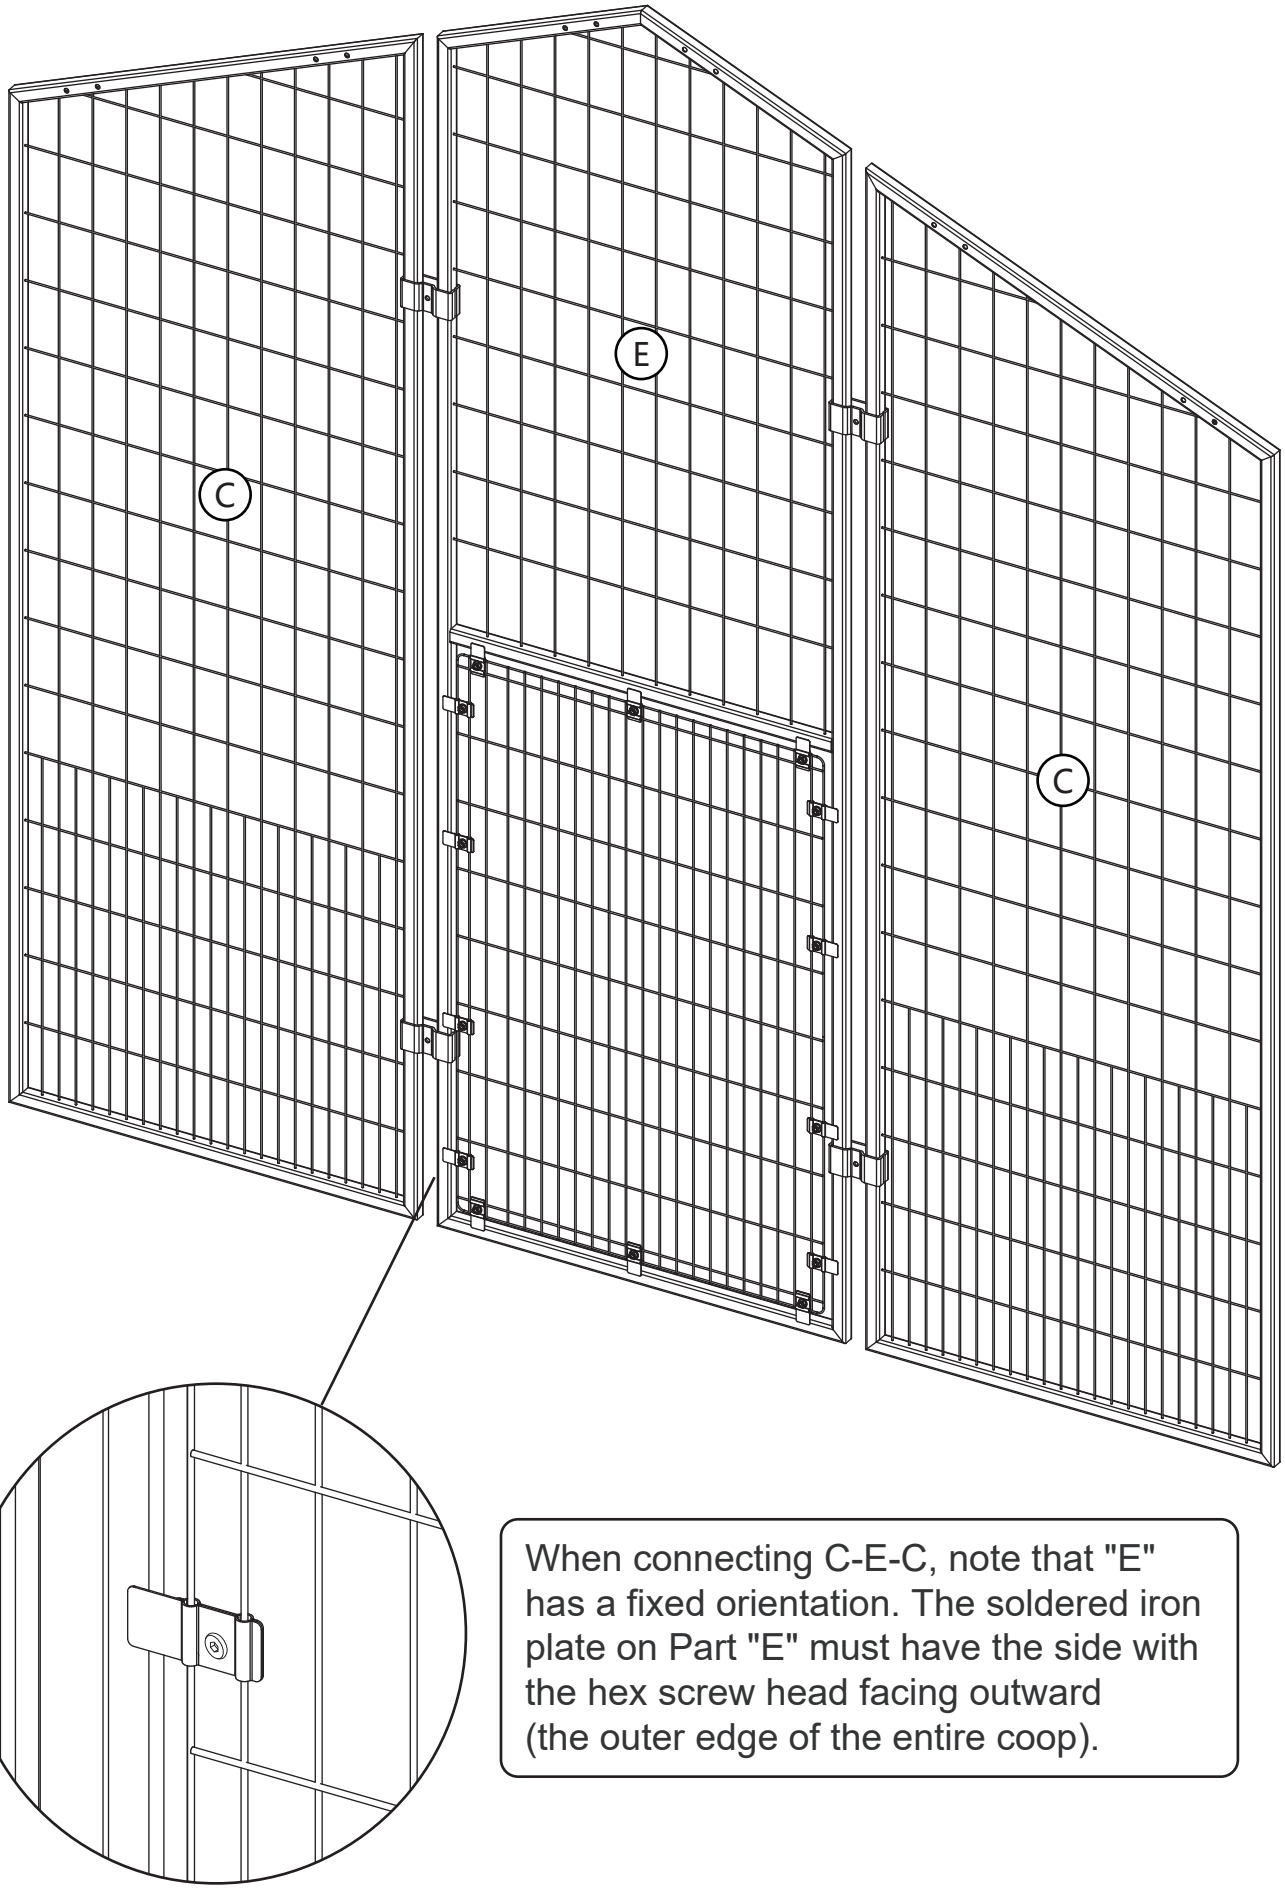


When connecting C-E-C, note that "E" has a fixed orientation. The soldered iron plate on Part "E" must have the side with the hex screw head facing outward (the outer edge of the entire coop).

Step 5

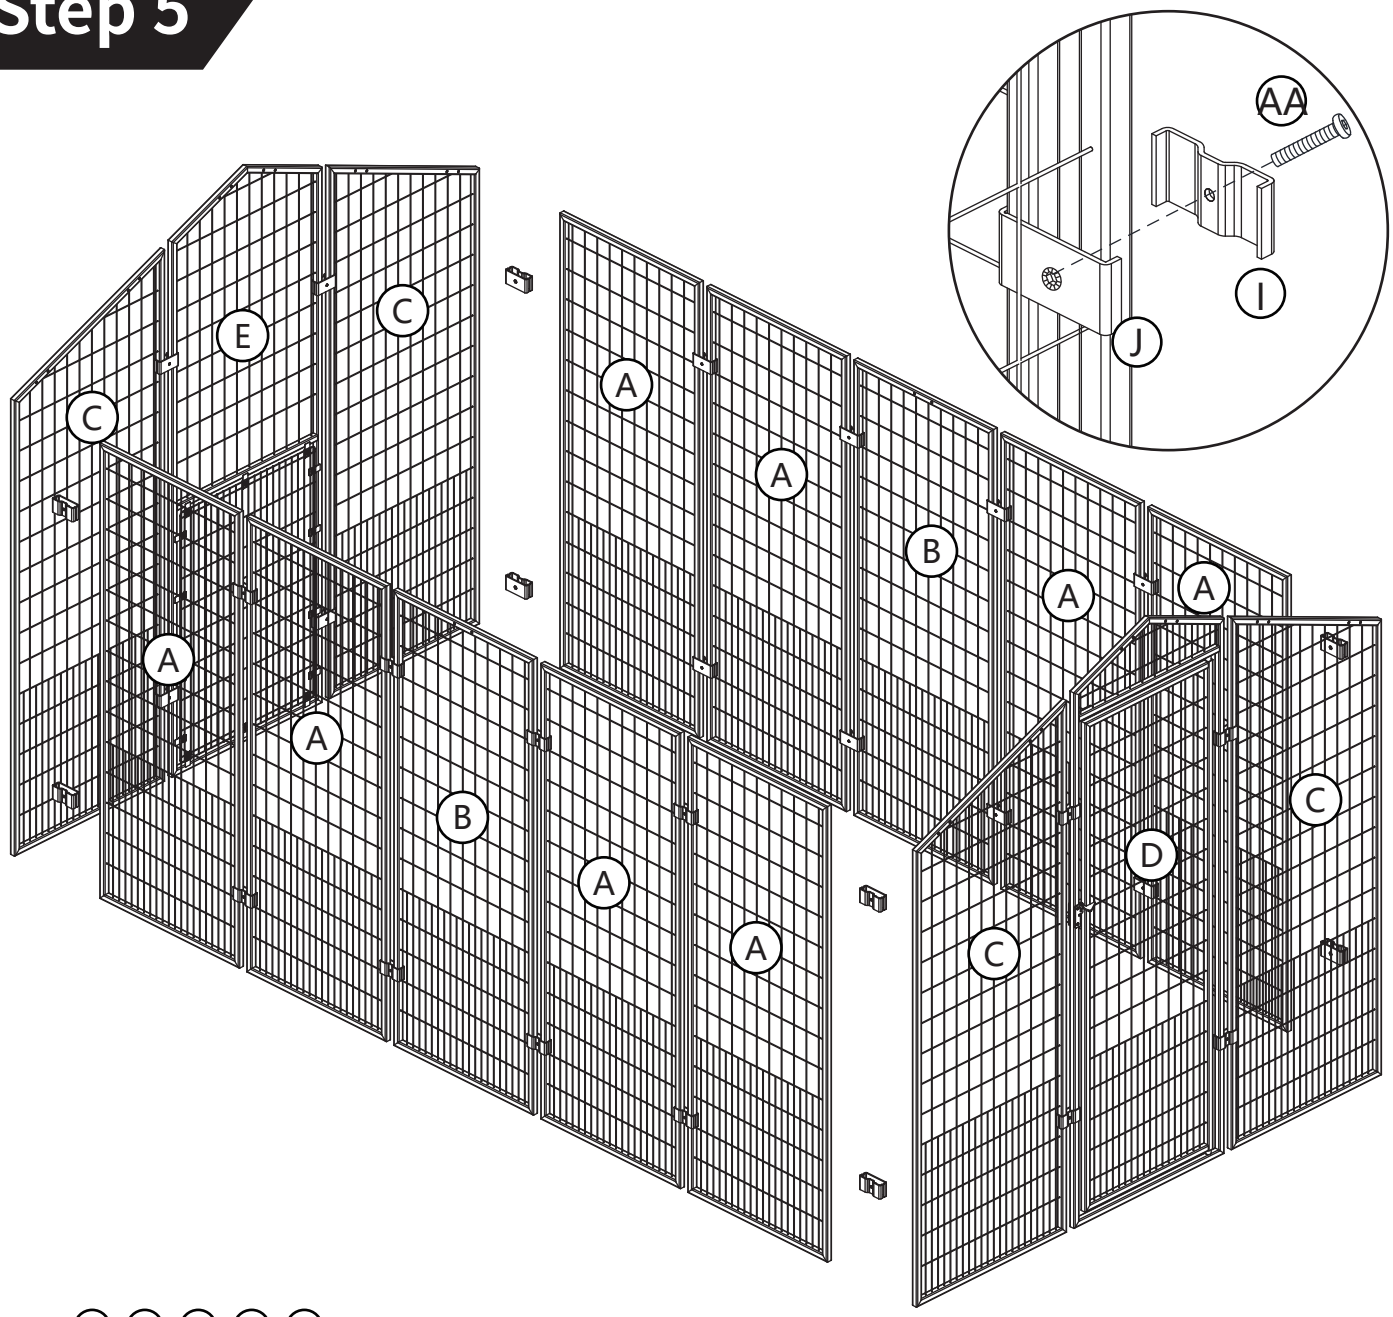

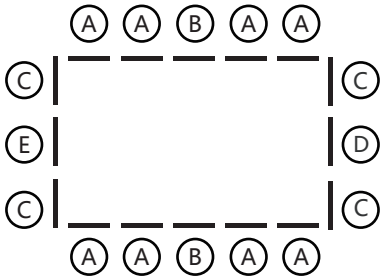


Note: Please connect all the metal frames correctly as shown in the diagram.




I x8 J x8 AA x8


Step 6

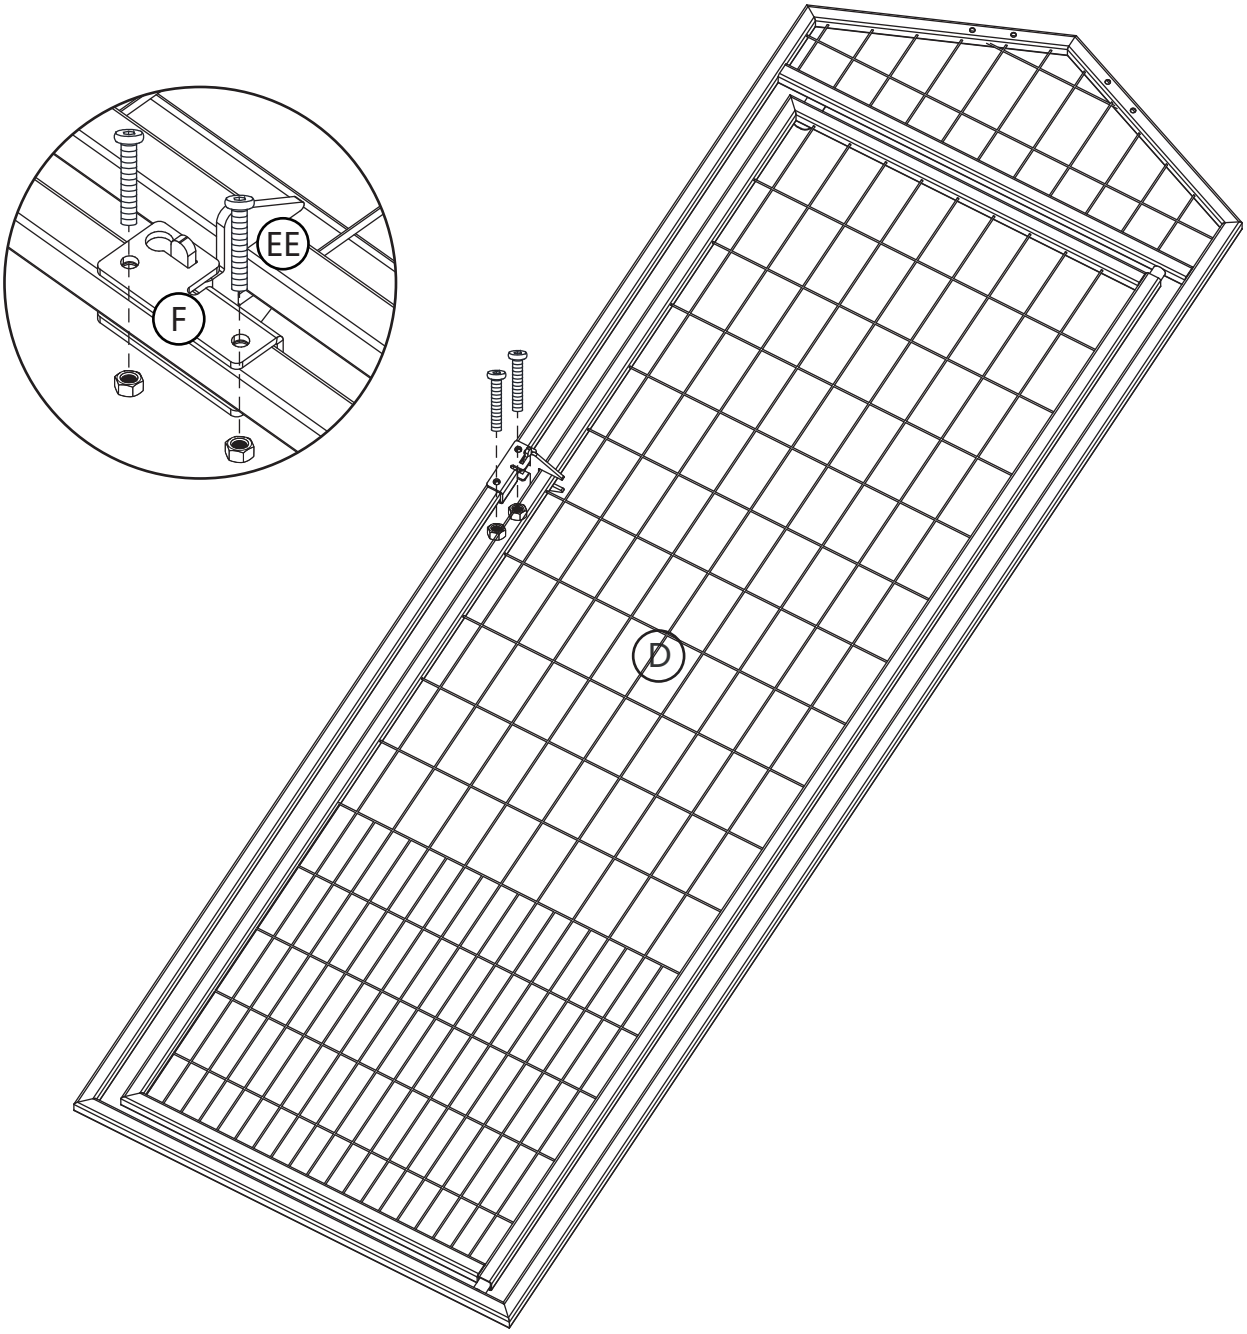

Attach F to D using 2 EE .

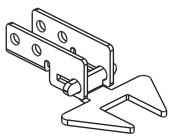



F x1




EE x2

Step 7

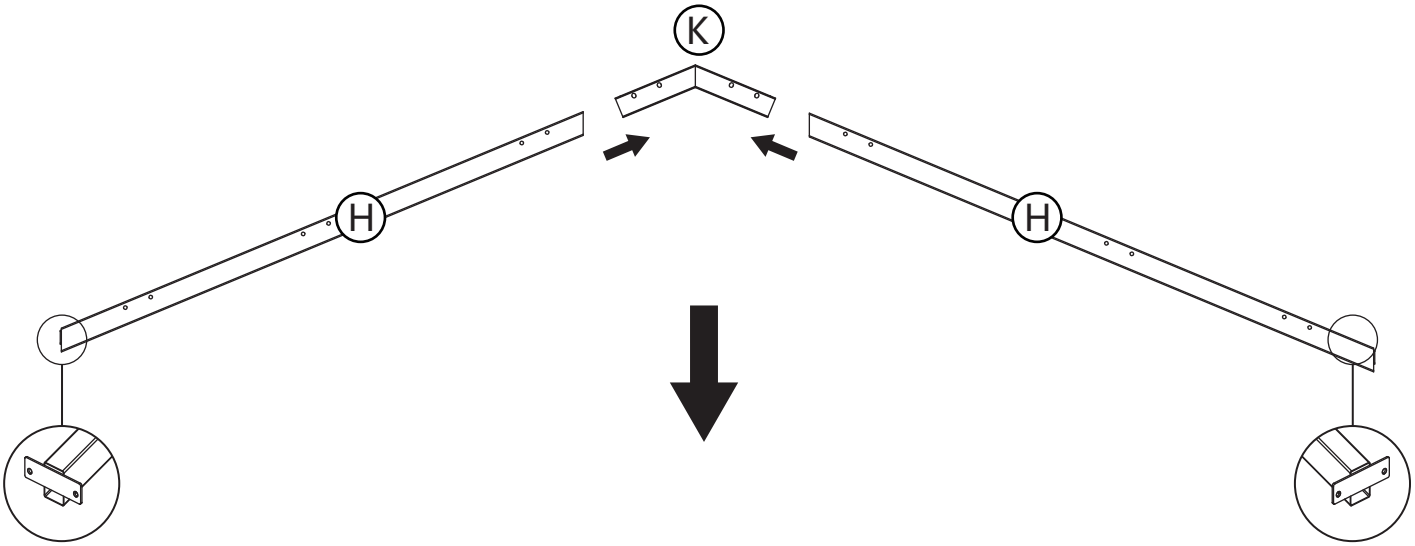


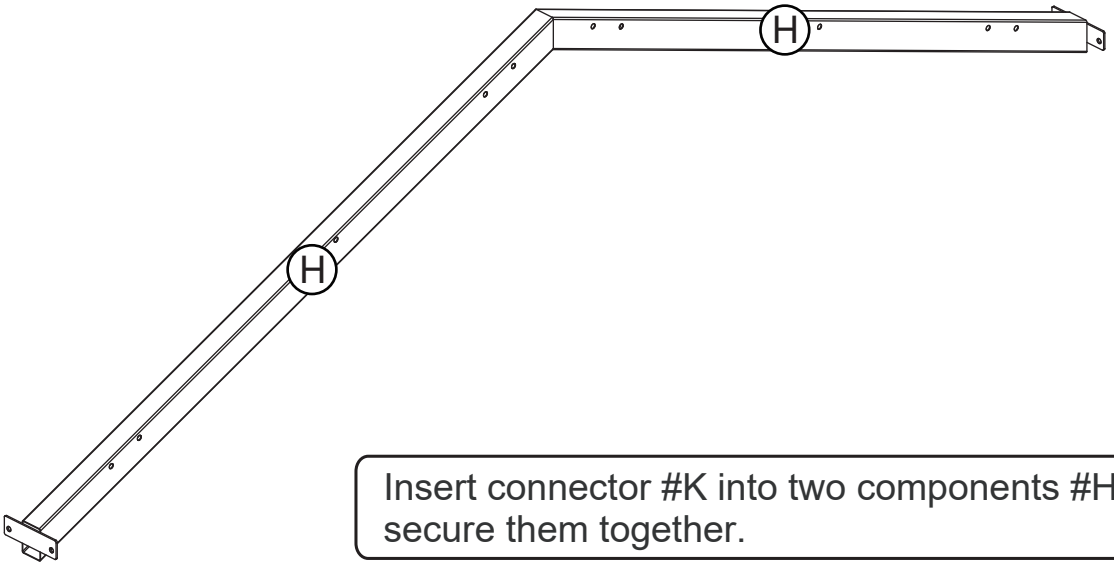

Insert connector #K into two components #H to secure them together.




H x2




K x1

Step 8

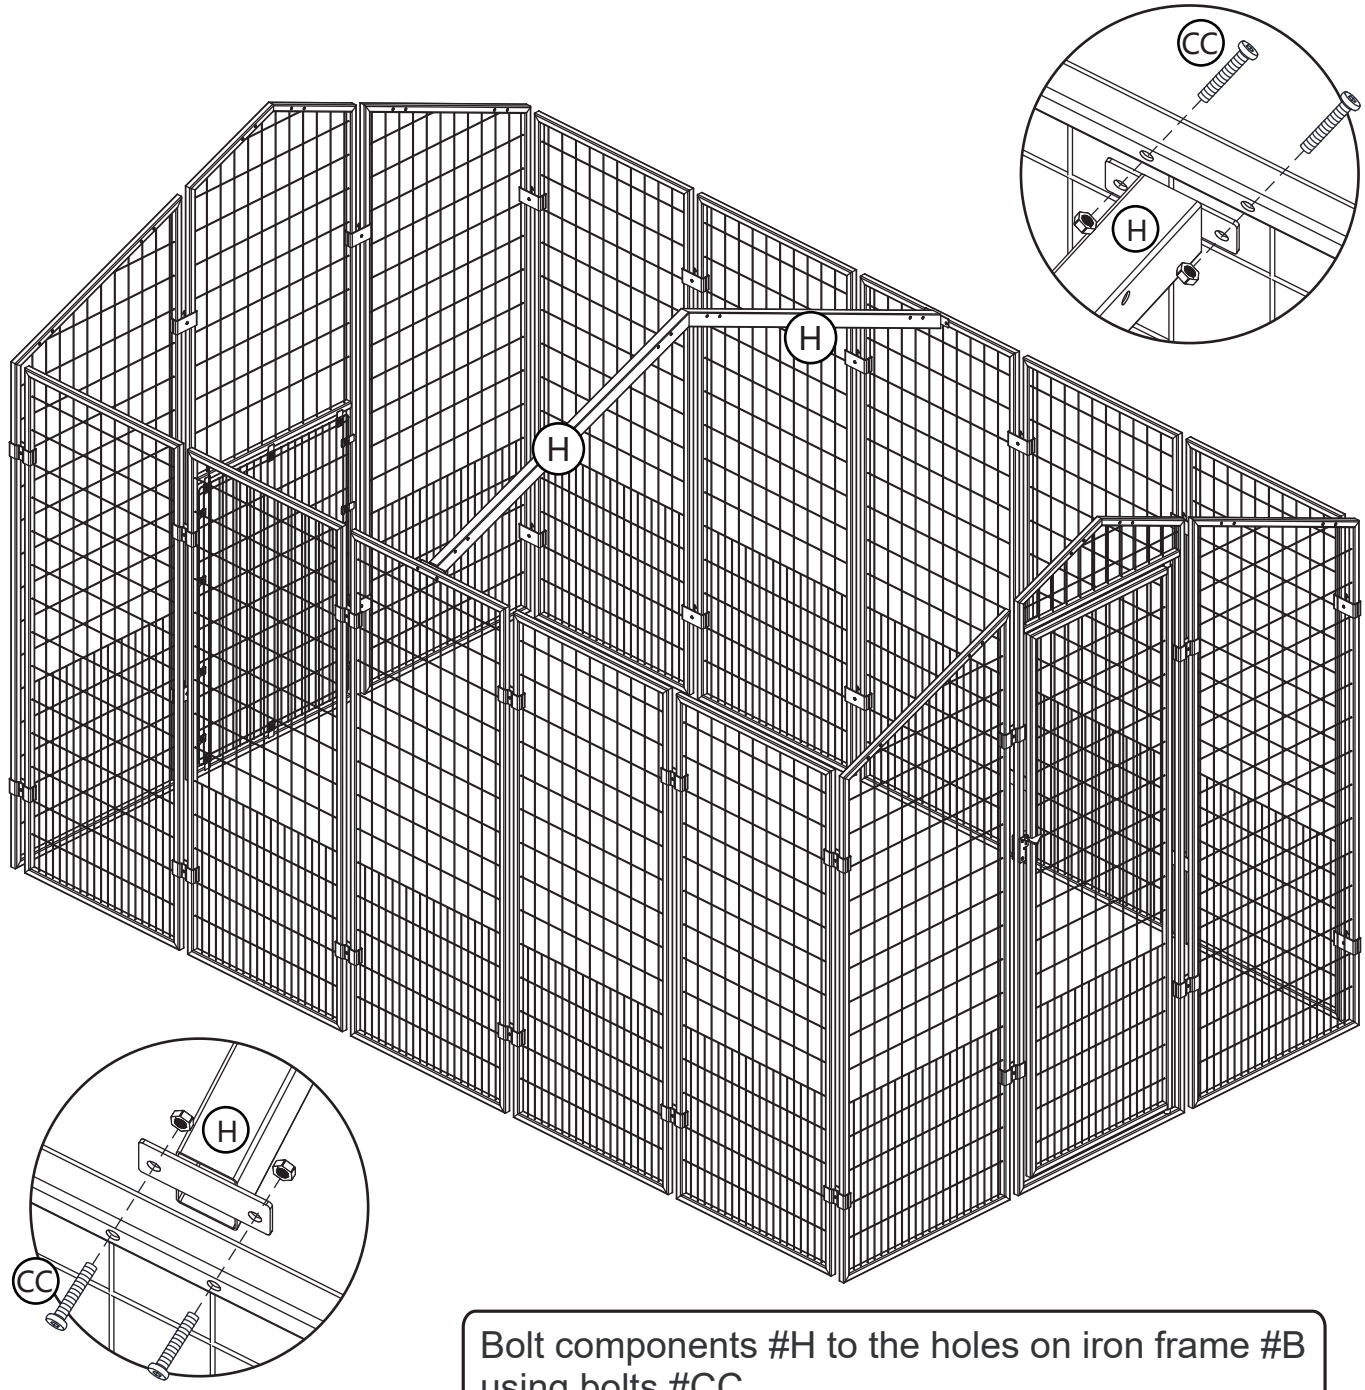


Bolt components #H to the holes on iron frame #B using bolts #CC.



CC x4

Step 9

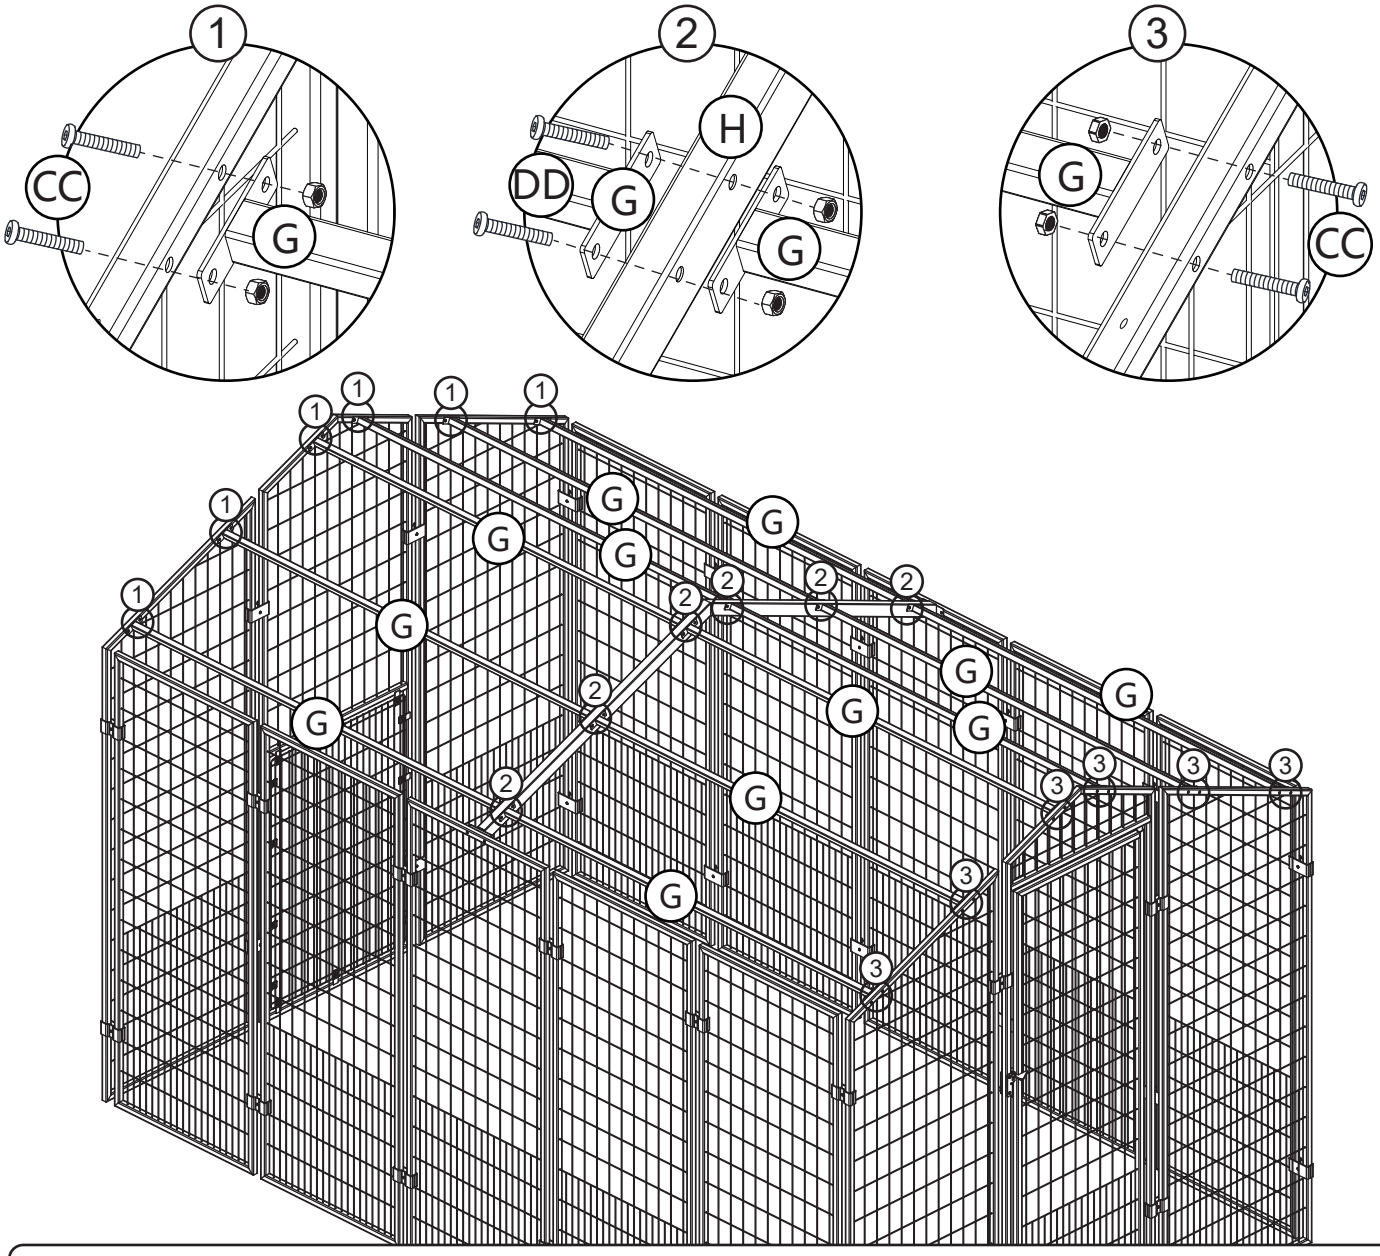


Fix the two G to H using DD (see enlarged view ②). Then, fix the unsecured ends of G to the arch tubes on both sides of the product using CC (see enlarged views ① and ③).
Note: Before installation, make sure that the screw holes on G align with all the screw holes on the rods. Repeat the above steps to connect the remaining parts.



G x12




CC x24




DD x12


Step 10

When assembling the PE4/PE7 metal sheet on the top,you may pre-drill the holes to make it easier to insert the screws. Follow the steps below.First, align the holes on PE4/PE7 with Part G. Use a 2.0drill bit to drill through the PE4/PE7 hole into the tube, making sure to drill out an opening in the tube. Then use the F1 screws to secure PE4/PE7 to part G.

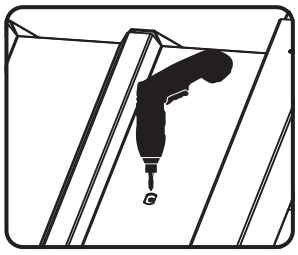


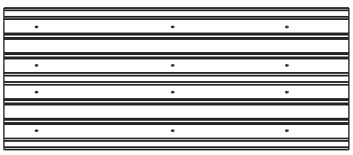

PE4 x7




PE7 x1




F1 x90


Step 11

When assembling the PE4/PE7 metal sheet on the top,you may pre-drill the holes to make it easier to insert the screws. Follow the steps below.First, align the holes on PE4/PE7 with Part G. Use a 2.0 drill bit to drill through the PE4/PE7 hole into the tube, making sure to drill out an opening in the tube. Then use the F1 screws to secure PE4/PE7 to part G.

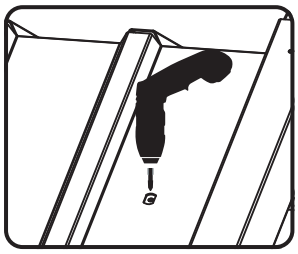


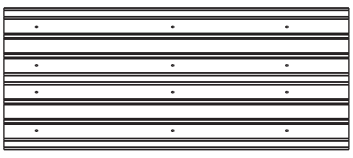

PE4 x7




PE7 x1




F1 x90


Step 12

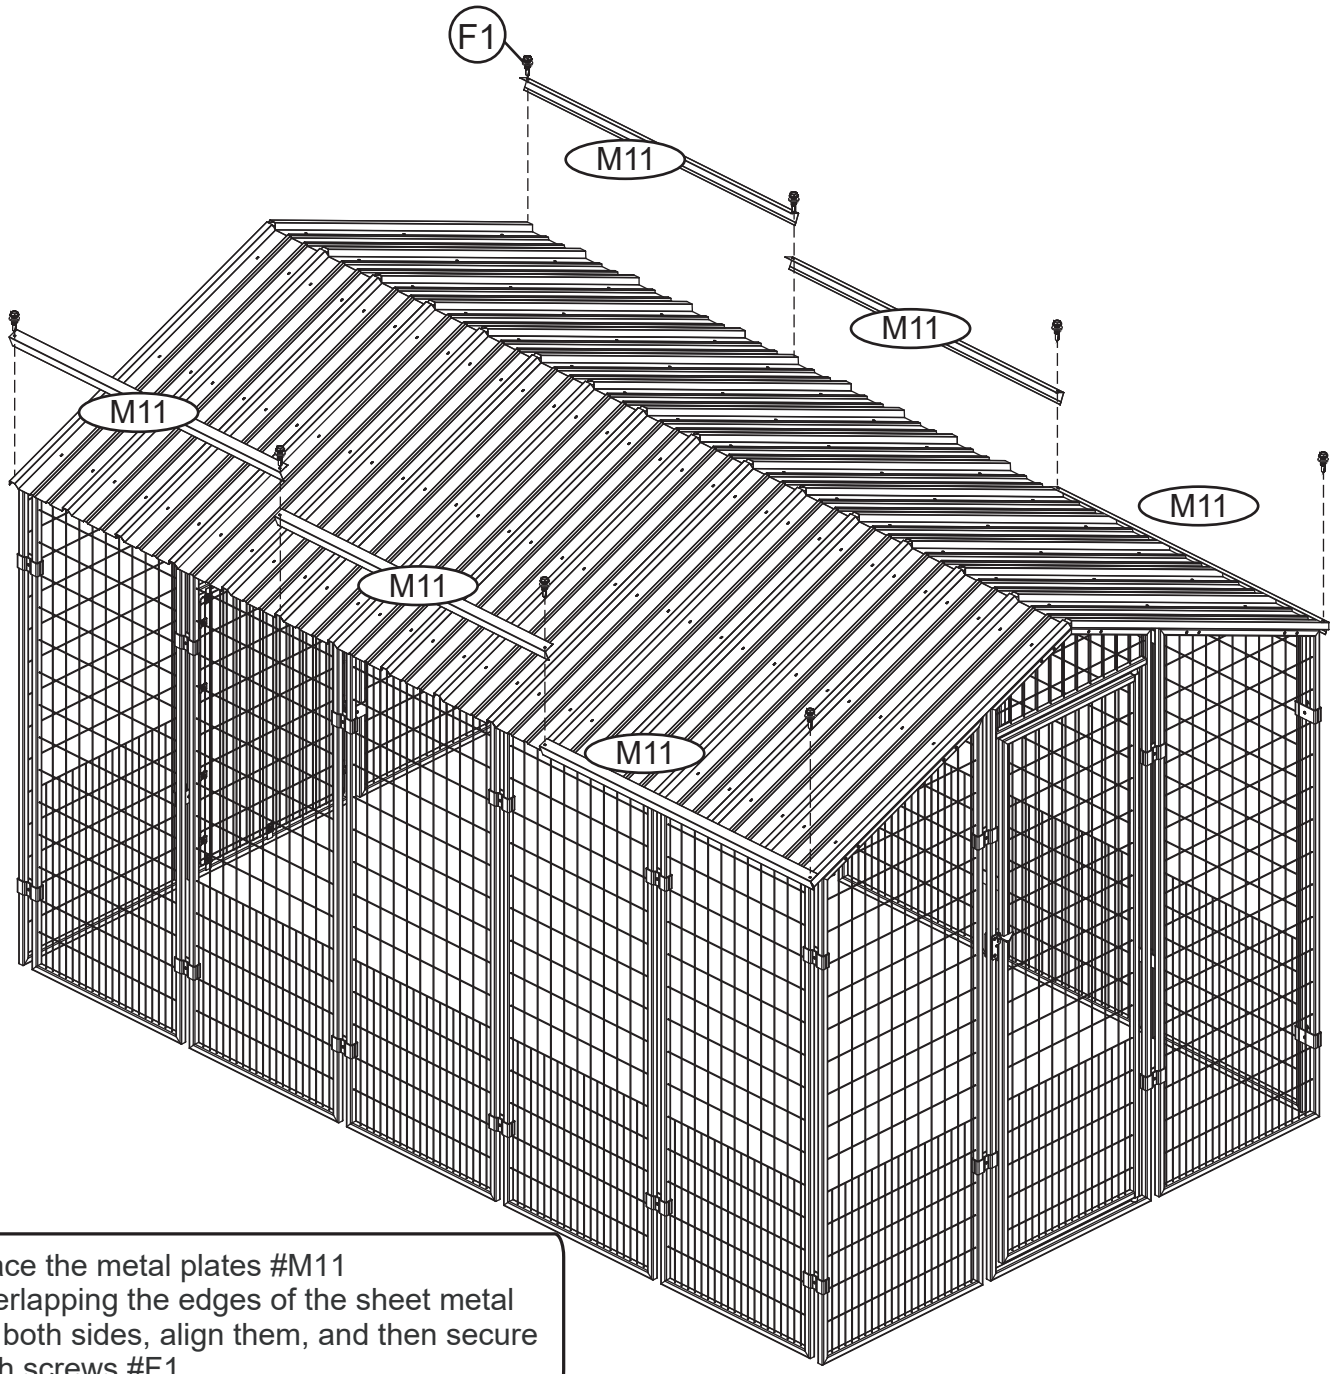

Place the metal plates #M11 overlapping the edges of the sheet metal on both sides, align them, and then secure with screws #F1.




M11 6PCS




F1 x8


Step 13

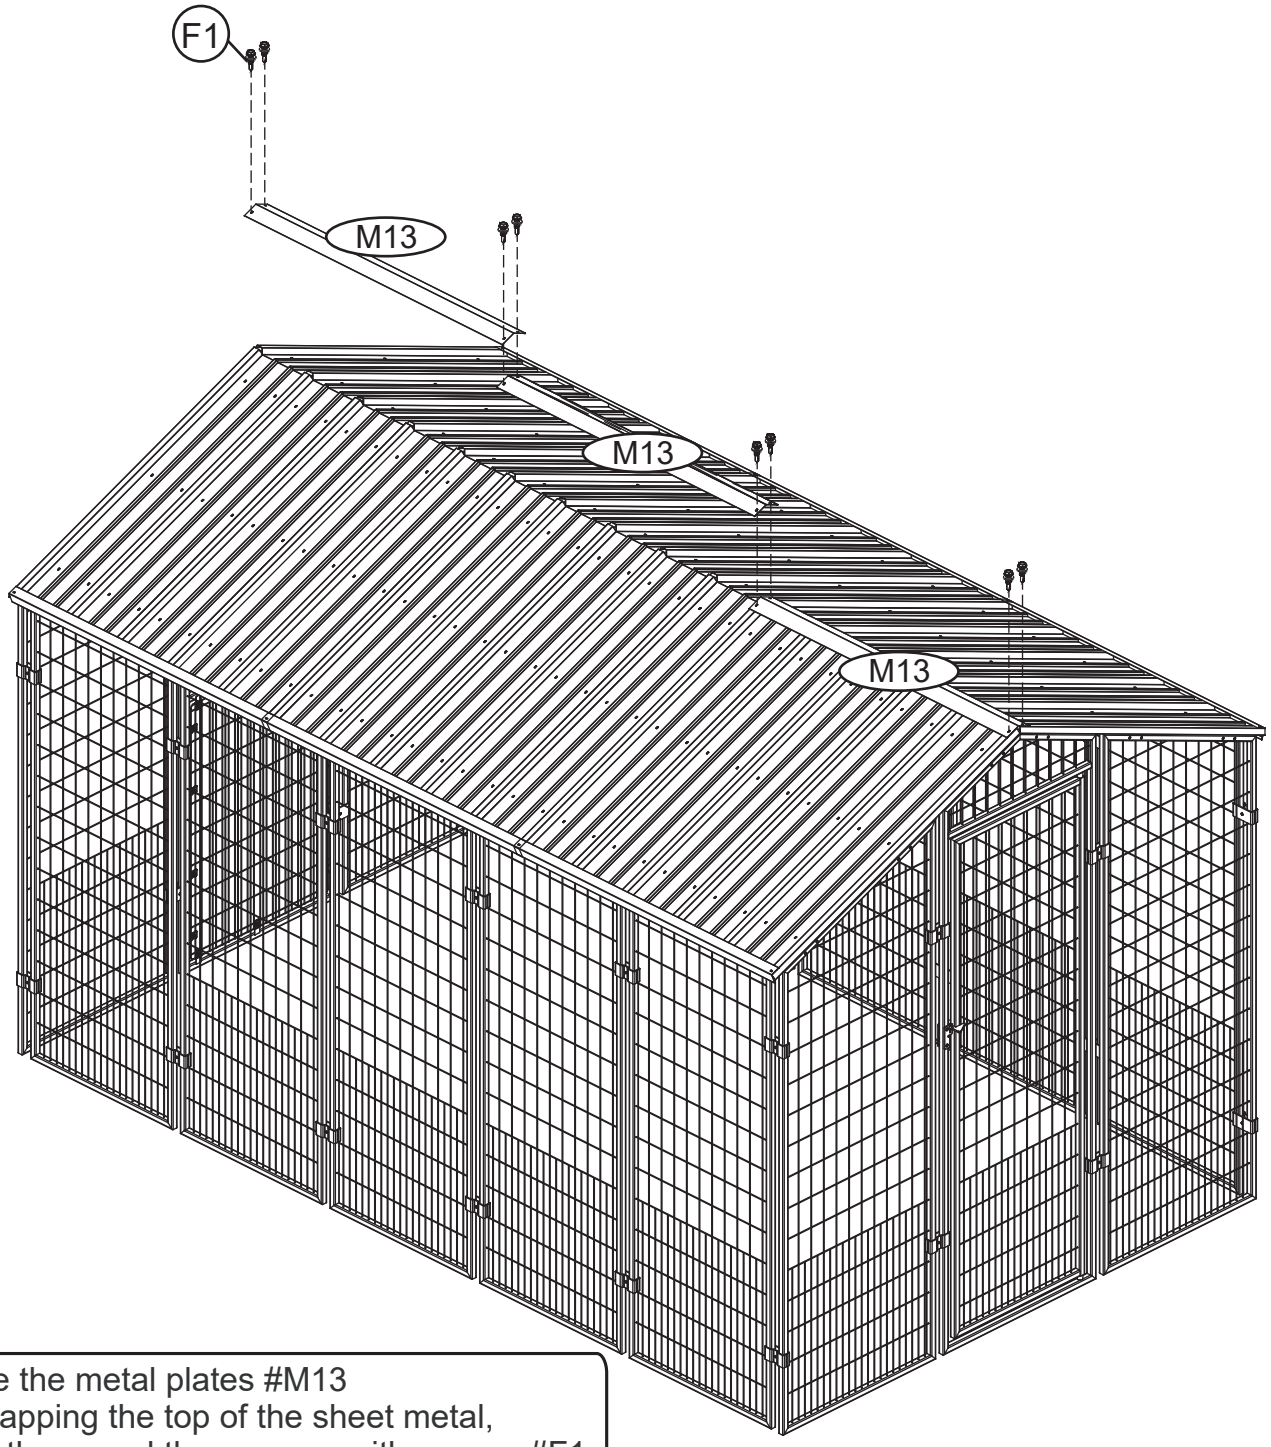

Place the metal plates #M13
overlapping the top of the sheet metal,
align them, and then secure with screws #F1.





M13 3PCS




F1 x8


Step 14

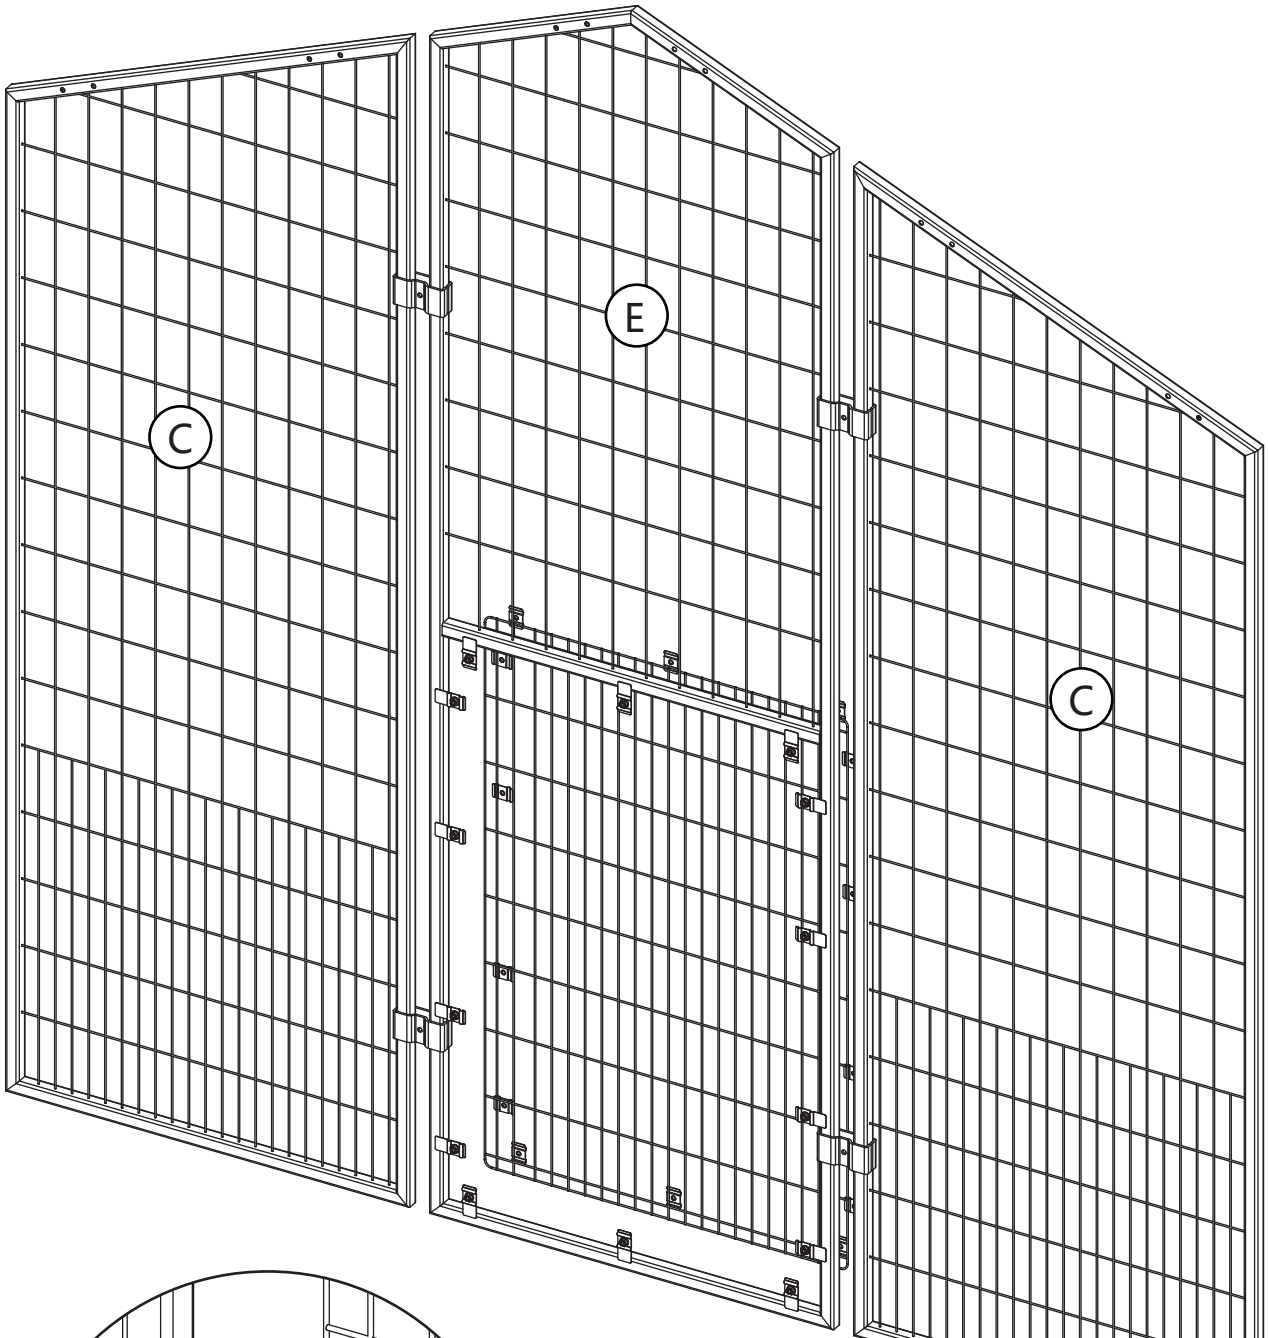

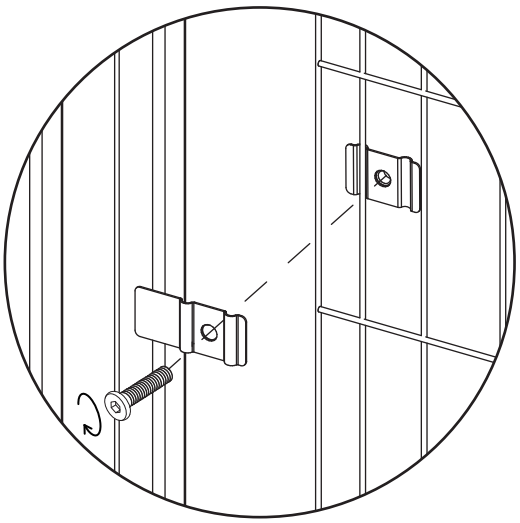

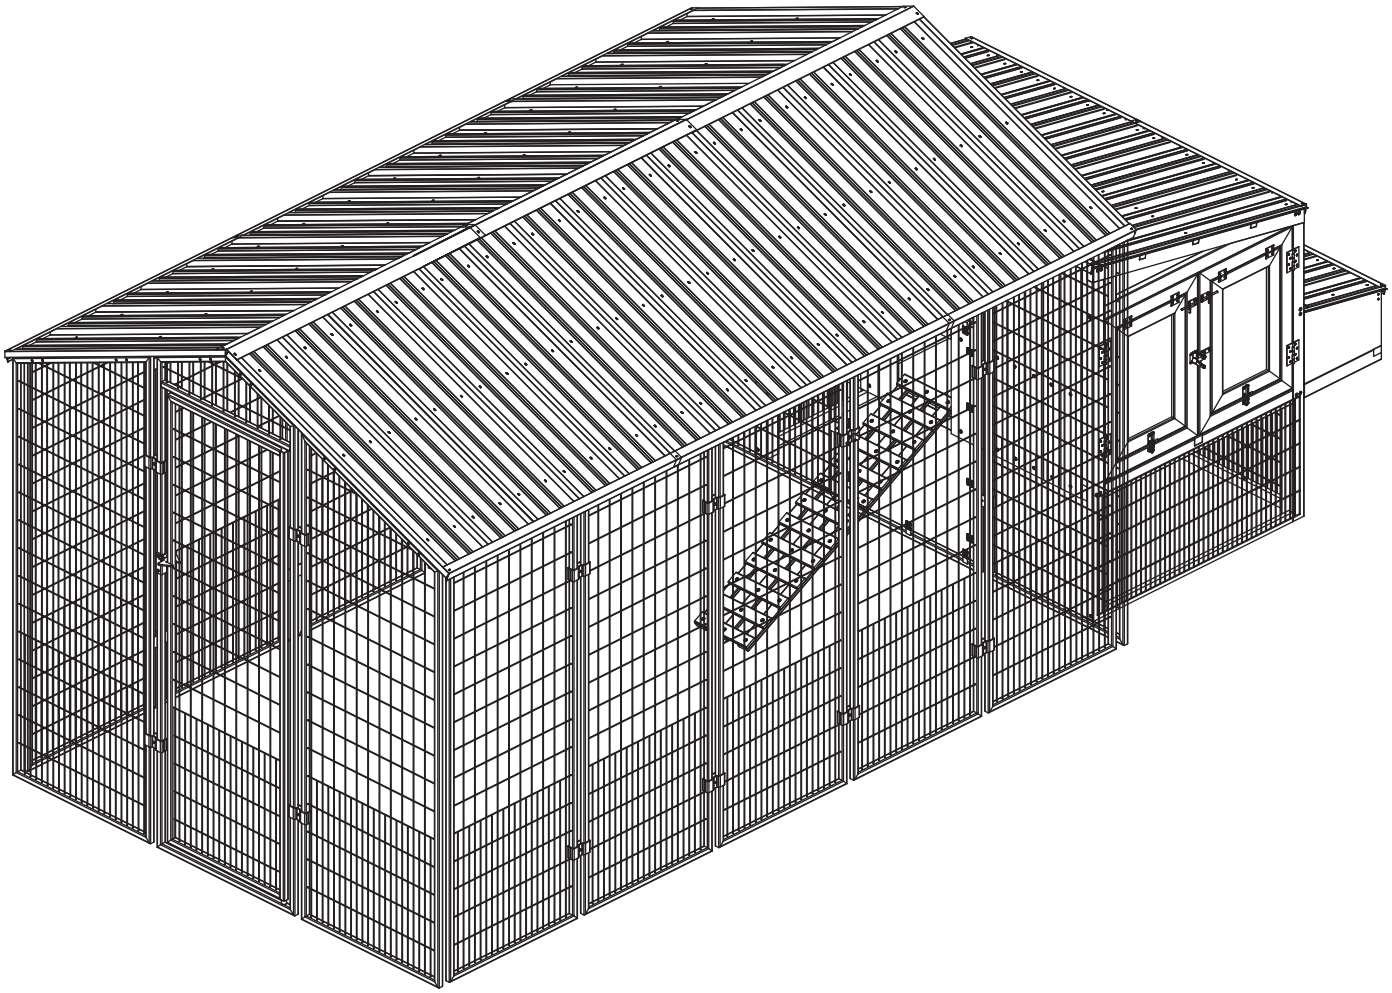

This wire mesh chicken run can be used with wooden chicken run.
Visit www.veikous.com to purchase if needed.

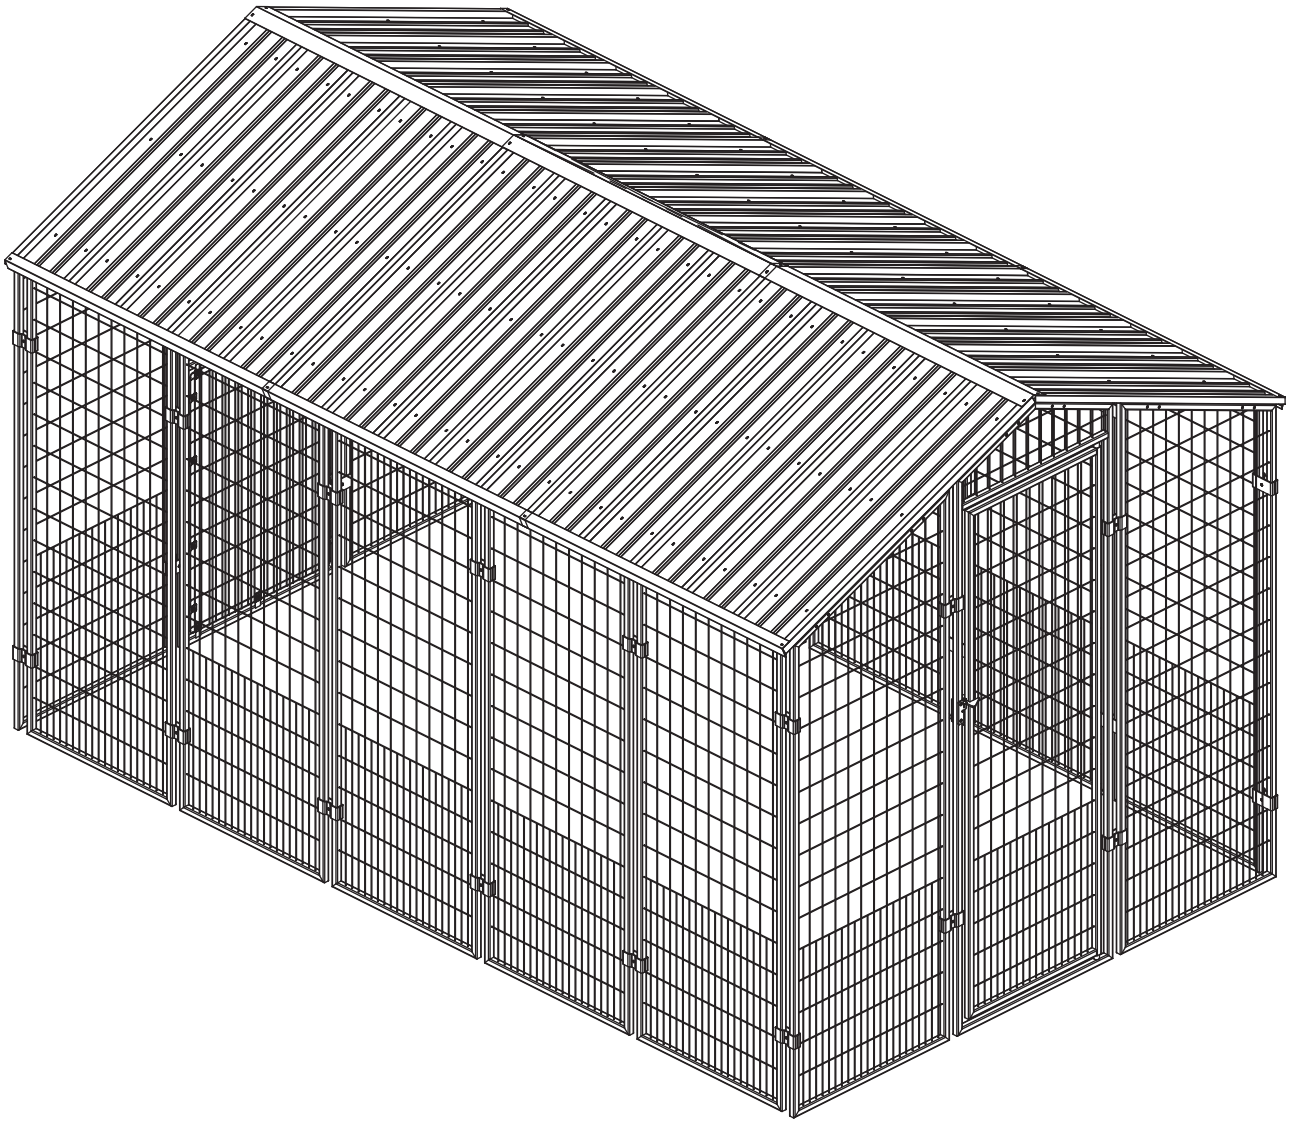

For better shopping experience
Please visit our website
WWW.VEIKOUS.COM

VEIKOUS