




TRUCK TROLLEY™

Long Bed Installation Note(s)/Kit

Parts Included:

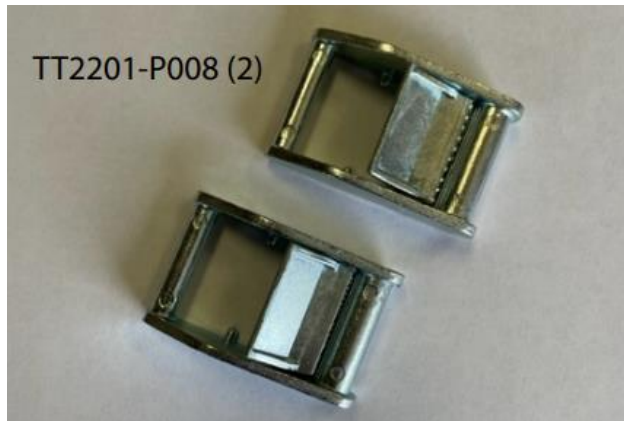

Step 1: Complete step 1 - 2 from main instructions.

Step 2: Feed drivers-side long cord rail through cam buckle (TT2201-P008). Over rear “arm” of buckle, then through clasp. Feed cover over cord/buckle



Step 3: Adjust clasp and cover toward cab approximately 65”. Repeat on the passenger-side.



Step 4: Complete step 3 – 7 from main instructions

Step 5: While the Trolley is in position (as described in step 7 from the main instructions) move the cam buckle and cover on the driver and passenger-side until contact with the back brackets “d” loop is made. This position on the back bracket is intended to limit the Trolley’s travel toward the cab.



Step 6: Complete steps 8 – 12 from main instructions