




# Grommet Installation

For installation of a 2nd grommet, carefully cut a 1 7/8 hole at least 12" from the mat edge

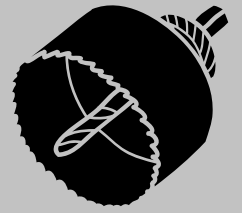

For replacement installation remove old grommet by unscrewing the phillips head screws & separating the two sections.

Insert grommet into the 1 7/8 hole and use the screws to lock the sections together.



The extra foam spacer is optional and may not be needed.



Call or email us with any questions you might have!

[CUSTOMERSERVICE@RUBBERDOCKIE.COM](mailto:CUSTOMERSERVICE@RUBBERDOCKIE.COM)


(605) 422-1325



# Tether Installation

Untie the knot and remove the ball from the bungee cord.

1

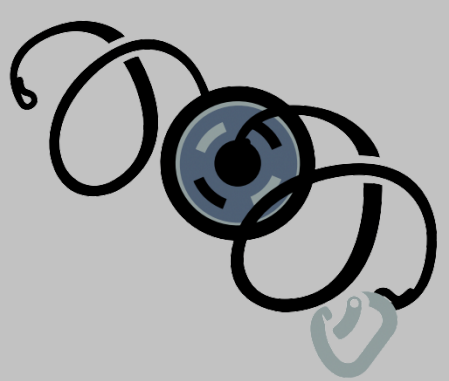

2

Pass the bungee cord through the installed grommet.

Replace the ball stop onto the bungee cord and retie the knot.

3



4

Call or email us with any questions you might have!

[CUSTOMERSERVICE@RUBBERDOCKIE.COM](mailto:CUSTOMERSERVICE@RUBBERDOCKIE.COM)

(605) 422-1325