

WIRE SPLICING OPERATION

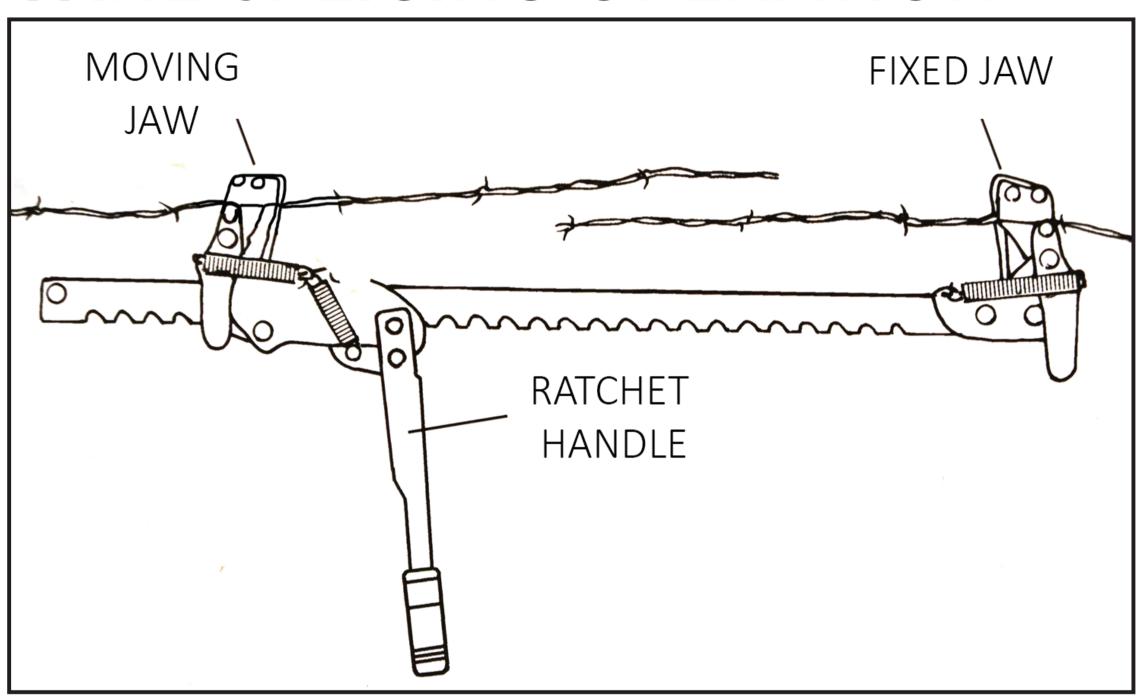

- 1. Lock one end of wire in fixed jaw
- 2. Lock other end of wire in moving jaw
- 3. Use ratchet to eliminate slack before splicing
- 4. Let wire stretcher hold wires in place to perform splicing
- 5. Release one jaw at a time when finished

WIRE STRETCHING OPERATION

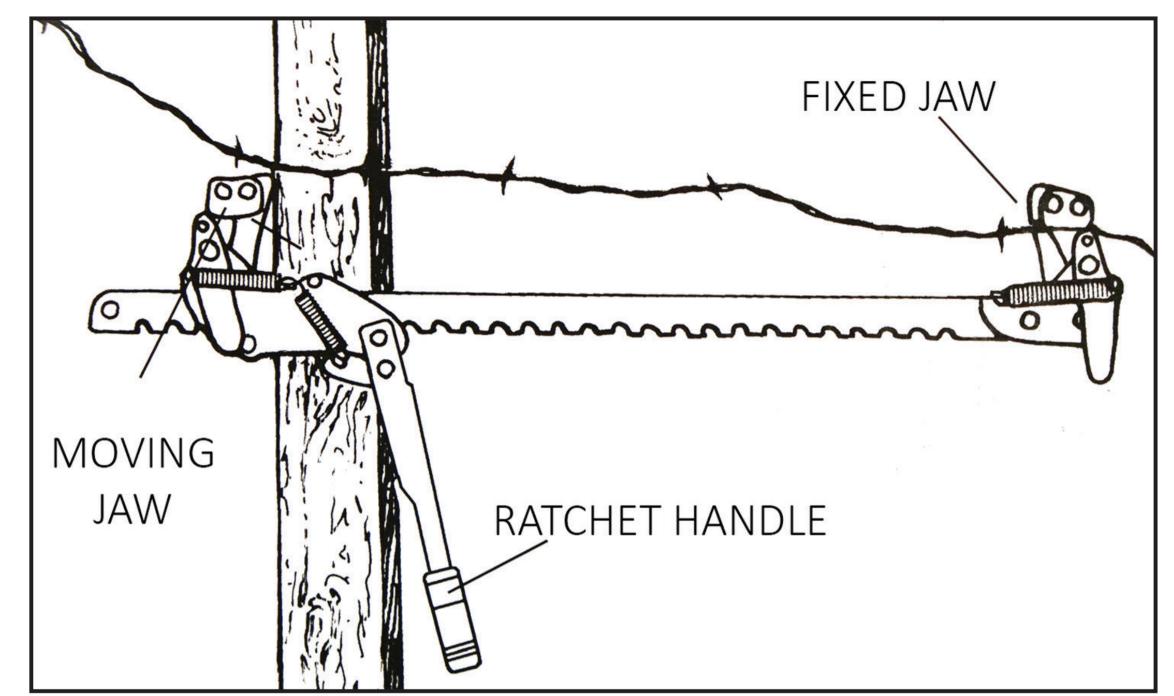

- 1. Lock one end of wire in fixed jaw
- 2. Position the moving jaw behind a post
- 3. Use ratchet to create desired tension in wire
- 4. To tighten loose fence wire secure the wire in the two jaws and use handle to create tension
- 5. Do not overtighten as injury could result