



# WIRE SPLICING OPERATION

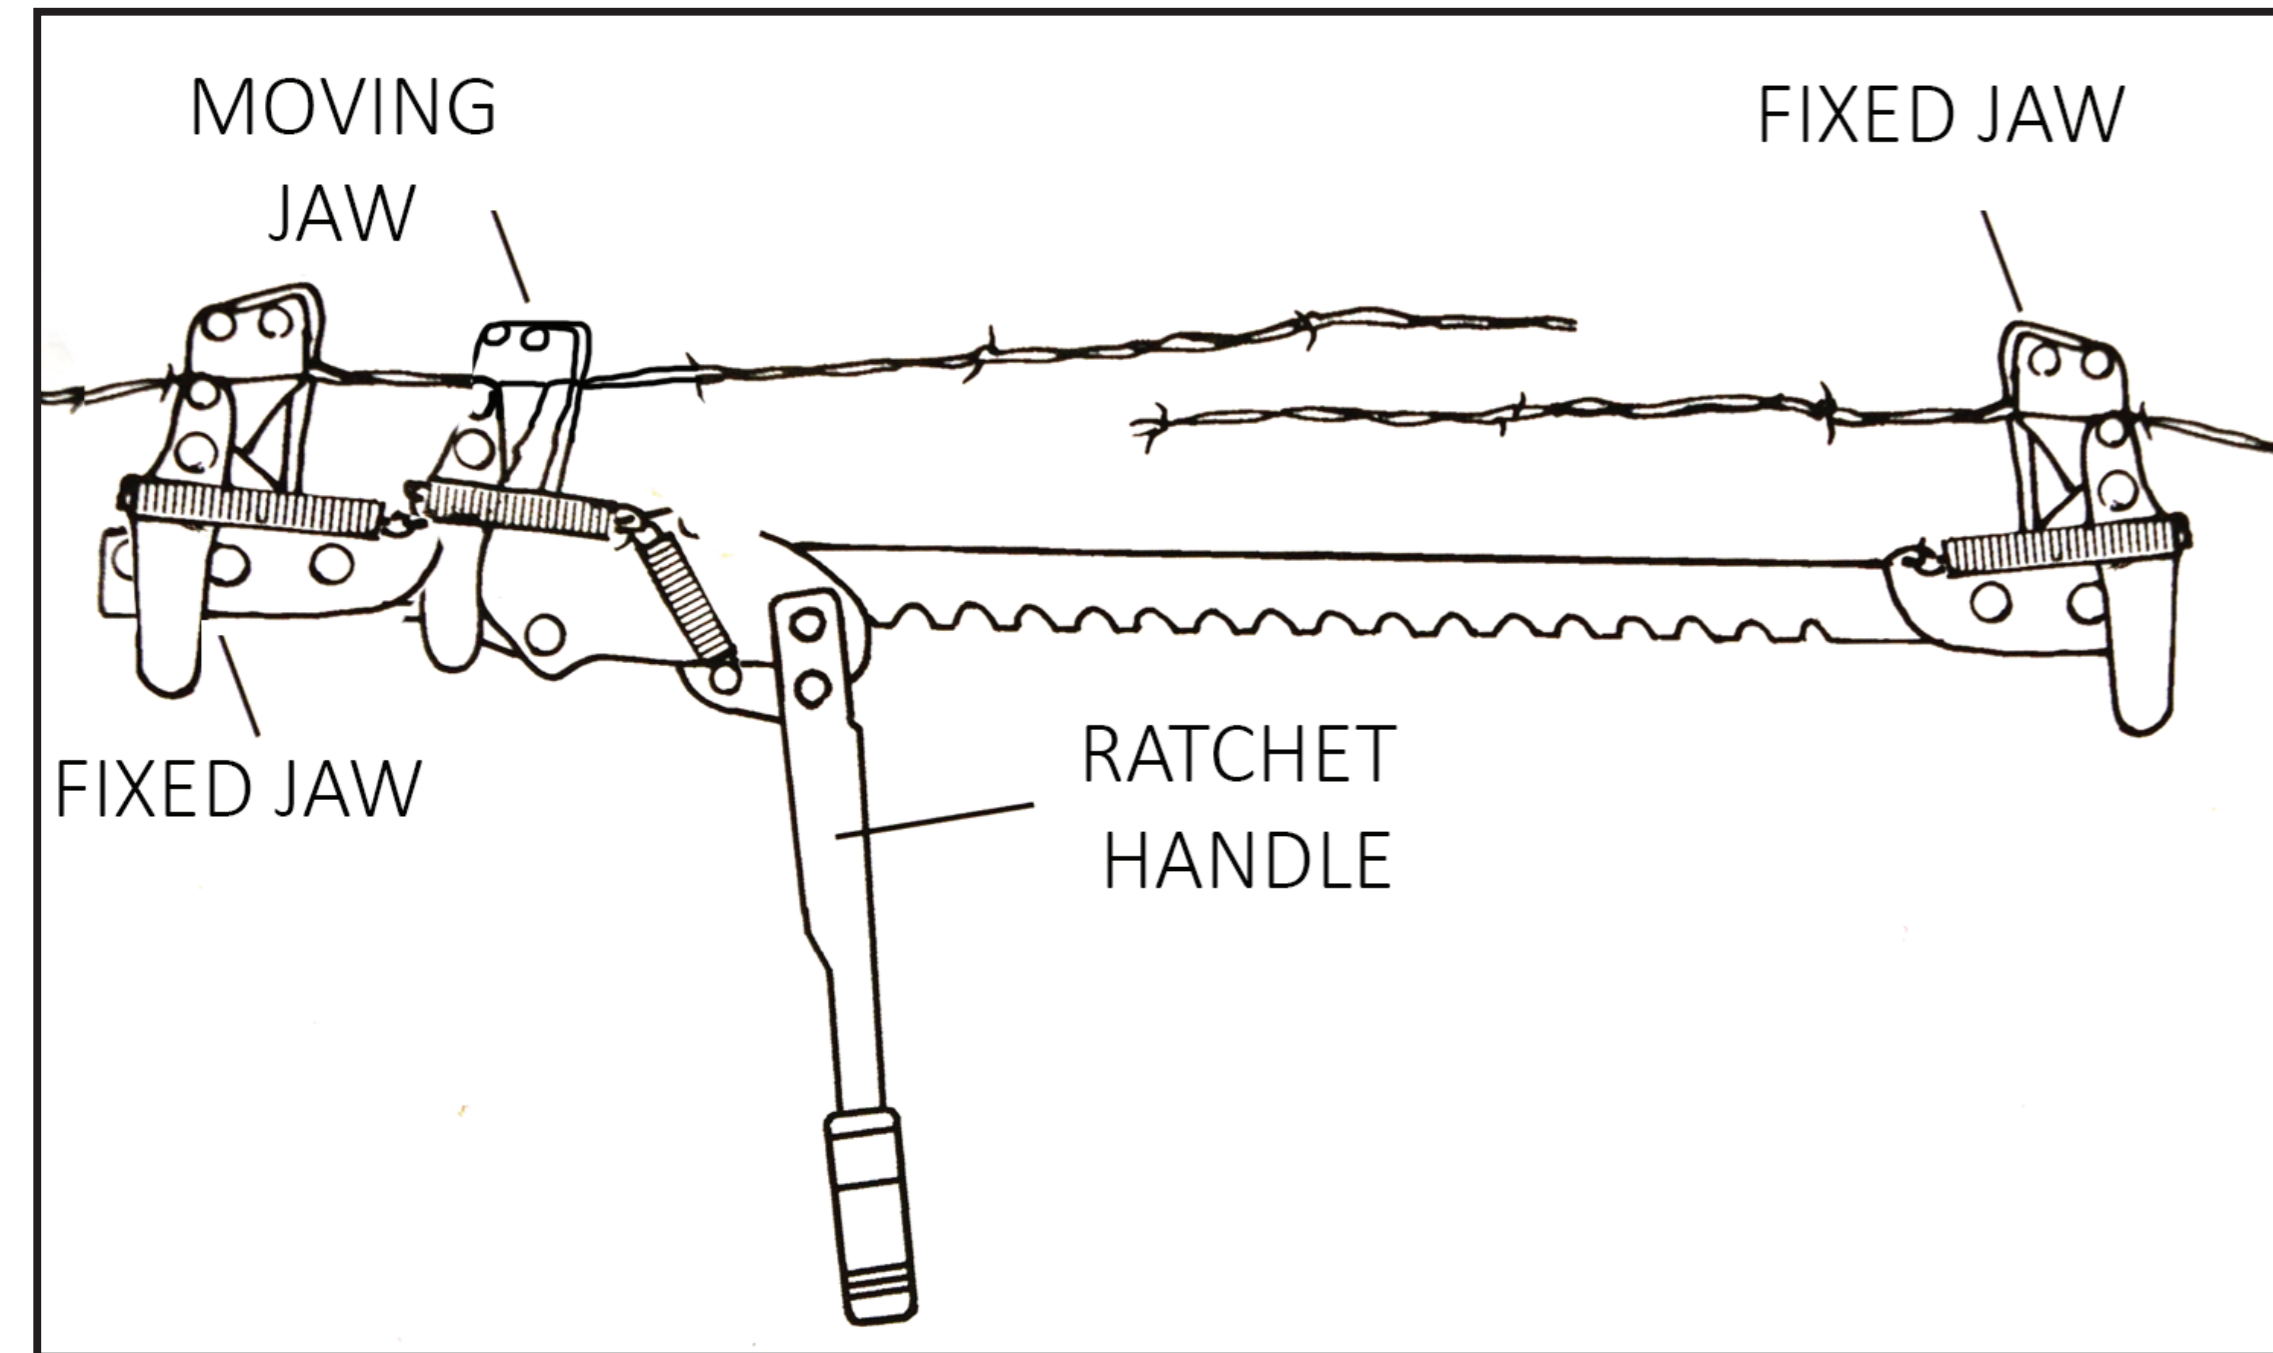

1. Lock one end of wire in fixed jaw
2. Lock other end of wire in moving jaw
3. Use ratchet to eliminate slack before splicing
4. Let wire stretcher hold wires in place to perform splicing
5. Release one jaw at a time when finished

# WIRE STRETCHING OPERATION

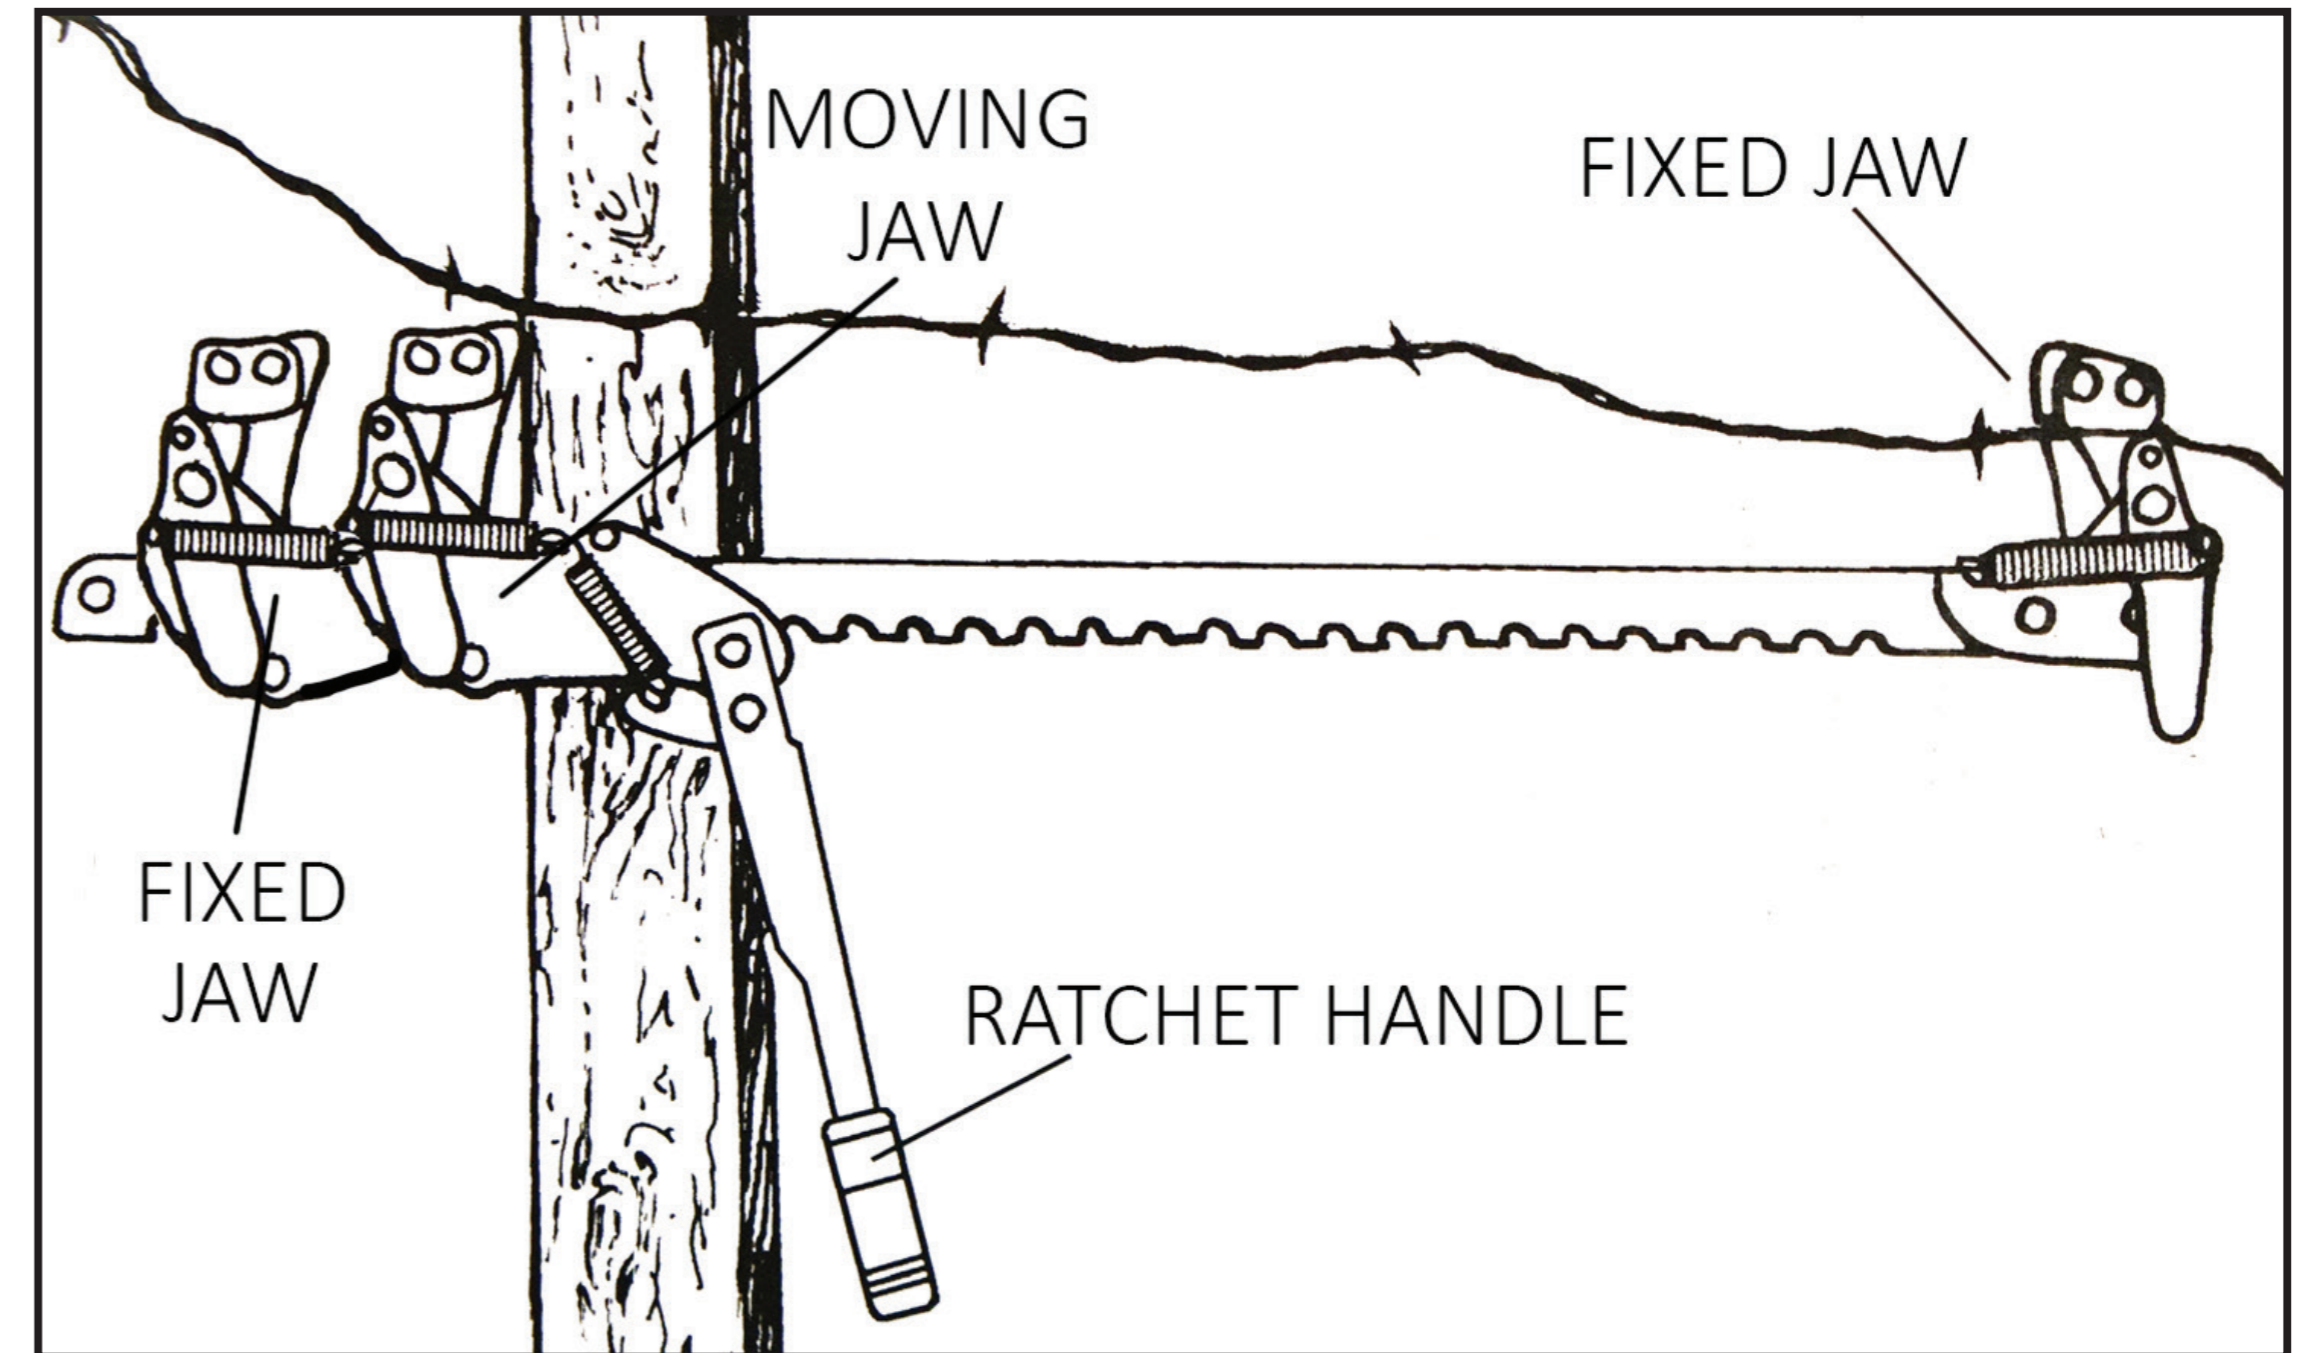

1. Lock one end of wire in fixed jaw
2. Position the moving jaw behind a post
3. Use ratchet to create desired tension in wire
4. To tighten loose fence wire secure the wire in the two jaws and use handle to create tension
5. Do not overtighten as injury could result