



# Rebar Ties

- Secure rebar intersections or secure to raising supports
- 16 gauge black annealed wire

**1** Wrap tie around rebar to be secured. Wire will bend easily by hand.

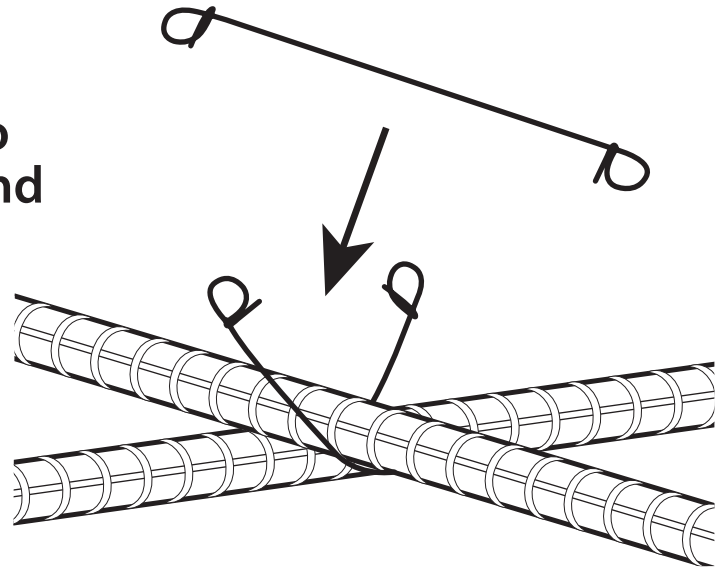

**2** Insert the rebar tie tool into both loops and spin until the tie is tight.

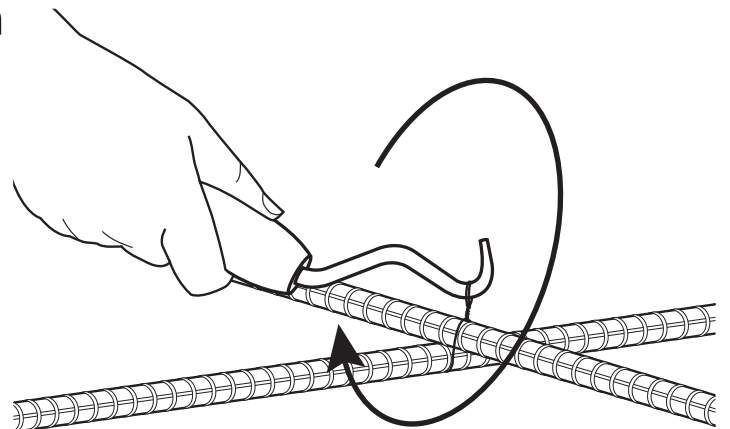

**3** Fold the loop down to keep it from nearing the surface of the concrete.

