



# Wall Tie

- Attach brick veneer to the supporting wooden structure
- Corrugation for extra strength & holding power


**1** Bend wall tie so it falls on the mortar area and can be attached the wall

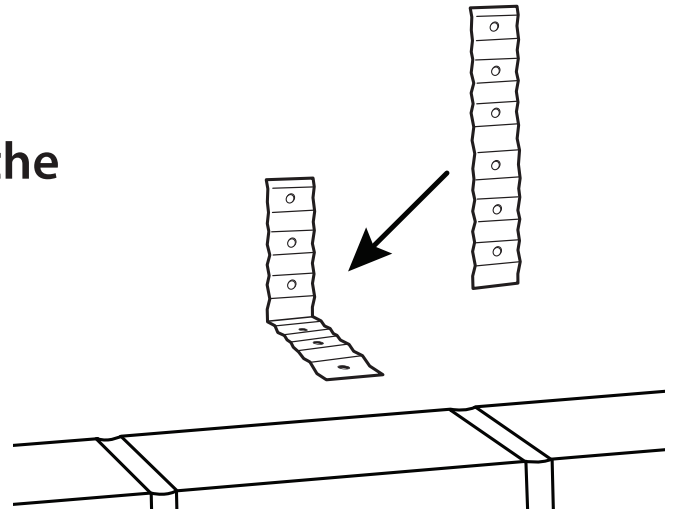

**2** Attach tie to structure with nails or screws

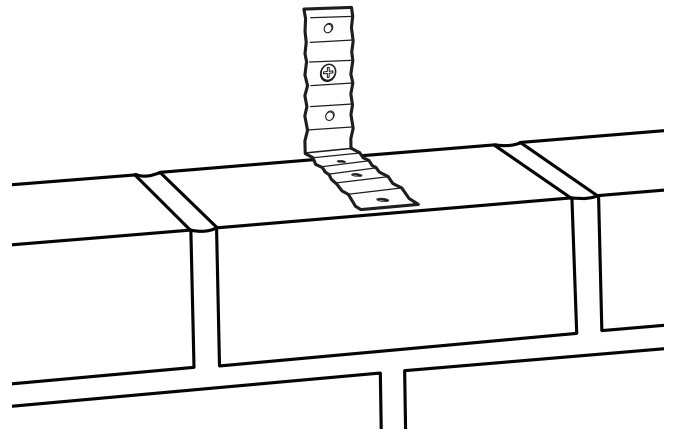

**3** Set next coarse of bricks over the tie. The mortar will secure the tie.

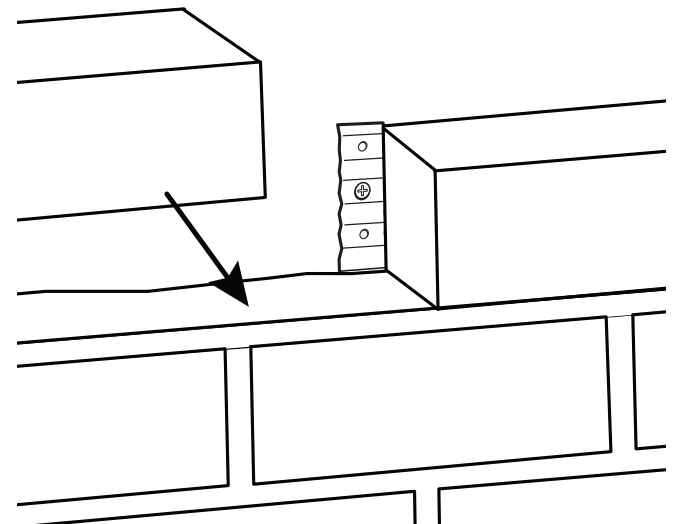

\*Check with local building codes as to how many ties to use on your project