



Tie Wire Roll

- Secure rebar intersections or secure to raising supports
- Black annealed wire bends easily by hand

1 Cut a 18"-20" piece of wire from roll. Double the wire up by folding it over. Wrap wire around rebar to be secured in both directions.

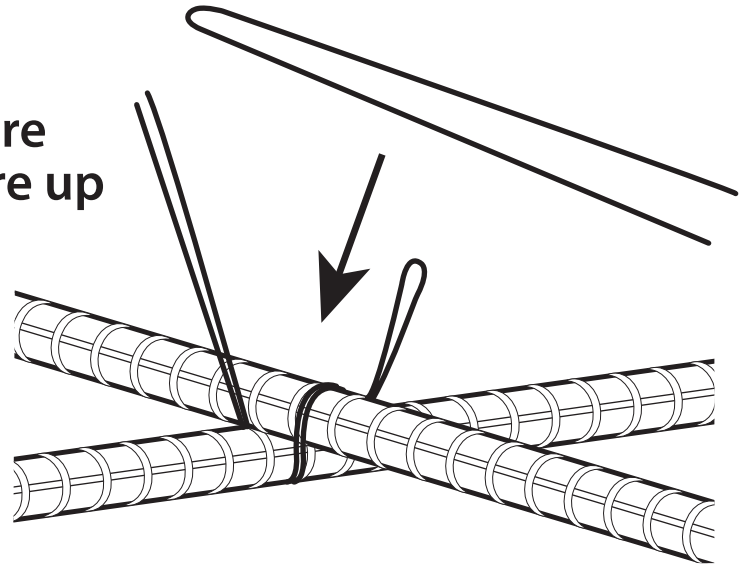

2 Loop both ends around rebar tie tool and spin until the wire is tight and holds joint securely.

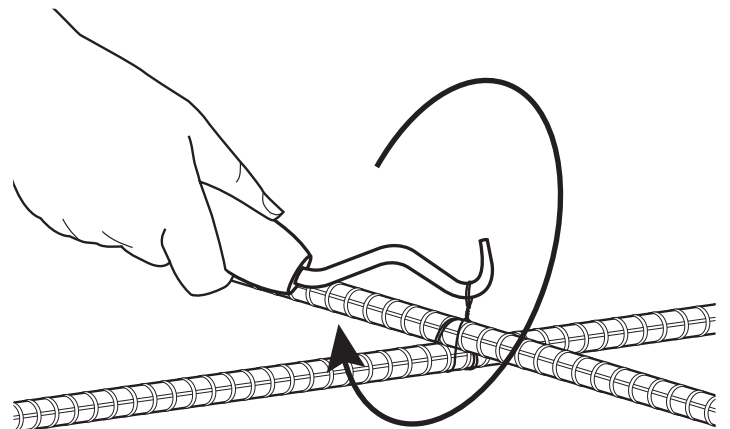

3 Fold the loop down to keep it from nearing the surface of the concrete.

