


6779-8219 Oversized Drying Rack ©2019 Whitmor, Inc.

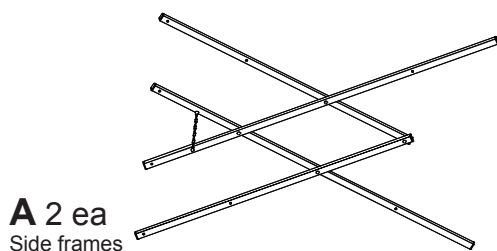

A 2 ea
Side frames



B 8 ea
Long hanging bars



C 4 ea
Short hanging bars



D 16 ea
Phillips screws




E 16 ea
Washers

Part	Reference
A	F10265
B	F10266
C	F10267
D	F10268
E	F10269


Tools Needed:
Phillips screwdriver

STEP 1: With the side frame (**A**) closed and chain facing outward, attach 8 long hanging bars (**B**) using 8 washers (**E**) with 8 Phillips screws (**D**). Tighten with a Phillips screwdriver (not included).

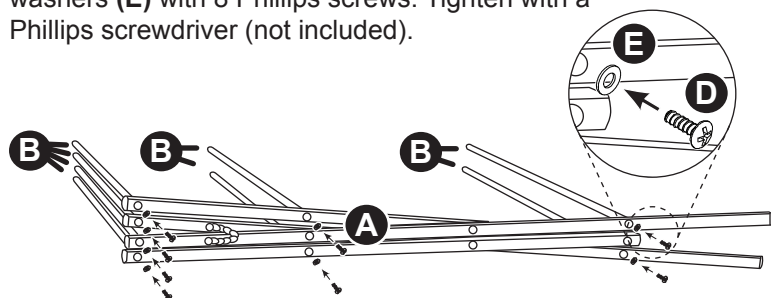


STEP 2: Open the side frame and lay it down with the long hanging bars (**B**) pointing up. Install the four short hanging bars (**C**) in the remaining holes on the tails of the rivets.


NOTE: Short hanging bars rest on rivets and are not tightened into place. Once the other side frame (**A**) is installed, short hanging bars will be held into place.

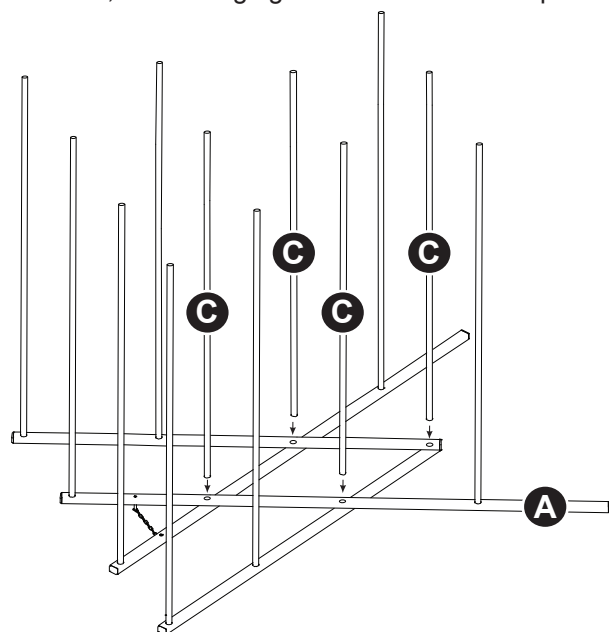

STEP 3: Attach the second side frame (**A**) with chain facing outward by aligning all of the bars in the appropriate holes. Use 8 washers (**E**) with 8 Phillips screws (**D**) and tighten with a Phillips screwdriver.

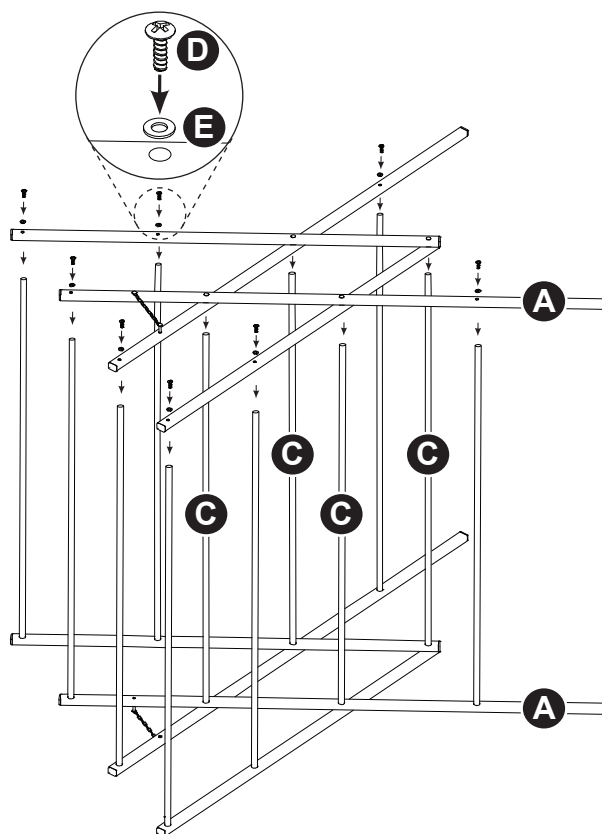

NOTE: Assembled drying rack can be folded for easy storage.

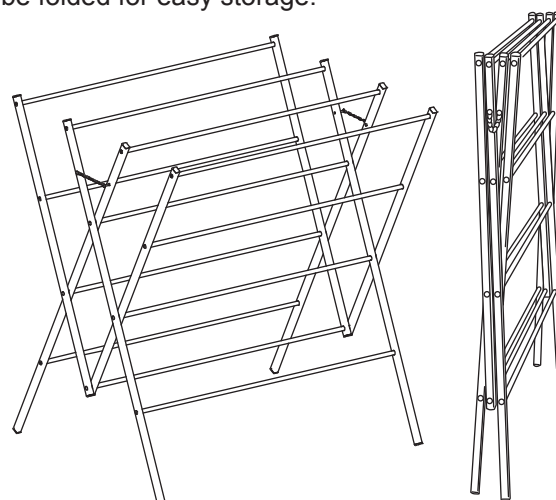

8680 Swinnea Road • Suite 103 • Southaven, MS • 38671

NEED HELP? For help with assembly, or if you are missing a part, please call Whitmor's Consumer Care Team, 1-888-944-8667 between 8 a.m. and 4:30 p.m. (Central Standard Time) Monday through Friday. Or email: help@whitmor.com. Visit us online at www.whitmor.com