






TRAILER VALET MV PRO

Ouick Start Guide

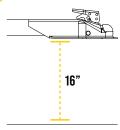

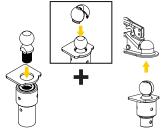

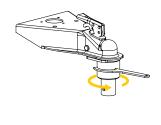

Check trailer height and raise the trailer tongue to where the frame is about 16 inches off the ground to give adequate space to attach the dolly.




Set up hitch ball and ball base. Then attach to coupler.

Optional: For 2-5/16" couplers, attach ball converter to hitch ball.




Use spanner wrench and tighten that base firmly!



Using your trailer jack, lower the hitch towards the unit's rotating coupler and attach rotation pin to secure.



Make sure the MV Pro is securely tightened and not rocking.

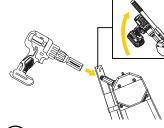


Align and insert the drill adapter to the drill adapter driveshaft. Lift the steering handle to disengage brakes, and start moving!

IMPORTANT SAFETY INFORMATION

For information and assistance, please visit our support page at TrailerValet.com or give us a call at (844) 846-9344. Scan the QR code to the right for detailed safety and usage information.



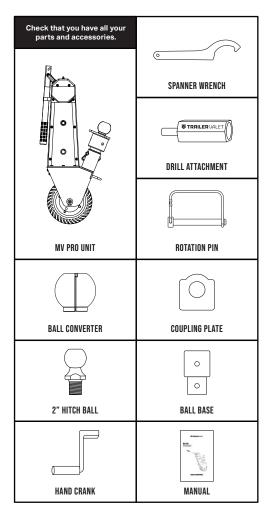





TRAILER VALET MV PRO W/ JX SIDE

Quick Start Guide






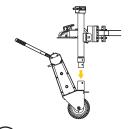


Lower the hitch and connect the JX Side to the MV Pro's rotating coupler.



Attach rotation pin to secure.

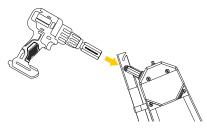

Align and insert the drill adapter to the drill adapter driveshaft.

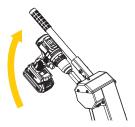

Lift the steering handle to disengage brakes, and start moving!

IMPORTANT SAFETY INFORMATION

For information and assistance, please visit our support page at TrailerValet.com or give us a call at (844) 846-9344. Scan the QR code to the right for detailed safety and usage information.

