

Instruction Manual for Premium Cedar/Red Cedar Pyramid Trellis

PLEASE READ ALL DIRECTIONS BEFORE STARTING ASSEMBLY


A clean, flat work surface is preferred.

Parts list:

- 1 Solid Cap Piece
- *Topper may vary
- 4 Triangular Trellis Panels
- 28 1¼" Wood Screws

Tools:


- Phillips Head Screwdriver

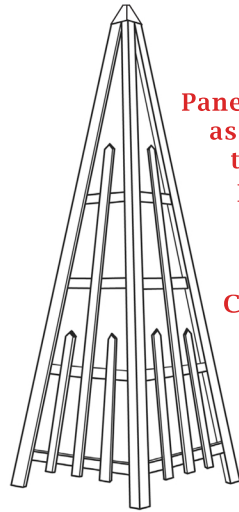

PLEASE READ FIRST!

Panel Note: Pre-drilled screw holes are in line with pilot holes, assisting with proper alignment when screwing the pieces together. Be sure to hold both pieces of wood firmly in position when starting each screw. Make sure you are driving screws in straight, particularly into the edges of the corner support pieces.

Cap Note: Topper may vary. Pre-drilling into the cap will be necessary to prevent splitting and should be done after each panel is lined up. Start with Step 1 and pre-drill at each panel assembly.

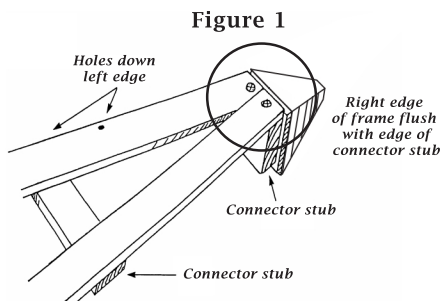

Step 1: Place the Cedar Cap on its side. Place the “point” of one Triangular Trellis Panel on top of the connector stub (see Figure 1) at the base of the pyramid, with the cross-members on the underside of the trellis panel (facing down).

Align the right edge of the right-hand side of the trellis piece so that it is exactly flush with the right side of the connector stub. The left-hand side of the trellis piece should be flush with the left edge of the pyramid.


Start screws in the two holes at the top of the trellis piece and tighten.

Step 2: Stand the first panel and place a second panel on its left side with cross-members facing inward. Leaning the two tops together, let the upper end of the second panel rest against the connector stub. **You will see that the pyramid can now stand unsupported.**

Align its top right edge against the side of the first panel, with the pyramid cap resting on the top.

Holding the two sides firmly in position, drive the right-hand screw into the connector stub. Then drive the second screw, taking care to hold the pyramid snugly against the panel top.

Holding the two trellis pieces firmly together at the corner and squarely aligned, drive a screw through the uppermost hole along the left side of the first piece into the edge of the second panel. This will provide some rigidity as you complete the assembly.

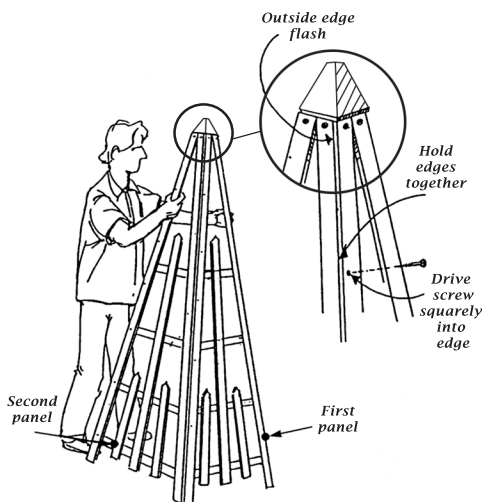

Step 3: Add the remaining two trellis panels in the same manner. You can secure the sides together at the corners as you progress or wait until all sides have been attached at the top.

NOTE: The pyramid is sufficiently sturdy for its purpose of supporting growing plants, but it is not intended to support concentrated weight on its cross-members. **DO NOT CLIMB.**

We recommend anchoring your trellis in place. Tie it to at least two stakes (not included) at the corners.