


INSTRUCTION MANUAL

AIR46M

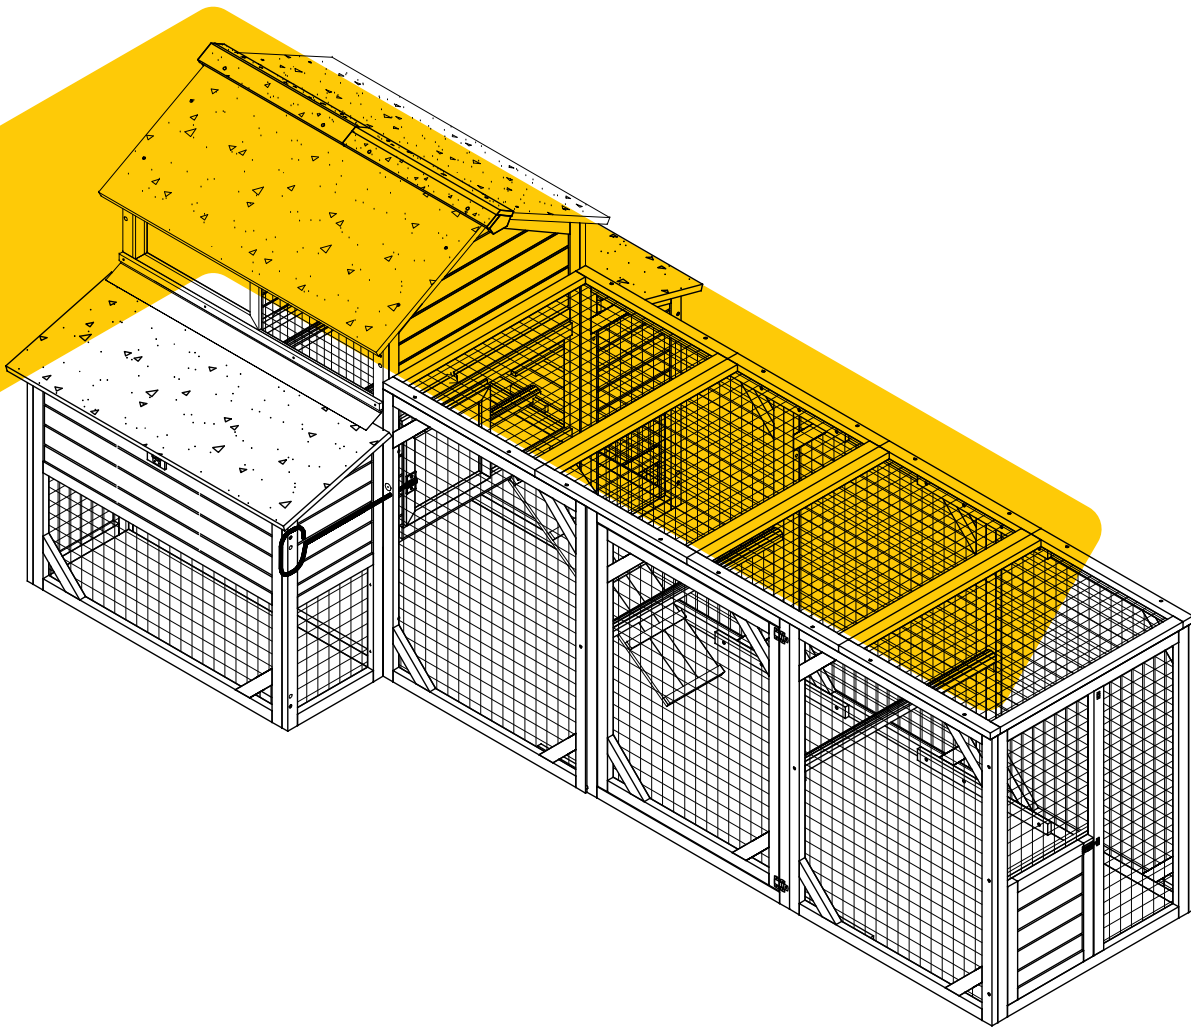



NOTICE


Please retain these instructions for future

- Firmly secure all bolts,screws and knobs before use.
- Reconfirm that all bolts,screws,and knobs are secure every 90 days.
- Fasten screws loosely during initial assembly. Do not fully tighten screws until the item is completely assembled.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- Be aware that moving parts can injure,crush and cut.
- If any parts are missing,broken,damaged,or worn,stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

TOOLS REQUIRED



PHILLIPS
SCREWDRIVER

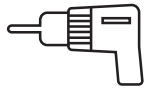

DRILL
(RECOMMENDED)



2PERSON
ASSEMBLY



APPROXIMATELY
60MIN. ASSEMBLY

HARDWARE

M3.5x40 mm SCREW
44PCS+1 spare



P1

M3.5x60 mm SCREW
16PCS+1 spare



P2

M3.5x50 mm SCREW
12PCS+1 spare



P3

M3.5x35 mm SCREW
8PCS+1 spare



P4

M3.5x25 mm SCREW
56PCS+1 spare




P5

M3.0x16 mm SCREW
124PCS+1 spare




P6

Metal Rod
1PC



P7


Lock
3PCS

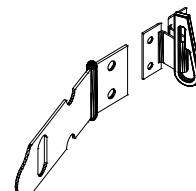

P8

HARDWARE

Waterproof PVC
1PC

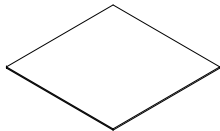

P9

L shape corner bracket
2PCS




P10

L shape corner bracket
8PCS




P11

L shape corner bracket
2PCS

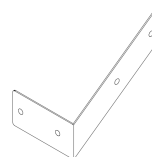


P12

L shape corner bracket
2PCS




P13

L shape corner bracket
2PCS

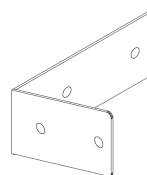


P14

L shape corner bracket
2PCS

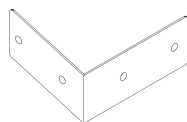


P15

L shape corner bracket
2PCS




P16

Hooks
6PCS

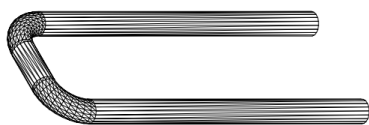

P17

Lock
3PCS

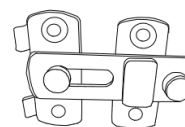


P18

HARDWARE

M3.5x30 mm SCREW
4PCS+1 spare




P19

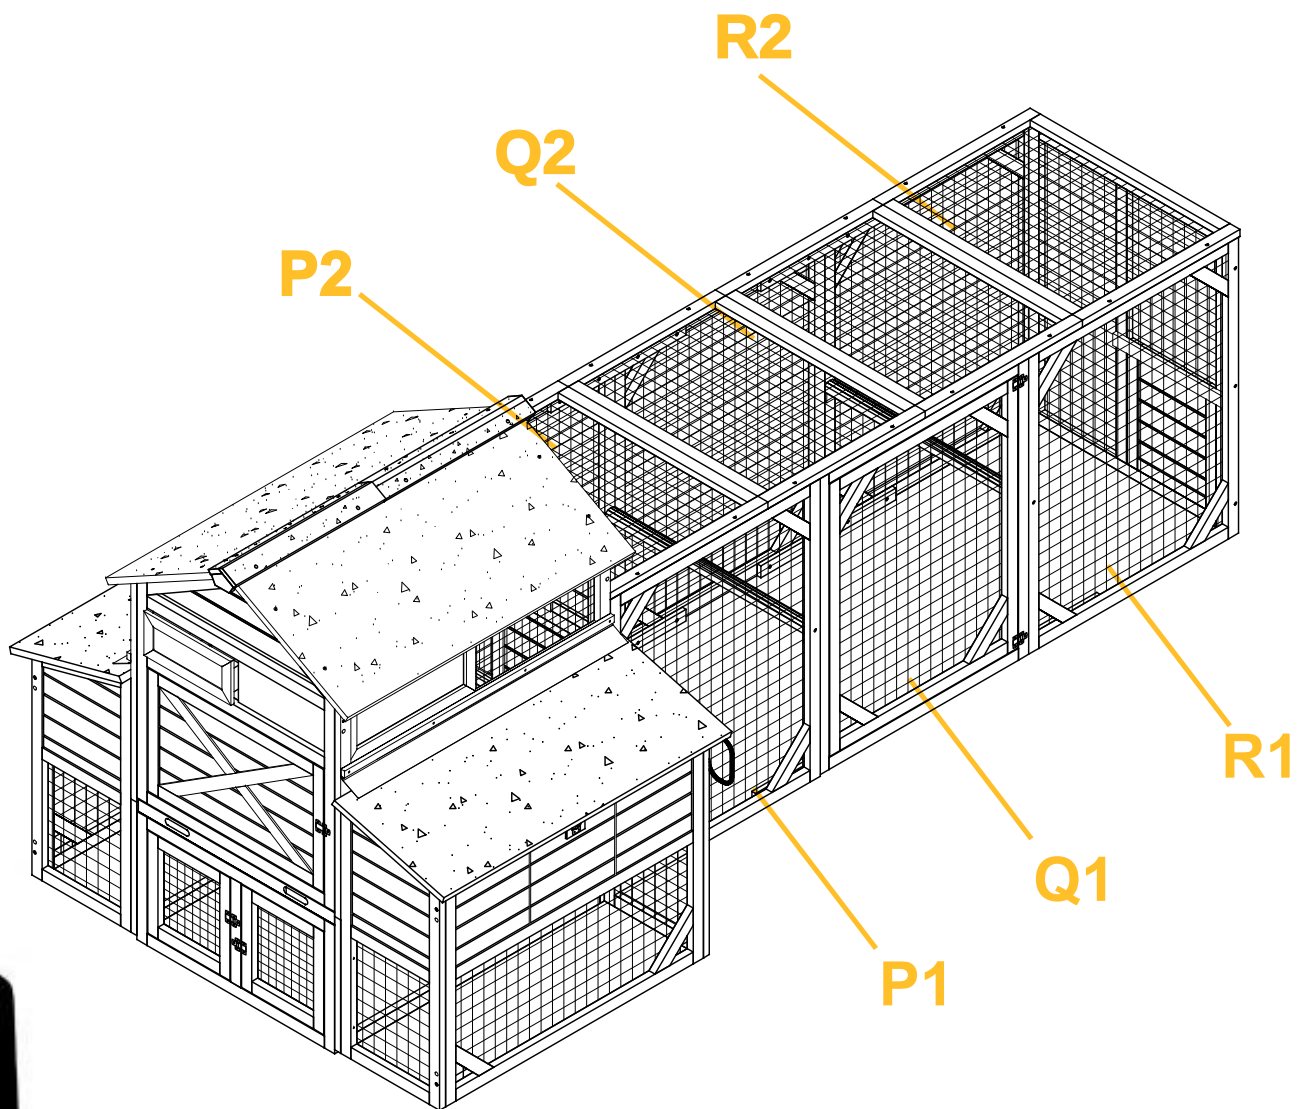

PARTS


CARTON 1/2

Right panel of coop
1PC

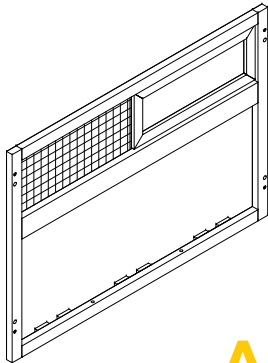


A1

Left panel of coop
1PC

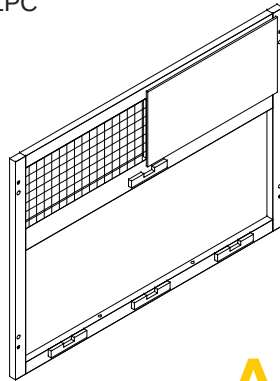


A2

Front bottom panel of coop
1PC

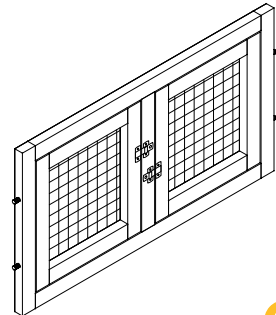


C

Right bottom panel of coop
1PC

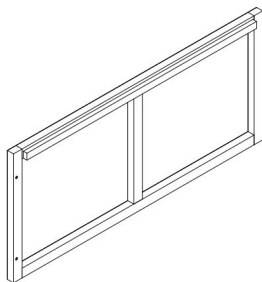


D1

Left bottom panel of coop
1PC

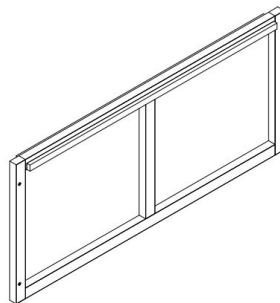


D2

Front panel of nesting box
2PCS

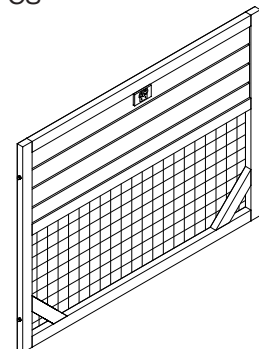


E

Tray
1PC

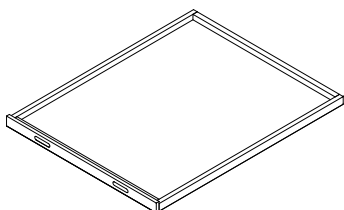


K

Roof of nesting box
2PCS

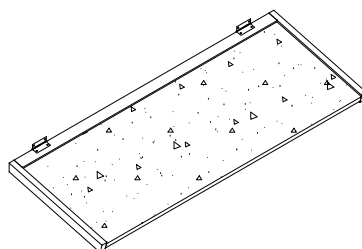

L


PVC Waterproof Strip
2PCS

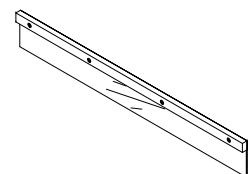

M

PARTS


Right/Leftroof of coop
2PCS

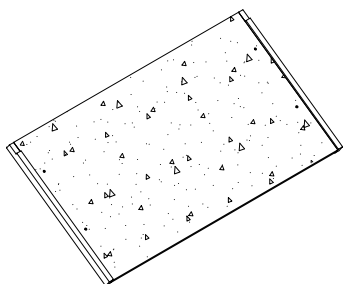

PARTS


CARTON 2/2

Front panel of coop
1PC

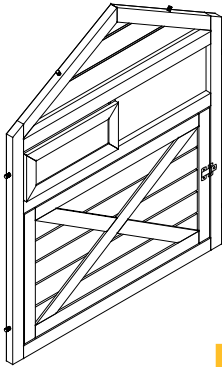


B1

Back panel of coop
1PC

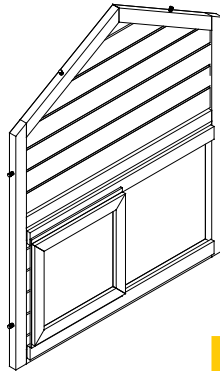


B2

Side panel of nesting box
2PCS

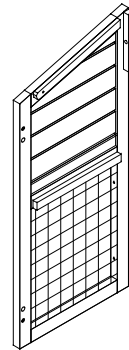


F1

Side panel of nesting box
2PCS




F2

Bottom panel of nesting box
2PCS

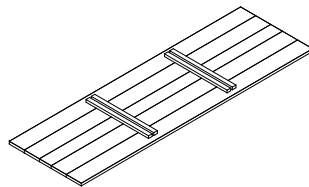


G

Divider of nesting box
4PCS

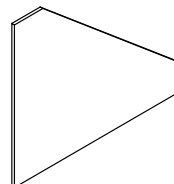


H

Round Perch of coop
3PCS

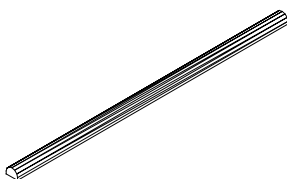


I1

Perch of pen
2PCS

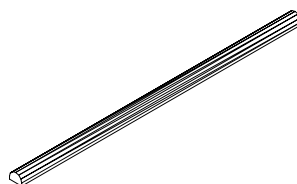

I2

Perch of coop
1PC

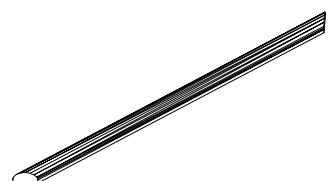


J

PARTS

Pen panel


1PC

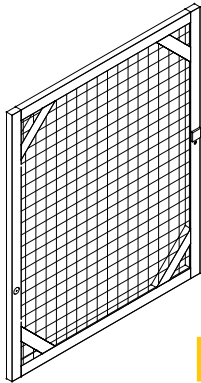

P1

Pen panel


1PC

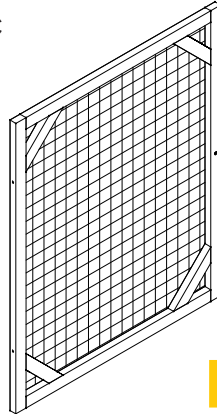

P2

Ramp


1PC

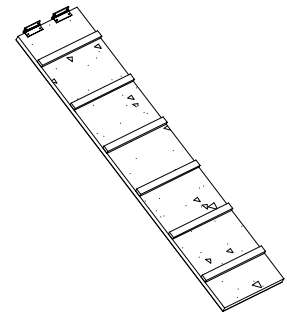

O

Pen panel


1PC

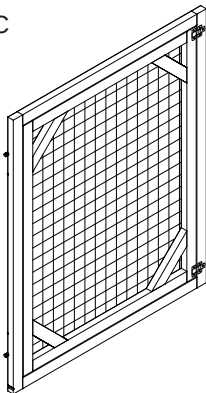

Q1

Pen panel


1PC

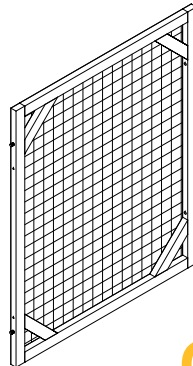

Q2

Pen panel


1PC

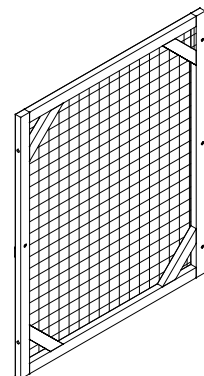

R1

Pen panel


1PC

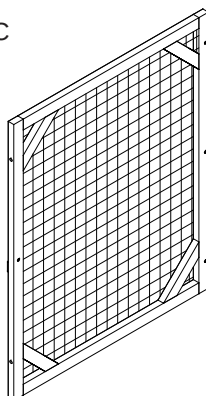

R2

Back pen panel


1PC

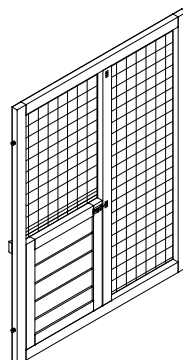

S

Inner roof of pen

4PCS

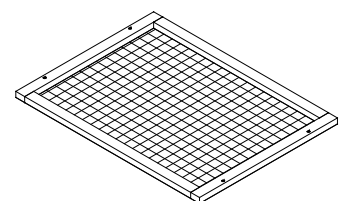


T

PARTS

Roof cap


2PCS

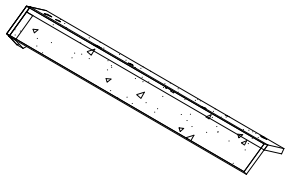

W


Connect bar

10PCS

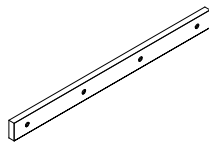

X

Metal Rod


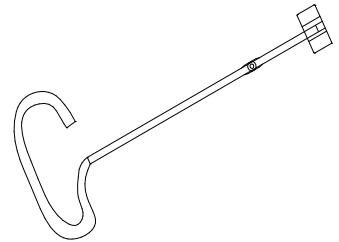


Hardware bag




PRODUCT ASSEMBLY

- 01** Attach the part A1, part D1 by 2 X P2 screws.
Attach the part A2, part D2 by 2 X P2 screws.

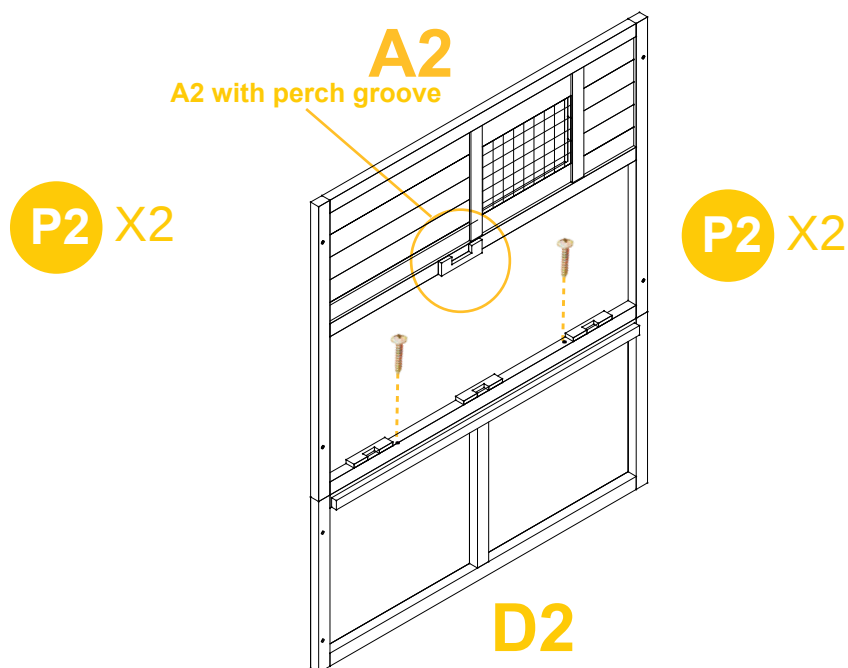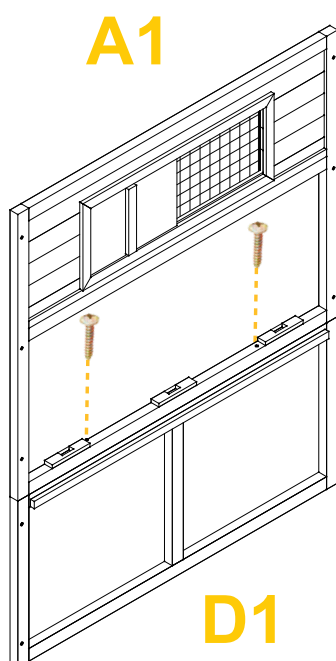

- 02** Then attach the part B1, part B2, part C to the step 1 by 12 X P1 screws.
Attach the lock P18 to the door by 4 X P6 screws.

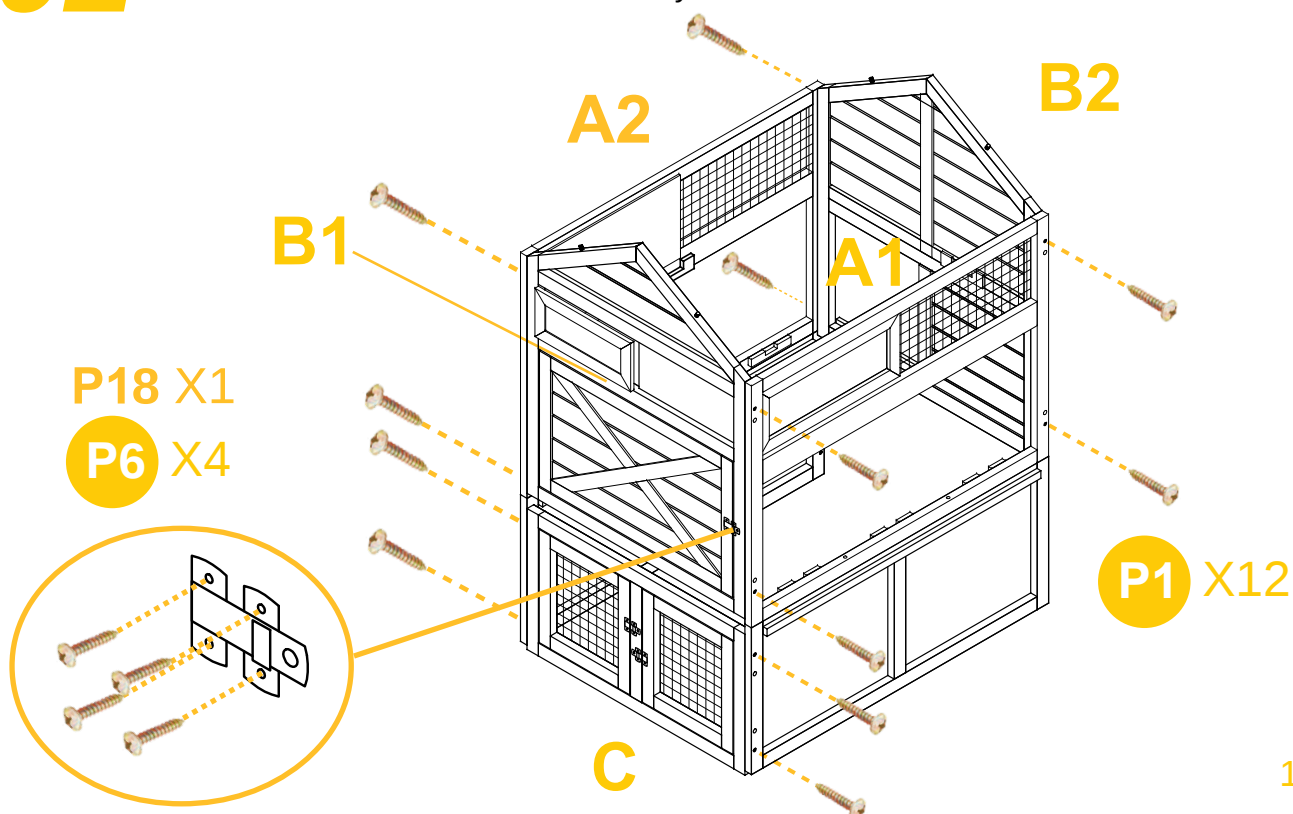


PRODUCT ASSEMBLY

03

Slide in the tray Part K.
Insert the perches 3xPart I1 into the slots inside the left and right panel of coop.


I1x3

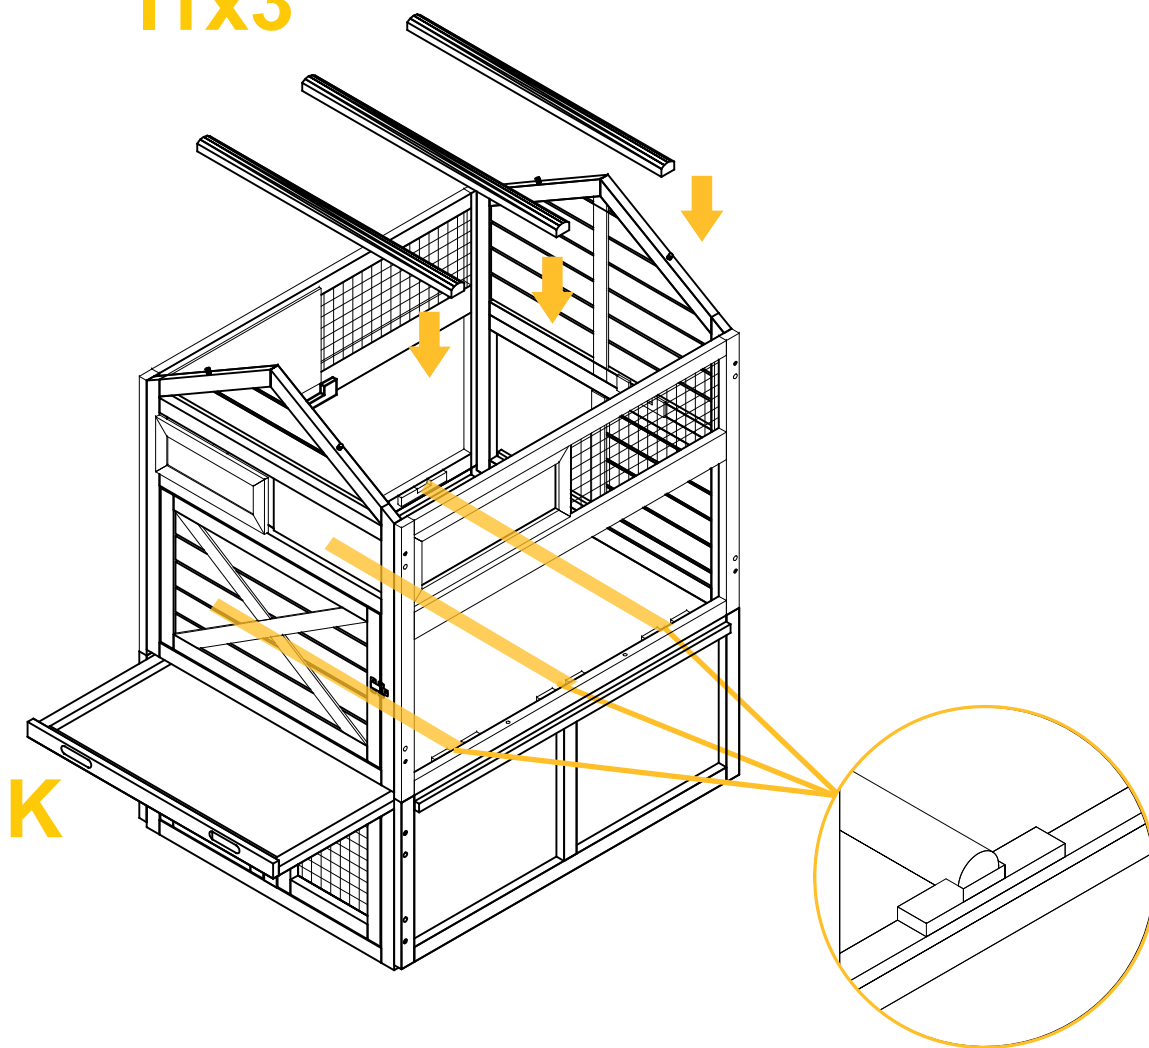

PRODUCT ASSEMBLY


04

Attach the perch Part J to the slots inside the front and right panel by 1XP1 screw each side.
Attach the corner bracket P12 & P13 to the corner by 4 X P6 each.

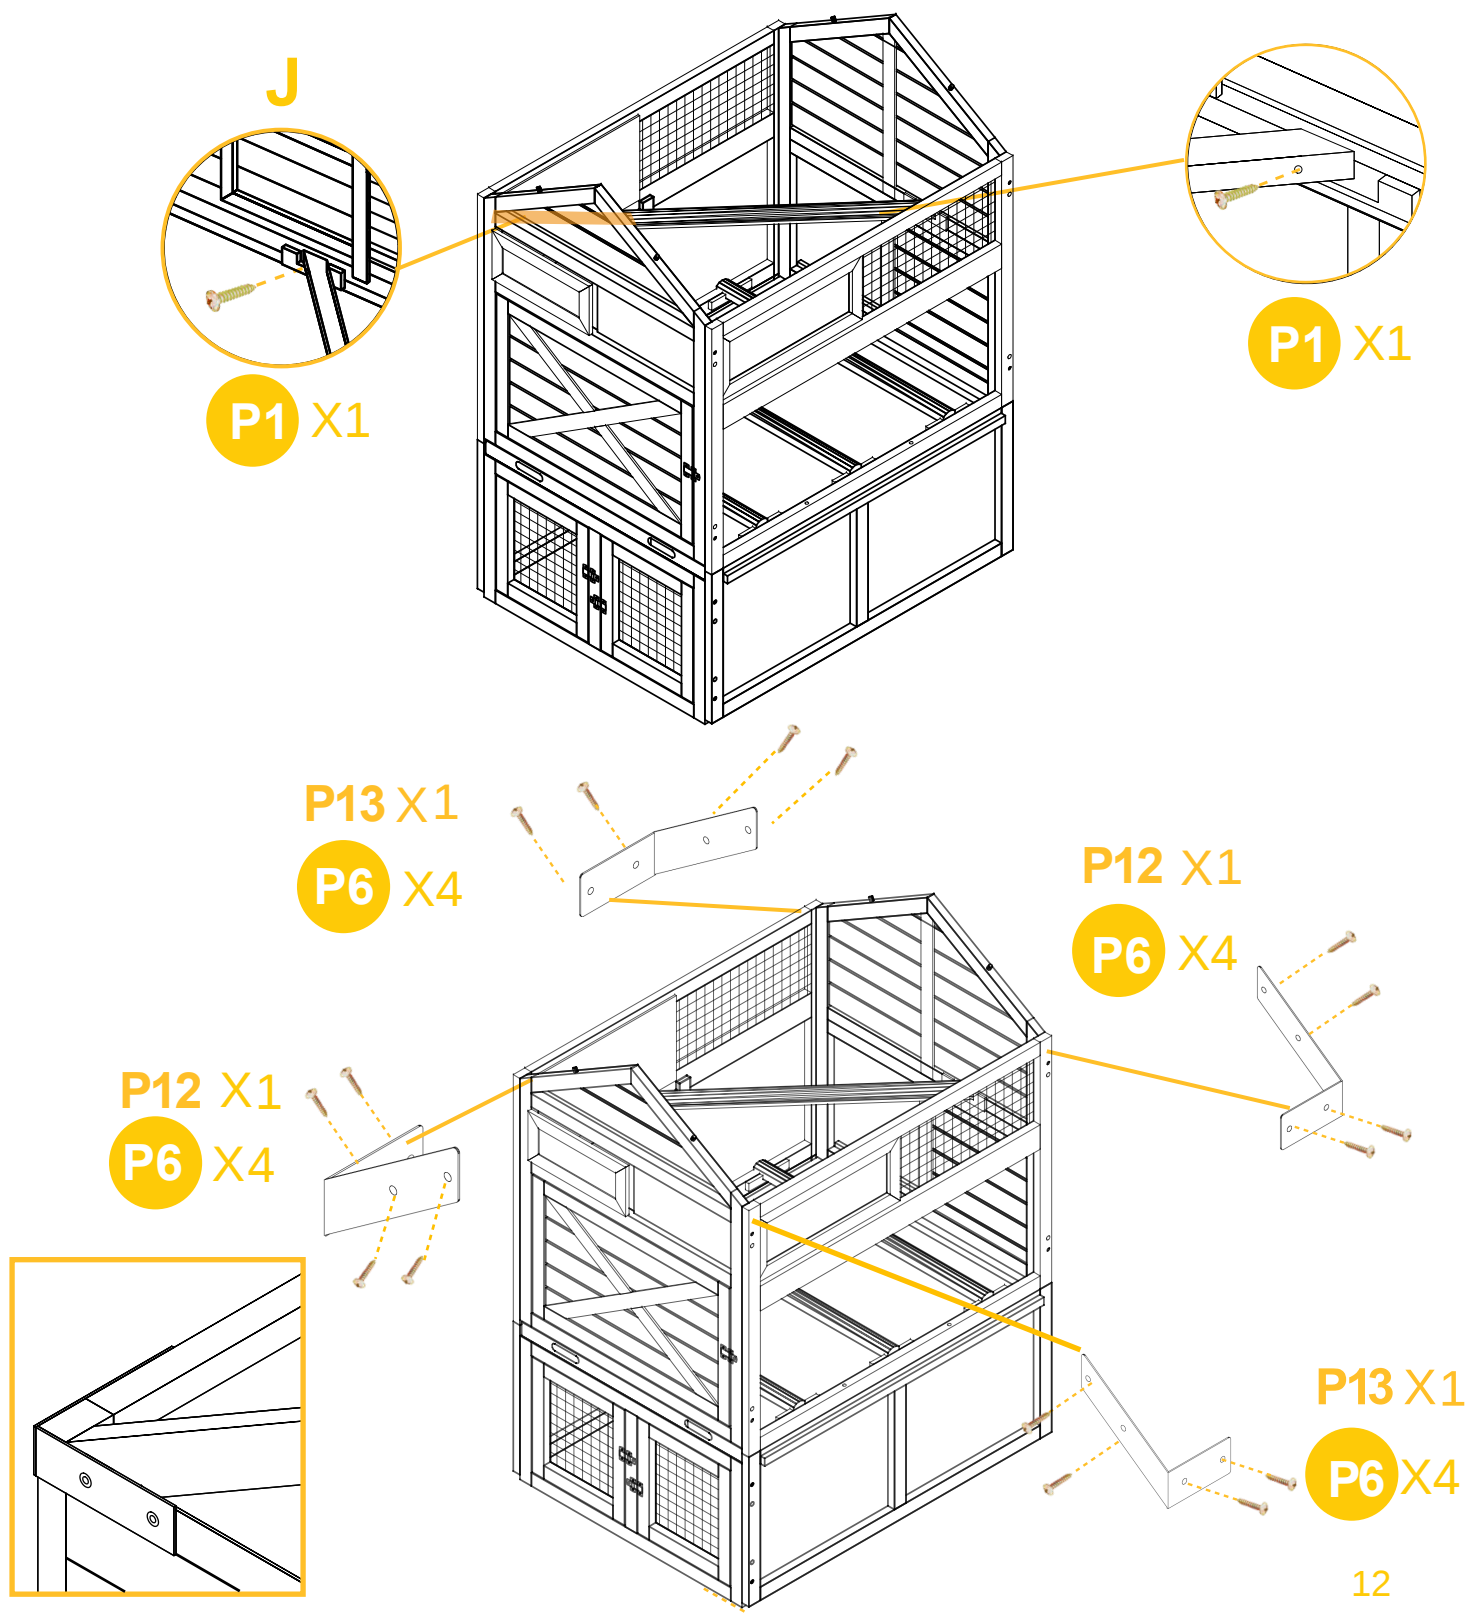


PRODUCT ASSEMBLY

- 05** Attach the side panels of nesting box Part F1 & F2 to the coop.
(Notice screw the P19 from inside in the upper position, screw the P3 from outside in the down position)

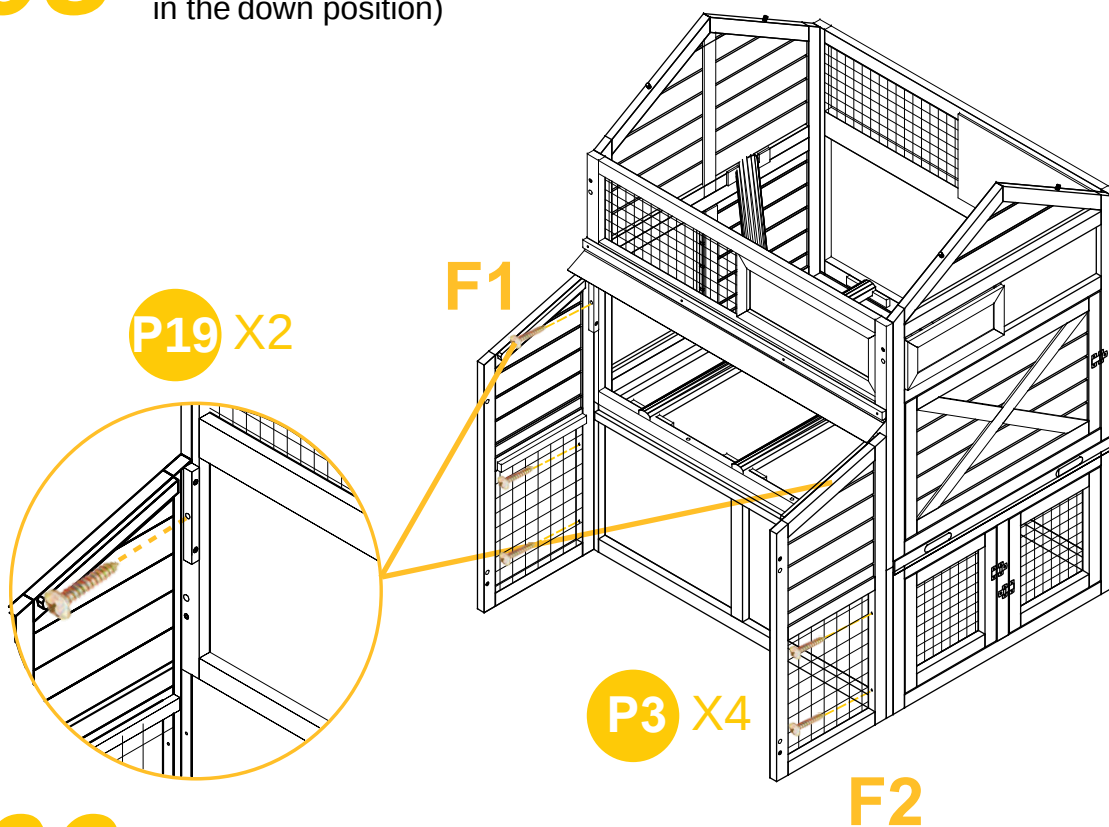


- 06** Attached the front panel of nesting box Part E to the side by 4XP1 screws.

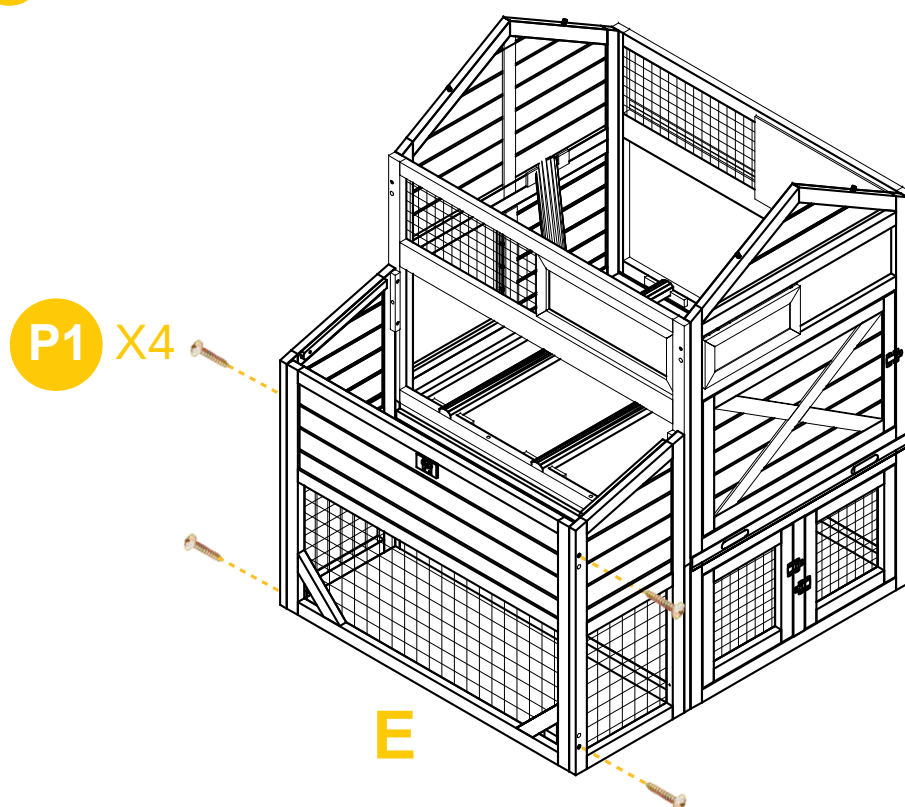


PRODUCT ASSEMBLY

- 07** Attach the another side panels of nesting box Part F1 & F2 to the coop.
(Notice screw the P19 from inside in the upper position, screw the P3 from outside in the down position)

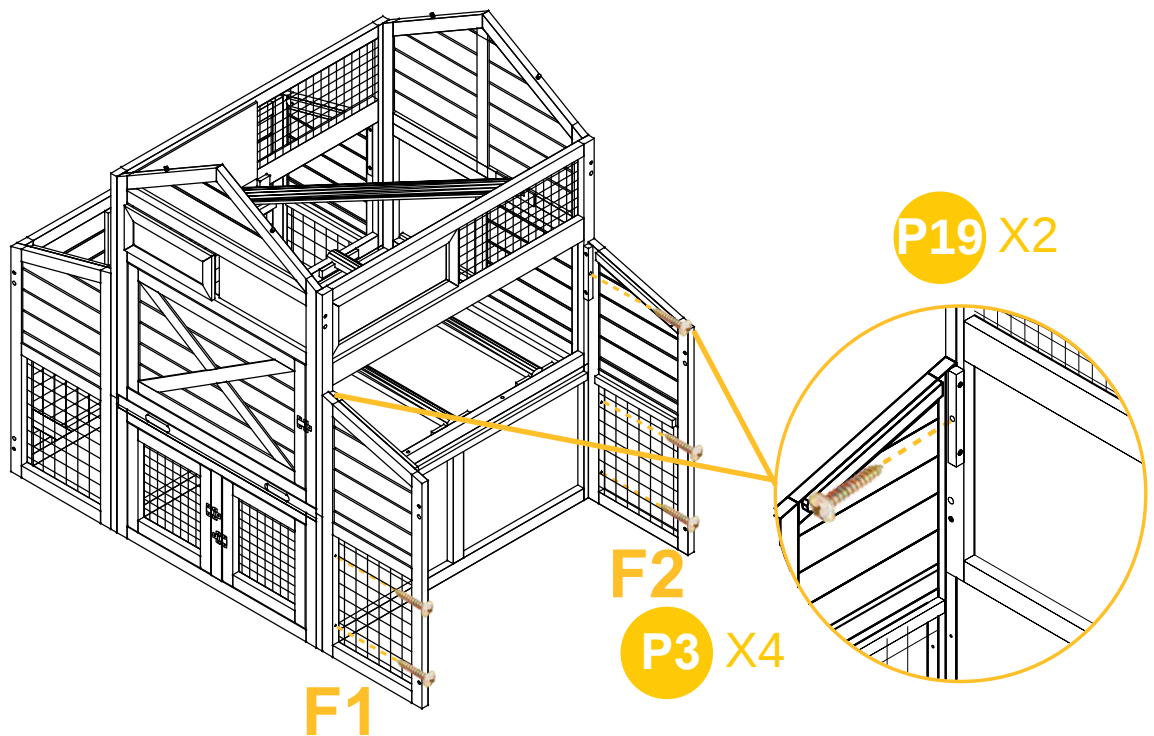

- 08** Attached the front panel of nesting box Part E to the side by 4 X P1 screws. Attach the corner bracket P14 & P15 to the corner by 4 X P6 screws each.

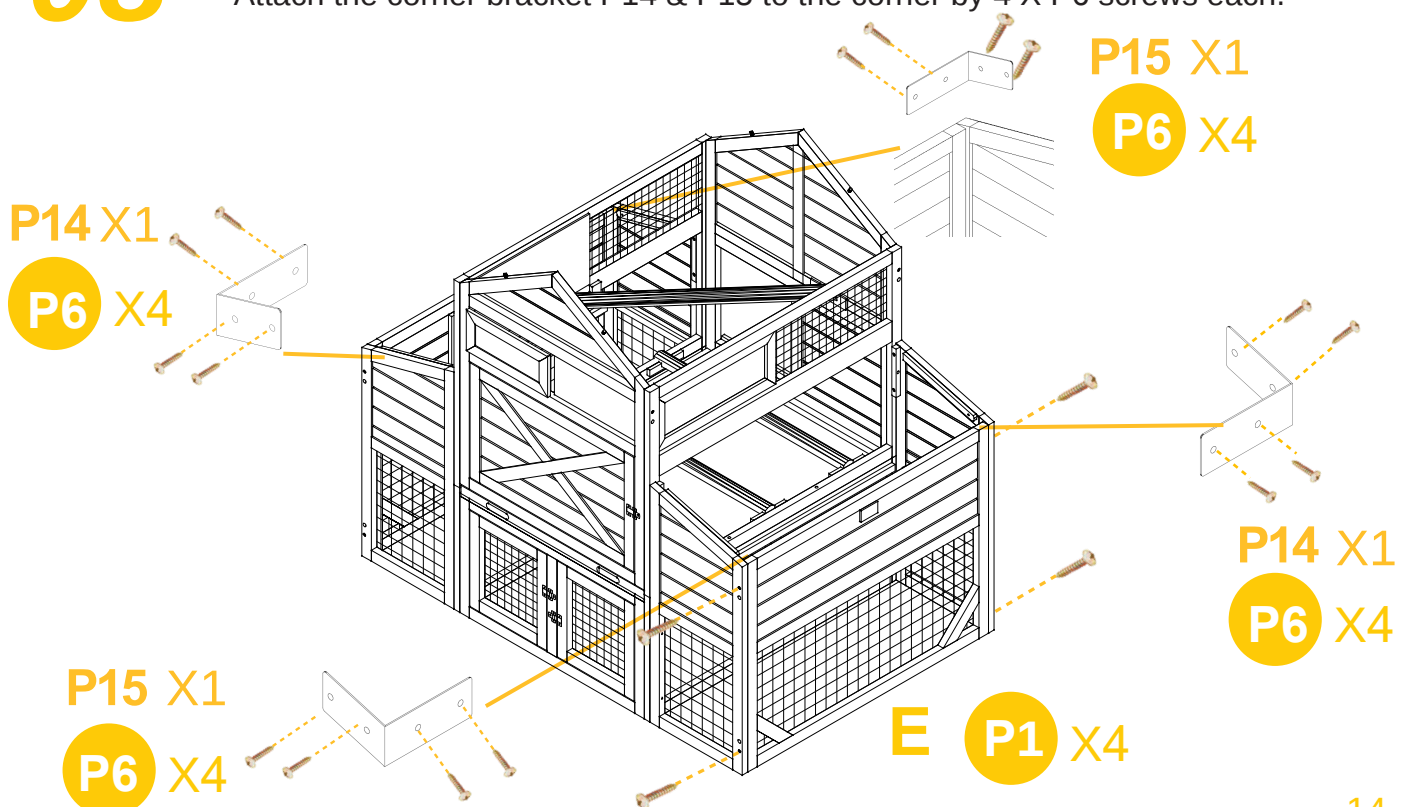



PRODUCT ASSEMBLY

09

Drop in the bottom panel of nesting box Part G.

Slide in the divider 2 x Part H each side.



Attach the corner bracket P11 to the corner by 4xP6 each.

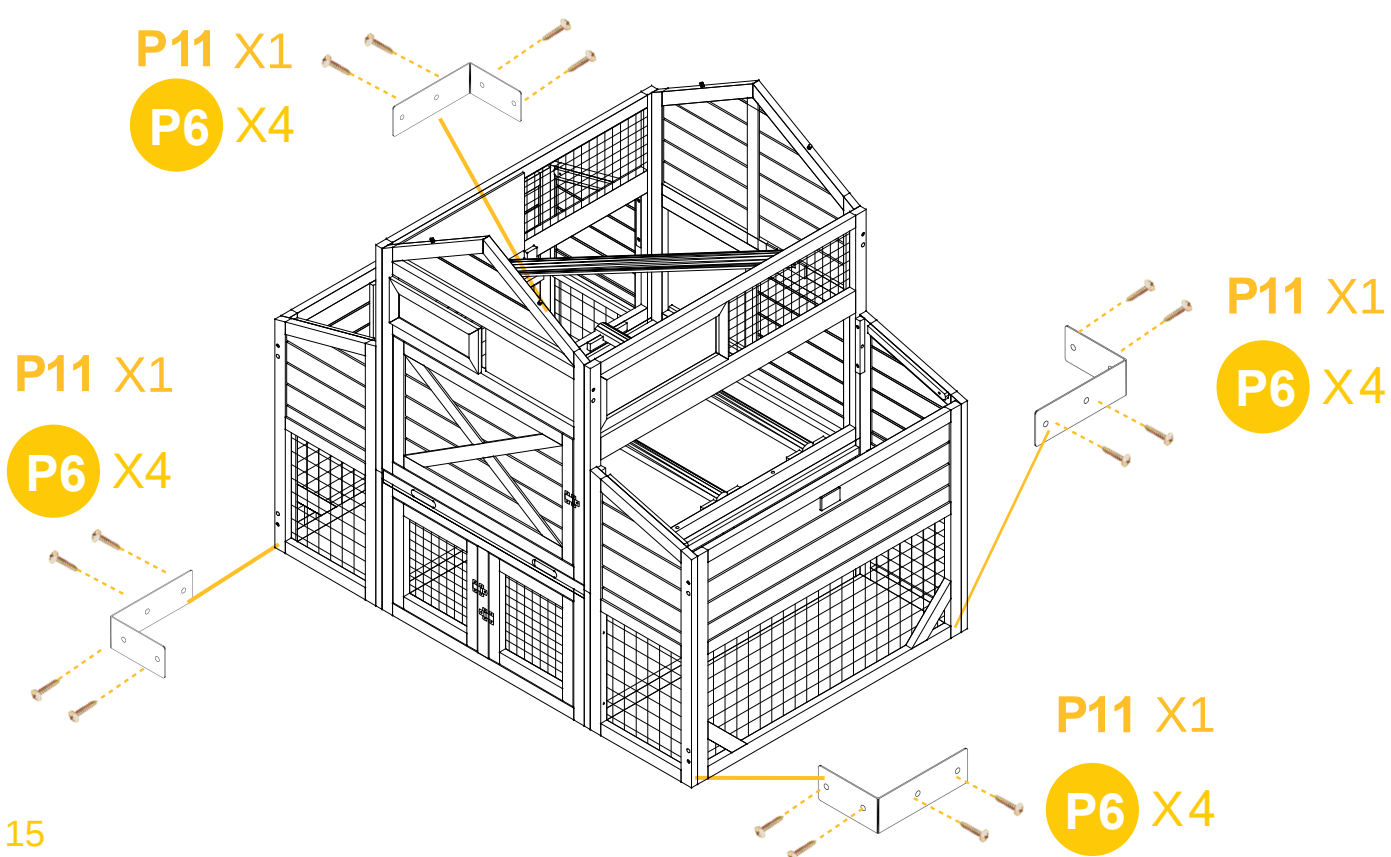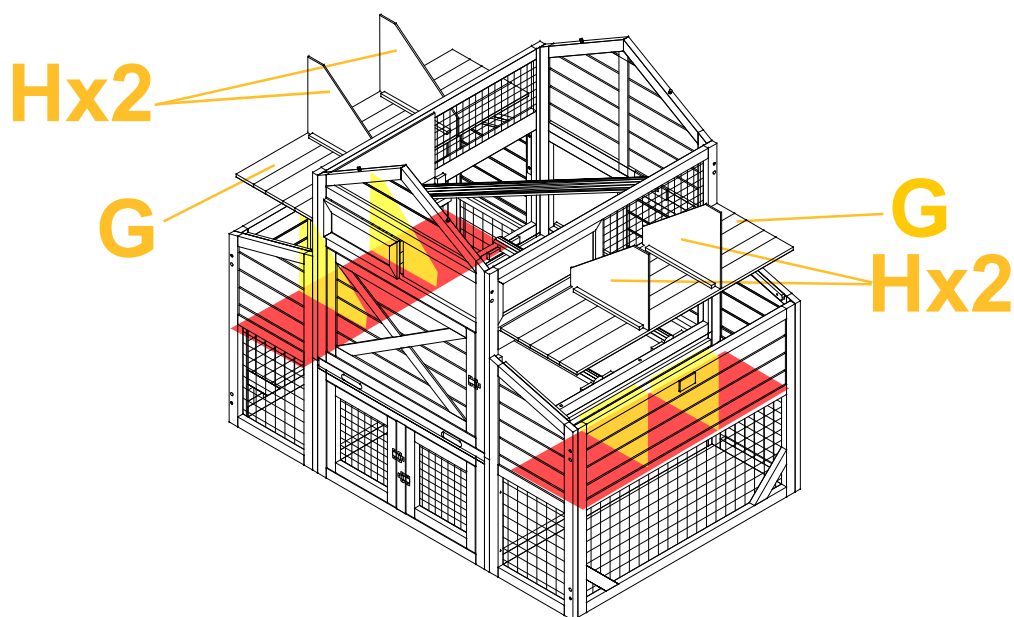

PRODUCT ASSEMBLY


10

Attach the roof of nesting box Part L to the nesting box by 6 X P6 screws each side. Make sure the lock is functioning properly before locking the roof. Attach the corner bracket P16 to the corner by 4 X P6 each.

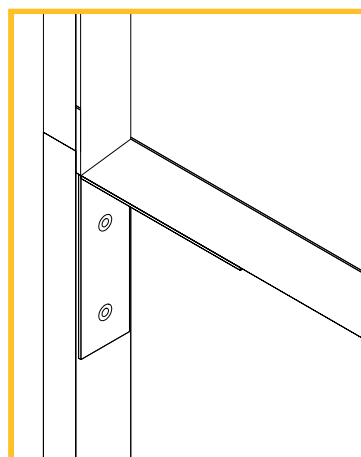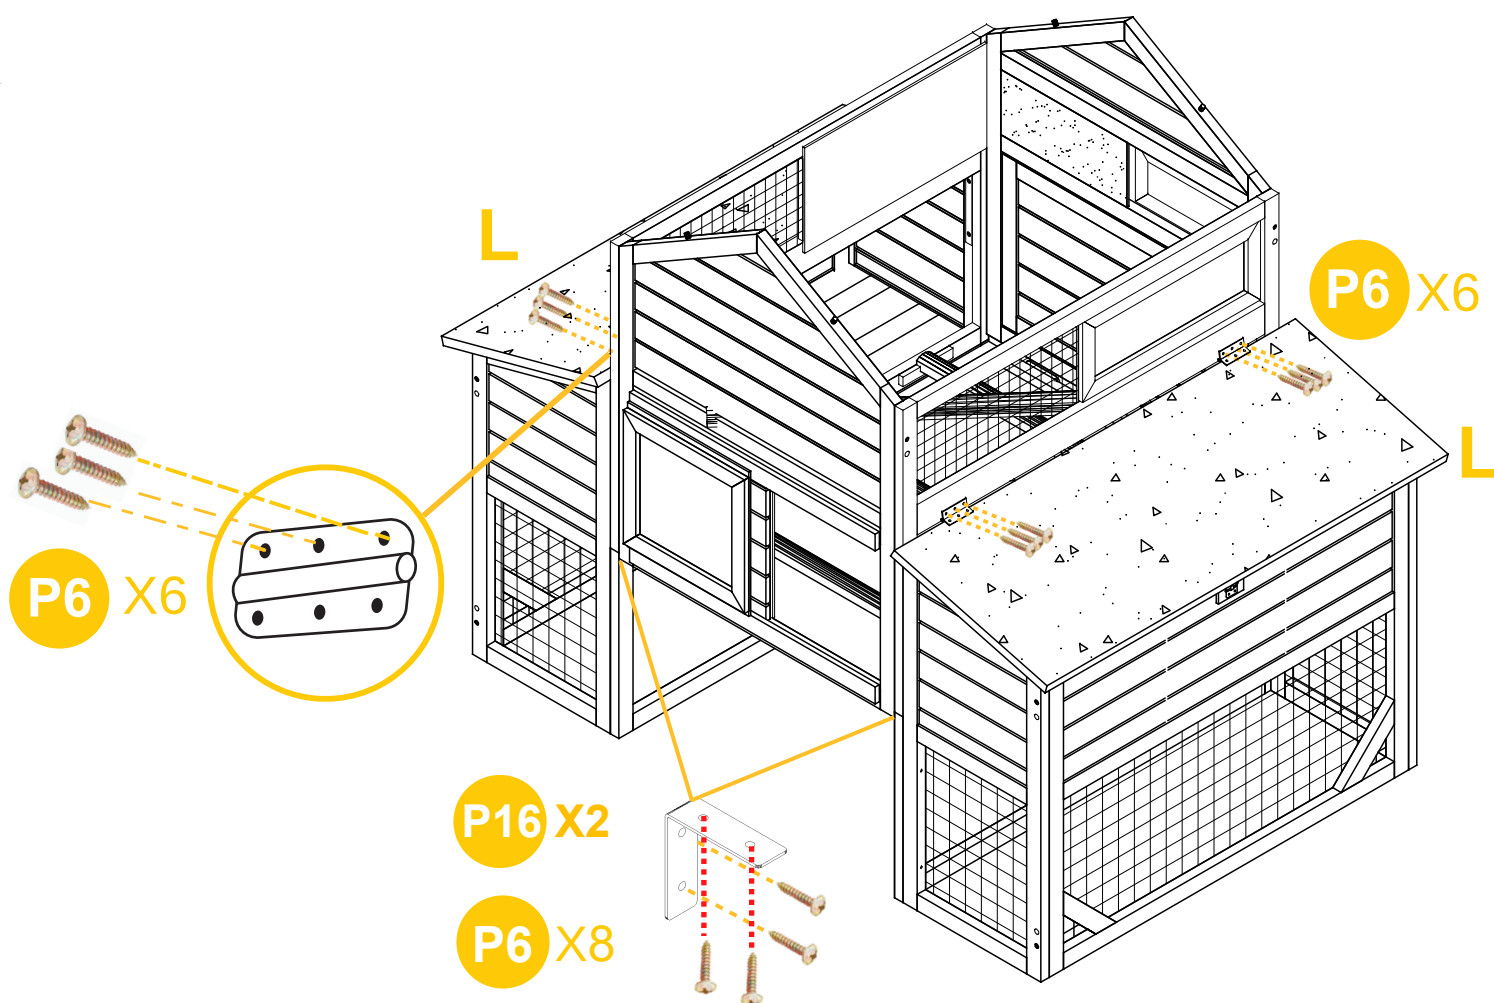

PRODUCT ASSEMBLY

11 Attach the coop roof 2xPart N to the coop by 8XP4 screws.

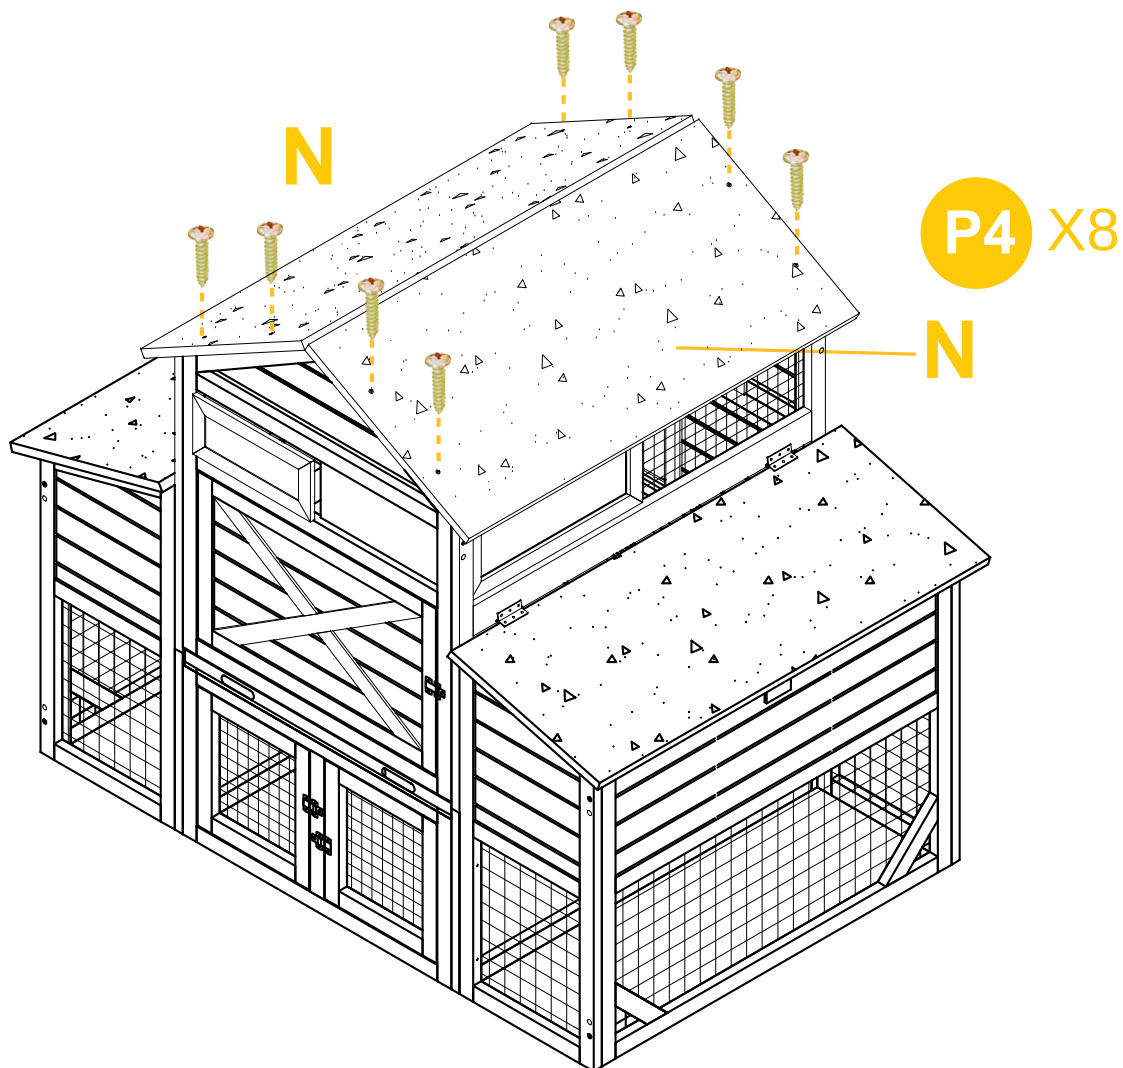


PRODUCT ASSEMBLY

12

Put the Waterproof pvc P9 in the connection position of 2 roof cap to avoid the water leakage.


Then attached the roof cap 2 x Part W by 8XP5 screws.

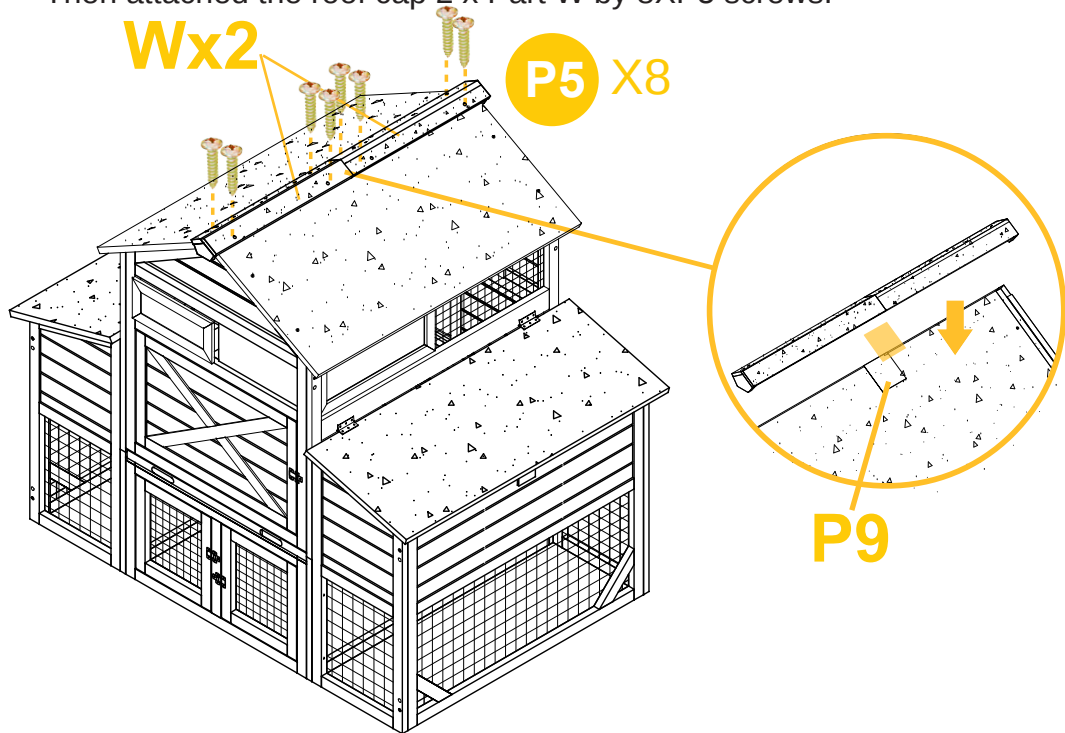

13


Attach the pen panel Part P1 to the coop by 2 X P2 screws.

Attach metal rod Part P7 to the sliding door by 2 X P6 screws.

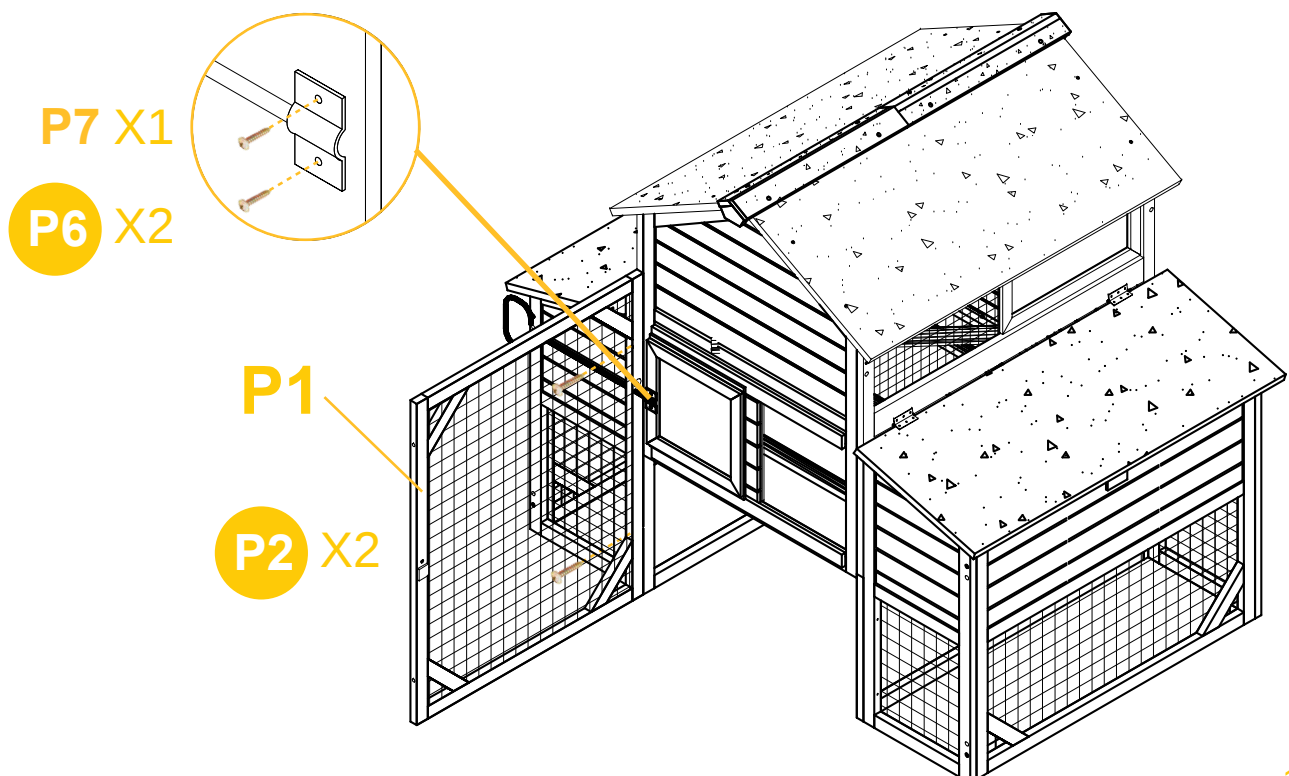


PRODUCT ASSEMBLY

- 14** Attach the bottom connecting bars Part X by 4XP5 screws, the position is shown in the picture.

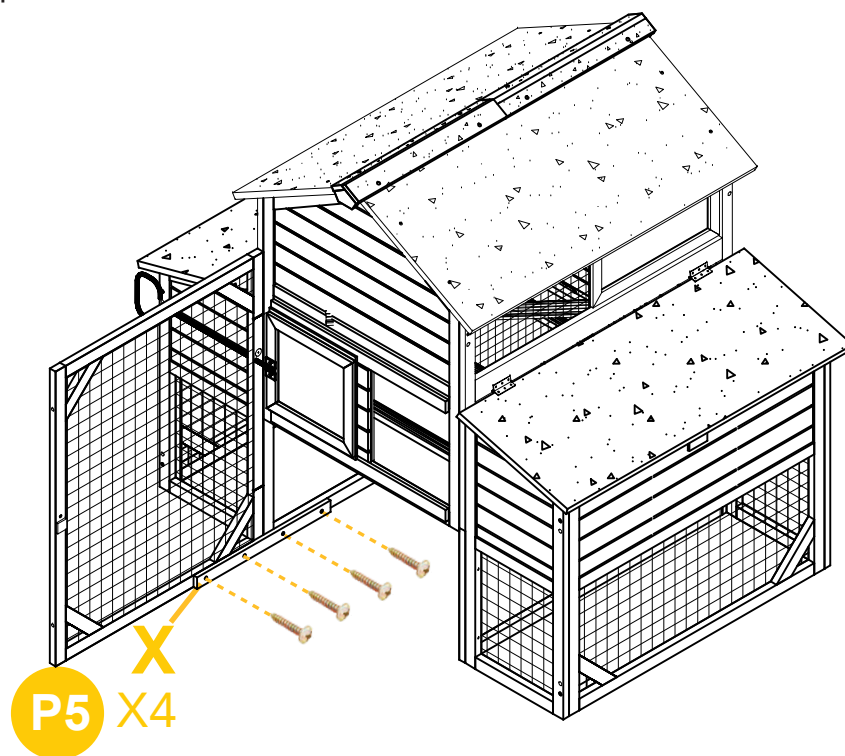


- 15** Attach the pen panel Part P2 to the coop by 2XP2 screws.
Attach the bottom connecting bars Part X by 4XP5 screws, the position is shown in the picture.

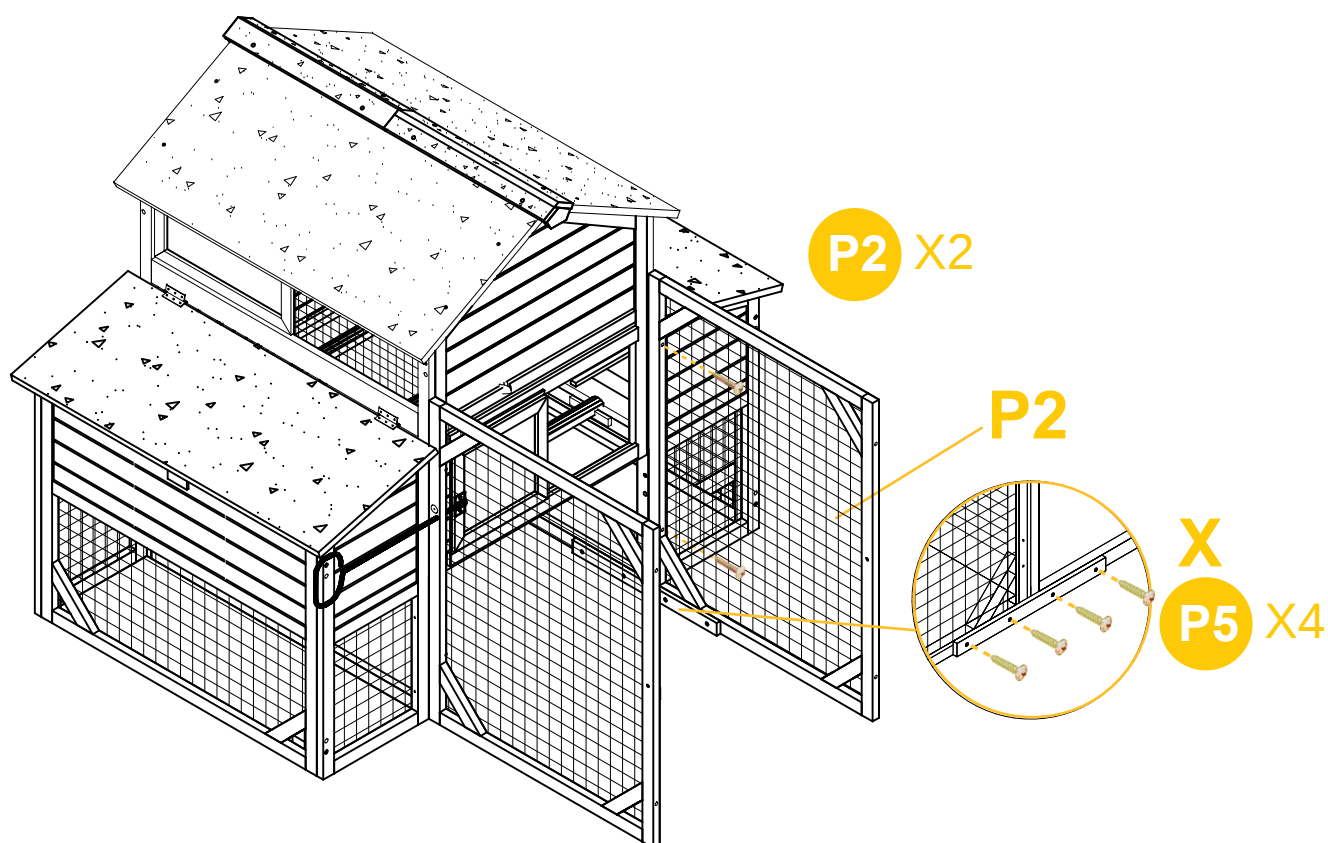


PRODUCT ASSEMBLY

16 Attach the ramp Part O to the coop by 4XP6 screws.

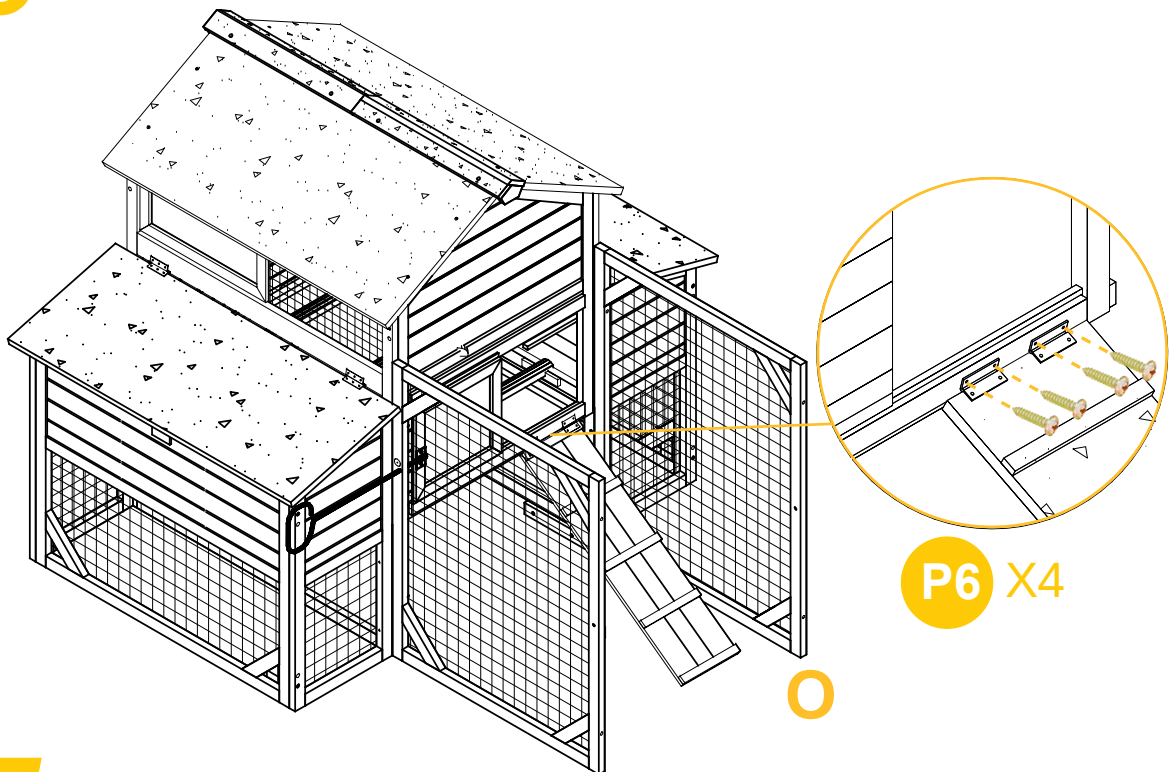


17 Attach the perch Part I2 into the slots inside the inner pen panel Part P1&P2 by 2XP3 screws.

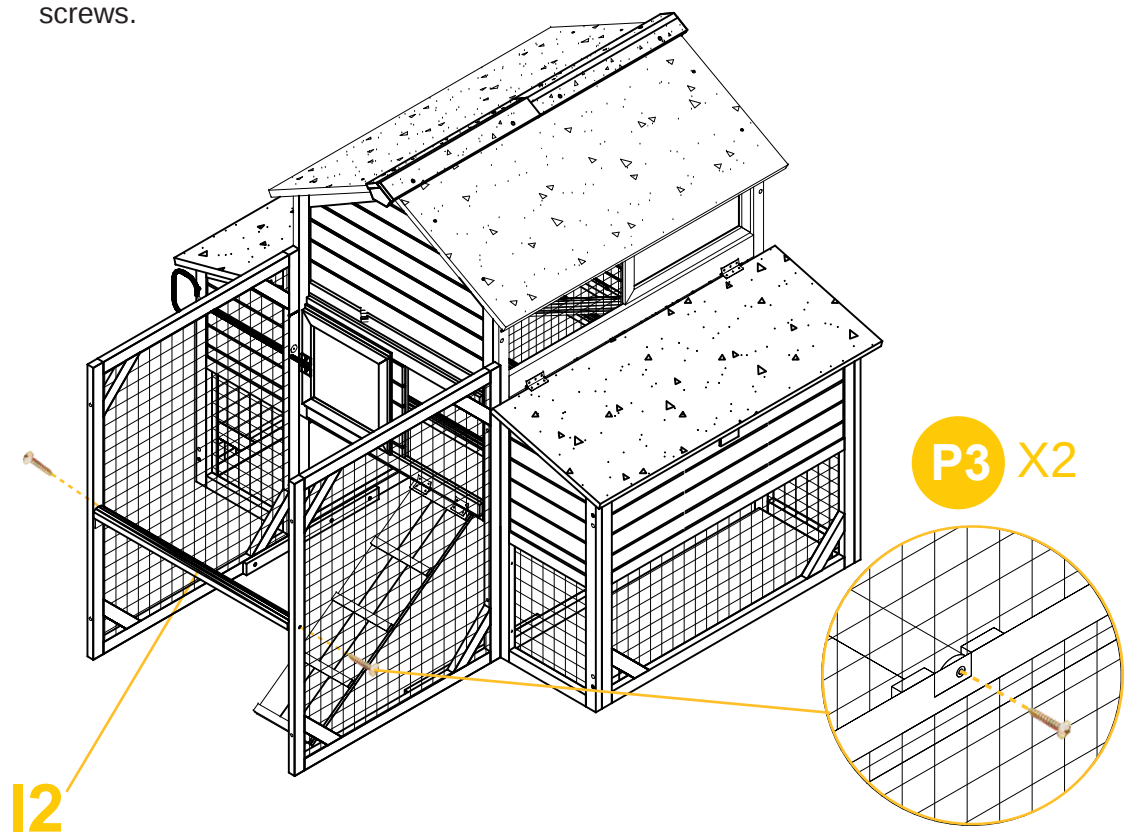


PRODUCT ASSEMBLY

18 Attach pen panel Part Q1 & Q2 by 4XP2 screws.

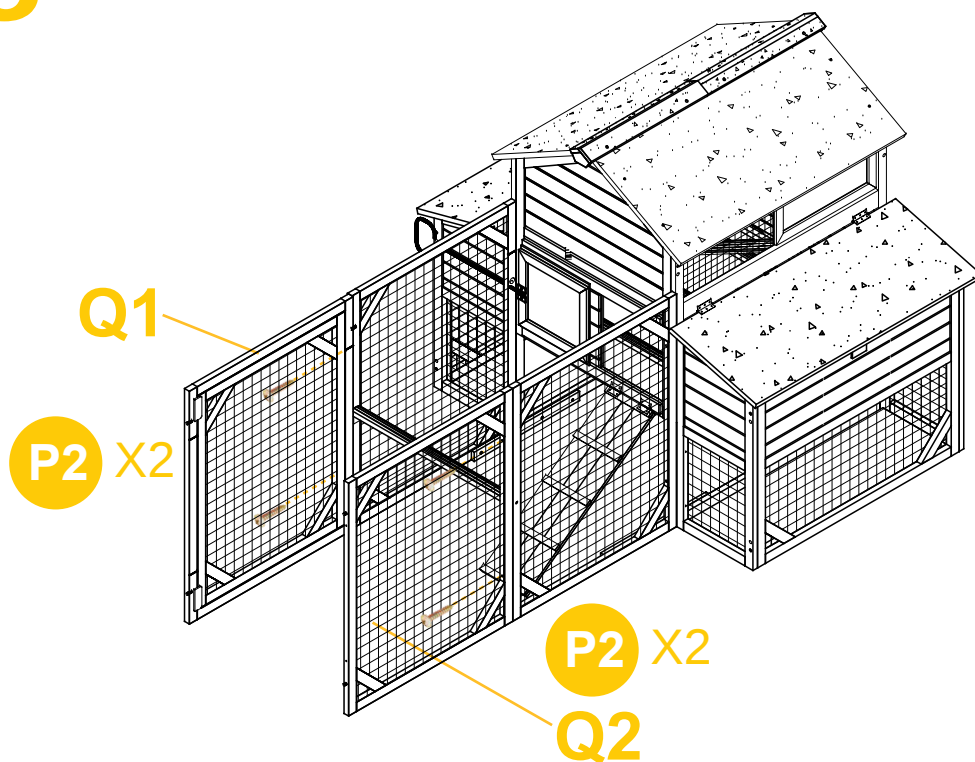


19 Attach the up and down four connecting bars Part X by 4XP5 screws each, the position is shown in the picture.

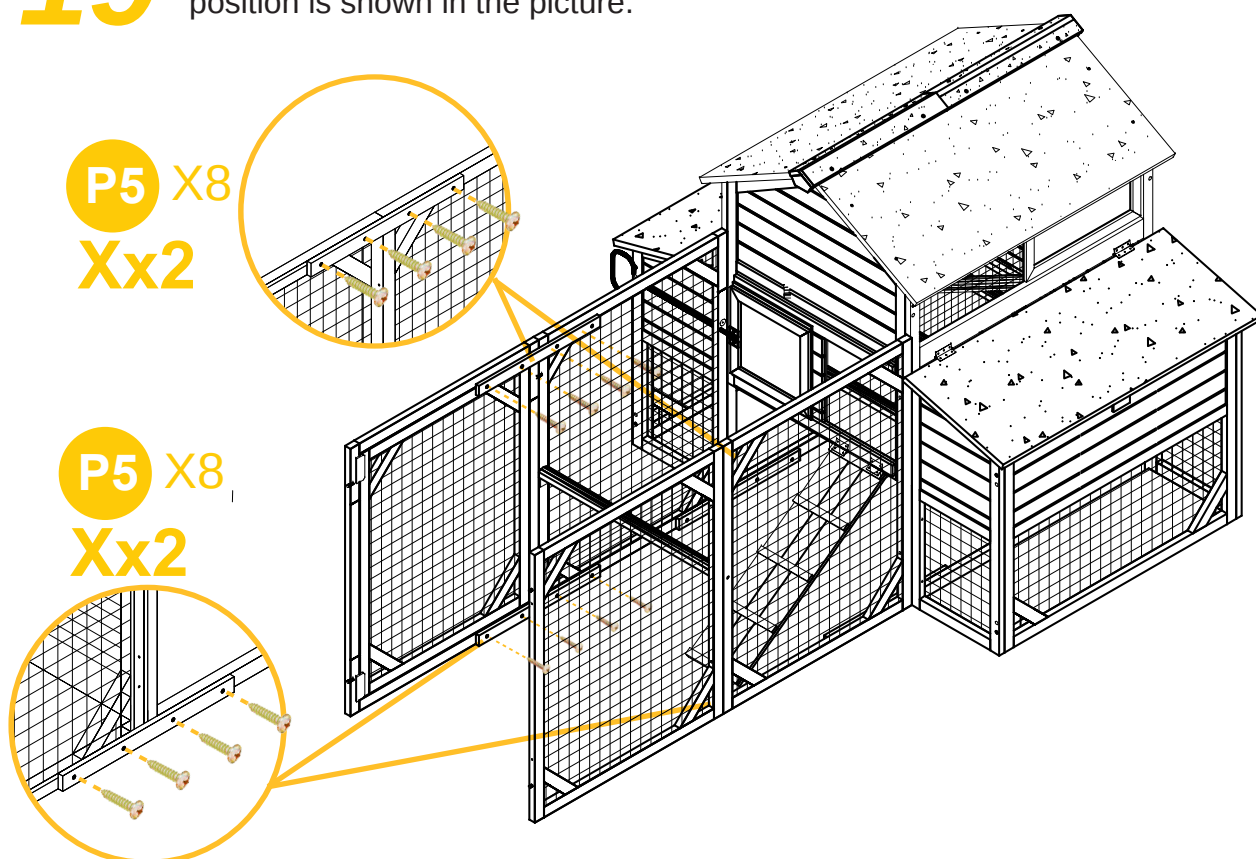


PRODUCT ASSEMBLY

20 Attach pen panel Part R1 & R2 to the coop by 4XP2 screws.

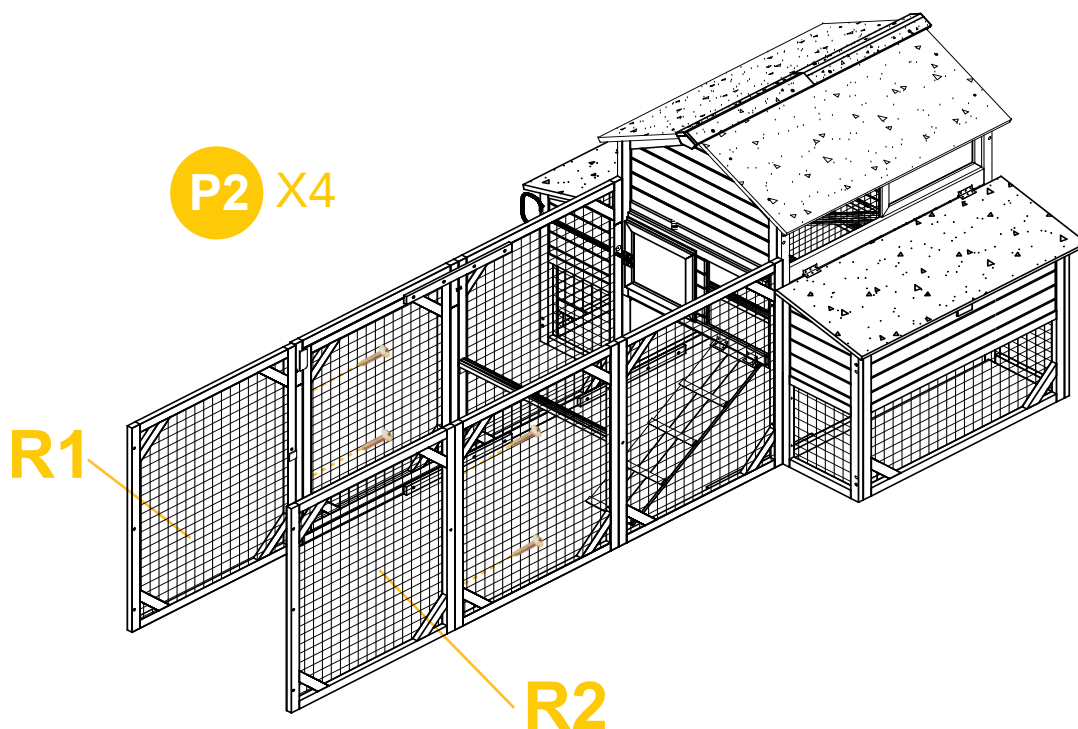


21 Attach the up and down four connecting bars Part X by 4XP5 each, the position is shown in the picture.
Attach the perch Part I2 into the slots inside the inner pen panel Part R1 & R2 by 2XP3 screws.

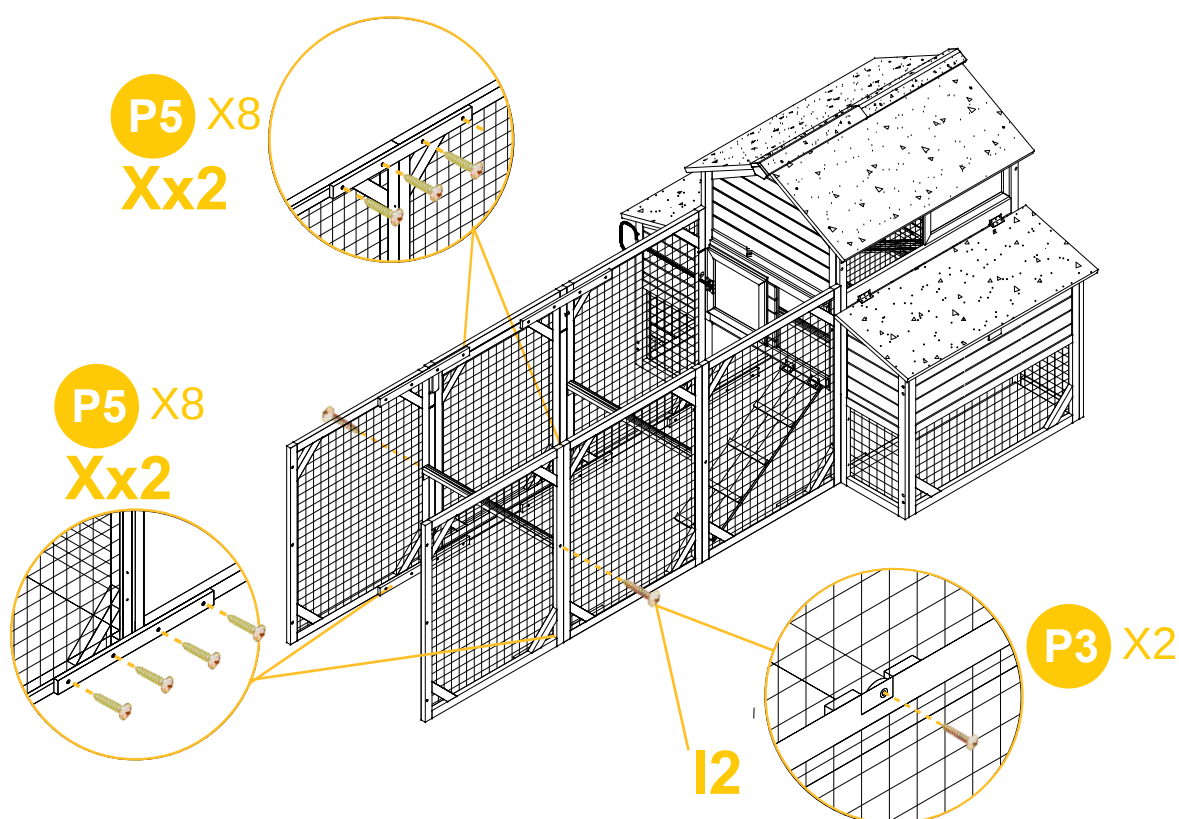


PRODUCT ASSEMBLY

22 Attach the back pen panel Part S to the pen by 6XP1 screws.

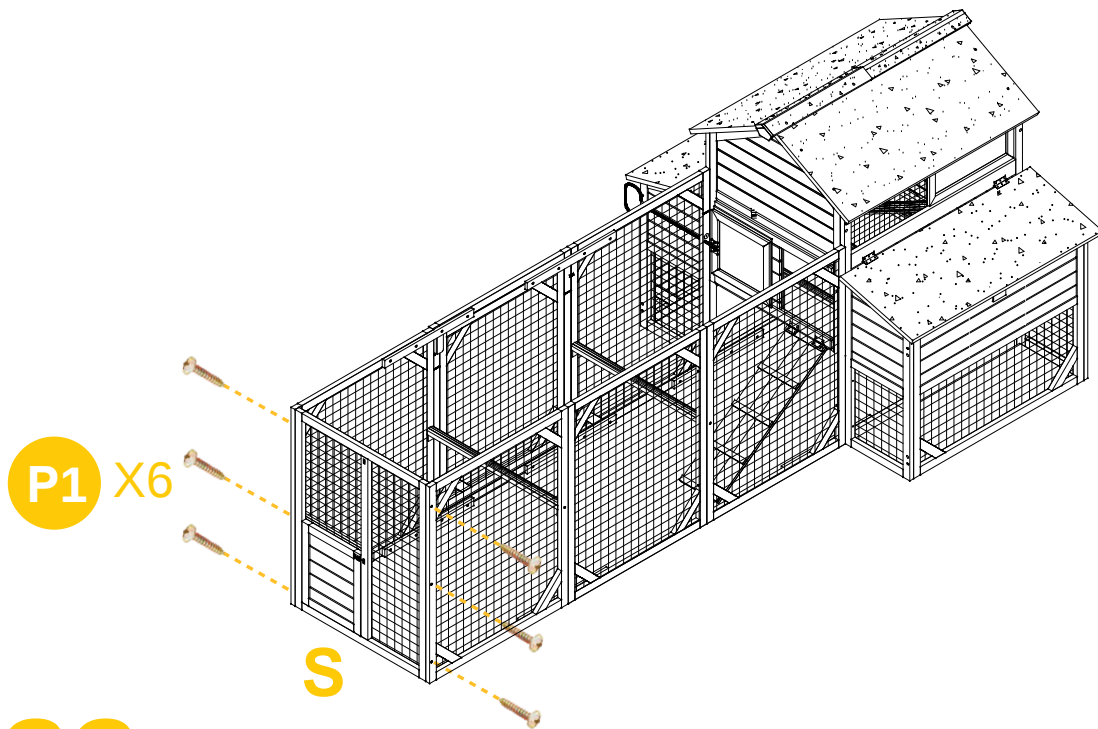

23 Attach the pen roof 4 X Part T by 16 X P1 screws.

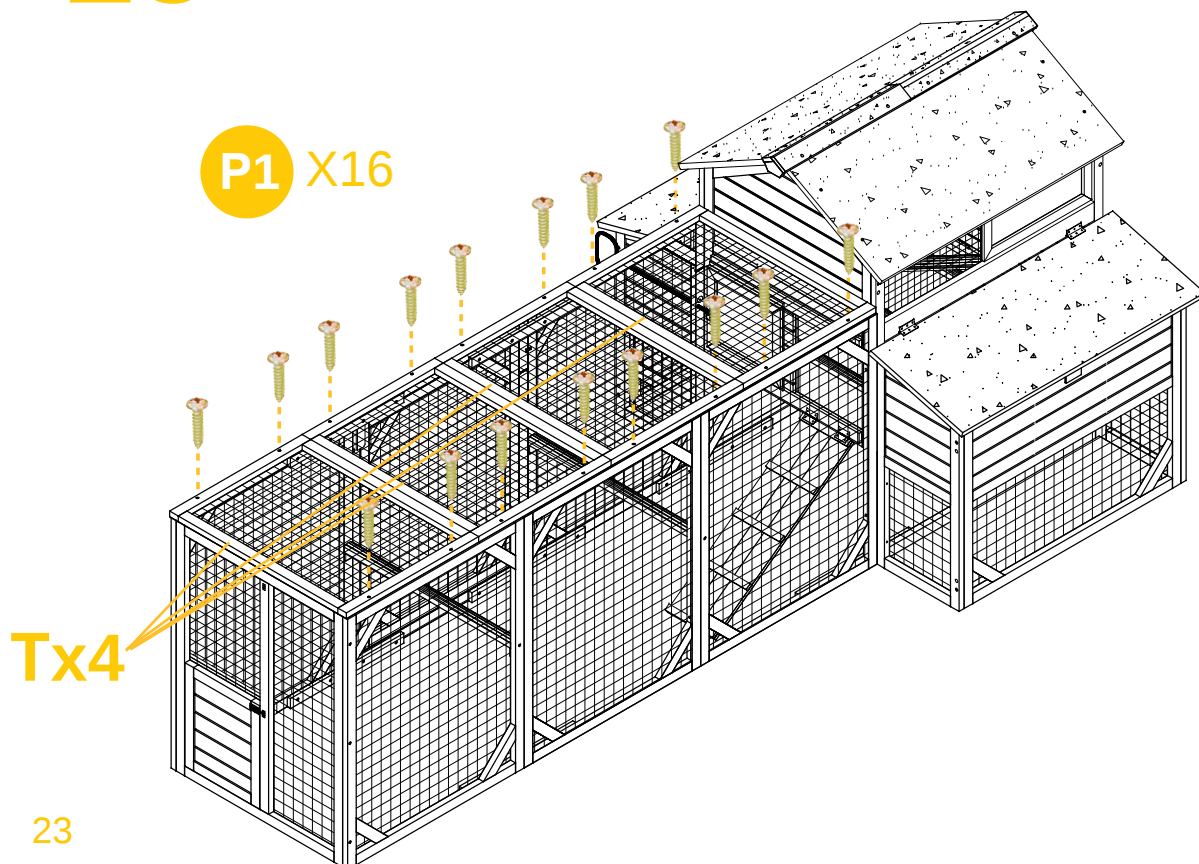

PRODUCT ASSEMBLY


24

Attach the corner bracket P11 to the top & bottom corner by 4 X P6 each.

Attach the corner bracket P10 by 4 X P6 each.

Screw one side of the lock to roof by 2 X P6 screws, screw the other side of lock to front panel by 4 X P6 screws. (Make sure the lock is functioning properly before locking the roof.)

Repeat the same assembly on the other side of the lock.

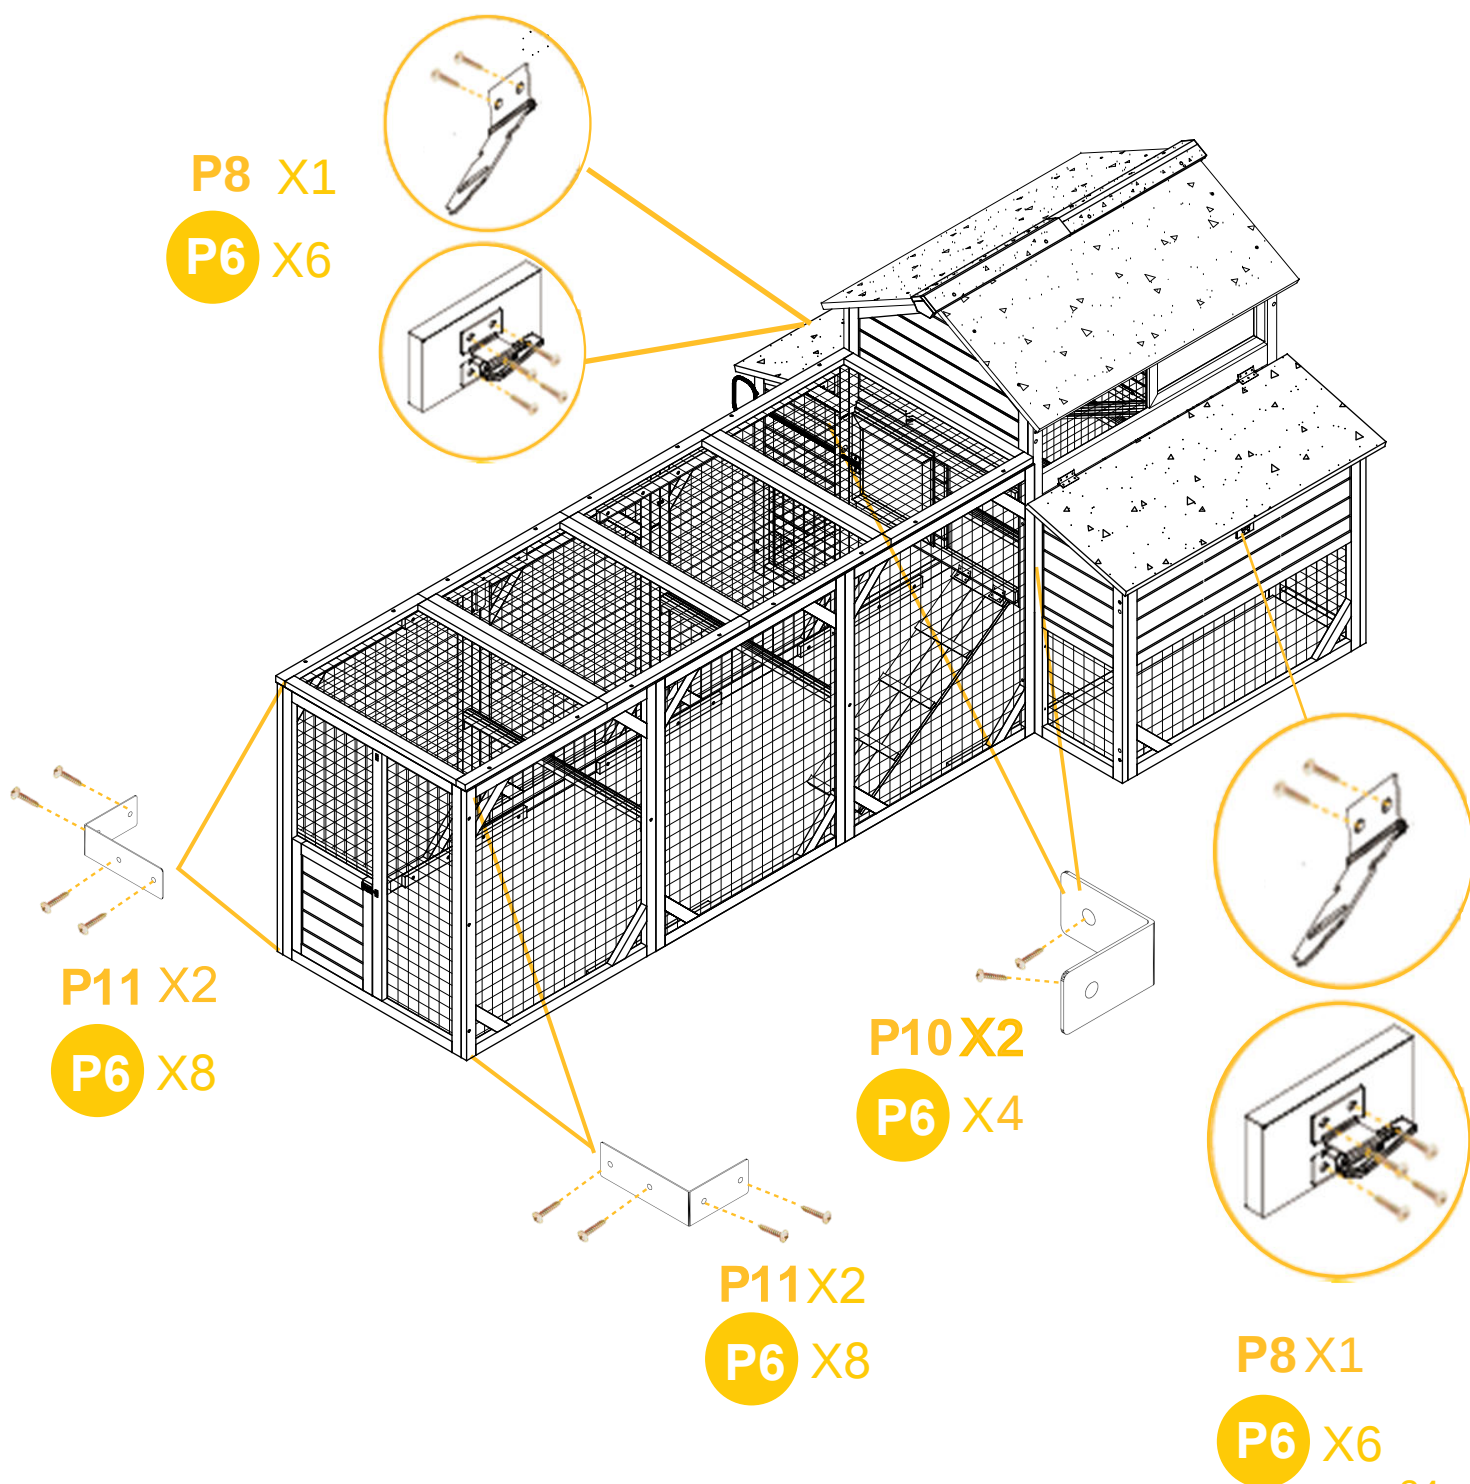


PRODUCT ASSEMBLY

25

Attach the lock P8 to the tray by 6 X P6 screws.

Attach PVC Waterproof Strip Part M above nesting box by 4 X P5 screws.


Attach the lock P18 to the door by 4 X P6 screws each.

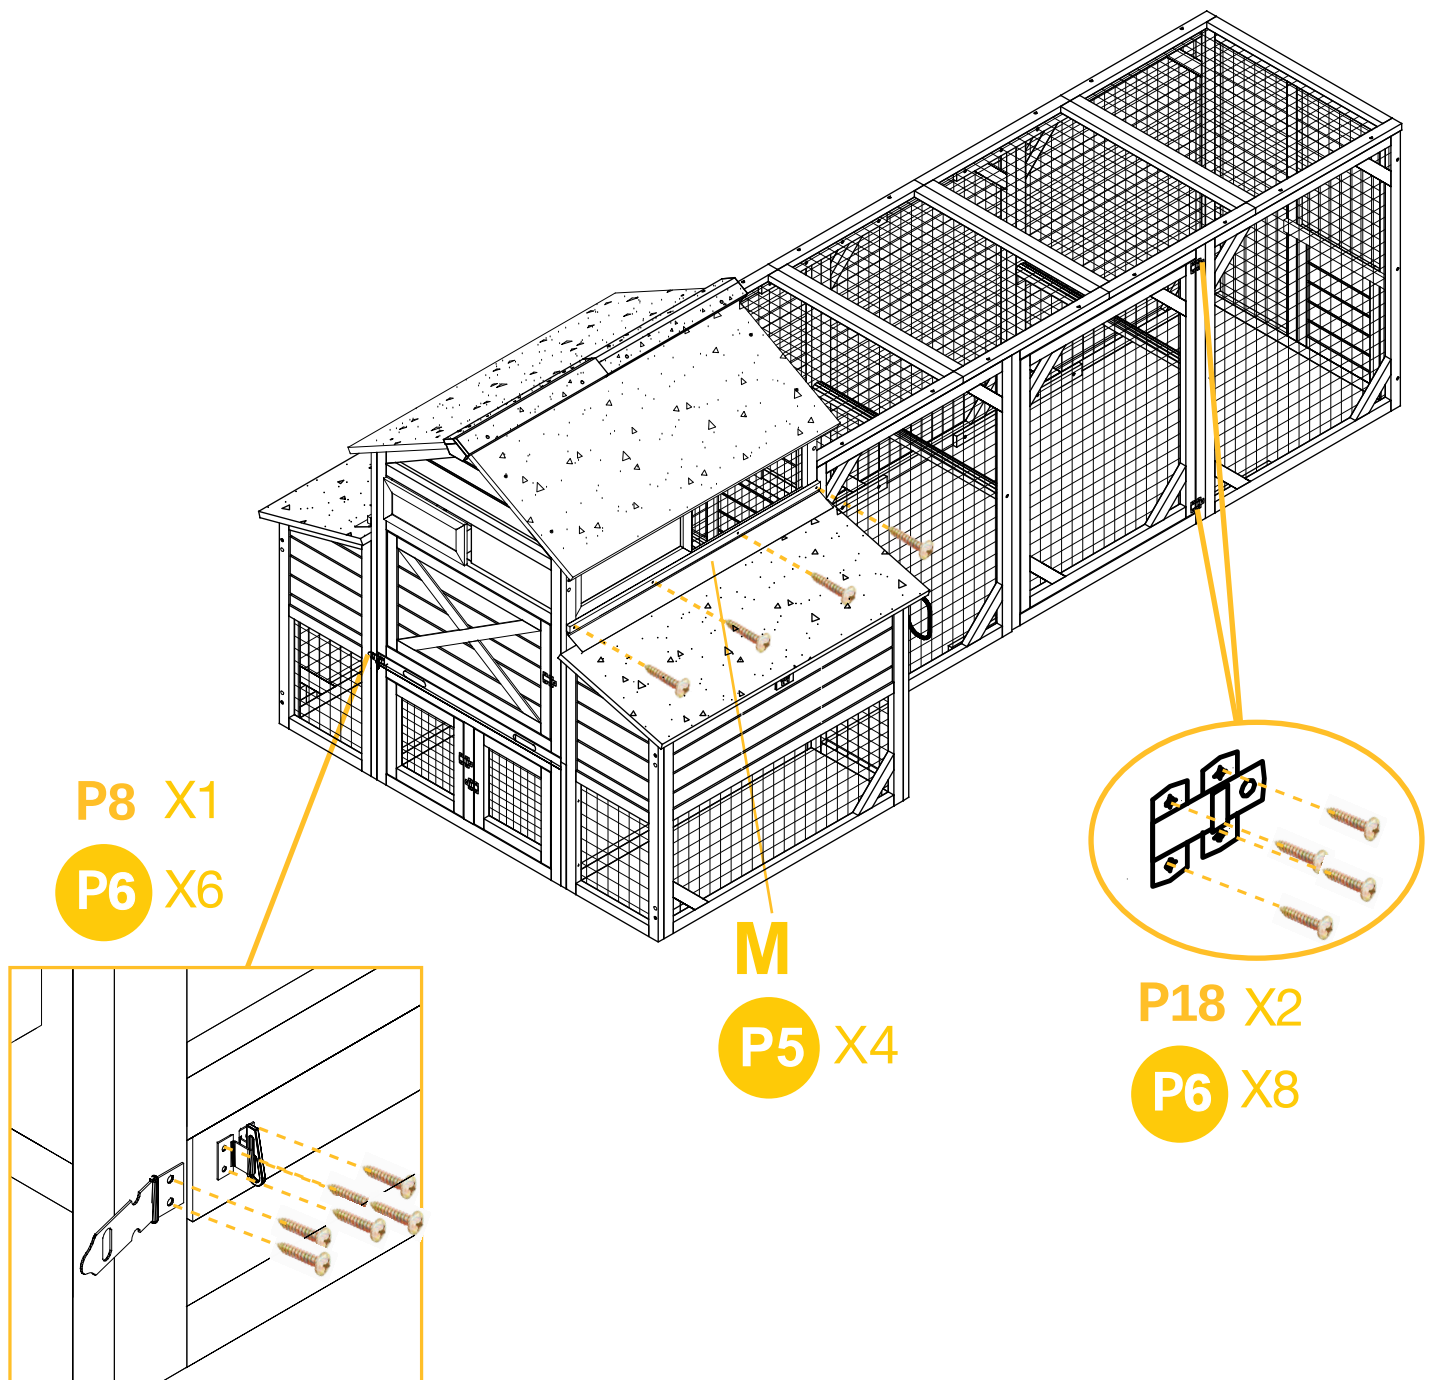

PRODUCT ASSEMBLY

26

Attach PVC Waterproof Strip Part M to the other side by 4 X P5 screws.
Hook the chicken coop to the ground by 6 X P17 hooks.

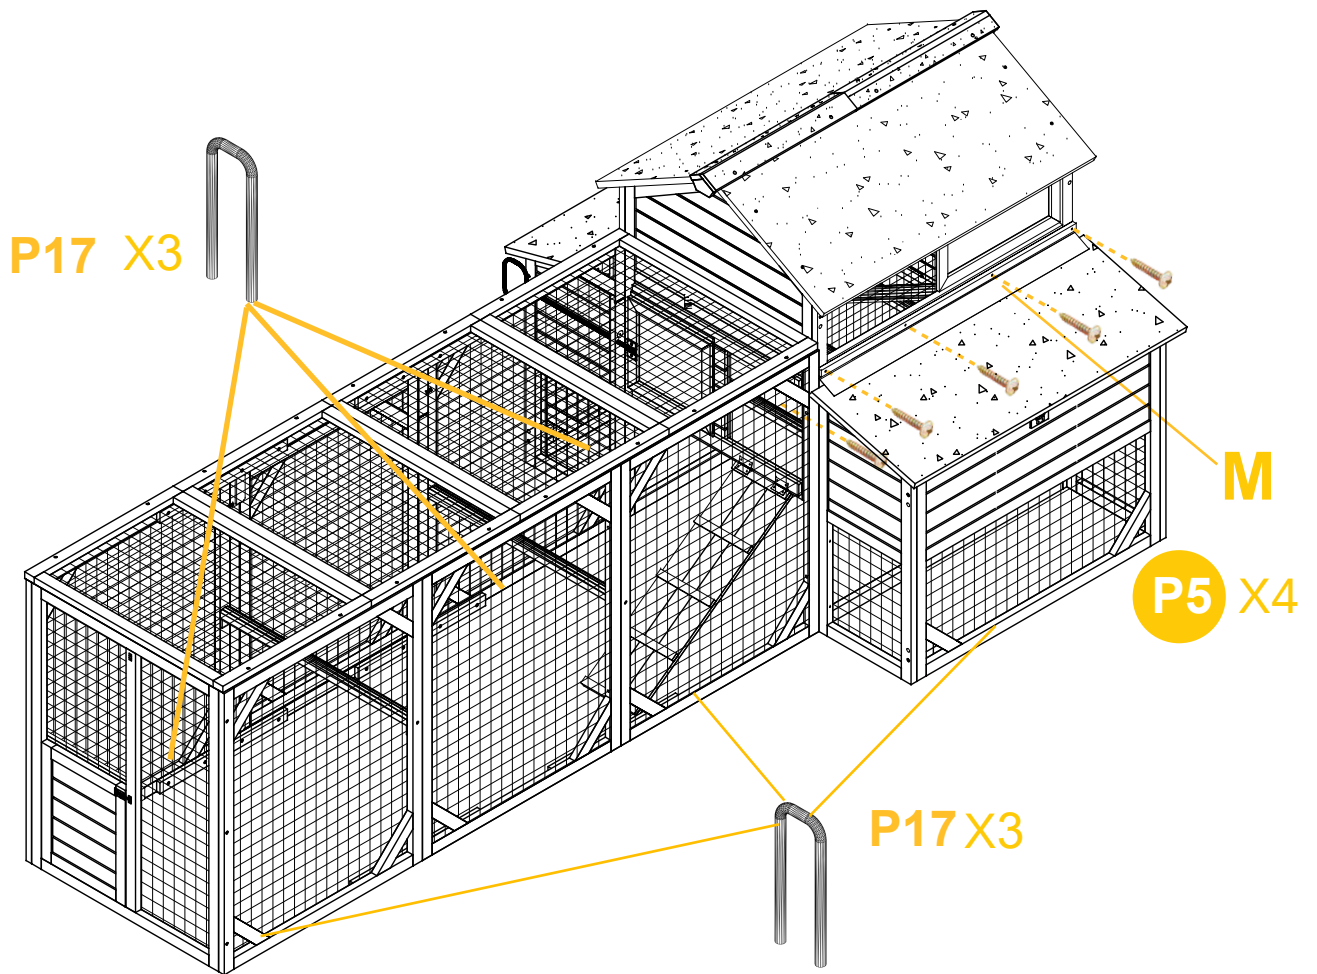

Finish



WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this