

BEFORE ASSEMBLING YOUR ATV MOUNT
FOLLOW INSTRUCTIONS IN YOUR SPOT
SPRAYER ASSEMBLY MANUAL

INCLUDED COMPONENTS

TOOLS REQUIRED




1/2" SOCKET WRENCH


NOTE:
ONCE YOU HAVE FINISHED THE SPOT SPRAYER AND
ATV MOUNT ASSEMBLY, MOVE ON TO THE BOOM ASSEMBLY
CARD TO COMPLETE YOUR SPRAYER.

HAVING TROUBLE? CALL SUPPORT AT: 800.825.5397


PRE-ASSEMBLED PARTS

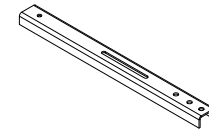


ATV Mounts (2)
31-100288

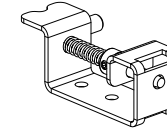


Spring Bracket Mounts (2)
34-140168

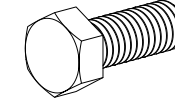

3/4" Bolts (4)
33-200120

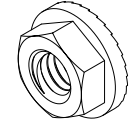


Flange Nuts (4)
33-100113

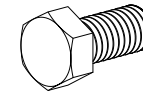

1/2" Bolts (4)
33-100114




Washers (4)
33-100115

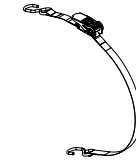


Ratchet Straps (2)
33-100164

1.

PARTS

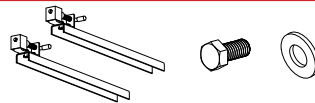


TOOLS

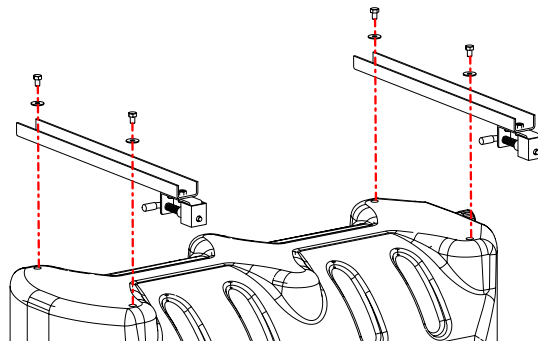

NOTE: Make sure the Spring
Bracket Mount end is on the
same side as the Pump head.

Attaches ATV Mounts to Sprayer Tank

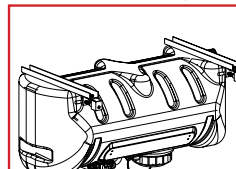

Flip your Sprayer Tank over to access the holes on the bottom.

Position ATV Mounts over Sprayer Tank holes.

Attach ATV Mounts to Sprayer Tank with 1/2" Bolts and Washers
using a Socket Wrench. Do not over tighten.


2.

PARTS




TOOLS

None

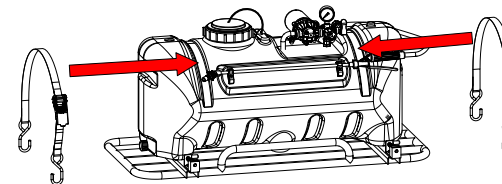



NOTE: If not done already,
assemble your Boom Kit
after completing this step.

Installs Sprayer on ATV Rack

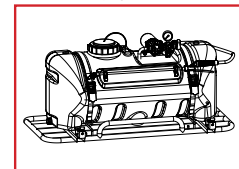

Position Sprayer Tank onto the back of an ATV, ensure that Spring
Bracket Mounts hang over the back end.

Use Ratchet Straps within the vertical grooves on the Sprayer Tank
to fasten Sprayer Tank securely to the ATV rack.

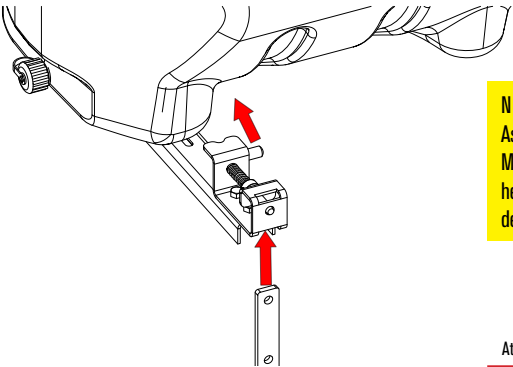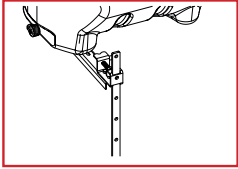3.	PARTS	
TOOLS None	 NOTE: Depending on Boom Assembly installation, ATV Mounts can help adjust height of Boom Assembly depending on application. Attaches Boom Assembly to Sprayer 	
Pull back spring handle of Spring Bracket Mount. Insert a Boom Upright Bracket into the Spring Bracket Mount and line up holes of each part. Release spring handle to lock Boom Upright Bracket into place.		