













Parts List

Configuration	4-Way Kit	6-Way Kit	9-Way Kit	10-Way Kit
Parts				
 C10 Corner Panels	4	4	4	
 C12 Corner Panels				4
 S15 Side Panels	4	6	8	4
 S20 Side Panels				4
 B1 Bolts M6X10	40	50	60	60
 FCN Flange Cap Nuts	16	20	24	24
 FSN Flange Standard Nuts	24	30	36	36
 Bracing Rod A		2	4	6
 Bracing Rod B		2	4	4
 SE Safety Edging	1	1	1	1
 LW L Wrench	1	1	1	1


Assembly Guide

www.vegogarden.com/assembly


1 Remove protective film from all panels, and lay the panels on a flat surface according to the configuration you selected.

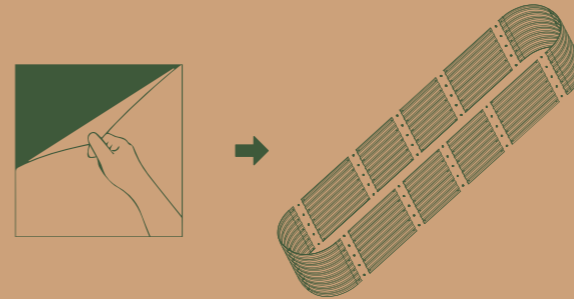


2 Cap nuts are used for the top two rows, and standard nuts are used for the remaining rows. Assemble all straight panels. First, install all bolts and nuts loosely, then go back and tighten with a screwdriver and included tool or a cordless driver.

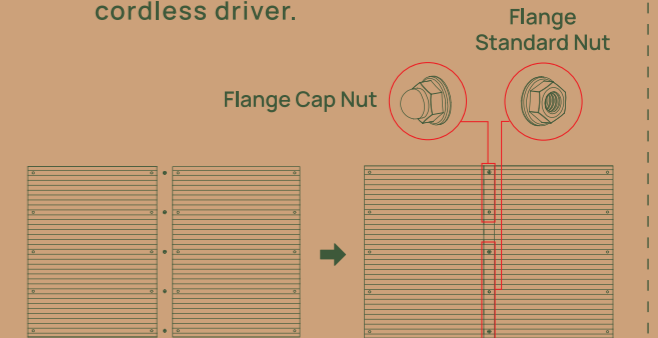


3 Make sure that all nuts & bolts are tightly fastened to fully support the raised garden bed.

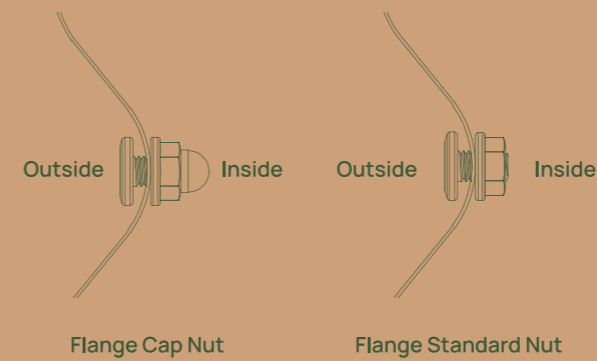

4 After the straight panels are assembled, attach corner panels to the outside of straight panels, following the same steps as above.

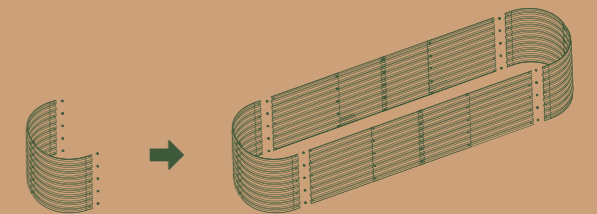

5 Press the safety edging along the top rolled steel edge, and trim away any extra length.

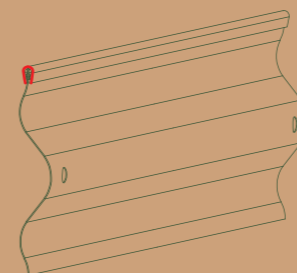

6 Some configurations require internal bracing. For 2ft and 2.5ft configurations with lengths 6ft and longer, use bracing rod A. For 3.5ft and 4ft configurations with lengths 5ft and longer use bracing rods A and B, connected with the threaded pin.

