




SKU#: 22203

UNIVERSAL CAGE WITH TOP COVER

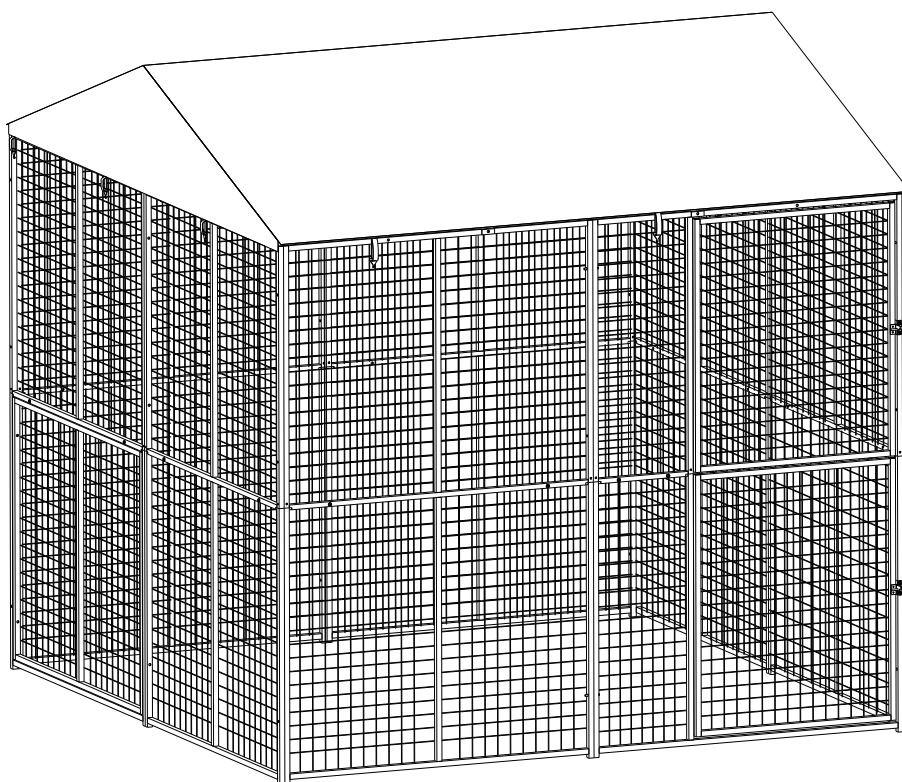

ASSEMBLY MANUAL




TOOLS REQUIRED FOR ASSEMBLY
(not included)

Distributed by: Win World International Trade LLC., Camarillo, CA
www.winworldinternational.com & www.JJShelter.com
Made in China

PARTS LIST


每个 "x" 的前后增加一个空格

①

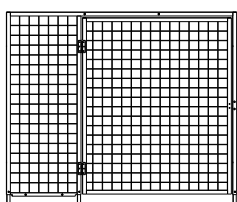


Gate Panel -Top
.....x1pc

②

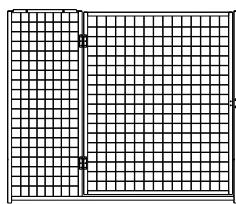


Gate Panel -Bottom
.....x1pc

③

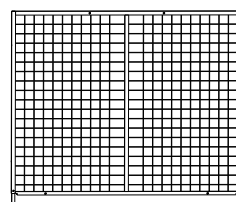


Side Panel 1 - Top
.....x3pcs

④

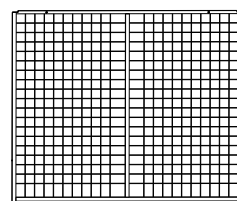


Side Panel 1 - Bottom
.....x3pcs

⑤

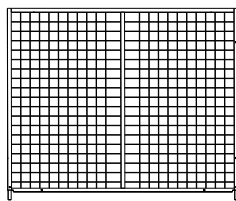


Side Panel 2 - Top
.....x2pcs

⑥

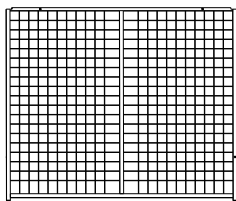


Side Panel 2 - Bottom
.....x2pcs

⑦

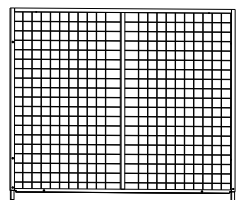


Side Panel 3 - Top
.....x2pcs

⑧

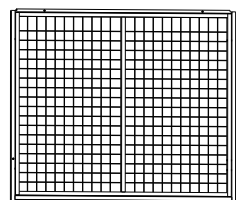


Side Panel 3 - Bottom
.....x1pc

⑨

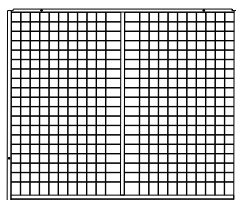


Side Panel 4 - Bottom
.....x1pc

⑩

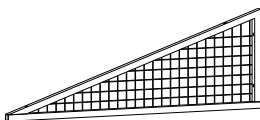


Triangle Panel - Left
.....x2pcs

⑪

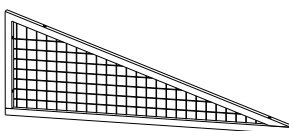


Triangle Panel - Right
.....x2pcs

⑫

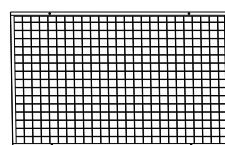

Roof Panelx6pcs

⑬




Triangle Support
.....x2pcs

⑭



Triangle Support Wings
.....x4pcs

⑮

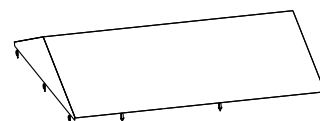

Canopyx1pc

⑯



Door Latchx2pcs

⑰



M6x80 Boltx1pc

⑱



M6x50 Boltx31+1pcs

⑲



M6x35 Boltx36+1pcs

⑳



M6x30 Boltx20+1pcs

㉑




M6 Nutx52+2pcs


ASSEMBLY

Get Ready: 第一个单词是Please

- Please assemble parts #1 to #9 as shown in the diagram, and secure them firmly using #20 and #21.


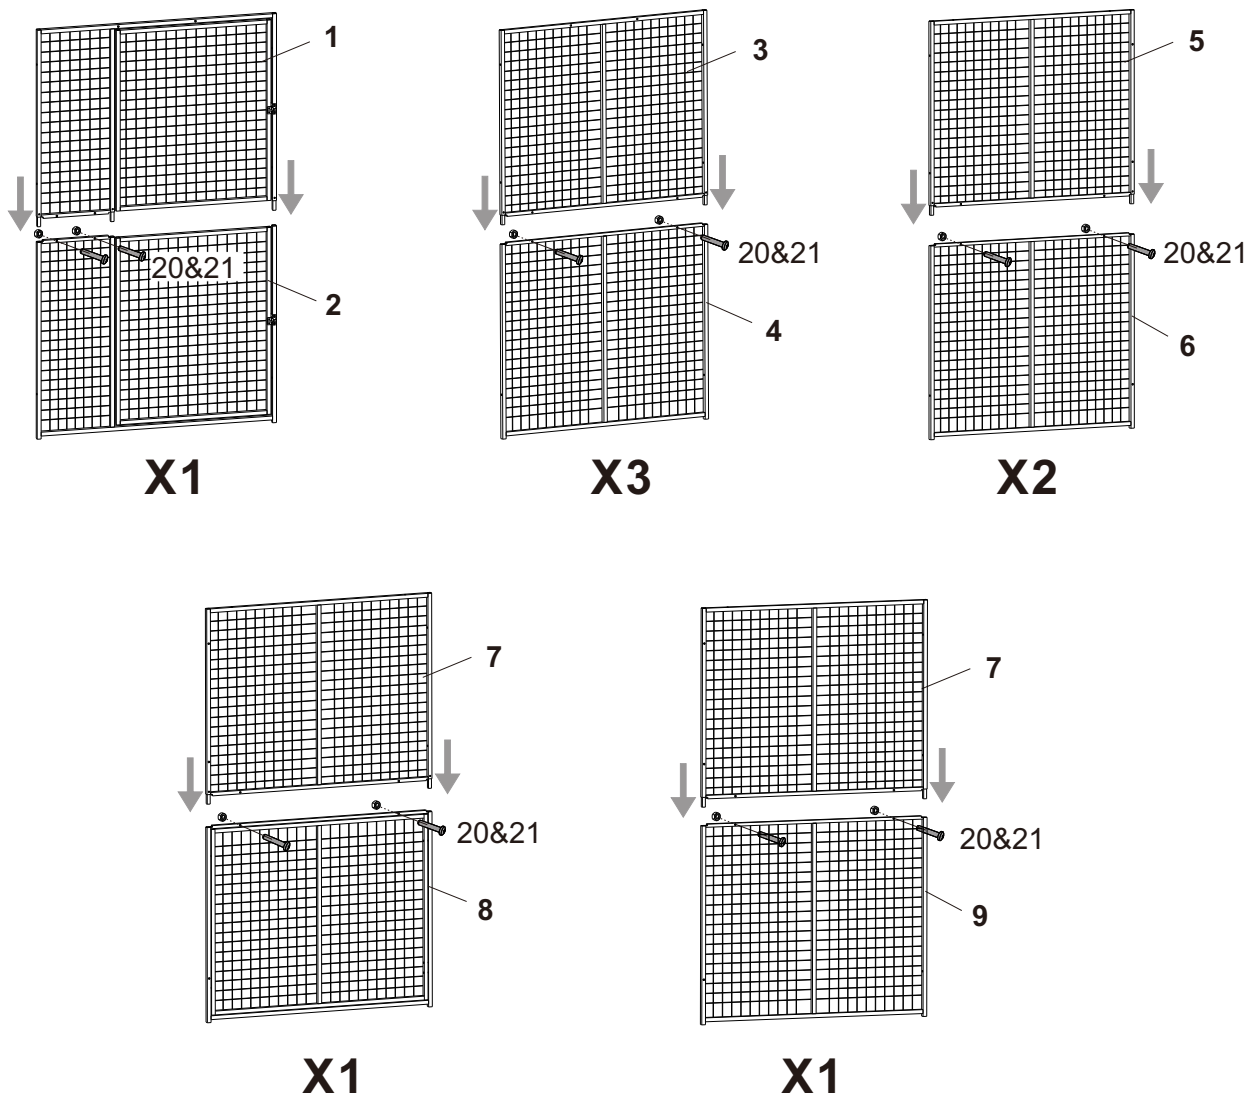


- Assemble parts #13 and #14 as shown in the diagram, and secure them firmly using #18 and #21.

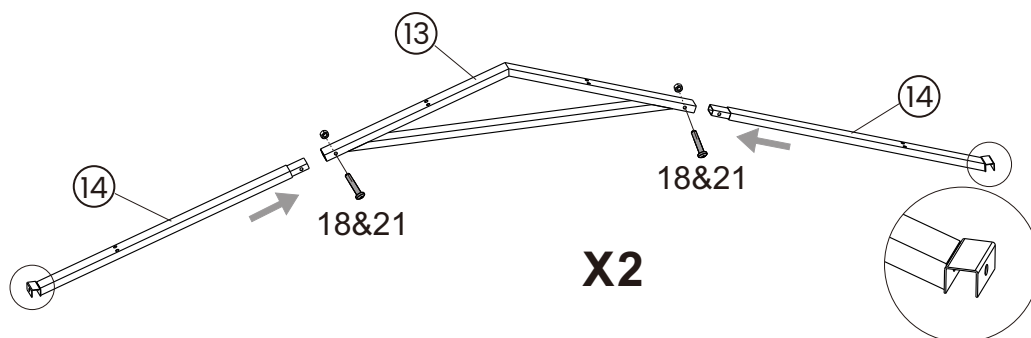

STEP 1

- Take the pre-assembled parts #1 & #2 and #7 & #9, then securely join the two assemblies using #18 and #21.
- Attach the two pieces of #16 to the pre-drilled holes on #1 and #2 using #19 and #21 respectively.

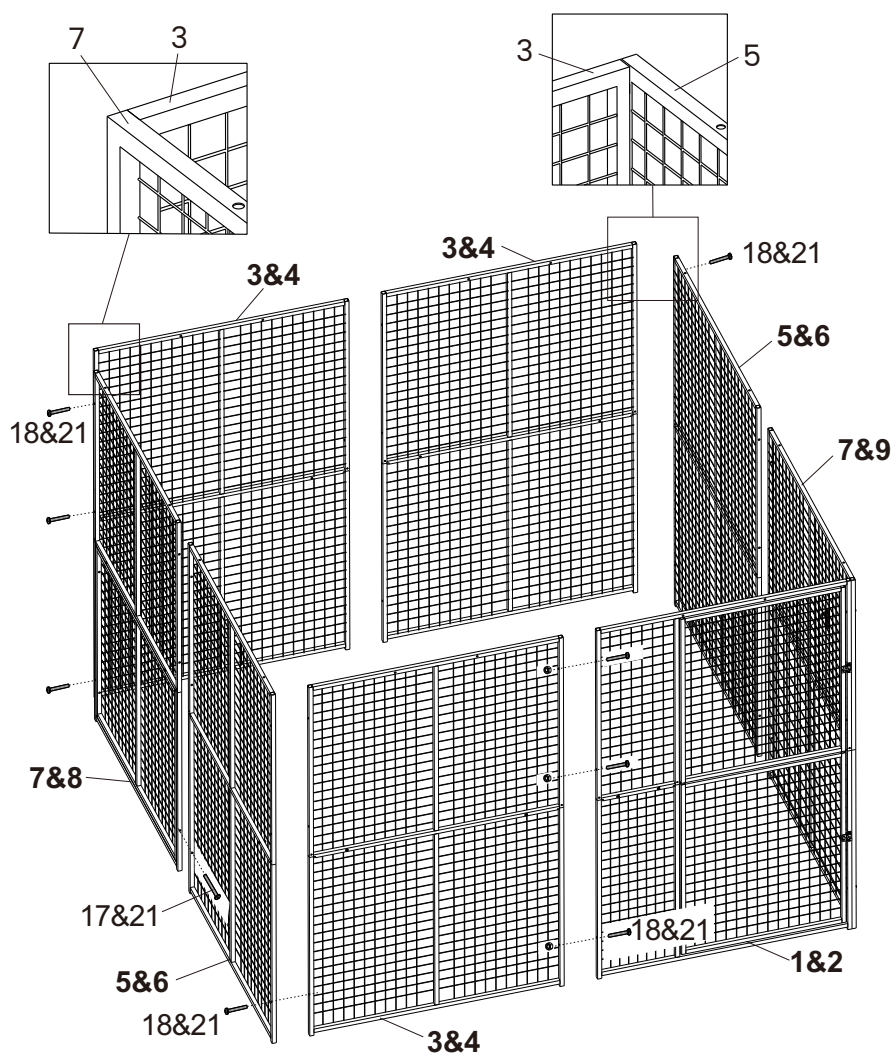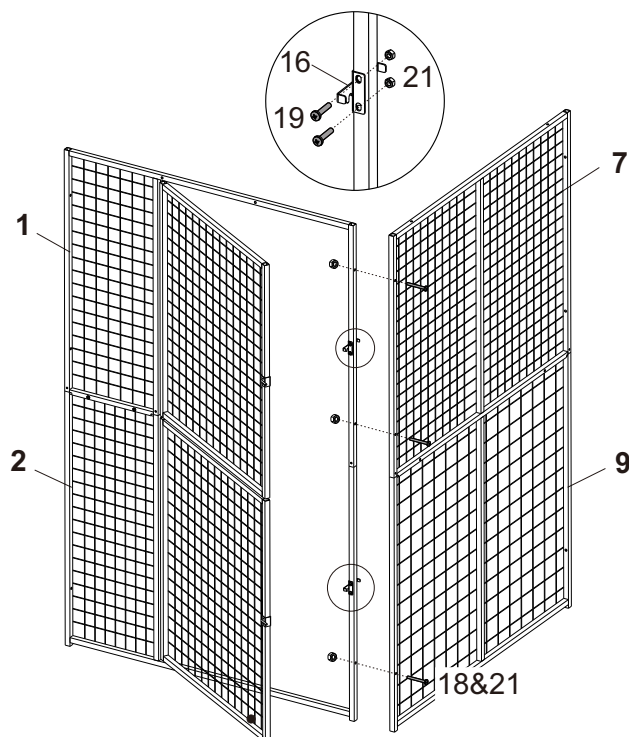




STEP 2

- Place the six pre-assembled components in the positions shown in the left diagram, and secure them firmly using #17, #18, and #21.

Note: 这个备注拉开一点距离，并且用斜体字吧
Please keep in mind that the long Bolt #17 must be used between two Panels (#6), bottom part.

STEP 3 ►

- Attach #10 and #11 to the top of #7 and #5 respectively using #19, and then securely connect #10 and #11 through the pre-drilled holes using #18 and #21.
- Install the two assembled sets of #13 & #14 in the indicated positions using #20 through the pre-drilled holes.

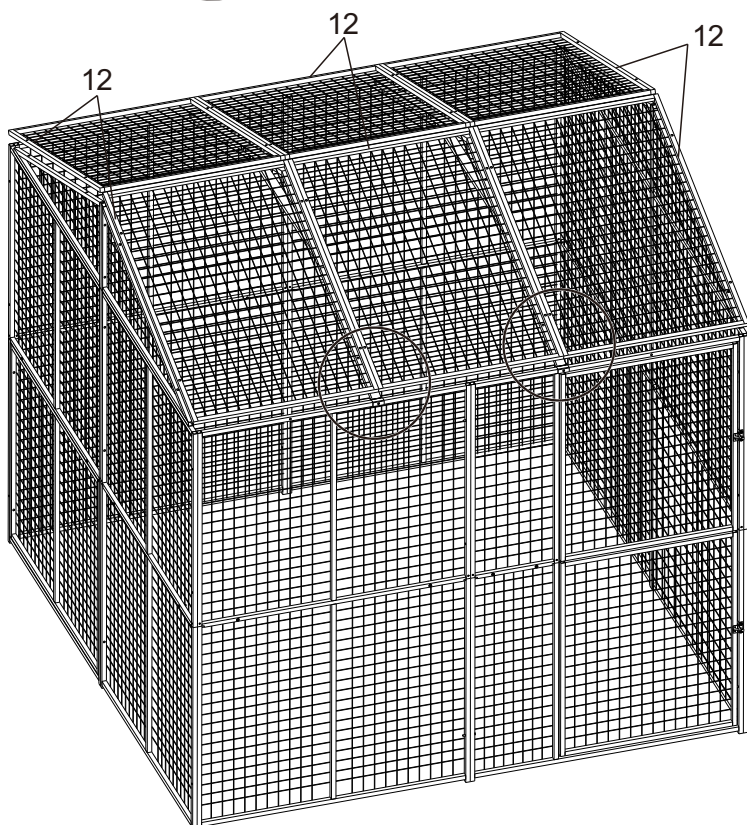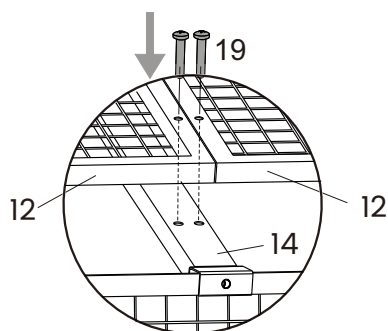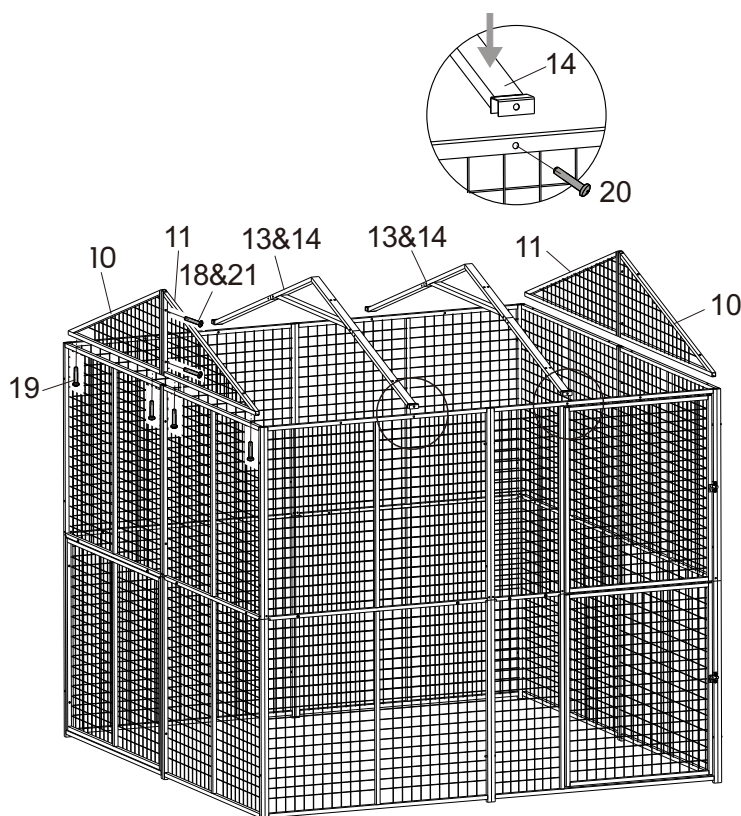



STEP 4 ◀

- Attach the six pieces of #12 to the top of the cage using bolts (#19) through the pre-drilled holes.

ASSEMBLY

STEP 5 ▼

- Unfold the Canopy (#15), place it on top of the cage, and secure it to the cage using the sewed hooks.

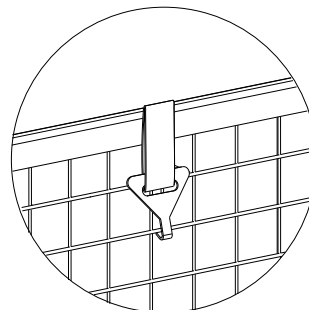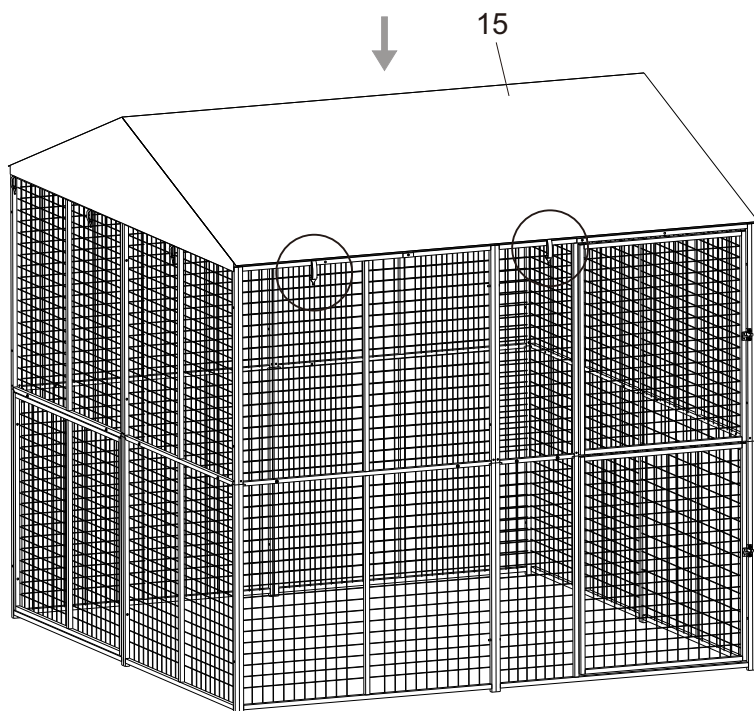

The assembly is now complete.