


INSTRUCTION MANUAL

AIR46

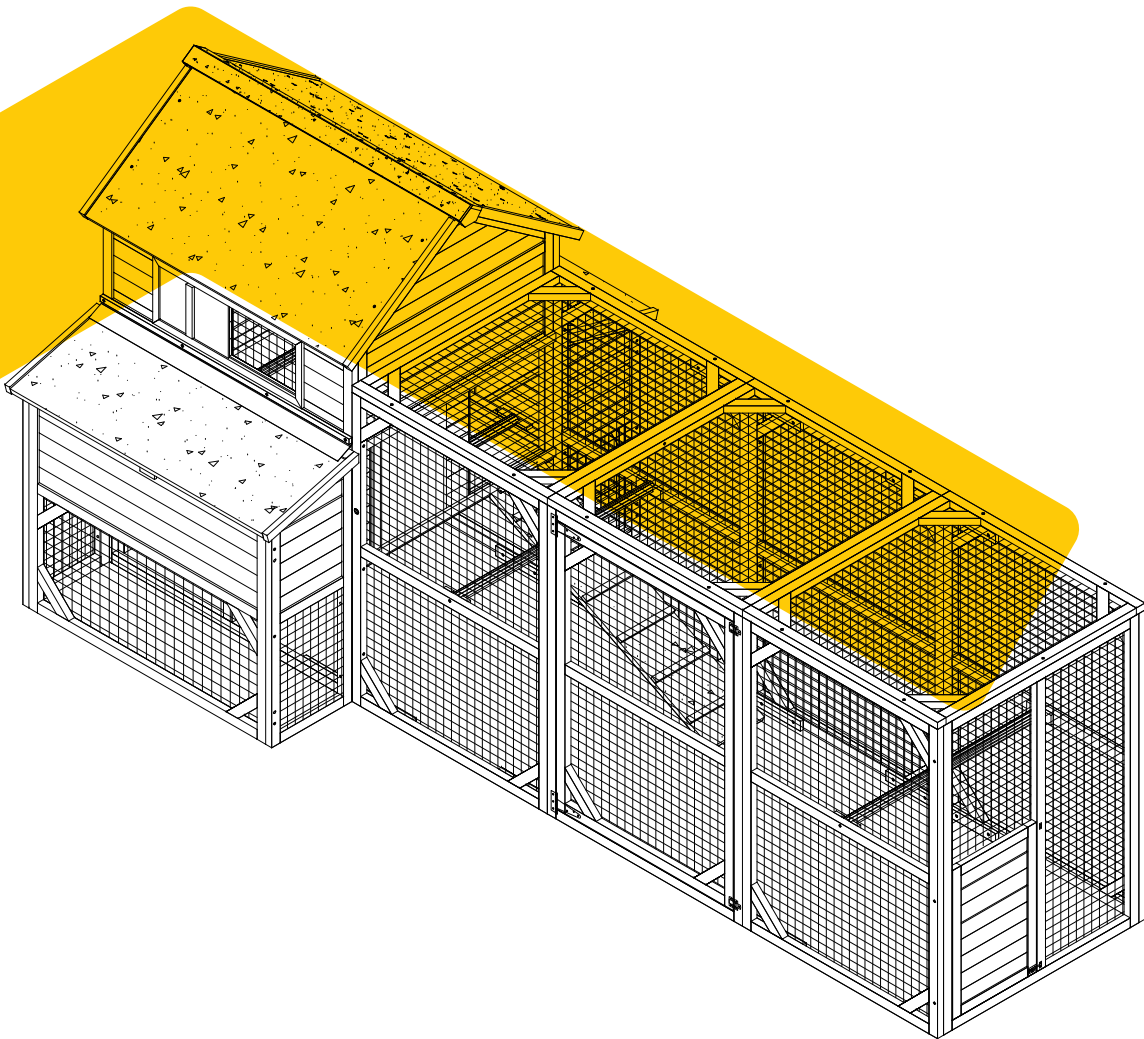



NOTICE


Please retain these instructions for future

- Firmly secure all bolts,screws and knobs before use.
- Reconfirm that all bolts,screws,and knobs are secure every 90 days.
- Fasten screws loosely during initial assembly. Do not fully tighten screws until the item is completely assembled.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- Be aware that moving parts can injure,crush and cut.
- If any parts are missing,broken,damaged,or worn,stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

TOOLS REQUIRED



PHILLIPS
SCREWDRIVER



DRILL
(RECOMMENDED)



2PERSON
ASSEMBLY



APPROXIMATELY
60MIN. ASSEMBLY

HARDWARE

M4.0x45 mm SCREW
30PCS+1 spare



P1

M3.5x60 mm SCREW
24PCS+1 spare



P2

M3.5x50 mm SCREW
35PCS+1 spare



P3

M3.5x35 mm SCREW
8PCS+1 spare



P4

M3.5x25 mm SCREW
56PCS+1 spare




P5

M3.0x16 mm SCREW
100PCS+1 spare




P6

Latch
1PC



P7


Lock
1PC

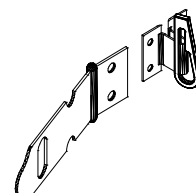

P8

HARDWARE

Waterproof PVC
1PC

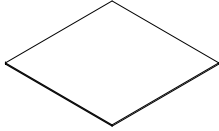


P9

L shape corner bracket
2PCS




P10

L shape corner bracket
8PCS




P11

L shape corner bracket
2PCS

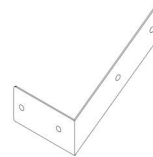


P12

L shape corner bracket
2PCS




P13

L shape corner bracket
2PCS

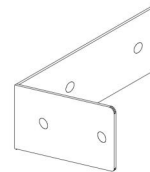


P14

L shape corner bracket
2PCS

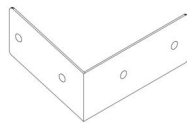


P15

L shape corner bracket
2PCS



P16


HARDWARE

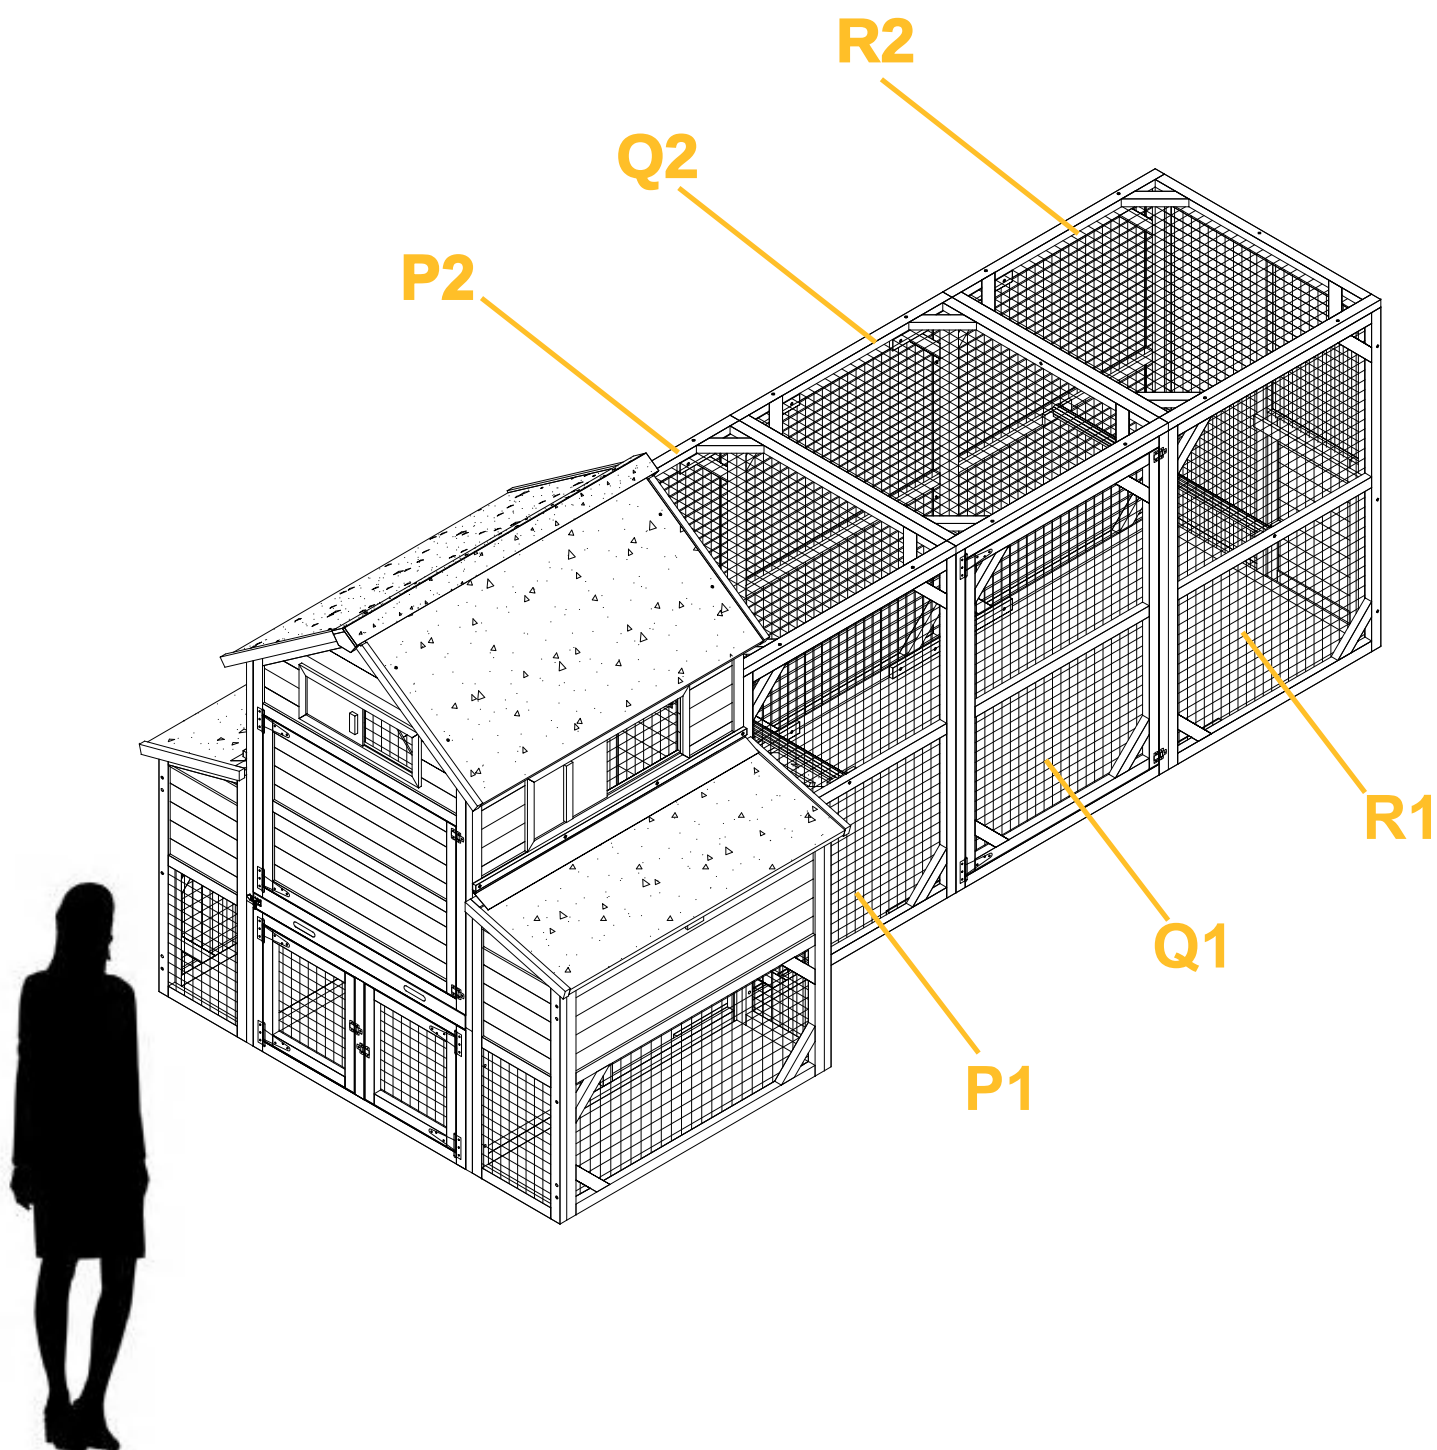

PARTS


CARTON 1/5

Right panel of coop
1PC

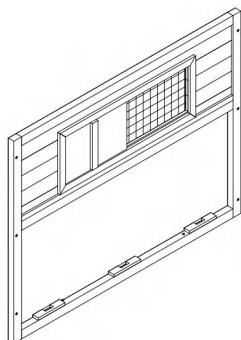


A1

Left panel of coop
1PC

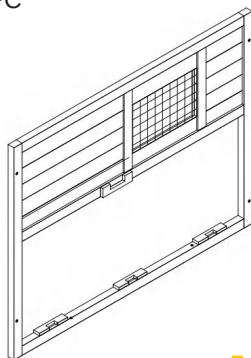


A2

Right bottom panel of coop
1PC

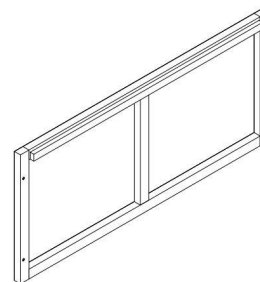


D1

Left bottom panel of coop
1PC

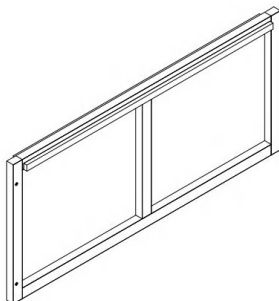


D2

Bottom panel of nesting box
2PCS

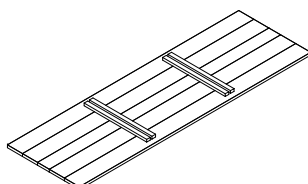


G

Ramp
1PC

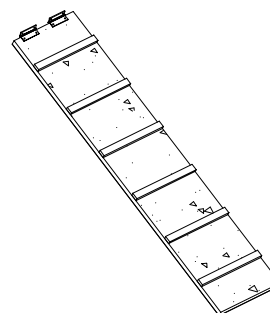

O

Outer roof of pen
1PC

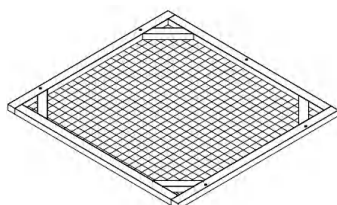


V

PARTS

CARTON 2/5

Pen panel


1PC

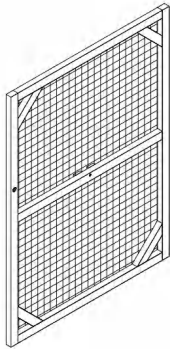

P1

Pen panel


1PC

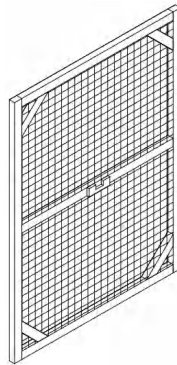

P2

Pen panel


1PC

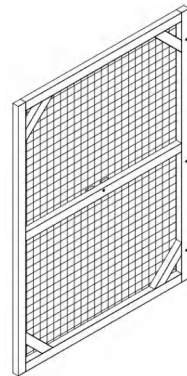

R1

Inner roof of pen


1PC

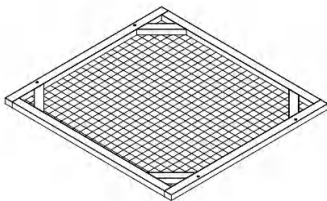

T

Middle roof of pen

1PC

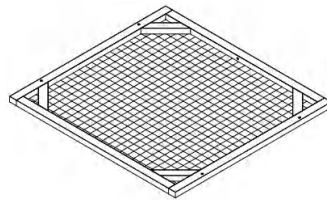


U

Hardware bag



Metal Rod

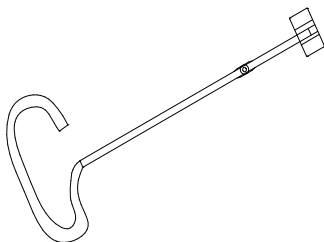


PARTS

CARTON 3/5

Roof of nesting box


2PCS

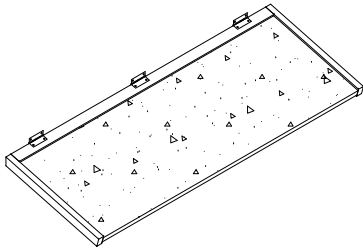

L

PVC Waterproof Strip


2PCS

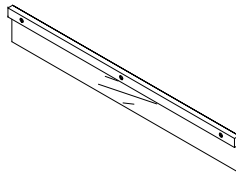

M

Right/Leftroof of coop


2PCS

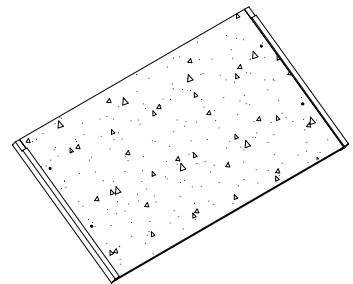

N

Pen panel


1PC

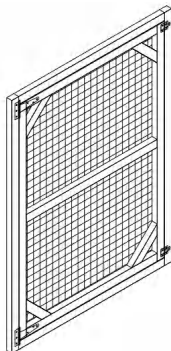

Q1

Back pen panel


1PC

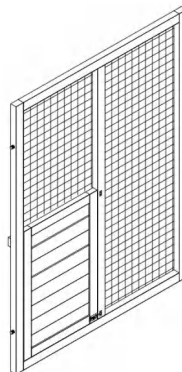

S

Roof cap

2PCS

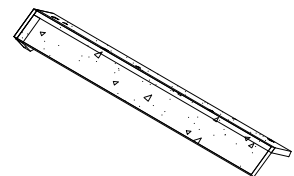


W

PARTS

CARTON 4/5

Front panel of coop


1PC

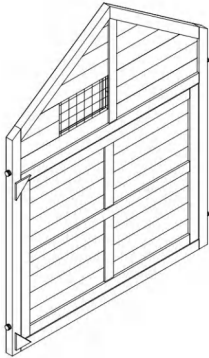

B1

Back panel of coop


1PC

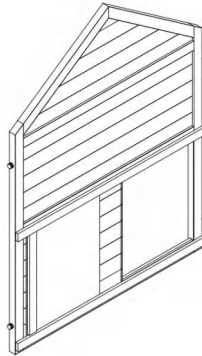

B2

Side panel of nesting box


2PCS



F1

Side panel of nesting box


2PCS



F2

Pen panel

1PC

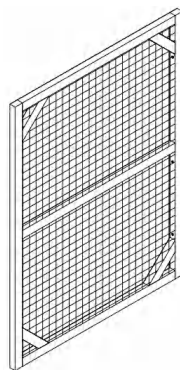


Q2

PARTS


CARTON 5/5

Front bottom panel of coop
1PC

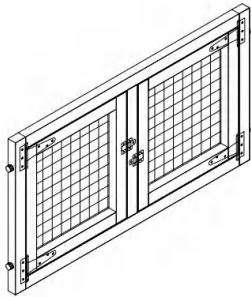


C

Front panel of nesting box
2PCS

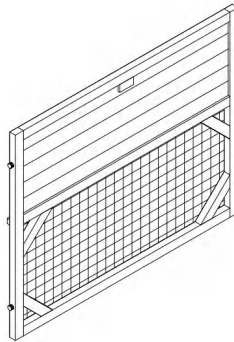


E

Divider of nesting box
4PCS

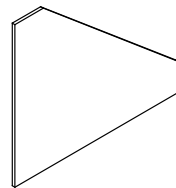


H

Round Perch of coop
3PCS

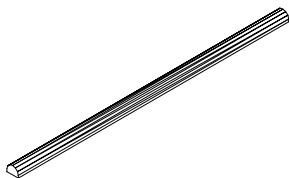


I1

Perch of pen
2PCS

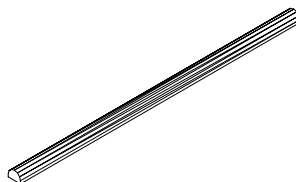


I2

Perch of coop
1PC

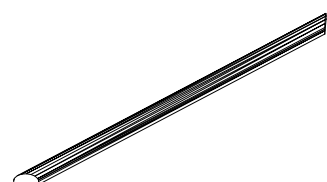


J

Tray
1PC

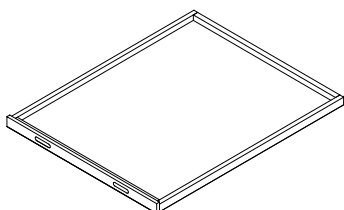


K

Pen panel
1PC

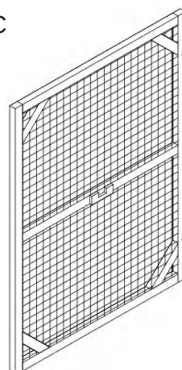

R2

Connect bar
10PCS

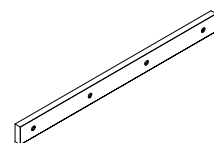


X

PRODUCT ASSEMBLY


01

Attach the part A1, part D1 by 2 X P2 screws.
Attach the part A2, part D2 by 2 X P2 screws.

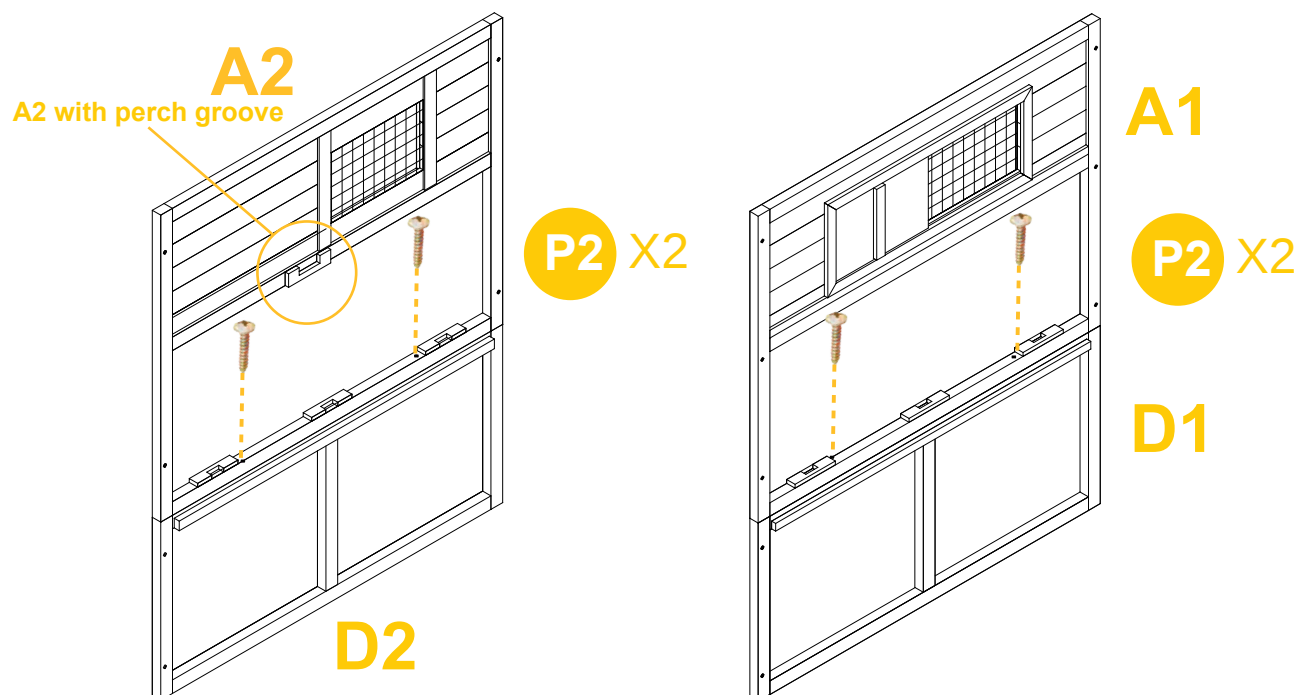

02

Then attach the part B1, part B2, part C to the step 1 by 16 X P1 screws.

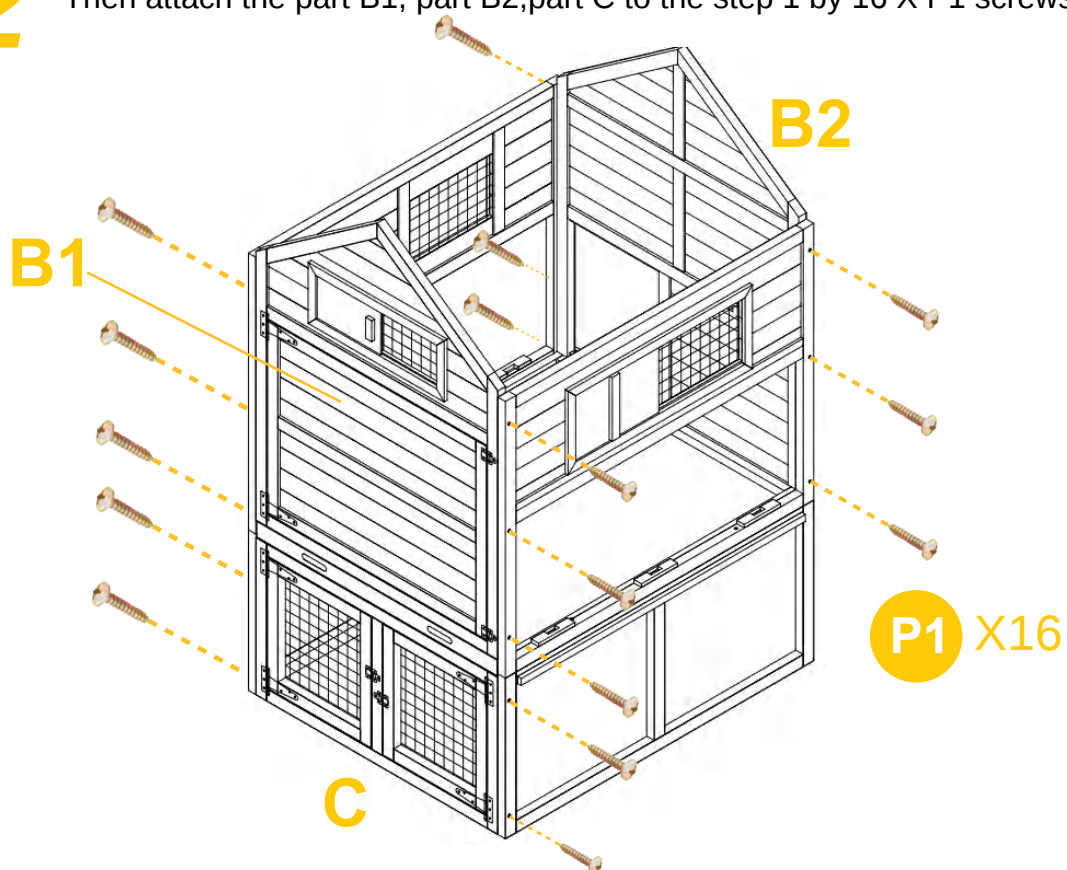


PRODUCT ASSEMBLY

03

Slide in the tray Part K.


Insert the perches 3xPart I1 into the slots inside the left and right panel of coop.

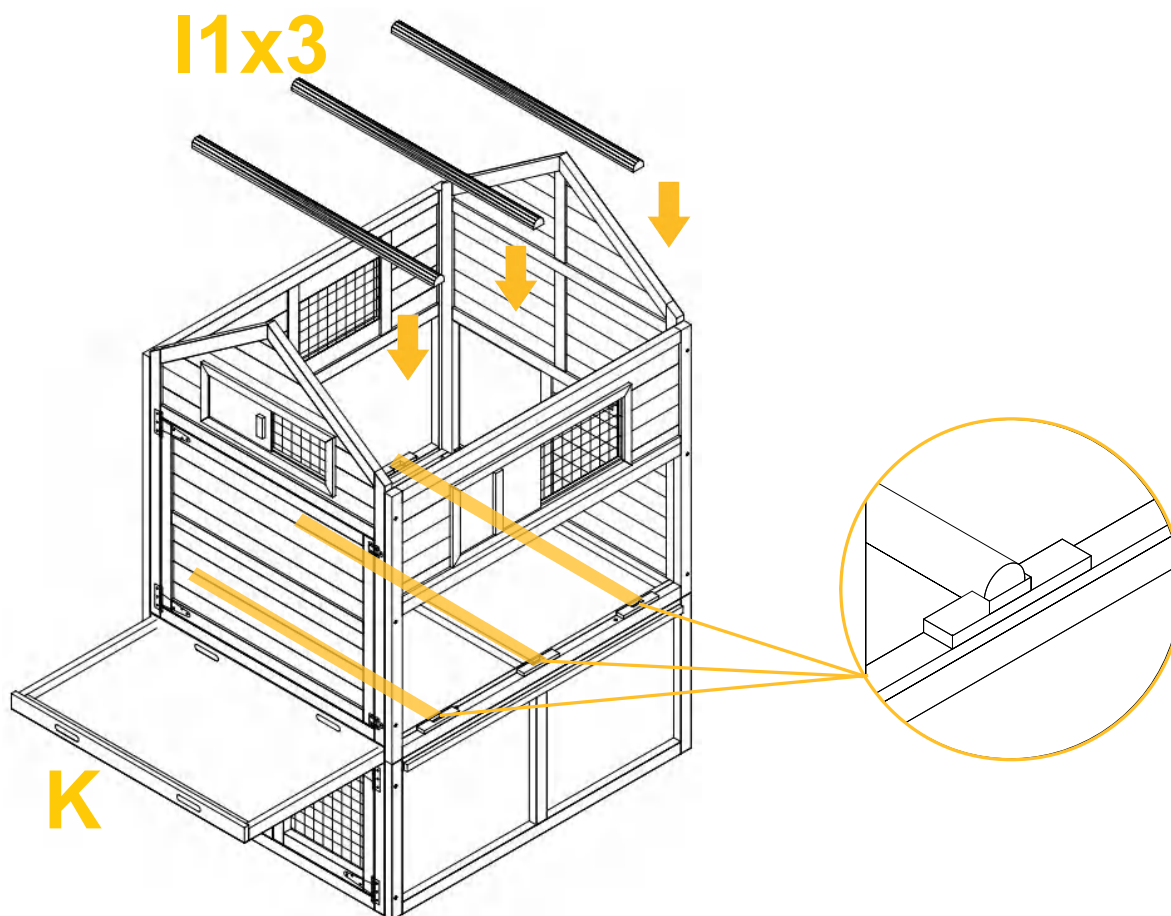

PRODUCT ASSEMBLY


04

Attach the perch Part J to the slots inside the front and right panel by 1XP3 screws each side.
Attach the corner bracket P12 & P13 to the corner by 4xP6 each.

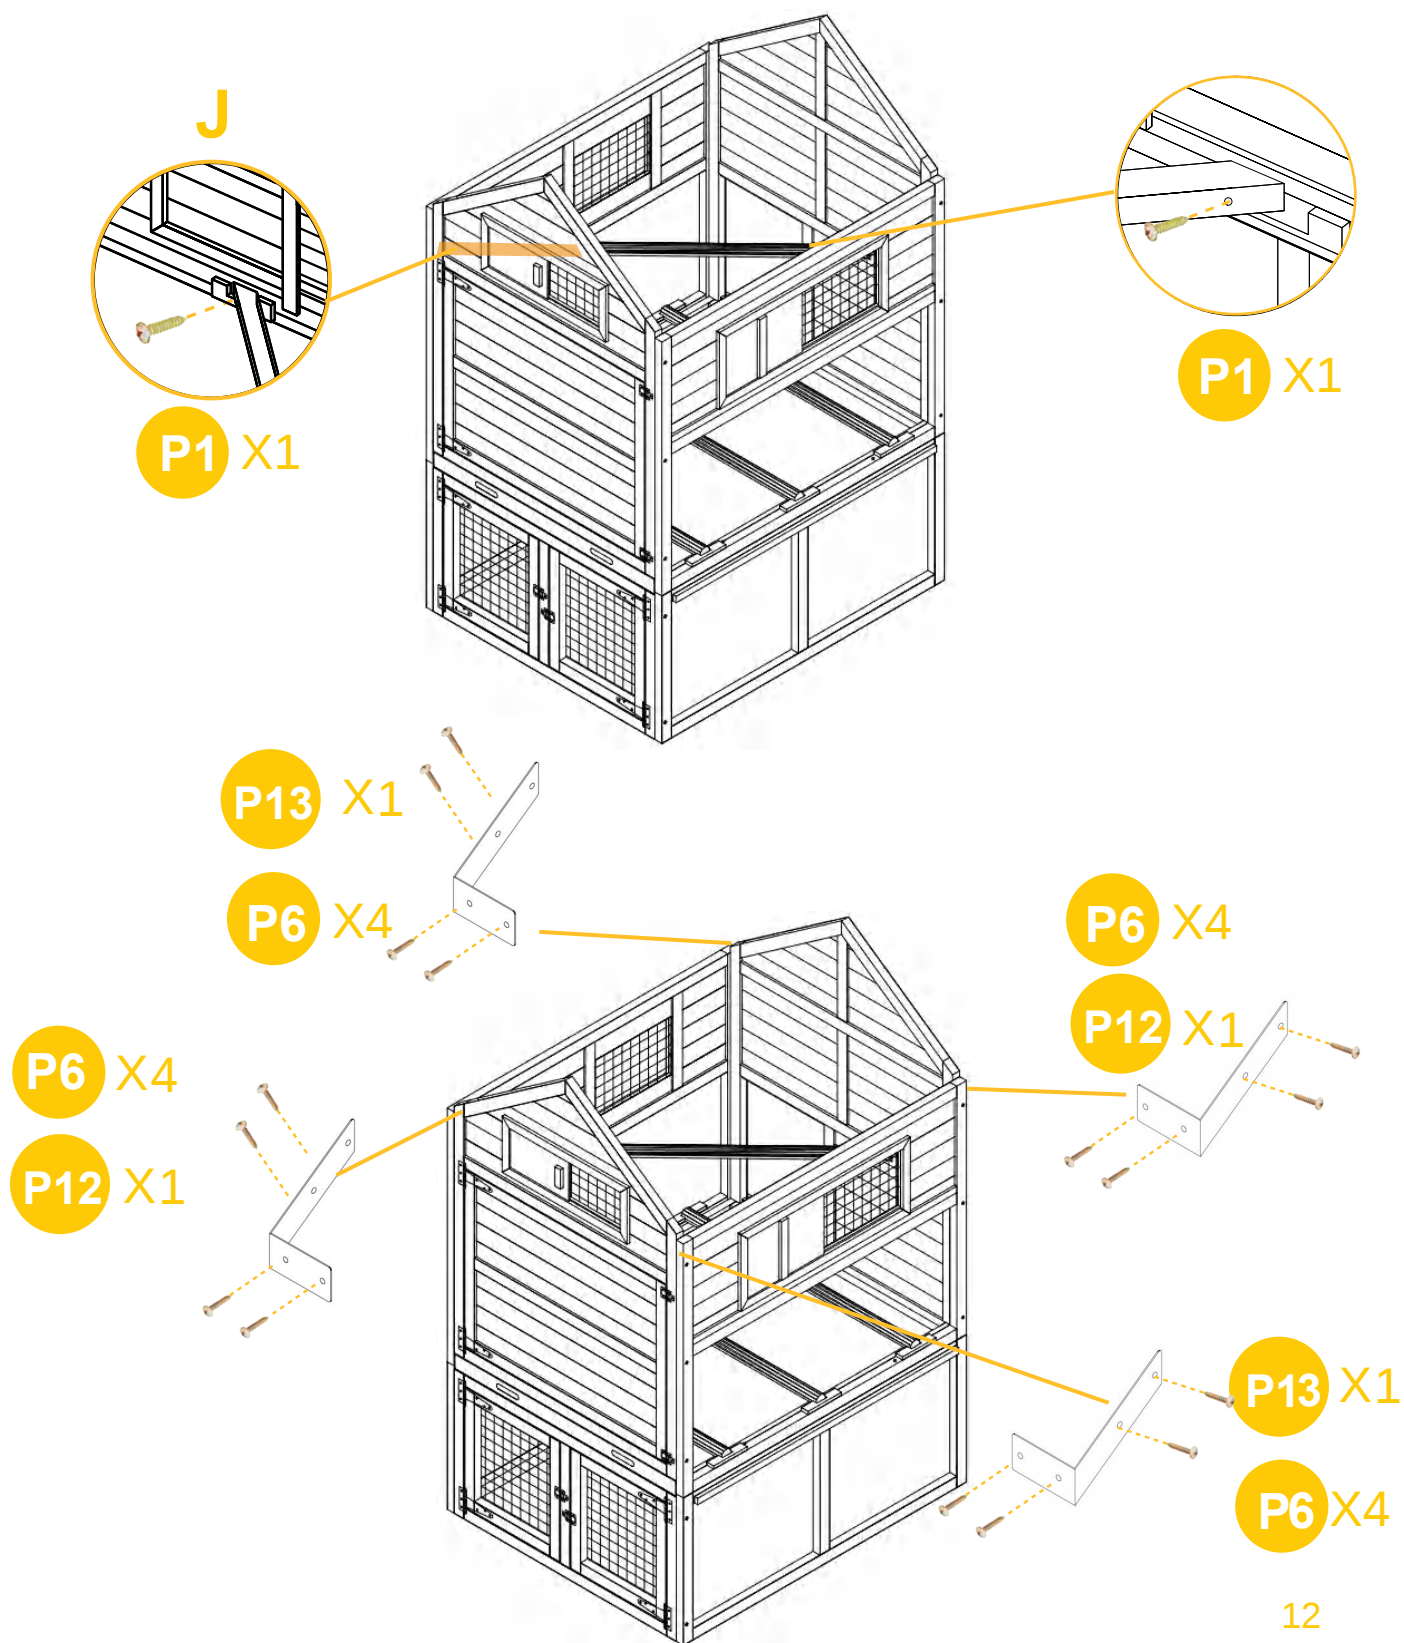


PRODUCT ASSEMBLY

05 Attach the side panels of nesting box Part F1 & F2 to the coop by 6XP3 screws.

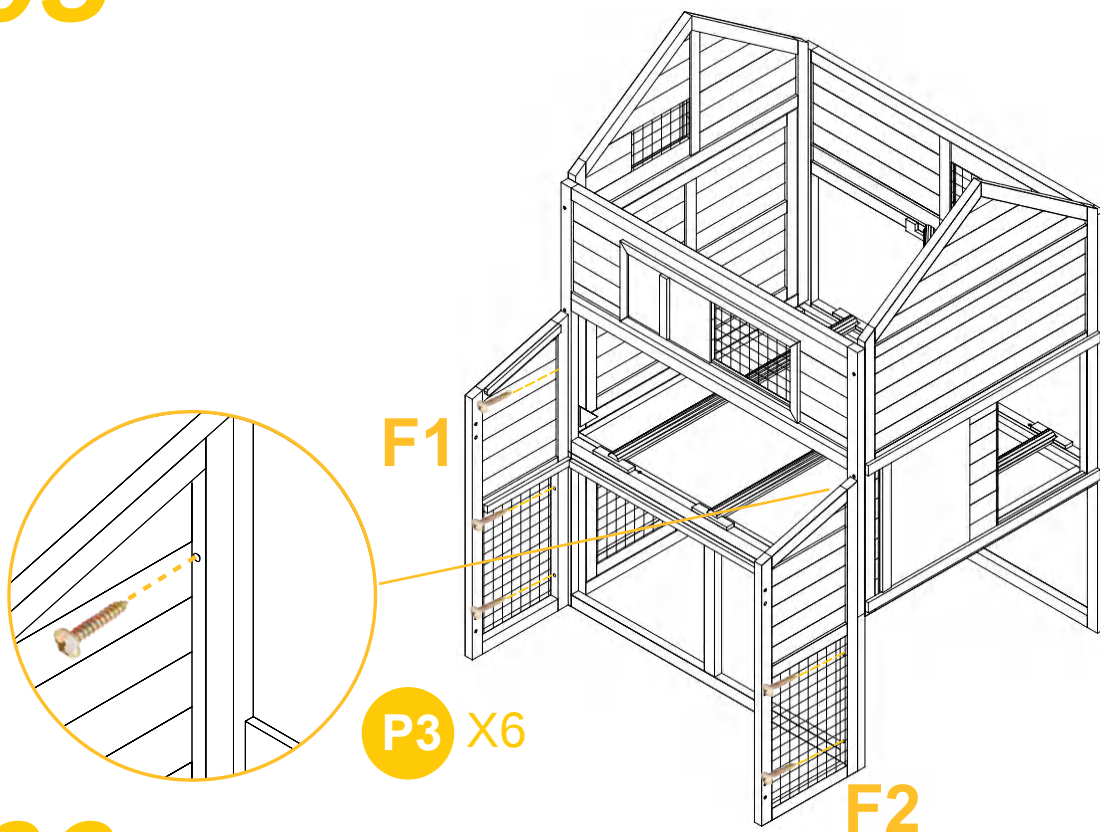


06 Attached the front panel of nesting box Part E to the side by 6XP1 screws.

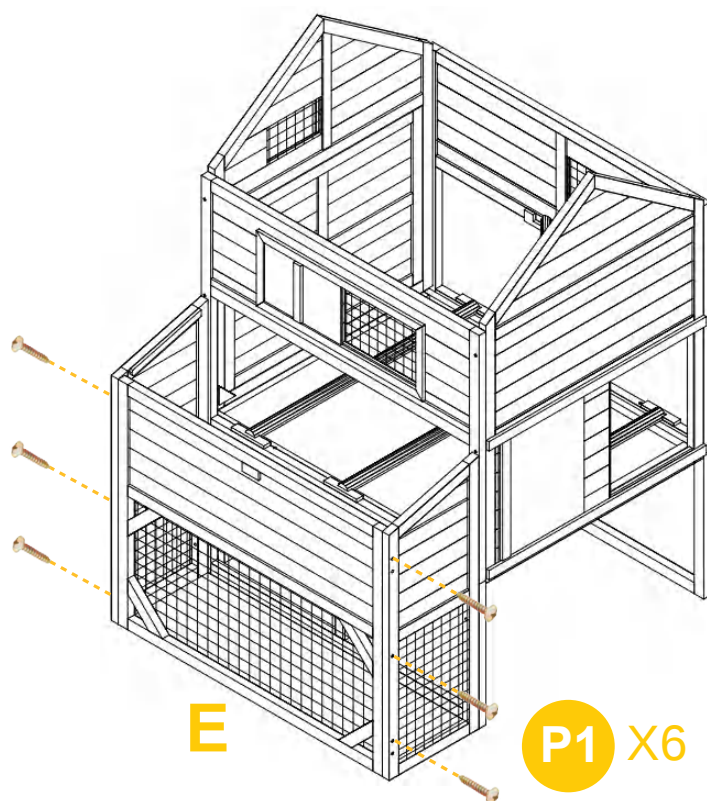


PRODUCT ASSEMBLY

- 07** Attach the another side panels of nesting box Part F1 & F2 to the coop by 6XP3 screws.

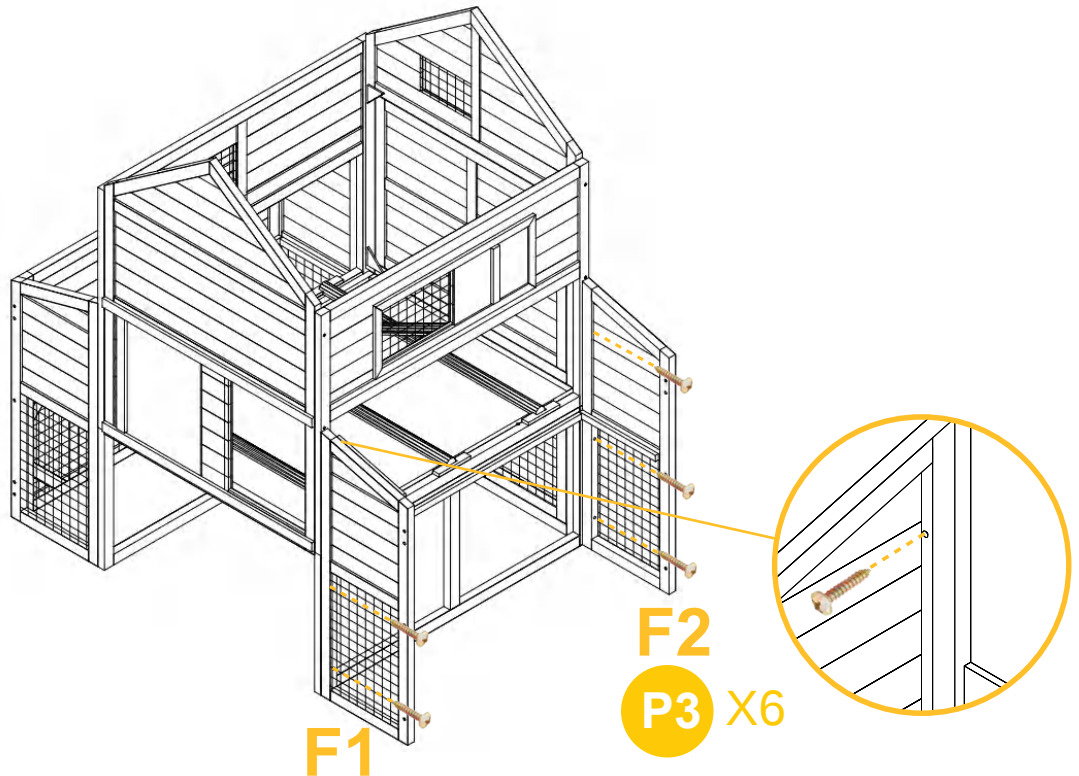

- 08** Attached the front panel of nesting box Part E to the side by 6XP1 screws. Attach the corner bracket P14 & P15 to the corner by 4xP6 each.

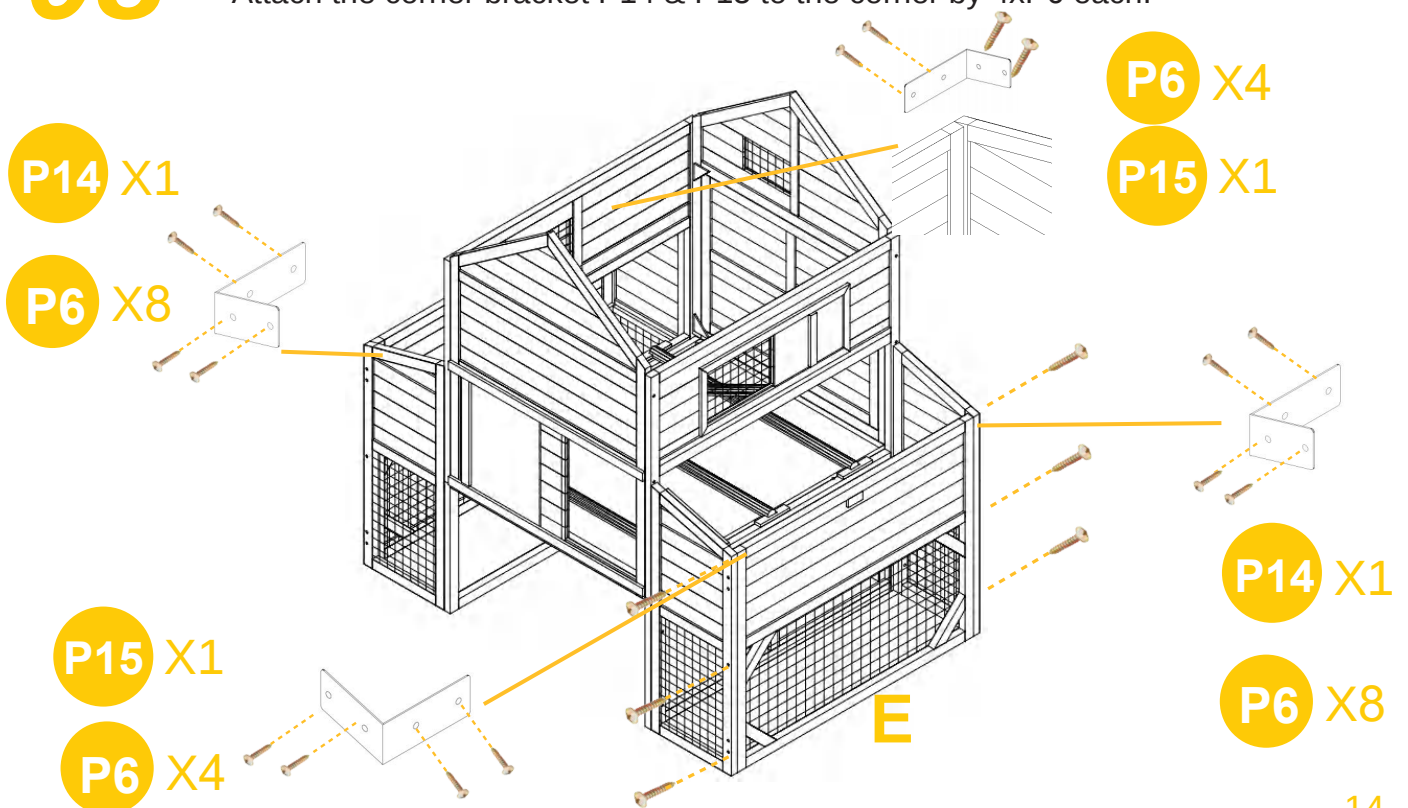



PRODUCT ASSEMBLY

09

Drop in the bottom panel of nesting box Part G.

Slide in the divider 2 x Part H each side.

Attach the corner bracket P11 to the corner by 4xP6 each.

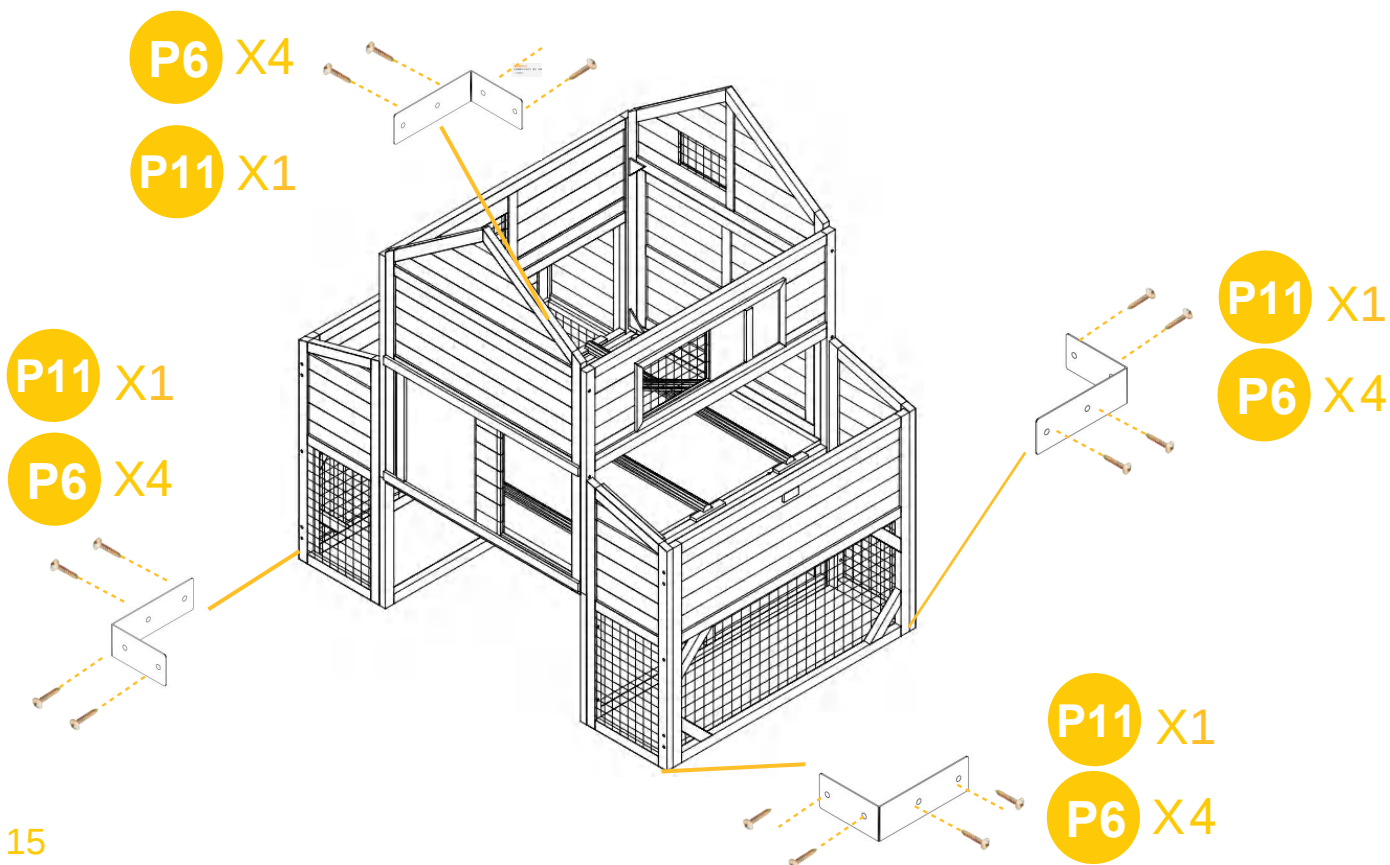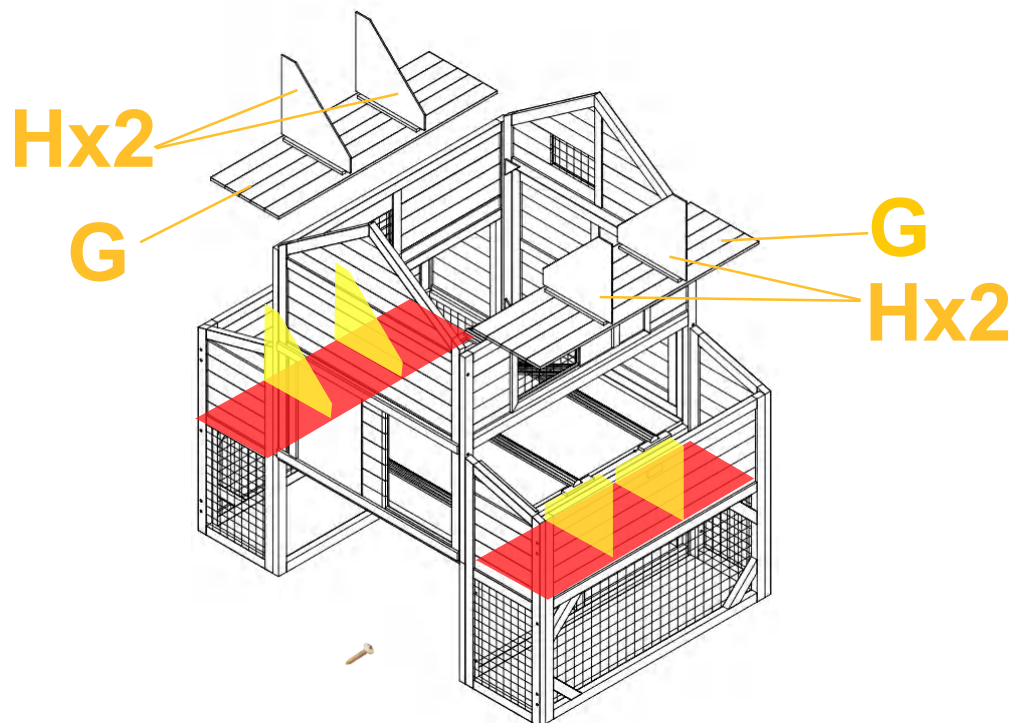


PRODUCT ASSEMBLY

10

Attach the roof of nesting box 2 X Part L to the nesting box by 6XP6 screws each side.


Make sure the lock is functioning properly before locking the roof.

Attach the corner bracket P16 to the corner by 4xP6 each.

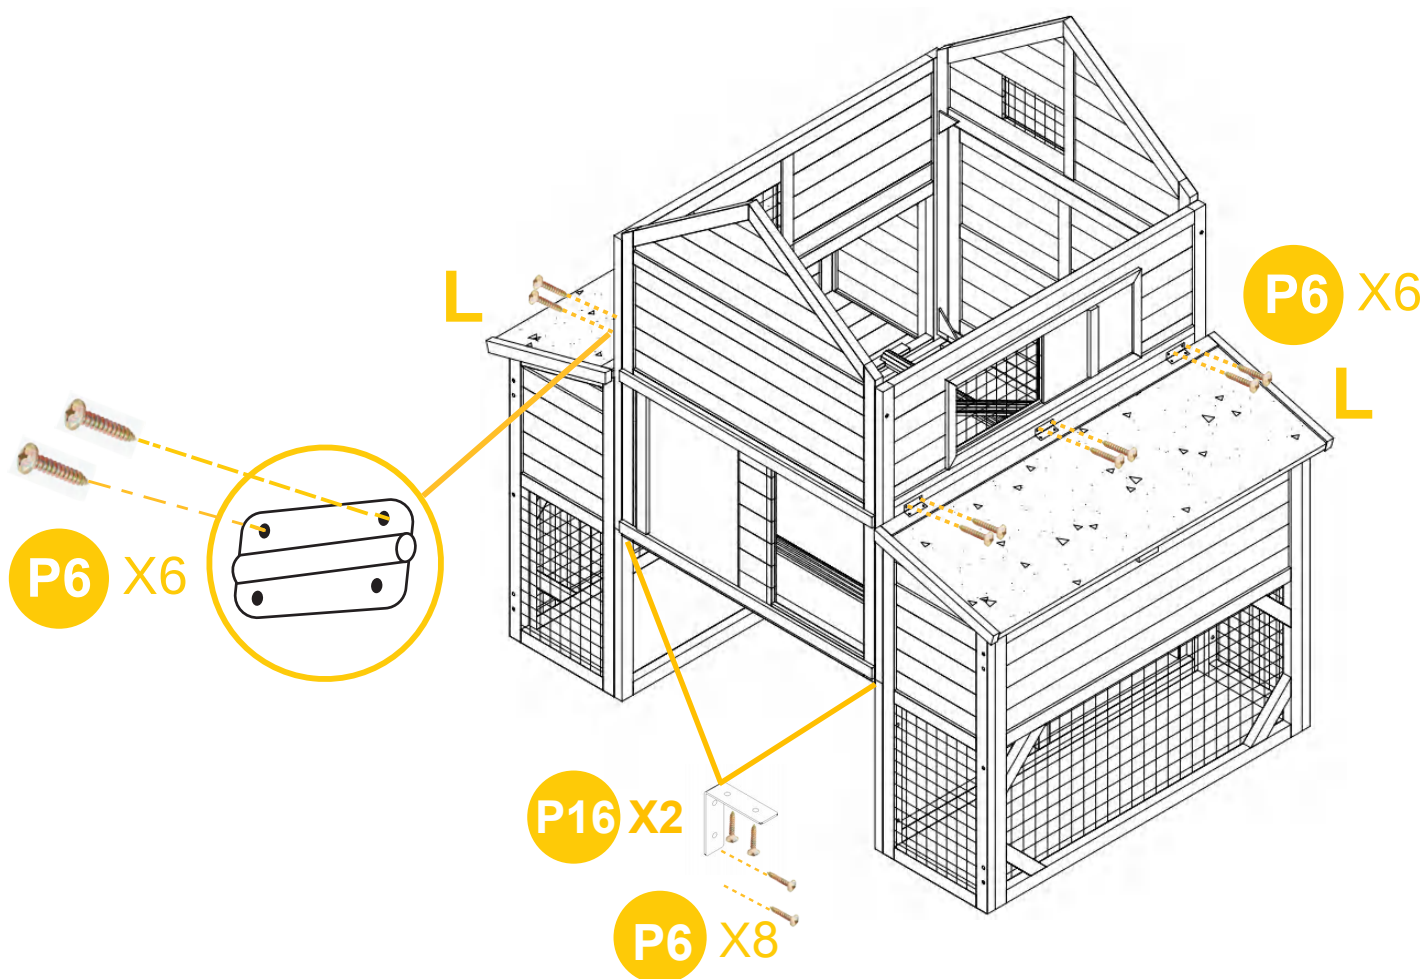

PRODUCT ASSEMBLY


11 Attach the coop roof 2xPart N to the coop by 8XP4 screws.

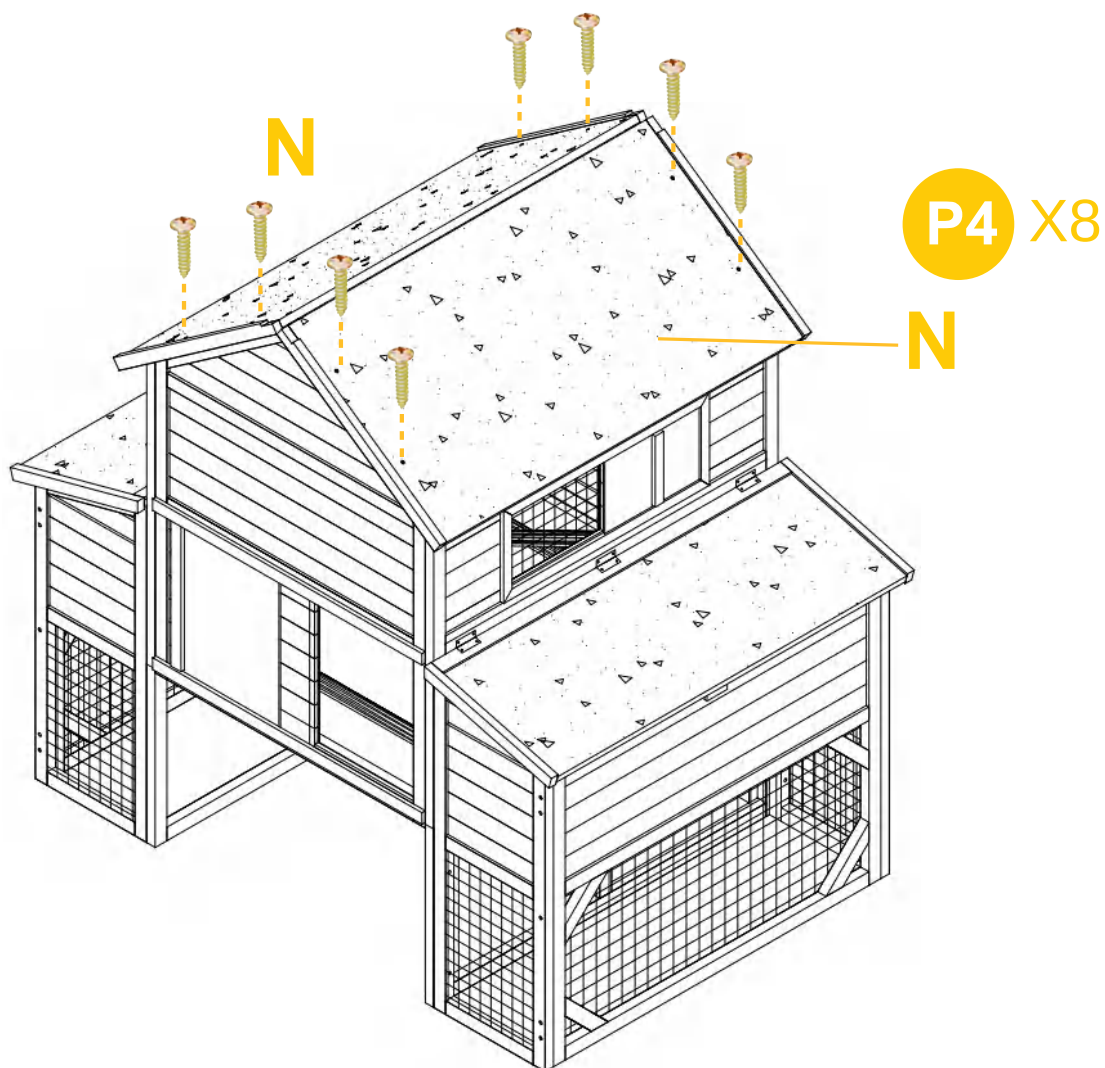

PRODUCT ASSEMBLY


12

Put the Waterproof pvc P9 in the connection position of 2 roof cap to avoid the water leakage.
Then attached the roof cap 2 x Part W by 8XP5 screws.

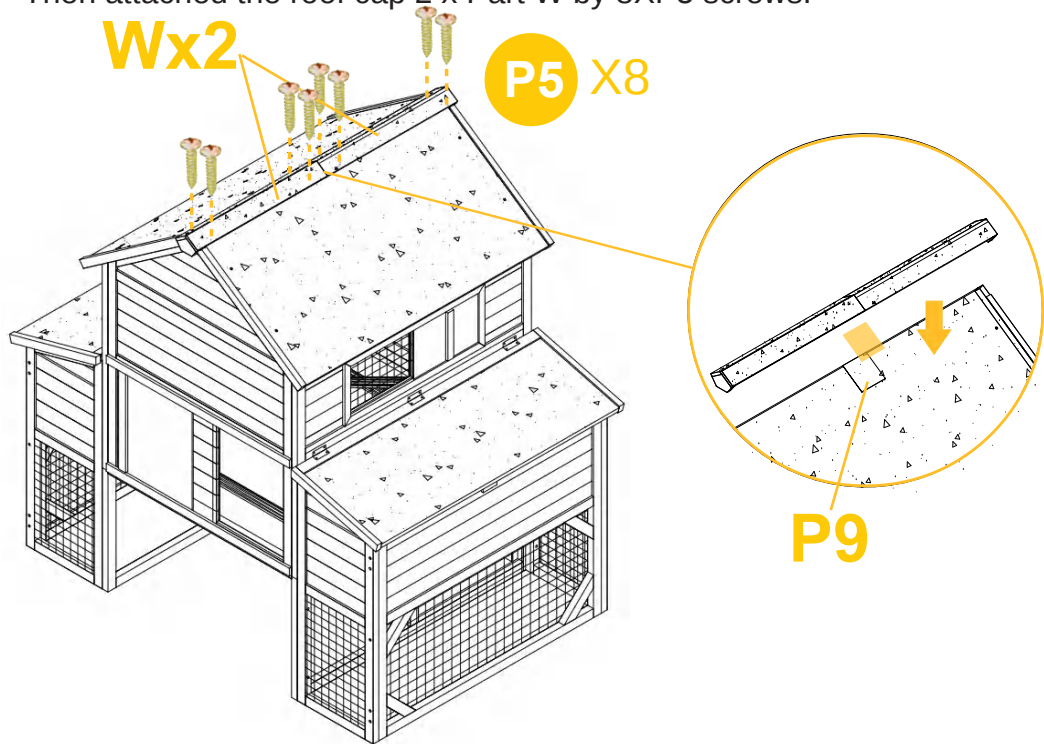


13

Attach the pen panel Part P1 to the coop by 3XP2 screws.
Attach metal rod Part P7 to the back panel of coop by 2xP6 screws.

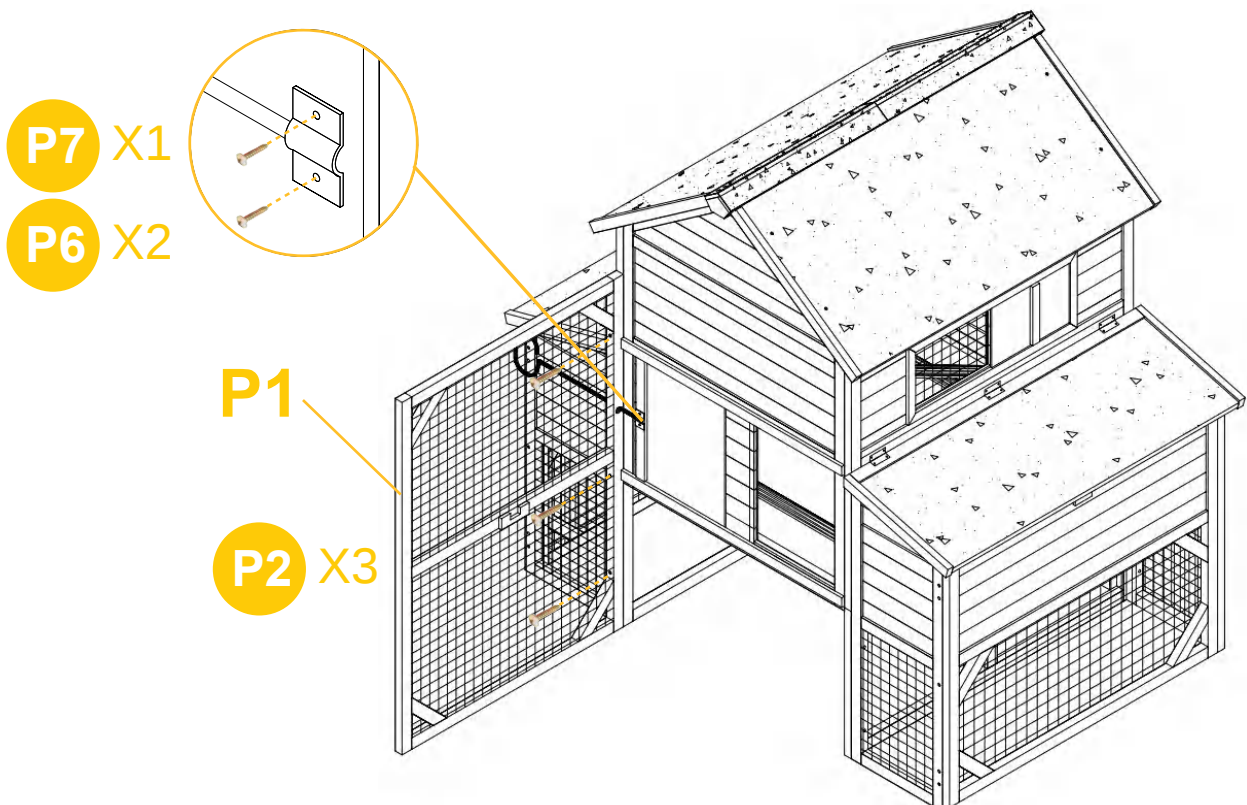


PRODUCT ASSEMBLY

- 14** Attach the bottom connecting bars Part X by 4XP5 screws, the position is shown in the picture.

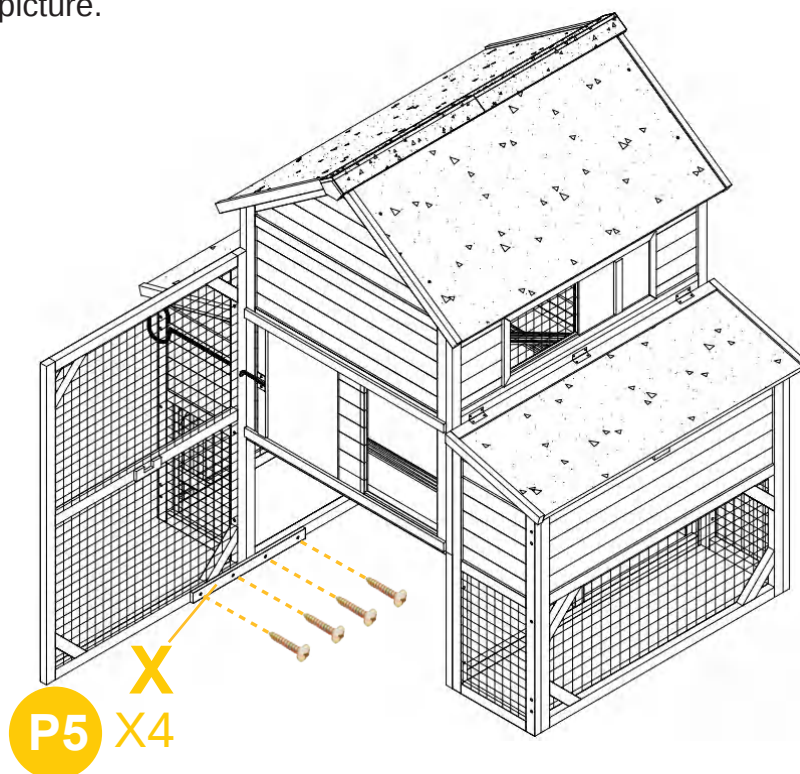


- 15** Attach the pen panel Part P2 to the coop by 3XP2 screws.
Attach the bottom connecting bars Part X by 4XP5 screws, the position is shown in the picture.

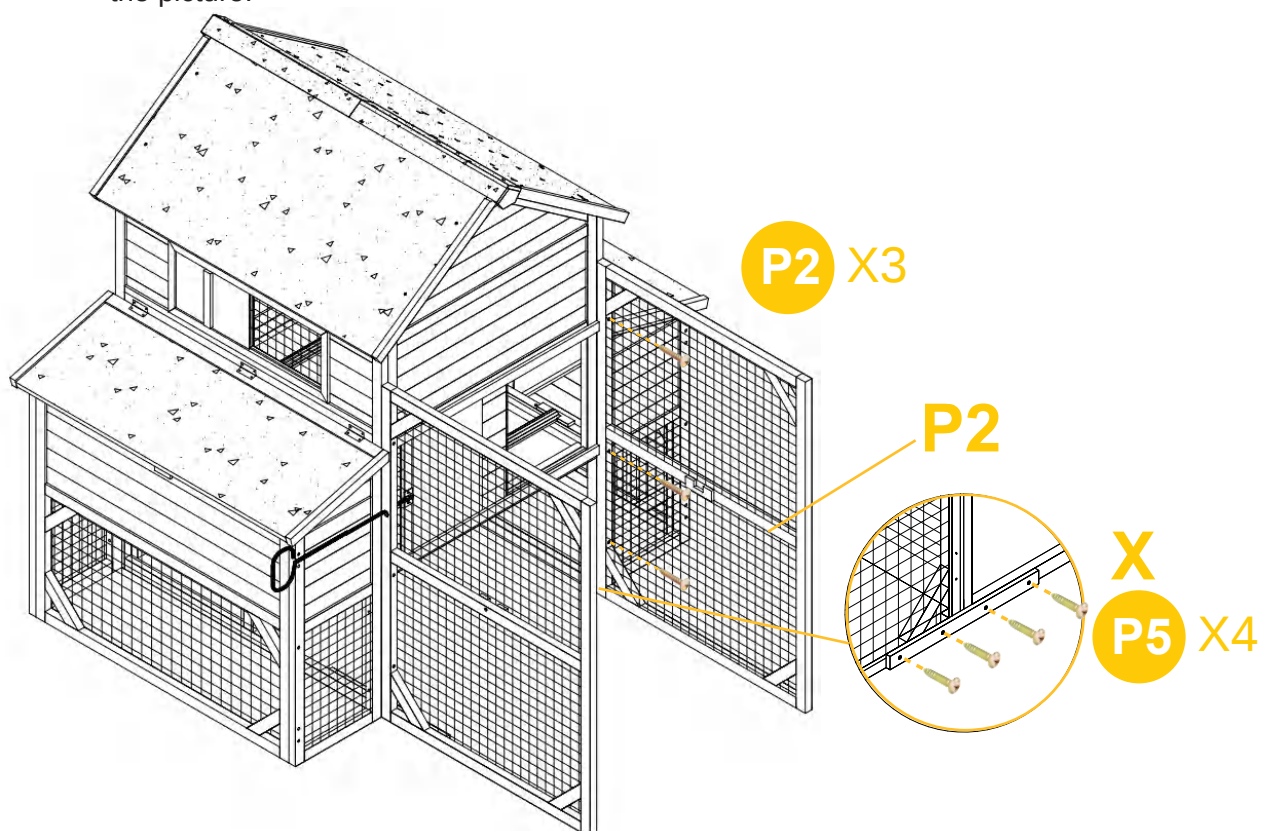


PRODUCT ASSEMBLY

16 Attach the ramp Part O to the coop by 4XP6 screws.

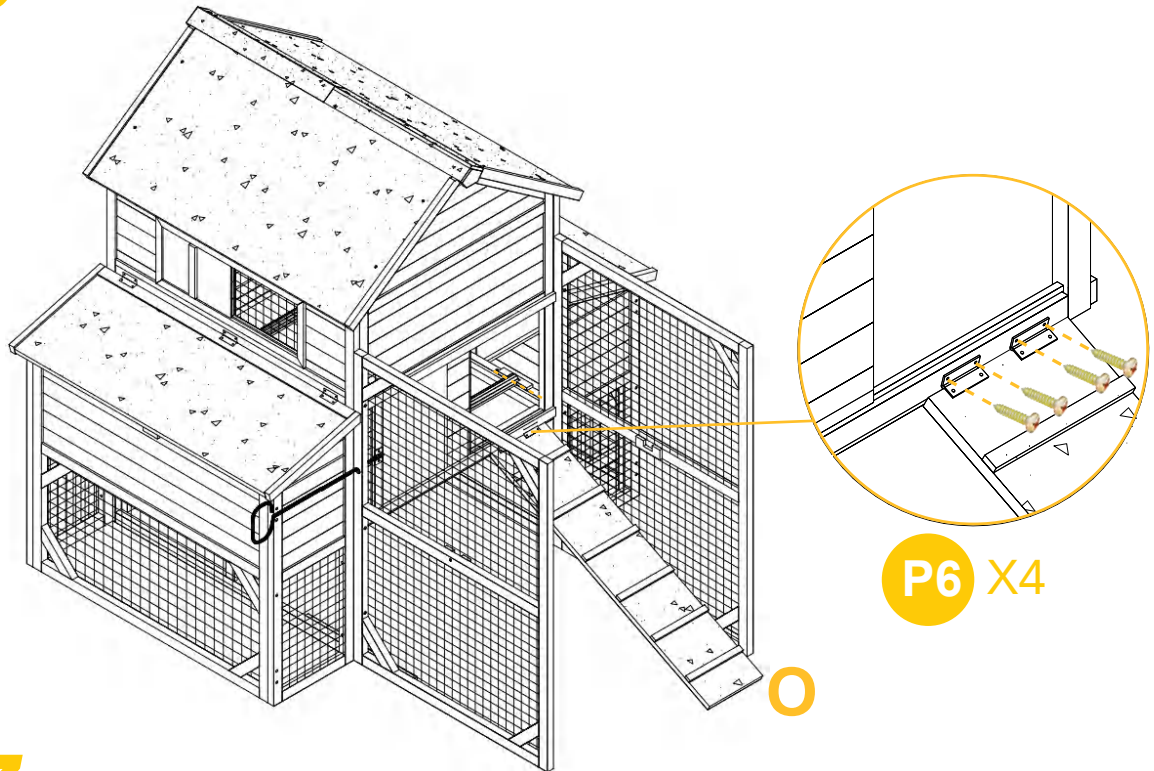


17 Attach the perch Part I2 into the slots inside the inner pen panel Part P1&P2 by 2XP3 screws.

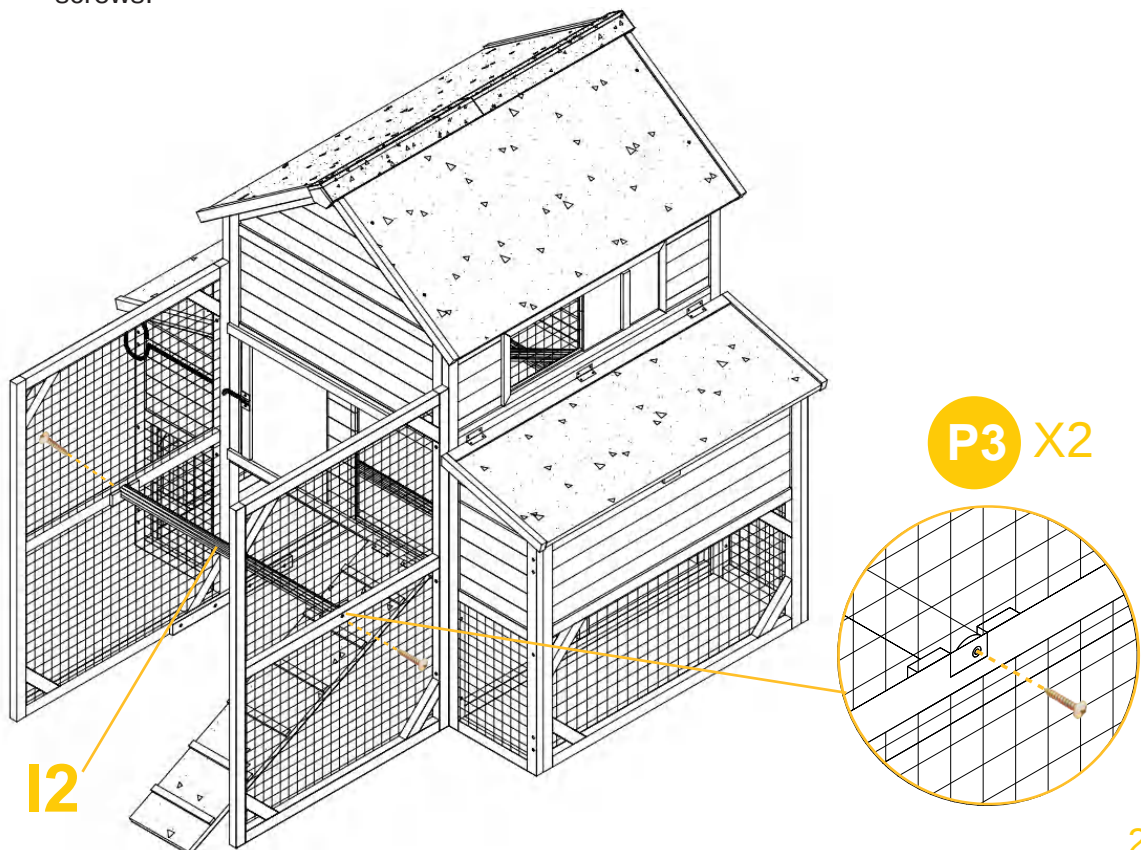


PRODUCT ASSEMBLY

18 Attach pen panel Part Q1 & Q2 by 6XP2 screws.

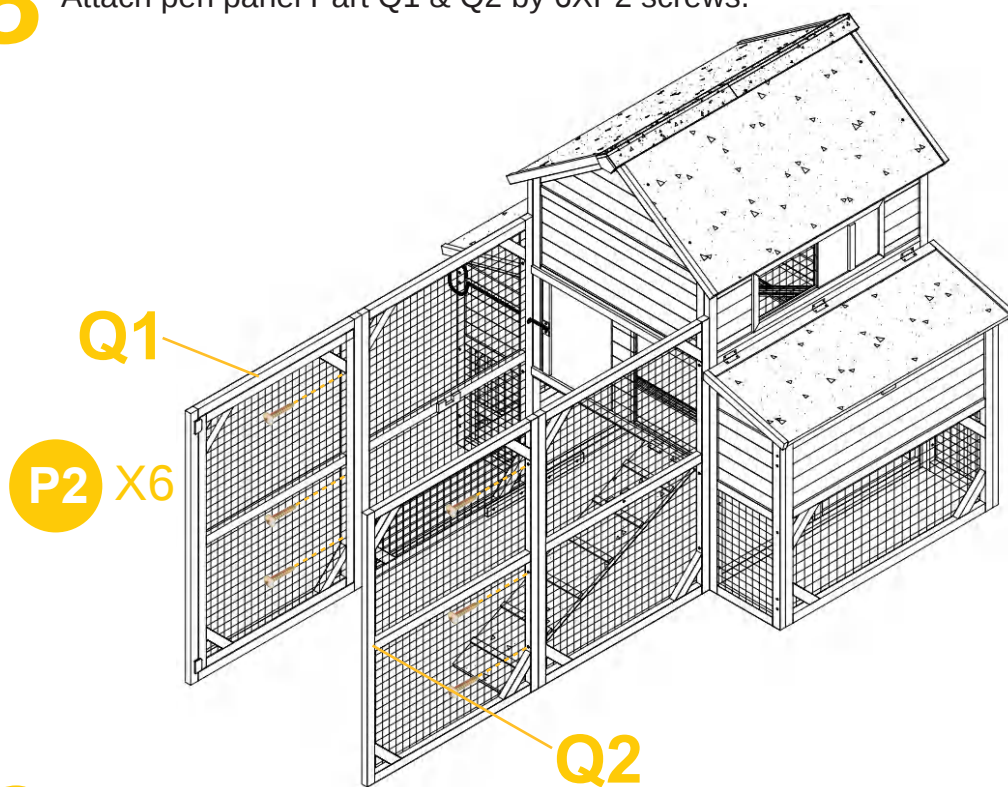


19 Attach the up and down four connecting bars Part X by 4XP5 screws each, the position is shown in the picture.

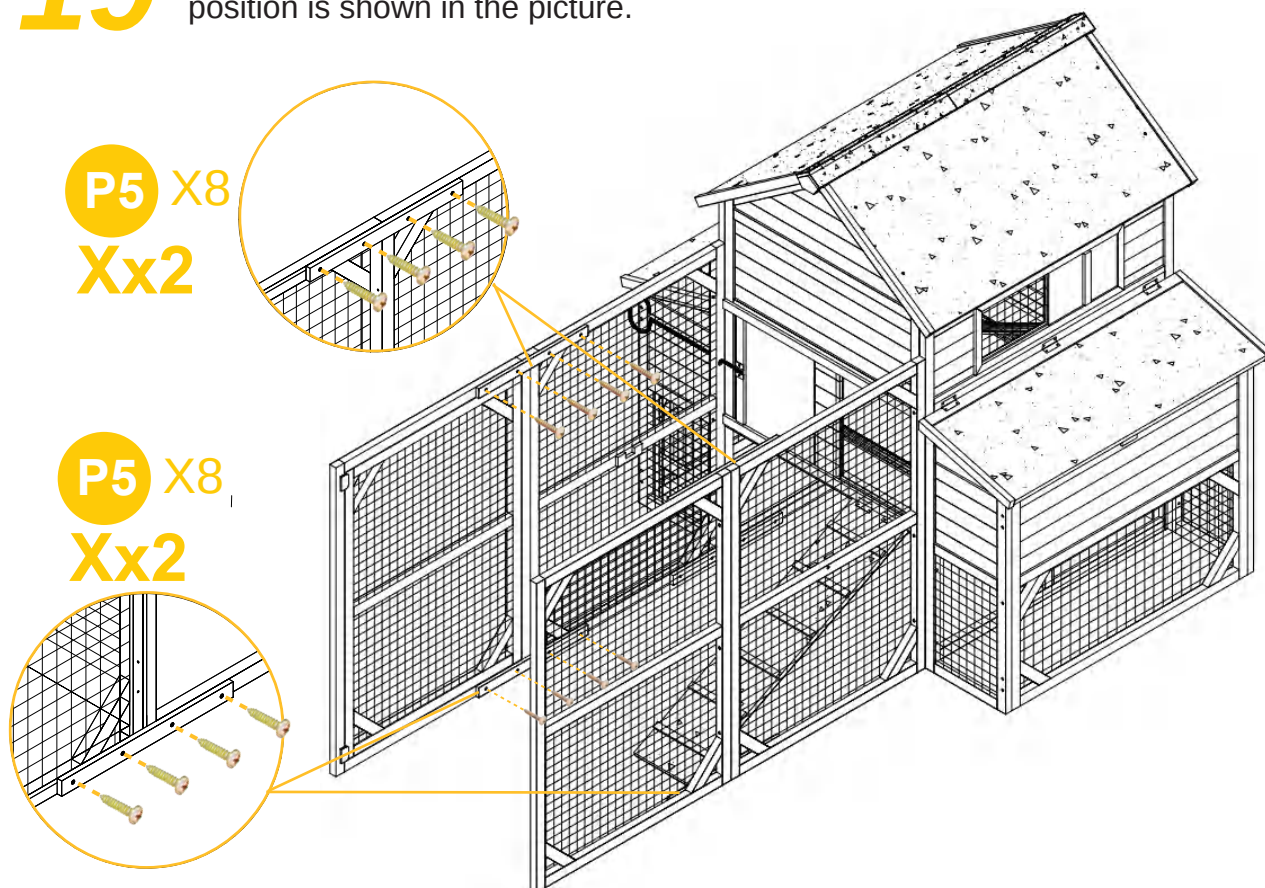


PRODUCT ASSEMBLY

20 Attach pen panel Part R1 & R2 to the coop by 6XP2 screws.

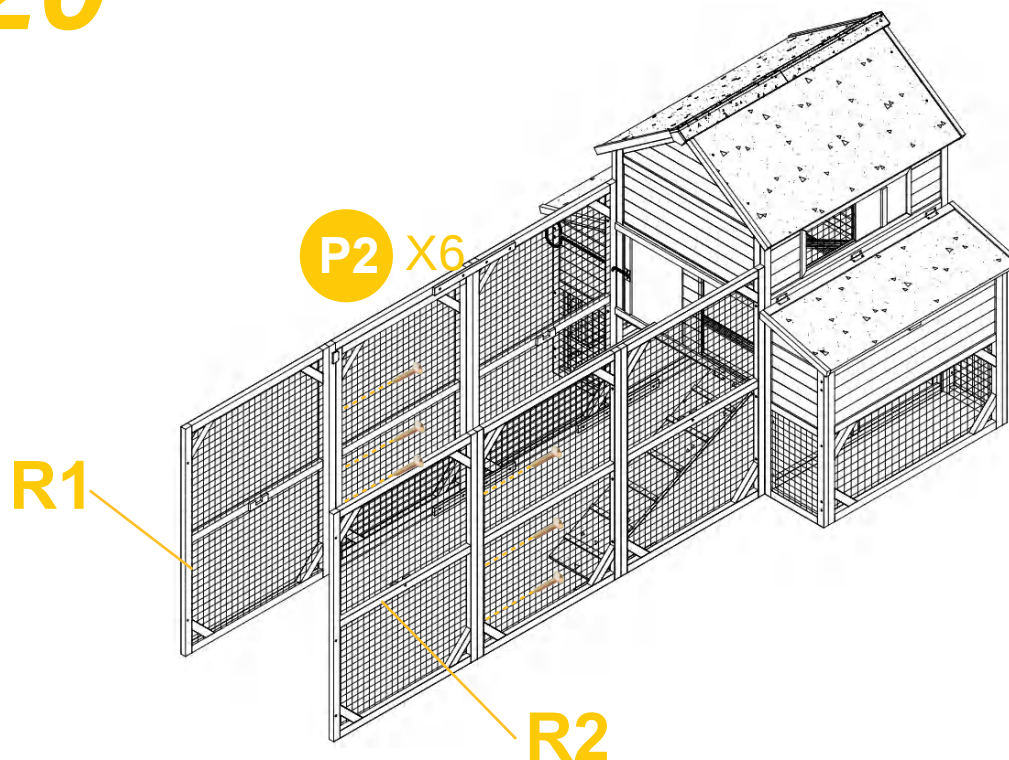


21 Attach the up and down four connecting bars Part X by 4XP5 each, the position is shown in the picture.
Attach the perch Part I2 into the slots inside the inner pen panel Part R1 & R2 by 2XP3 screws.

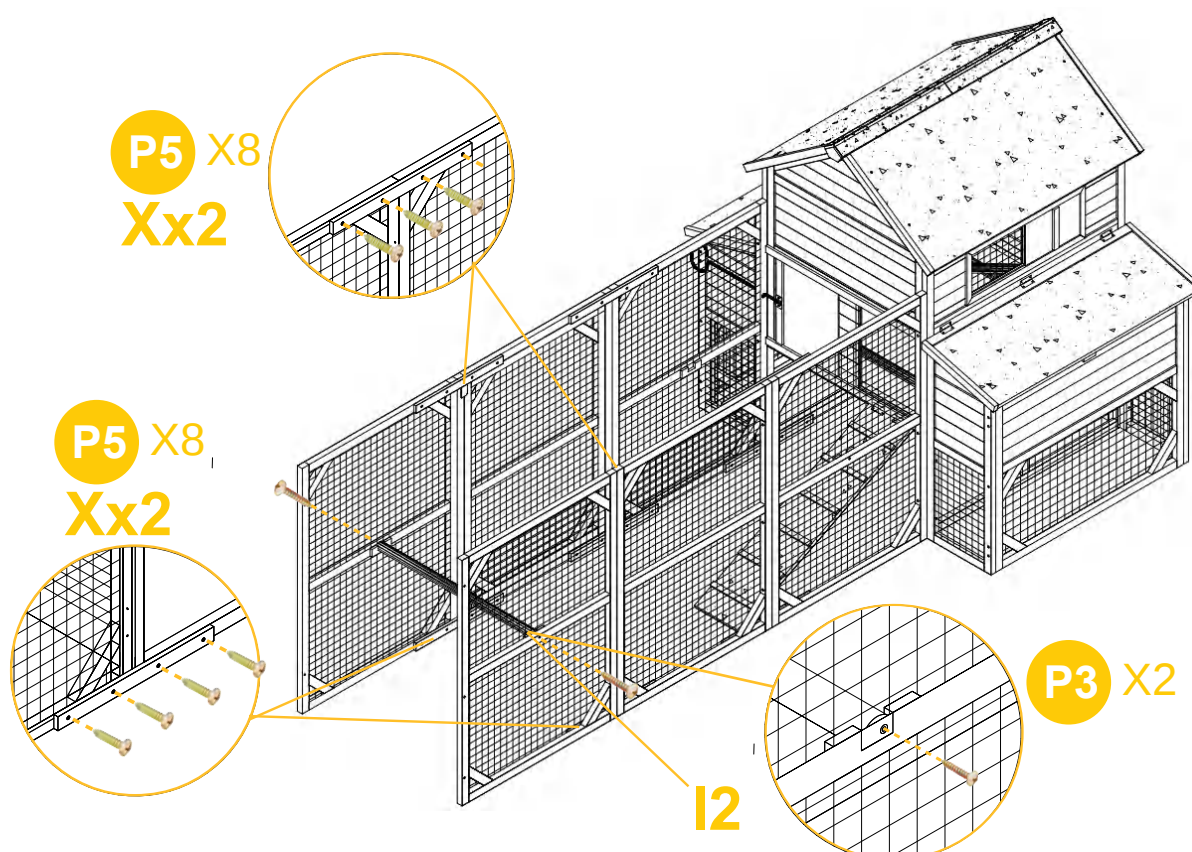


PRODUCT ASSEMBLY

22 Attach the back pen panel Part S to the pen by 6XP3 screws.

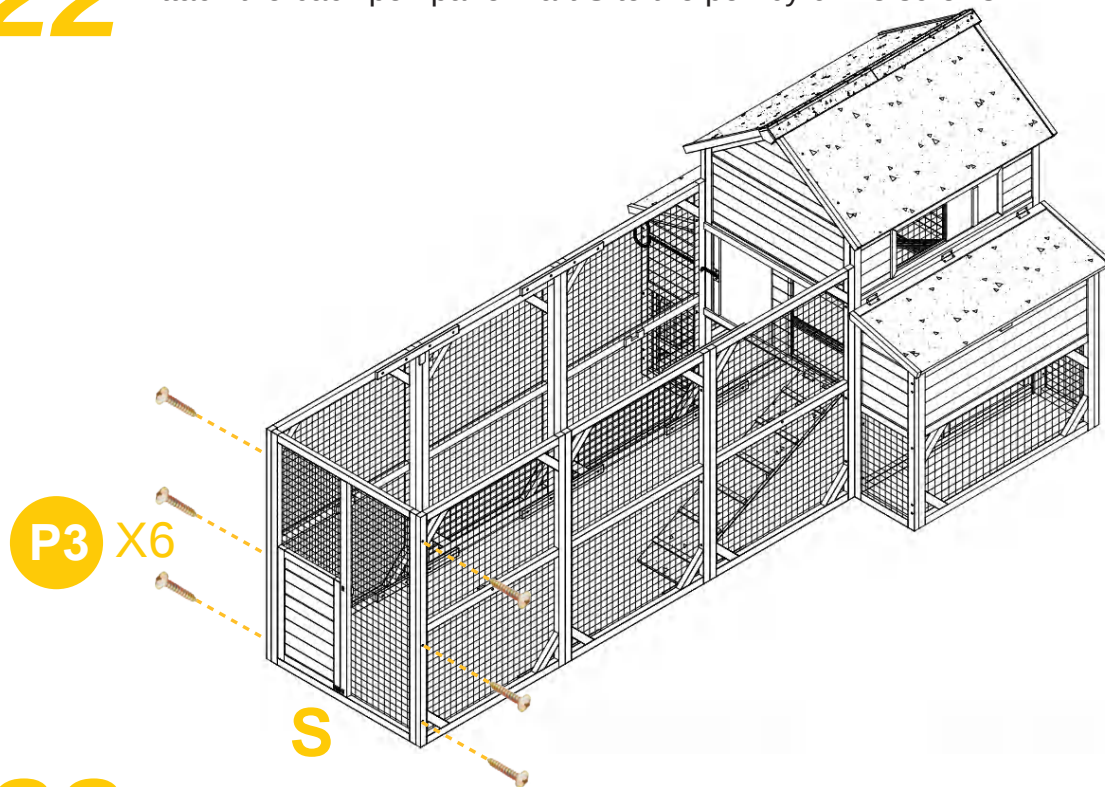


23 Attach the pen roof Part T & Part U & Part V by 13XP3 screws.

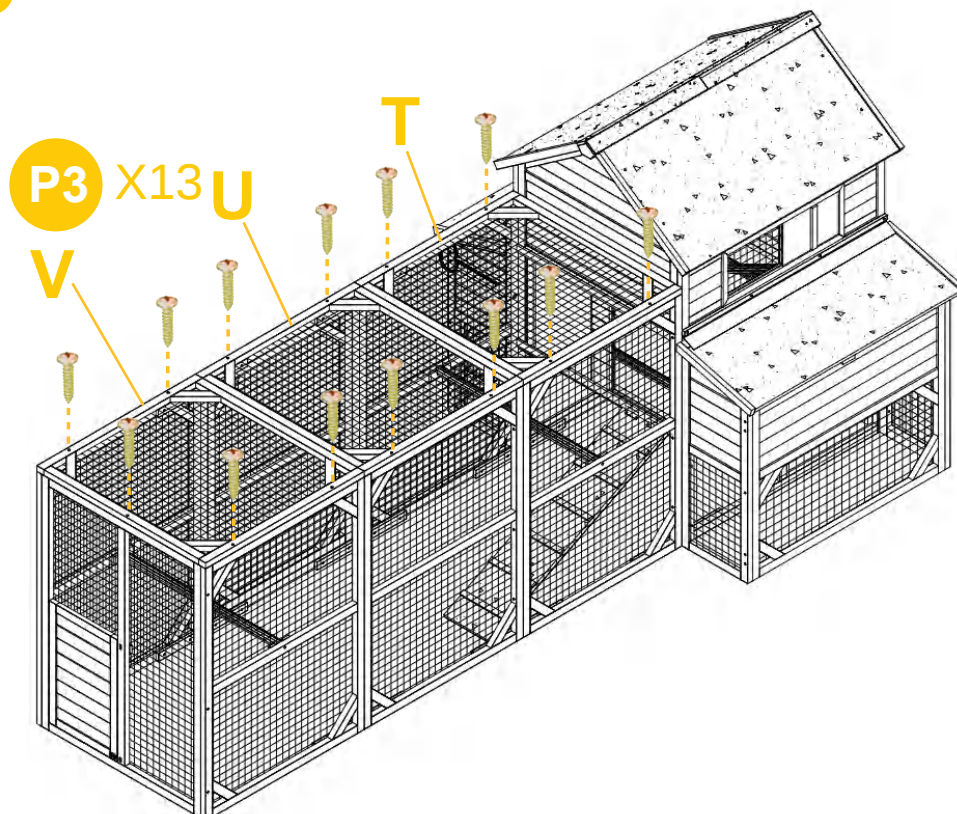

PRODUCT ASSEMBLY

24


Fix the middle roof panel to the side roof panels by 2XP2 screws.
Attach the corner bracket P11 to the top & bottom corner by 4xP6 each.
Attach the corner bracket P10 by 4xP6 each.

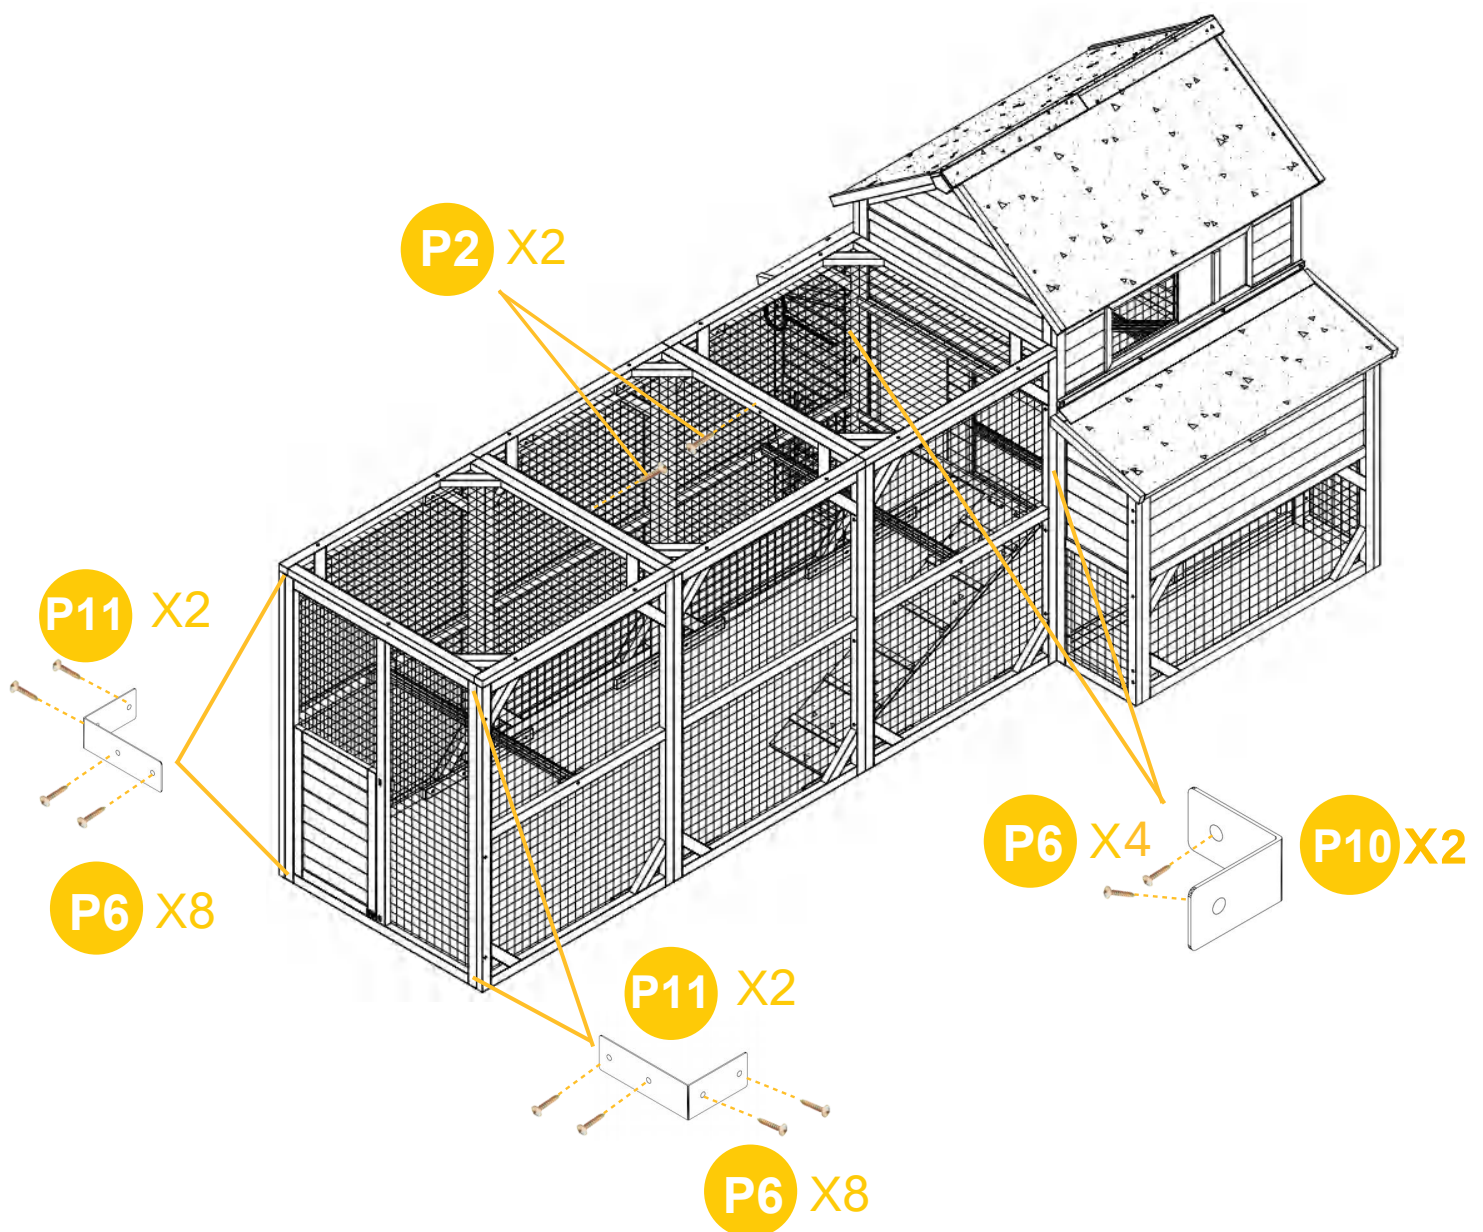

PRODUCT ASSEMBLY


25

Attached PVC Waterproof Strip Part M to the right side nesting box by 4XP5 screws.
Attach the lock P8 to the tray by 6XP6.

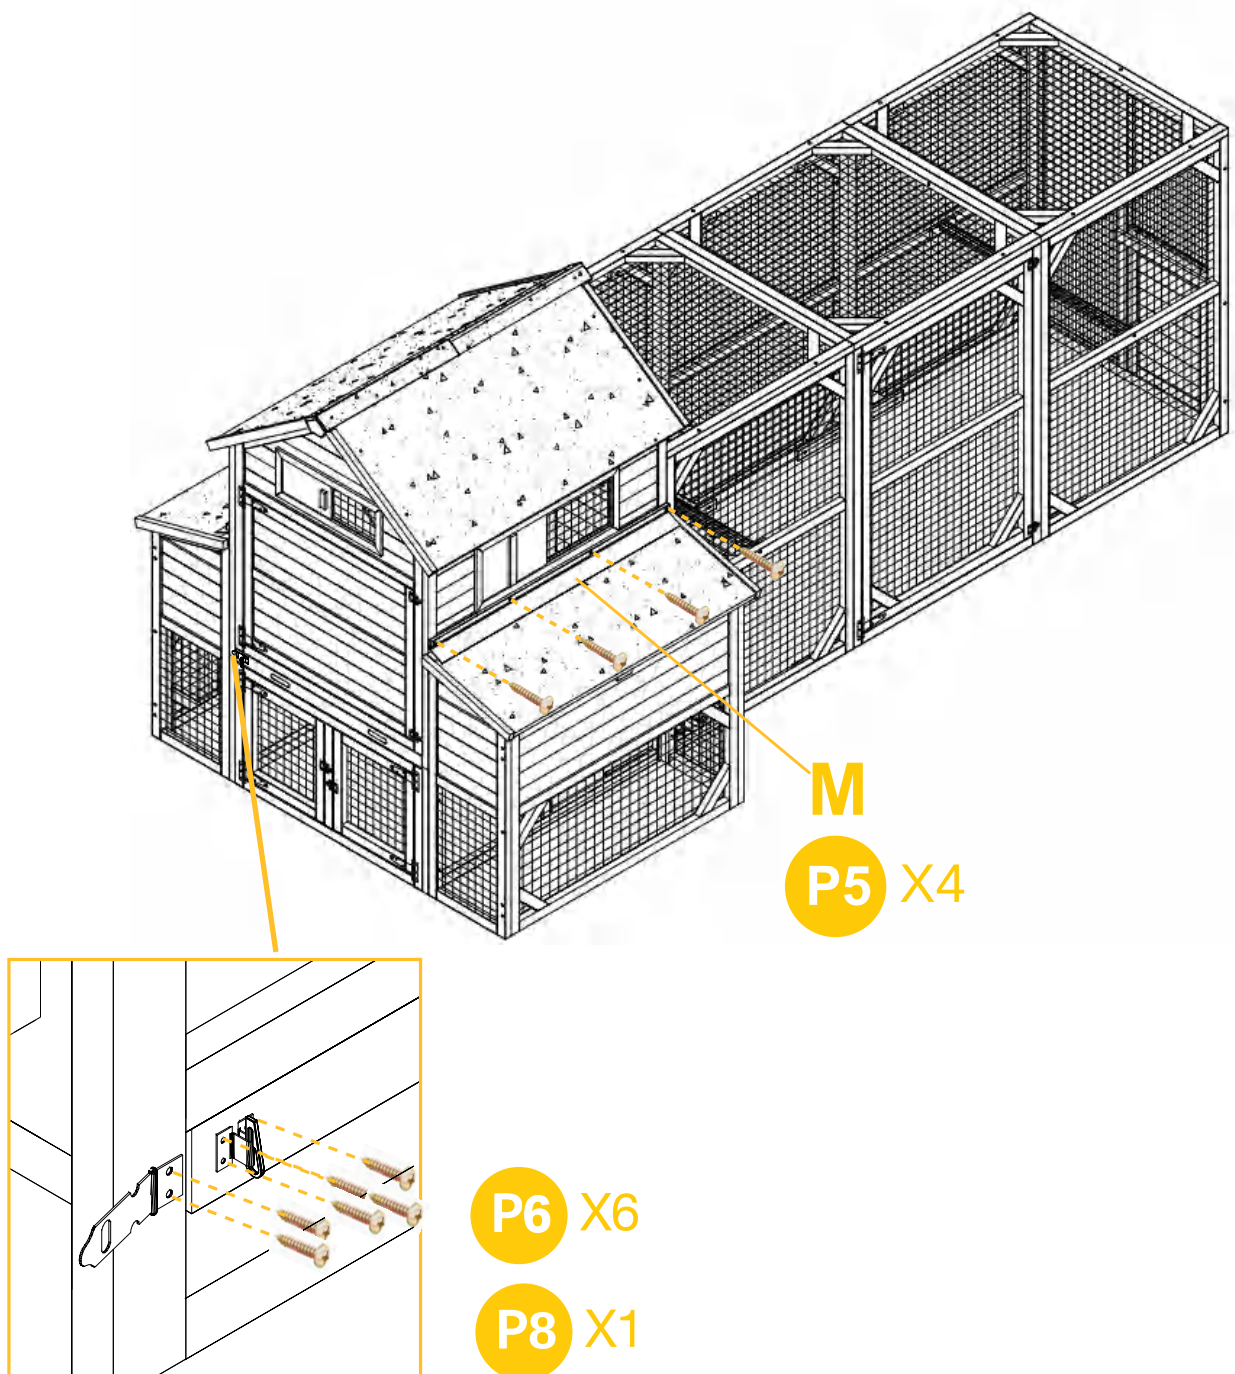

PRODUCT ASSEMBLY

26 Attached PVC Waterproof Strip Part M to the left side nesting box by 4XP5 screws.

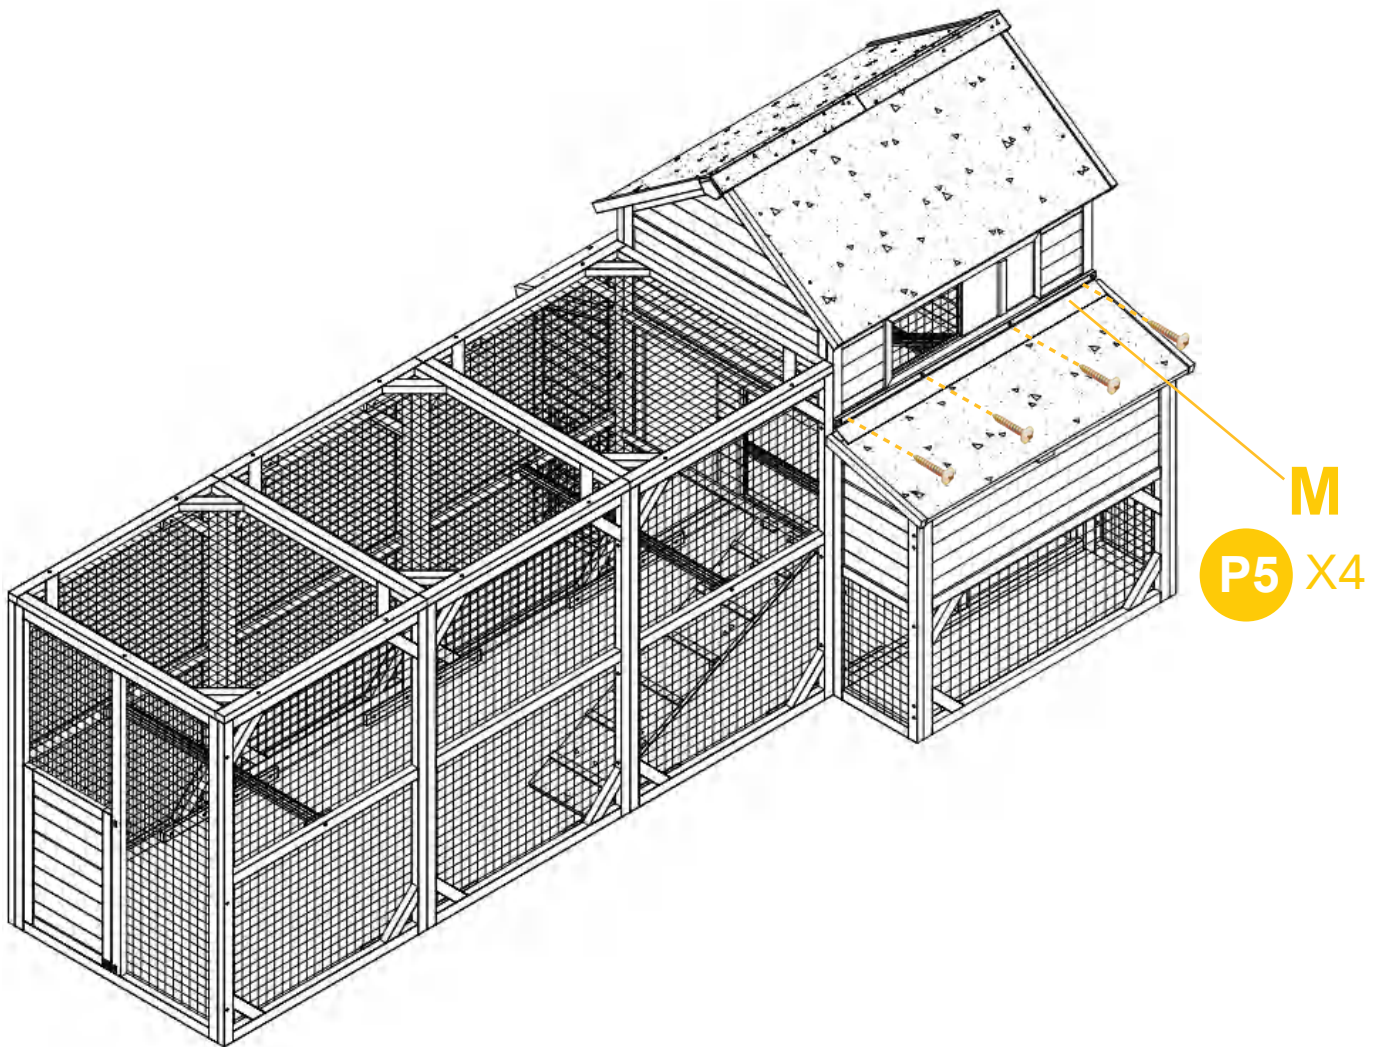

Finish



WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this