



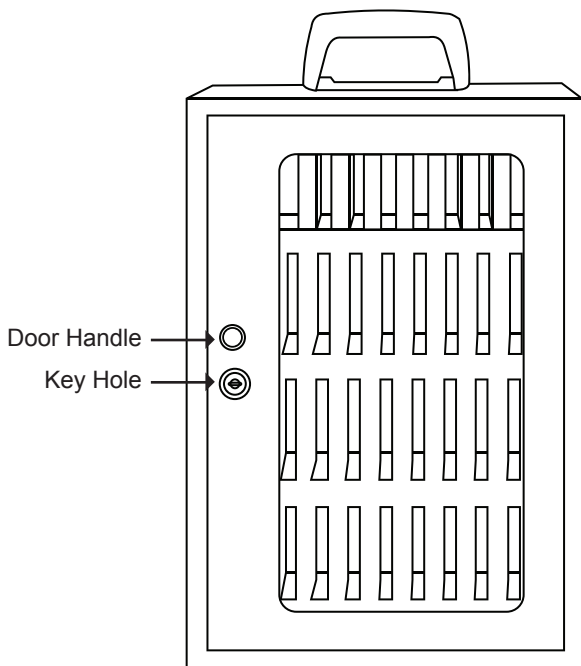


## Cell Phone Storage Cabinet Handle Installation

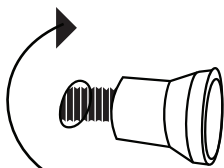


Screw in the door handle and use the screwdriver to tighten together.



See reverse side for more information



## Installation Guide for Corner Protectors



### 1. Clean the Surface

---

Wipe all corners of the key cabinet with a clean, dry cloth to remove any dust or dirt.

### 2. Peel and Position

---

Peel the backing off a protector, avoiding the sticky side. Align it with a corner of the cabinet.

### 3. Apply Firm Pressure

---

Press the protector firmly onto the corner for 10-15 seconds to ensure a strong bond.

Do not reposition the protector once it has been applied.

### 4. Repeat

---

Apply the remaining protectors to the other corners.

### 5. Final Check

---

Press firmly on each protector one last time to ensure they are all secure.



### Note

---

The protectors reduce the risk of injury from sharp corners and help protect the cabinet from minor damage.

Note: All information, feature, and specification displayed herein are based on the data available at the time of publishing, thus they are subject to change without notice. All product pictures displayed herein are for illustration purposes only. The actual product may vary due to different circumstances.