


Bighorn Timberland 450 Soft Cab Enclosure Installation Instructions

Timberland 450 Soft Cab Enclosure



Diagram

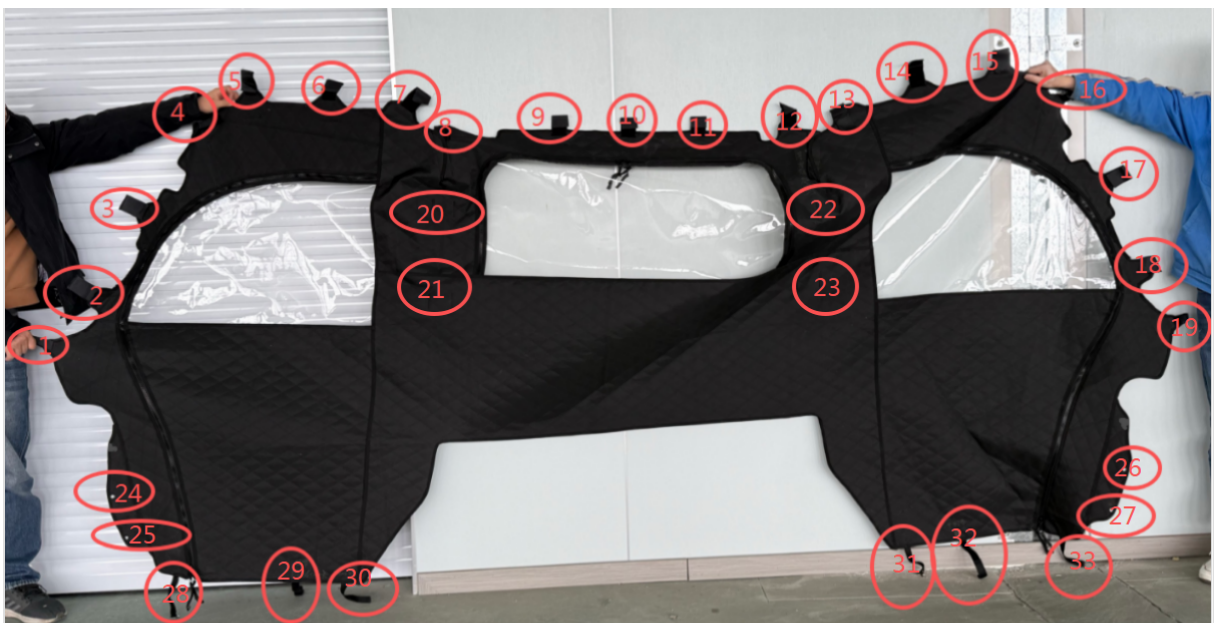

Step 1

Fasten the buckles at positions 1, 2, 3,4,16, 17, 18 and 19 to the designated locations on the vehicle. As shown in the diagram.



Step 2

Fasten the buckles at positions 5, 6, 7, 13, 14 and 15 to the designated locations on the vehicle. As shown in the diagram.





Step 3

Fasten the buckles at positions 8,9,10,11, 12, 20,21, 22 and 23 to the designated locations on the vehicle. As shown in the diagram.



Step 4

Fix positions 24, 25, 26, and 27 to the designated locations on the vehicle. Then, tighten the bolts to secure the soft package, as shown in the diagram.



Step 5

Fasten the hook straps at positions 28, 30, 31, and 33 to their respective designated locations on the vehicle undercarriage. Secure the buckles at positions 29 and 32 to the vehicle. As shown in the diagram.

