

Bighorn Timberland 450 & 450 T Half door Installation Instructions

Step 1

Use an iron wire to position the hole on the inner side of the mudguard, remove the mudguard, drill 4 holes with a diameter $\phi 10$, and re-install the mudguard on the car;




Step 2

Fix the 2 hinges (L) to the frame with 4 - M8×25 countersunk hex bolts;



Step 3

Optional - If needed, fix the lock catch bracket and the spacer with 3 - M6×16 hex cap screws, the spacer in the middle position, and install the belt bolts;

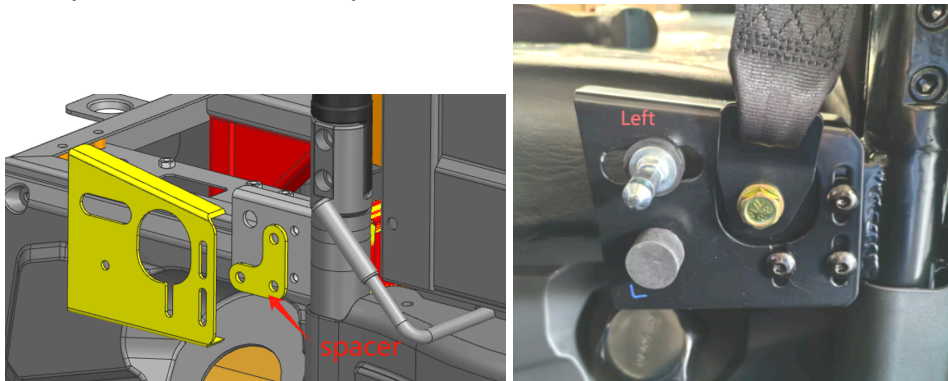

Step 4

Connect the U-shaped plate and the side door with 8 M8×12 bolts (torque 10~12 N.m);



Step 5

Adjust the position of the lock pin and the buffer rubber; the same installation steps are performed on the other side.