

XL-V HUNTING BLIND

ASSEMBLY INSTRUCTIONS



WARRANTY

All Maverick® blinds are warranted to be free from manufacturing and workmanship defects for as long as the original owner owns the product up to 2 years from the original date of purchase. This warranty does not include hardware or windows, only the blind itself.

Warranted blinds will be repaired or replaced, at Maverick® Hunting's discretion. Shipping charges may apply.

Failures due to misuse, abuse, normal wear and tear, and/or improper installation & storage are not covered by this warranty. In addition, failures due to storms, high winds, floods or other acts of God are not covered by this warranty. Maverick® Hunting shall not be responsible for any incidental or consequential damages.

Blinds must be registered in order to be covered by the 2-year limited warranty. Proof of purchase will be required when registering your blind(s).

SUPPORT

Contact support@maverickhunting.com or give us a call at **920-965-8397**. Our team is always here and happy to help you with any questions you may have.

DO NOT RETURN TO RETAILER

If there are any missing or broken components please contact the manufacturer, Maverick Hunting®, at support@maverickhunting.com or **920-965-8397**. Please be ready to describe the blind model and the specific components.

LOVE YOUR BLIND?

Find us on social media at [@MaverickHunting](https://www.instagram.com/MaverickHunting), post your blind setup, submit your story, and leave us a review on [MaverickHunting.com](https://www.MaverickHunting.com)

INCLUDED IN THIS KIT:

- 5x – Side panels (non-door)
- 1x – Side panel (with door)
- 6x – Roof panels
- 6x – Side panel extrusion
- 6x – Roof panel extrusion
- 1x – Inner roof cap
- 1x – Outer roof cap
- 1x – Hardware Kit

TOOLS REQUIRED FOR ASSEMBLY:


- A friend
- Drill with 7/16" socket
- 7/16" nut driver or wrench

SIDE PANEL ASSEMBLY


STEP 1: Working from the outside, take two side panels and nest the left one inside the right one.

STEP 2: Slide the long extrusion piece over the connection joint and all the way to the base. This locks the panels together.

STEP 3: Repeat steps 1 and 2 until you've connected all 6 side panels (including the door panel) together and a full circle is formed.

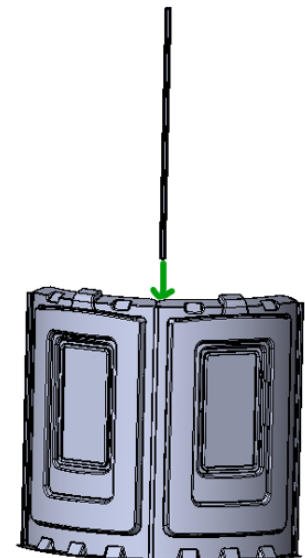


ROOF PANEL ASSEMBLY

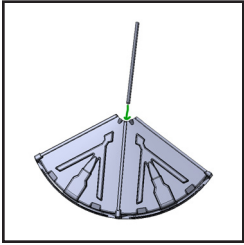


STEP 1: Working from the outside, take two roof panels and nest the left one inside the right one.

STEP 2: Slide the long extrusion piece over the connection joint and all the way to the base. This locks the panels together.

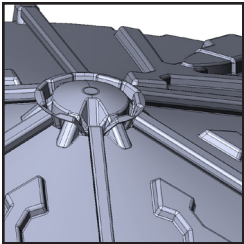


STEP 3: Repeat steps 1 and 2 until you've connected 6 roof panels together but haven't put the last extrusion piece on.

STEP 4: Insert the inner roof cap from the inside so it sits on top of the roof panels and covers the hole that is formed. Make sure the notched-out part lines up with where the last extrusion piece is.

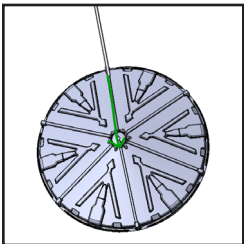

STEP 5: Add the 6th extrusion piece. Slide it past the notched-out portion of the inner cap and connect the last roof panels together forming the full circle.

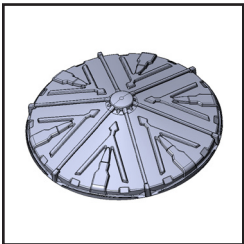

STEP 6: Place the outer roof cap on top to cover the middle portion and using a 1"-1/4x20 bolt, (2) 1/4" washers, and 1/4" lock nut, connect the inner cap to outer cap.

PRO TIP: Have the bolt head on the inner cap side so the bolt end won't be sticking into your assembled blind.

ATTACHING ROOF AND SIDE PANELS

STEP 1: Place assembled roof on top of assembled side panels making sure they are lined up properly.

STEP 2: Using (6) 2.5"-1/4"x20 bolts, (12) 1/4" washers and (6) 1/4" lock nuts, go around the entire circle bolting the roof to the side panels. The bolt will go through the holes on the roof panels, extrusion locking pieces, the side panels and out the other side of the roof panel.

PRO TIP: If the bolt holes don't line up perfectly, remove the roof cap, drill out the extrusion piece and side panels a bit using a 5/16" or 3/8" drill bit and put the roof back on. Then put the bolt through and tighten.

