



Upgrade · The Home Creator Way

Steel Garden Carts

Model: TC-900R /TC-900B /TC-900G

VEVOR
Support Center



TC-900R




TC-900B



TC-900G

Model: TC-900R /TC-900B /TC-900G

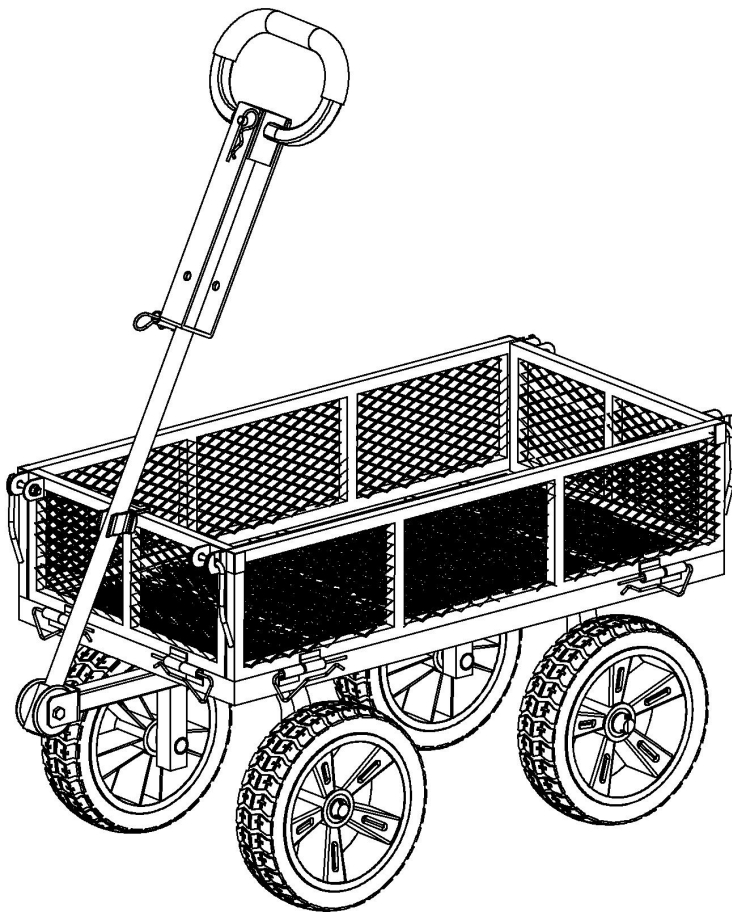

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

SAFETY INSTRUCTIONS

WARNING:

Read this material before using this product. Failure to do so can result in serious injury.

Assembly precautions










1. Assemble only according to these instructions. Improper assembly can create hazards.
2. Wear ANSI-approved safety goggles and heavy-duty work gloves during assembly.
3. Keep the assembly area clean and well-lit.
4. Keep bystanders out of the area during assembly.
5. Do not assemble if tired or when under the influence of alcohol, drugs or medication.
6. The product capabilities apply to properly and completely assembled products only.
7. Assemble on a flat, level, hard and smooth surface capable of safely supporting the Steel Garden Carts.
8. For additional information regarding the parts listed in the following pages, please refer to the Assembly Diagram of this manual. Unwrap and separate all parts in a clean work area.


Use precautions


1. This product is not a toy. Do not allow children to play with or near this item.
2. Do not exceed specified weight capacities.
3. Use as intended only.
4. Inspect before every use; do not use if parts are loose or damaged.

SAVE THIS MANUAL

PARTS LIST

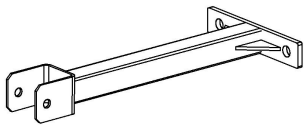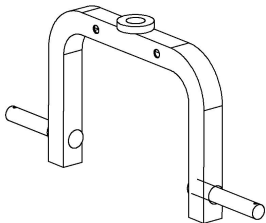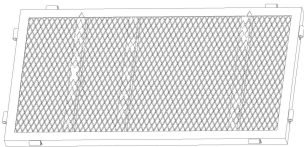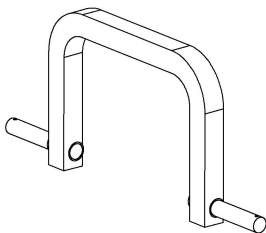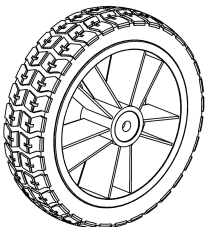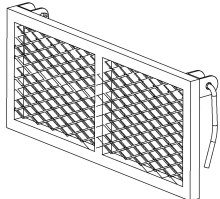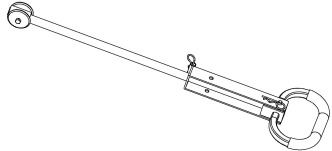

No.	Part	Qty.	No.	Part	Qty.
1	 T-shaped connector	1	2	 Front wheel bracket	1
3	 Bottom frame	1	4	 Rear wheel bracket	1
5	 Wheel	4	6	 Frame border	2
7	 Front and rear frame	2	8	 Handle	1
9	 Plastic clip	1			

No.	Part	Qty.	No.	Part	Qty.
A	 Bolt M8x45	2	B	 Washer φ16	5
C	 Nut M16	1	D	 Nut M12	2
E	 Washer φ12	2	F	 hairpin cotter	4
G	 R-clip	8			

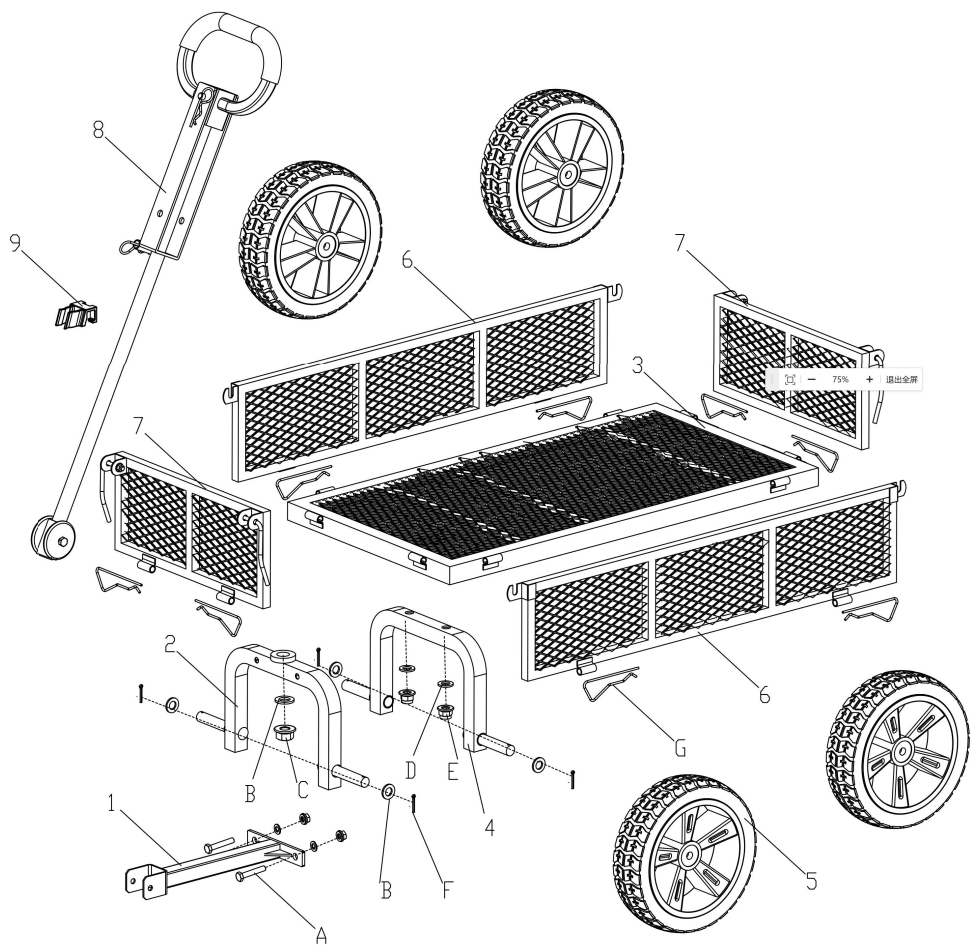


ASSEMBLY STEP

STEP 1

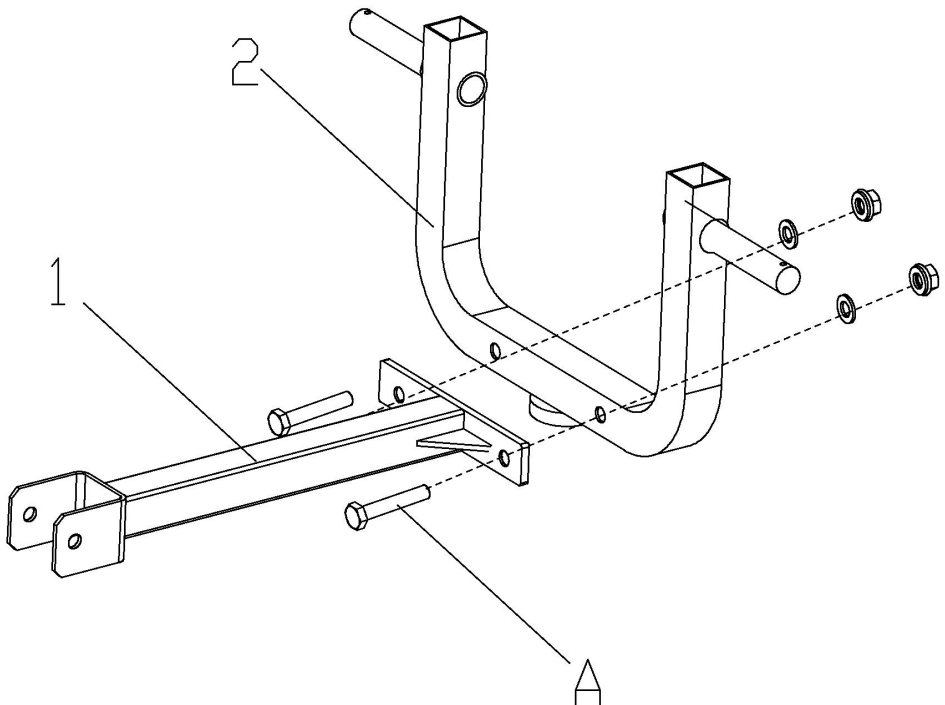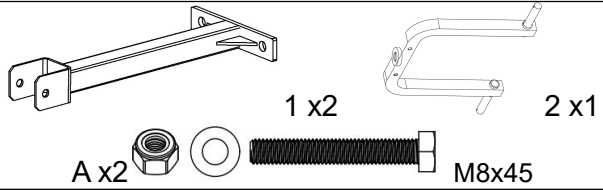

Tighten the T-shaped connector(1) and the front wheel bracket(2) with screws(A).

STEP 2

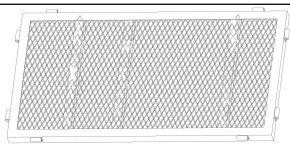



3 x1



B x1




Cx1

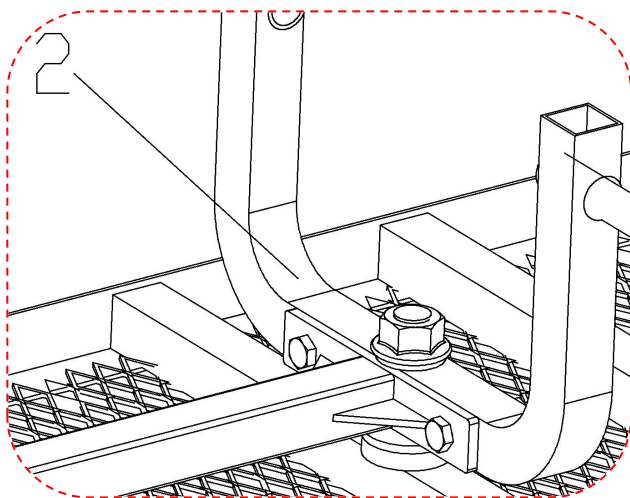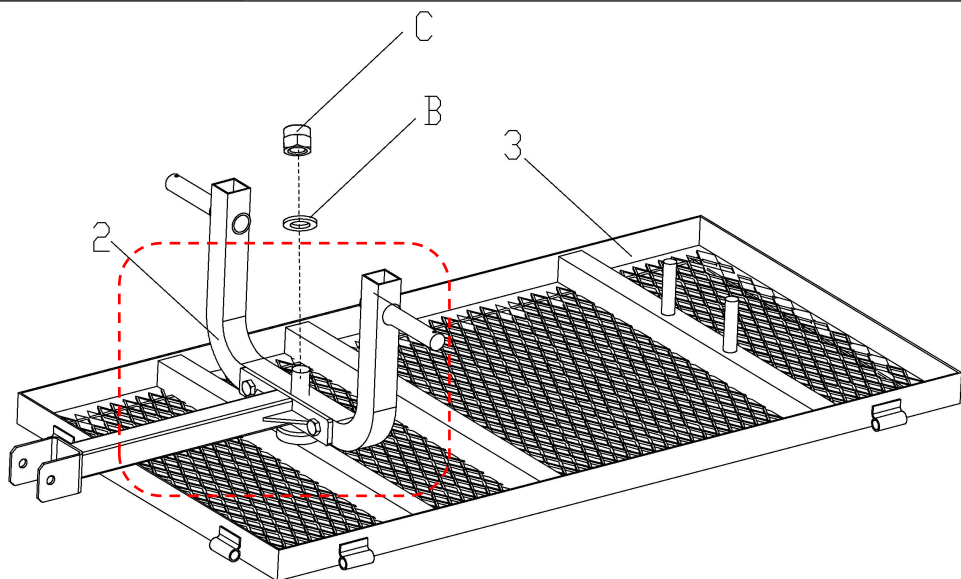

Slide the front wheel bracket(2) onto the screw of the bottom frame(3), and fix it with washer(B) and nut(C).

Note: Do not fully tighten the screws to avoid affecting the rotation of the front wheel bracket.

STEP 3




4 x1



E x2



D x2

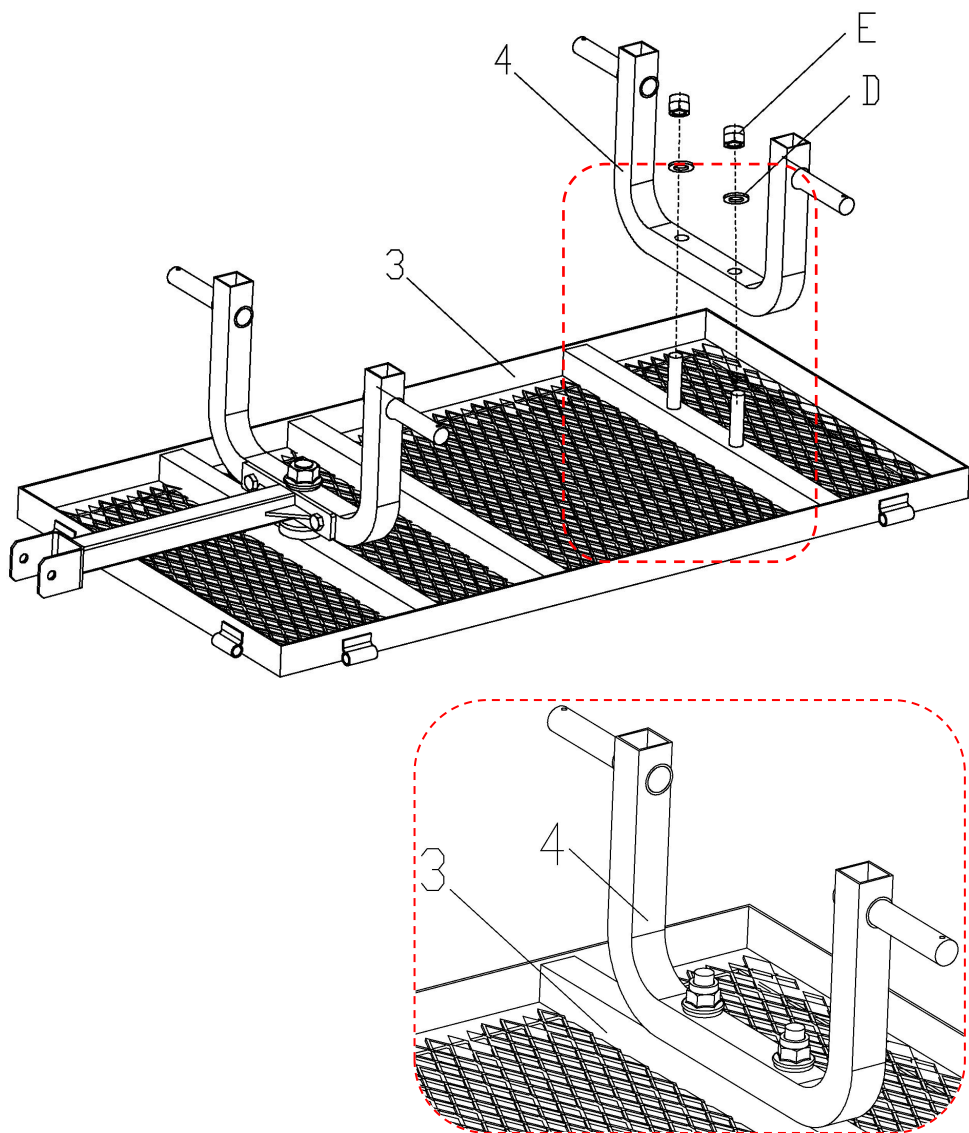

Slide the rear wheel bracket(4) onto the screw of the bottom frame(3), and fix it with washers(D) and nuts(E).

Note: The nuts(E) must be fully tightened.


STEP 4





5 x4



B x4




F x4

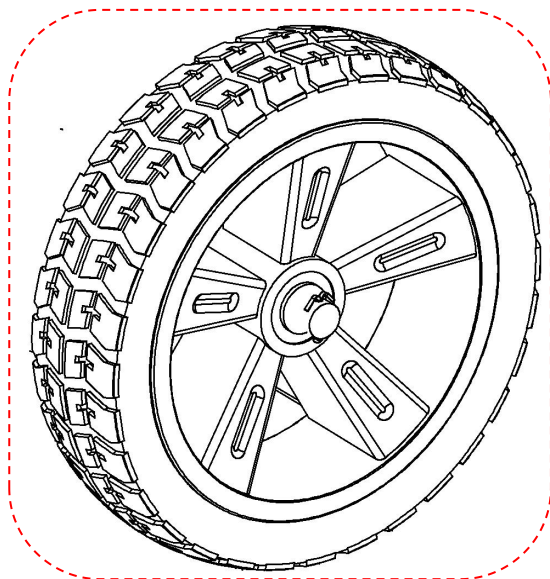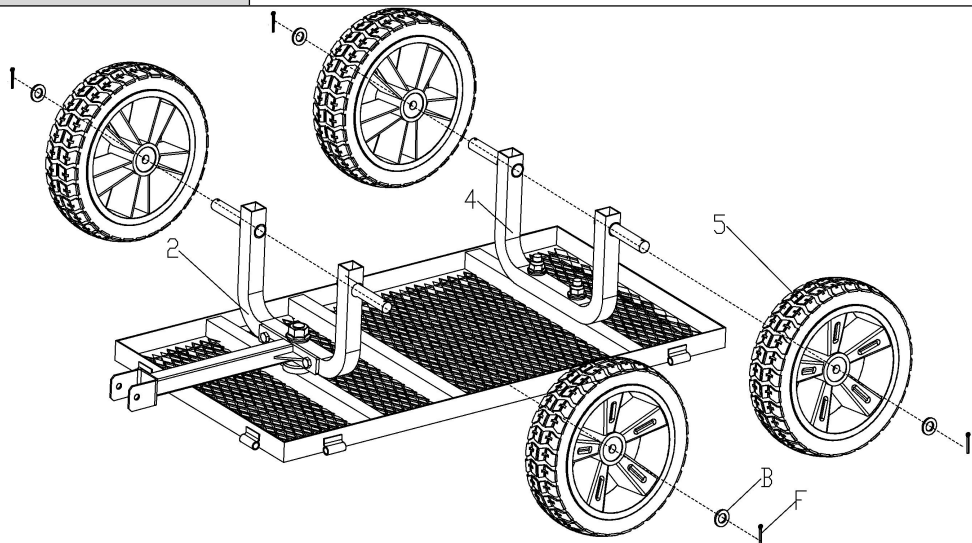


Install the wheels(5) into the front wheel brackets(2) and rear wheel brackets(4) respectively, then insert the washers(B) and hairpin cotters(F) in sequence, and finally bend the ends of the hairpin cotters to lock and secure them.

STEP 5

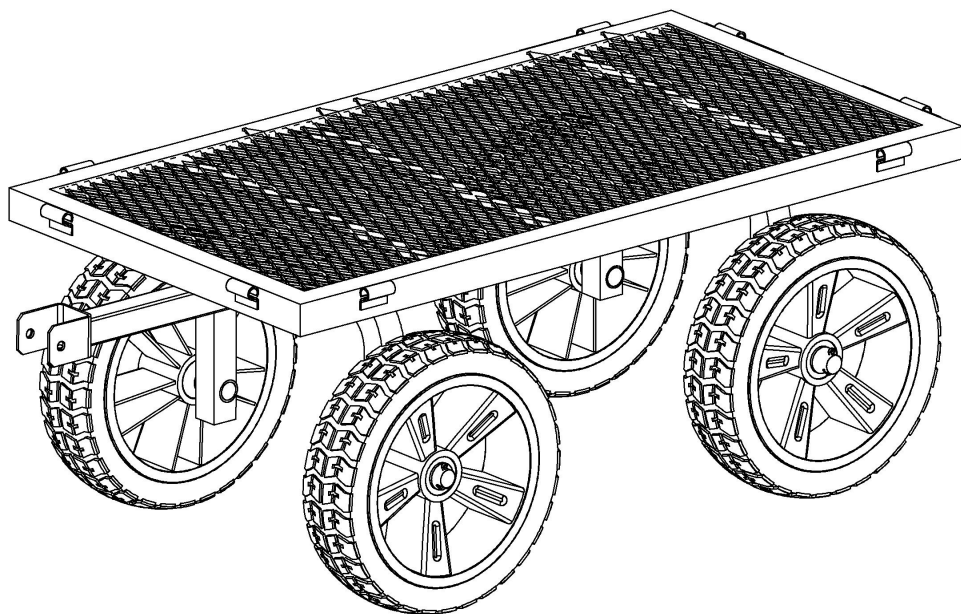


Turn the vehicle upside down.



STEP 6



6 x 2






G x 4

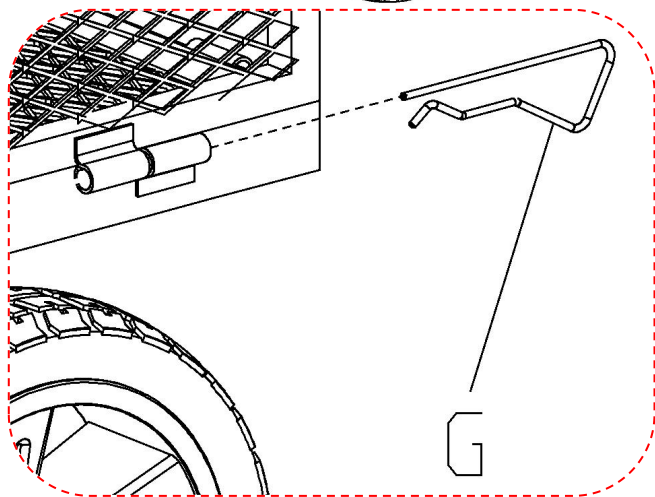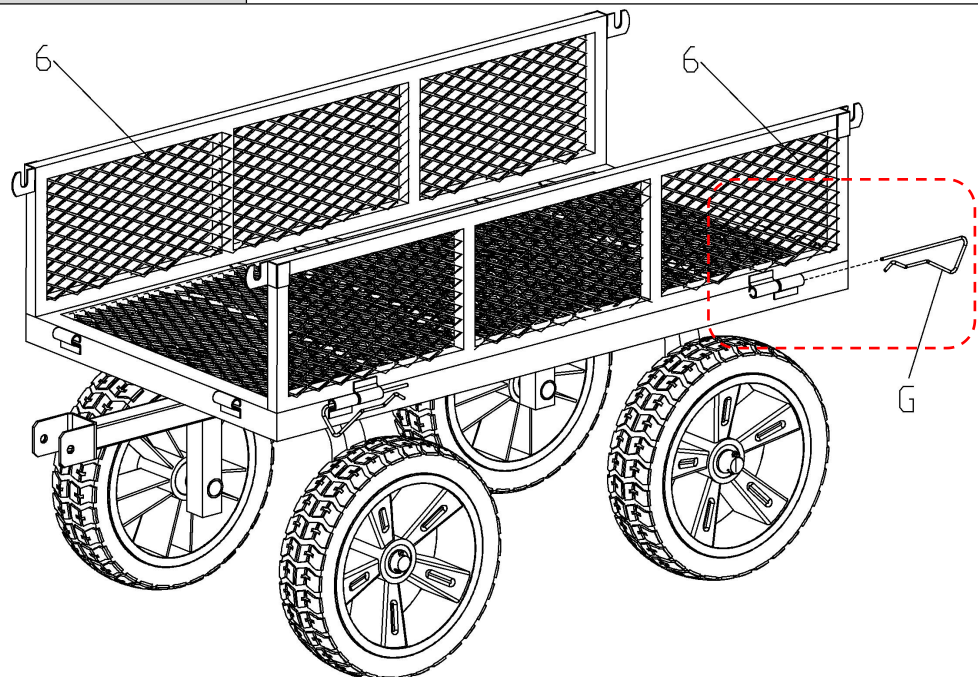



Secure the frame border(6) to the bottom frame(3) with R-clips(G).

STEP 7

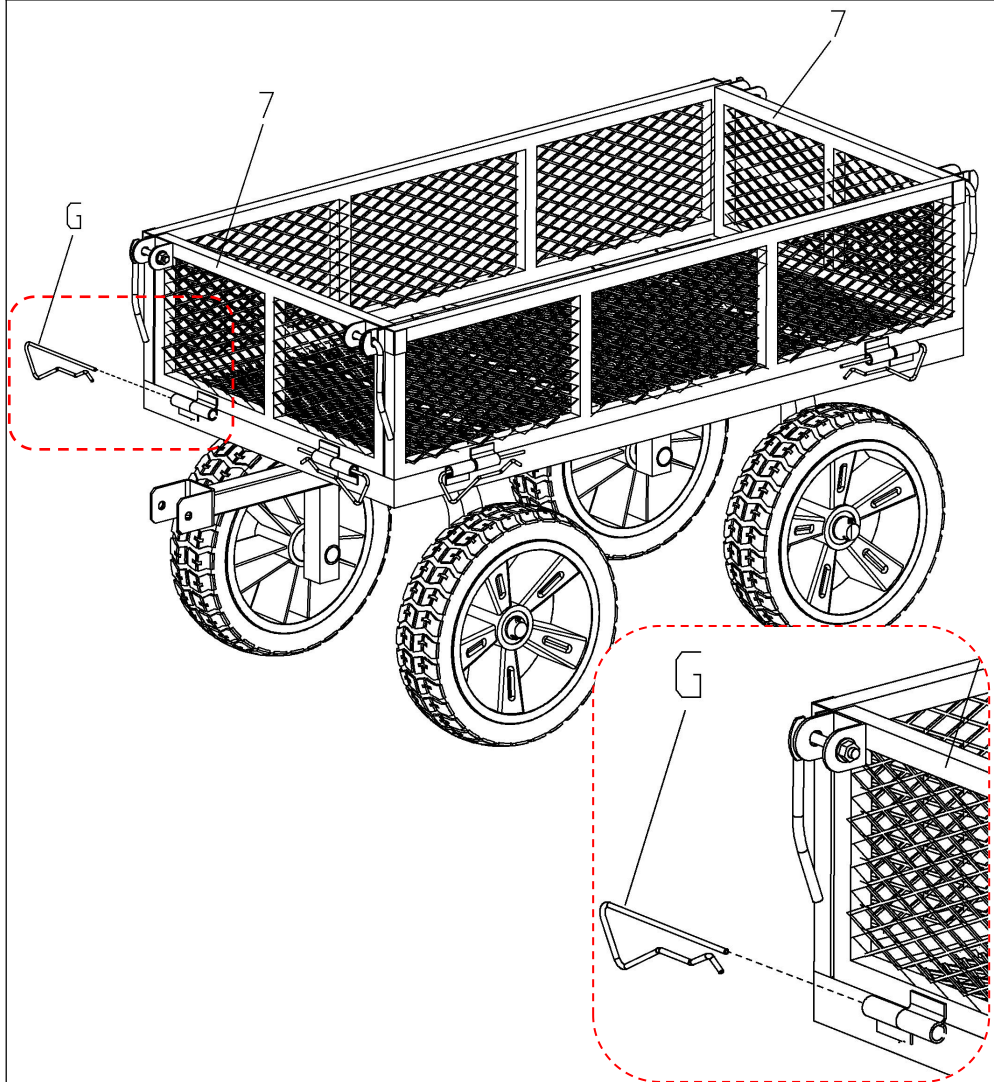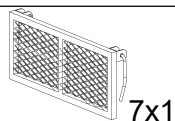


1. Secure the Front and rear frame(7) to the bottom frame(3) with R-clips(G).
2. Position and secure the side panels using the quick-release pins on the front and rear panels.

STEP 8


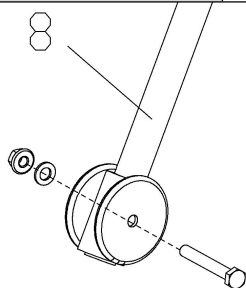
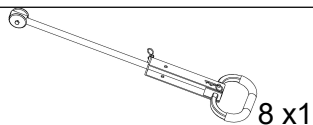


Remove the bolt and nut from the handle(8).

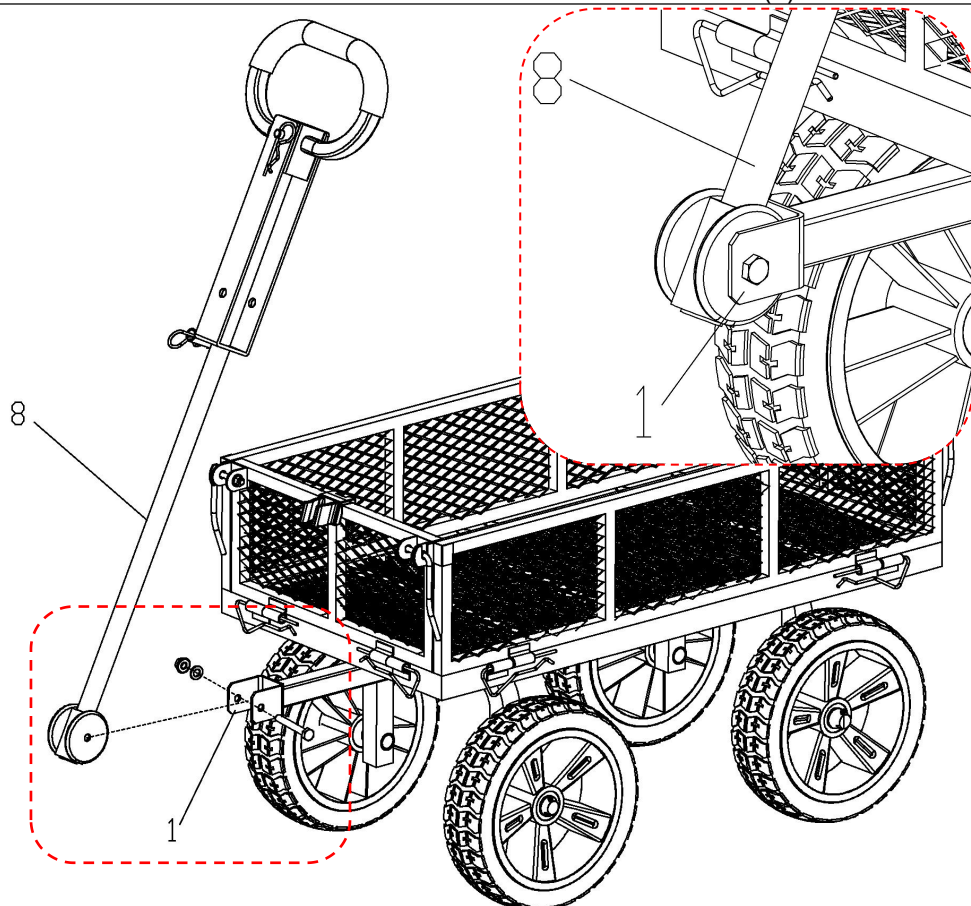


Secure the handle(8) to the T-shaped connector(1) using the removed screw and nut.

STEP 9

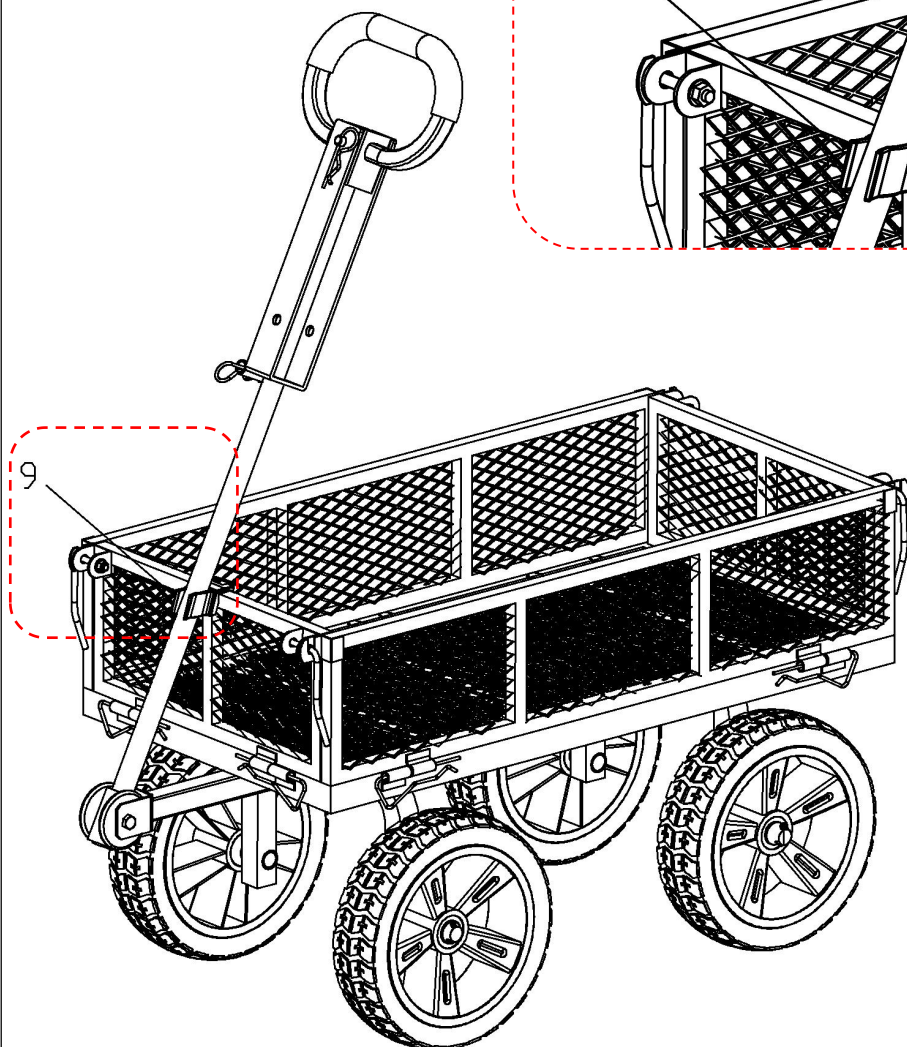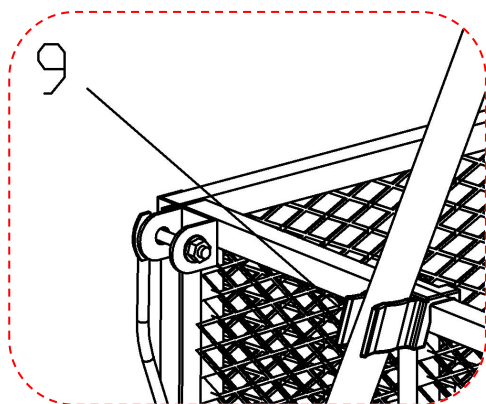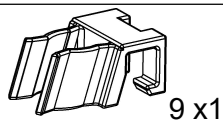


Clip the plastic part(9) onto the front panel; this plastic part is equipped with the function of quickly securing the handle(9).

Hand pull mode

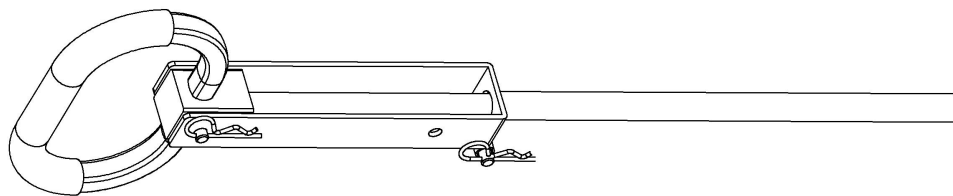

Vehicle towing mode

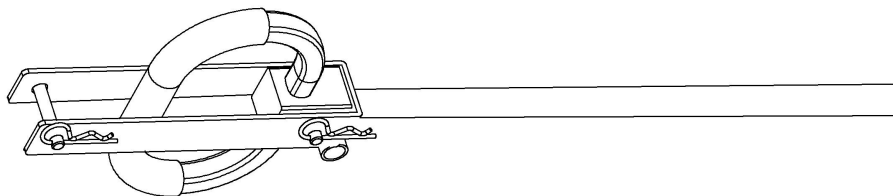

PRODUCT PARAMETER

Model	TC-900R	TC-900B	TC-900G
Safe Loading Weight	900 LBS/408kg		
Colour	Basket: Red ; Metal bracket: Black	Basket: Black ; Metal bracket: Black	Basket: Green ; Metal bracket: Black
Truck Bed Dimensions	37.8*20*9.65inch (960*510*245mm)		

Do not exceed the overall maximum weight capacity.

Manufacturer: Shanghaimuxinmuyeyouxiangongsi

Address: Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, shanghai 200000 CN.

Imported to AUS: SIHAO PTY LTD. 1 ROKEVA STREETEASTWOOD NSW 2122 Australia

Imported to USA: Sanven Technology Ltd. Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730

UK	REP
-----------	------------

YH CONSULTING LIMITED. C/O YH Consulting
Limited Office 147, Centurion House, London
Road, Staines-upon-Thames, Surrey, TW18 4AX

EC	REP
-----------	------------

E-CrossStu GmbH
Mainzer Landstr.69,
60329 Frankfurt am Main.

