

SCHWINN®


Rascal

PET TRAILER

13-SC315

OWNER'S MANUAL

This manual contains safety, assembly, use and maintenance instructions. Read these instructions carefully before use and keep them for future reference. Your pet's safety may be affected if you do not follow these instructions. The Schwinn Bicycle Trailer must be assembled by an adult who has read and understands the instructions in this manual. Keep the packaging away from children and dispose all packaging before use.

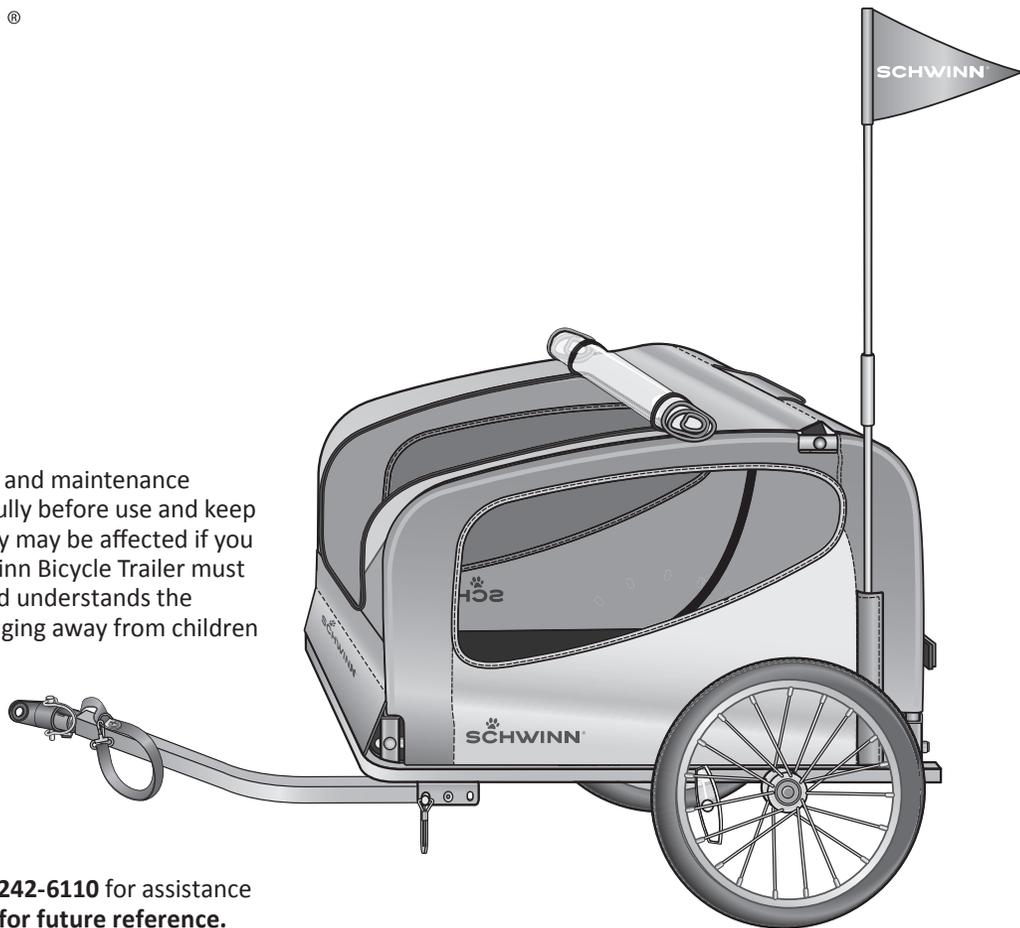

Do not return to store. Call toll free **1-800-242-6110** for assistance and replacement parts. **Keep instructions for future reference.**

Thank You

For purchasing the Schwinn Pet Trailer. Enjoy hours of pleasurable exercise and pet-time fun. If you have any questions or comments our customer service hours are:

8:00 AM - 5:00 PM Monday through Friday CST.

You may also reach us through the following:

Web: www.pacific-cycle.com

Email: customerservice@pacific-cycle.com

Mail: P. O. Box 344

4730 E. Radio Tower Lane

Olney, IL 62450

Important!

Do not return the product to the store. Please contact customer service at 1-800-242-6110 for assistance and replacement parts.

Contents

1 SAFETY	1
Assembly	1
Safe Riding Warnings	1
Trailer Use Warnings	2
Care/Tips/Guidelines	2
2 PARTS AND FEATURES	3
3 ASSEMBLY	4
Extend and Secure the Tow Bar	4
Attach the Wheels	5
Unfold the Frame	7
Insert the Safety Flag	9
4 TRAILER ATTACHMENT	10
Attachment with Quick Release	12
Attach the Safety Strap	15
5 USING THE PET TRAILER	16
6 DISASSEMBLY AND STORAGE	18
7 MAINTENANCE AND PARTS	21
Care	21
Accessories	21
8 WARRANTY	22

1 Safety

WARNING!

FAILURE TO FOLLOW THE SAFETY INSTRUCTIONS LISTED BELOW MAY RESULT IN SERIOUS INJURY OR DEATH. Always read and understand the information and warnings in this manual before using the Bicycle Trailer.

If you are unsure of any information in this manual or have a question regarding assembly or use please call customer service. Always keep this manual for reference and include it with resale of the Bicycle Trailer.

ASSEMBLY

- An adult who has read and understands the information and warnings in the manual shall assemble this product according to manufacturer's instructions.
- Do not use the product if there are any missing or damaged parts. Do not return the product to the store. Please contact customer service at **1-800-242-6110** for assistance and replacement parts.
- Dispose of all plastic bags and wrapping material immediately.
- Check the assembly (i.e.: crossbar locked, screws tight) before using the product.
- Never allow children to assemble, fold, or disassemble the trailer.

SAFE RIDING WARNINGS

- Weight limit is 50 lbs. Do not carry pet exceeding 50 lbs, as the extra weight and height will increase the center of gravity, increasing the risk of tip over
- Do not carry an excitable pet. If pet becomes agitated, cease riding and tend to them
- Do not carry more than one pet at a time as there is only one leash tether
- Never leave your pet unattended
- Make sure the pet safety strap is properly adjusted, according to the size of the pet, to keep the pet secure in the trailer but with enough room to adjust position
- Never carry humans in this trailer
- Always make sure zippered pet door is fully closed before riding
- Never tow trailer with any motorized vehicle
- Inspect and maintain the bicycle trailer regularly, before each use. Ensure trailer hitch is properly attached and secure prior to riding
- Make sure the tow bar safety strap is properly secured for additional safety

⚠ WARNING!

- Riding with this trailer increases your turning radius. Be sure to allow for extra clearance around curbs, signs, cars, and other obstacles. Practice riding with the trailer without a pet first to get comfortable with the adjustment of riding with a trailer
- Avoid riding with the trailer on icy or slippery terrain, or when inclement weather makes bicycling unsafe
- Avoid riding on sloped terrain, with wheels perpendicular to the slope. Doing so may increase the likelihood of the trailer tipping.


TRAILER USE WARNINGS

- Tires must be properly inflated prior to use. Please refer to the PSI recommendations printed on the tires for proper inflation levels
- Over inflation of tires may result in failure and risk of serious injury. Do not exceed maximum pressure as shown on tires
- This product may contain a chemical known to the State of California to cause cancer, birth defects, or other reproductive harm.

CARE/TIPS/GUIDELINES

- Practice riding with the trailer without a pet first to get comfortable with the adjustment of riding with a trailer
- Material is not weather resistant. Pet may get wet if used during precipitation
- Do not leave trailer outside after use. Inclement weather and harsh elements may stress the fabric on the trailer
- Removable/washable liner must be properly placed to assist in the pet's traction
- If pet seems uncomfortable, adding a blanket or pet bed to the base may help with pet's comfort level
- We recommend using a harness on the pet, rather than a collar, to reduce the stress on the pet's neck
- Riding with a trailer will increase your normal braking distance. Make sure to practice braking with the trailer in less trafficked areas.
- To get your pet used to the trailer, practice with frequent but shorter rides, in less trafficked areas to limit distraction for you and the pet
- Weight limit for storage pouch is 1lb. We do not recommend using this storage pouch for phones and/or other valuable items, as uneven terrain can cause items to potentially bounce out of the pouch
- Zippered bug screens and weather screen can be rolled up (fastened with elastic bands) or rolled down, depending on riding conditions.

2 Parts and Features

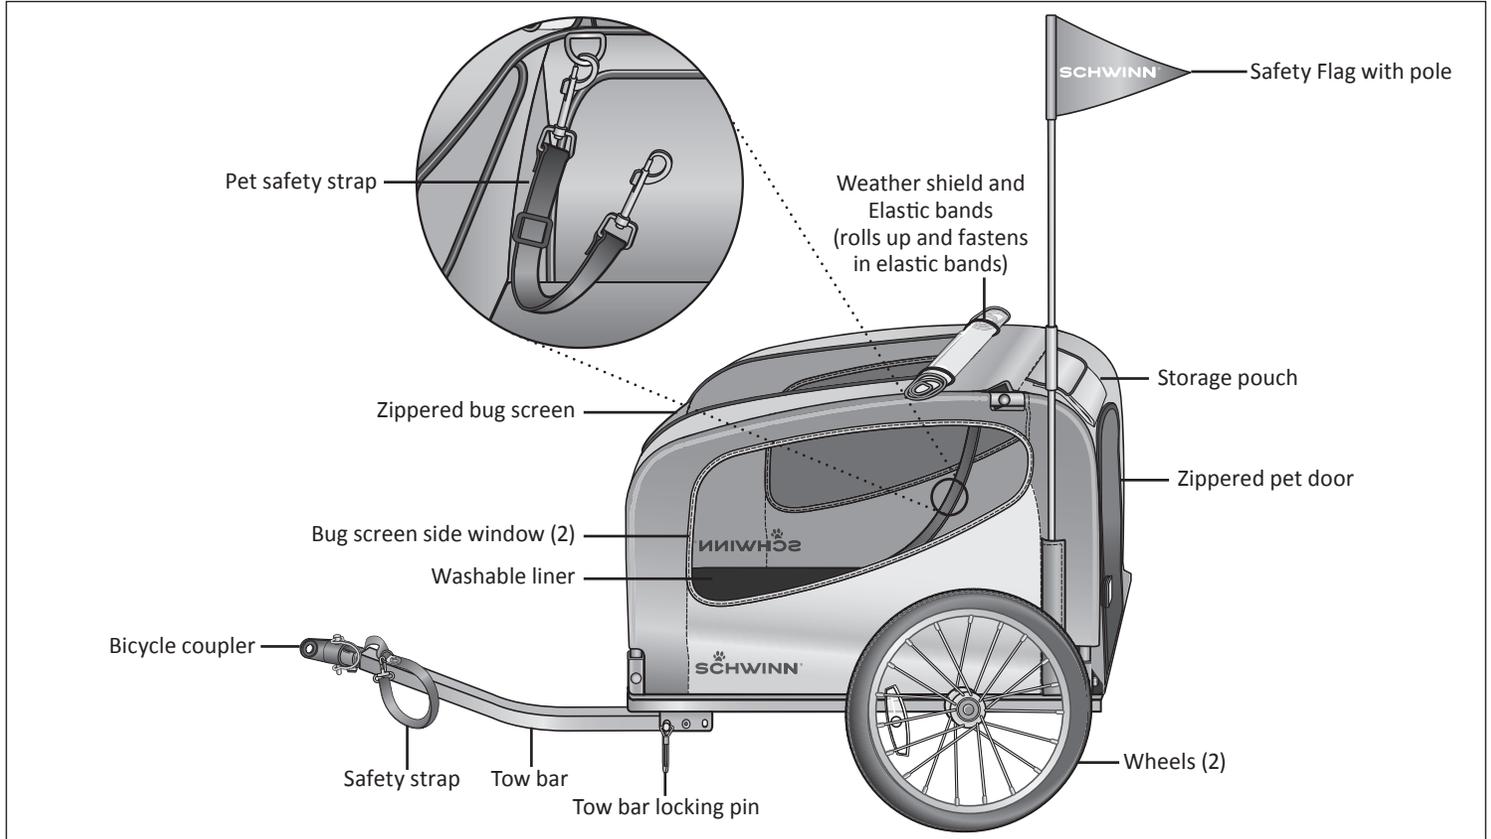

3 Assembly


EXTEND AND SECURE THE TOW BAR

⚠ WARNING!

- There are pinch points between the sidewalls and the frame of the trailer that may cause injury. Fold or unfold the trailer slowly using caution.
- Keep children clear when folding or unfolding the trailer.
- Ensure that all locking devices are engaged before use.

TIP! Start assembly with the tow bar side facing up.

- 1 Unlock the tow bar by removing the loop on the end of the locking pin, and removing the locking pin from the tow bar bracket. **Figure 3.1**
- 2 Rotate the tow bar out and away from the trailer. The tow bar should be resting on the front of the frame. **Figure 3.1**

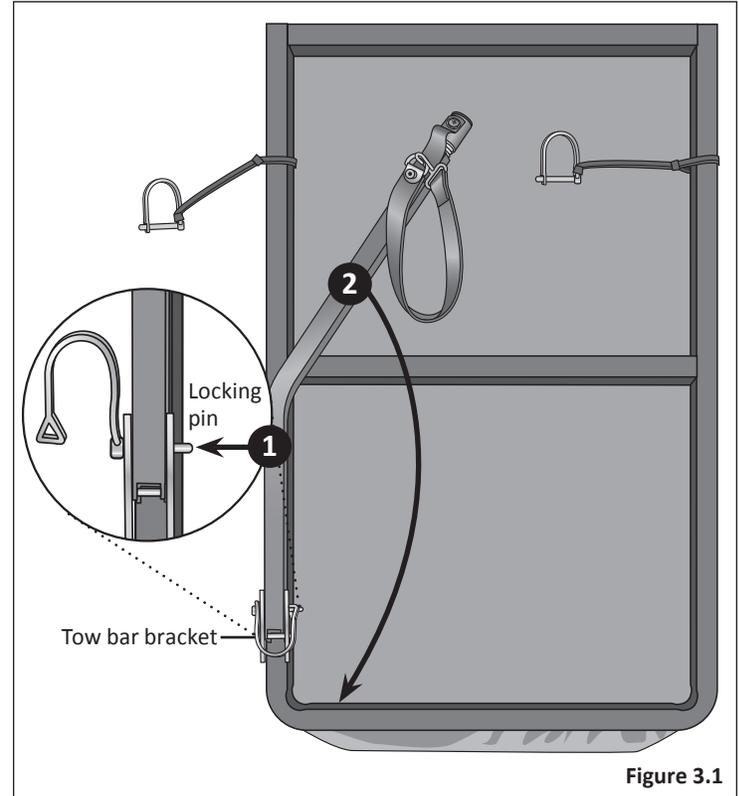

- 3 Re-insert the locking pin through the tow bracket, and lock it by inserting the end of the loop onto the end of the locking pin.
Figure 3.2

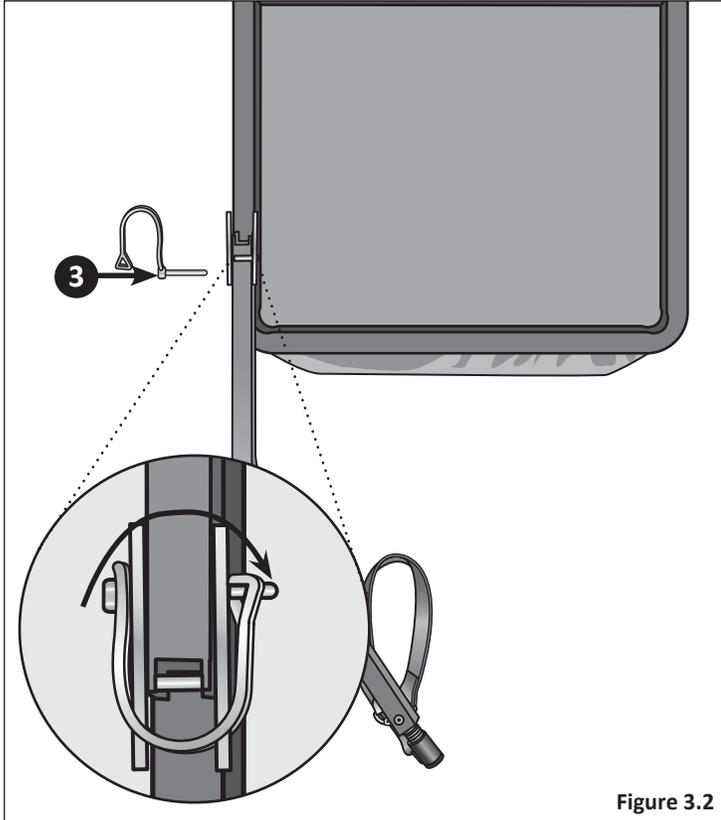


Figure 3.2

ATTACH THE WHEELS

⚠ WARNING!

Wheels that are not securely locked in place may fall off the trailer and cause serious injury or death. Always check the wheels are securely locked in place before use.

- 1 Remove the caps from the ends of the axles.
- 2 Insert the axle of the wheel into the hole located on the side of the trailer frame. Figure 3.3

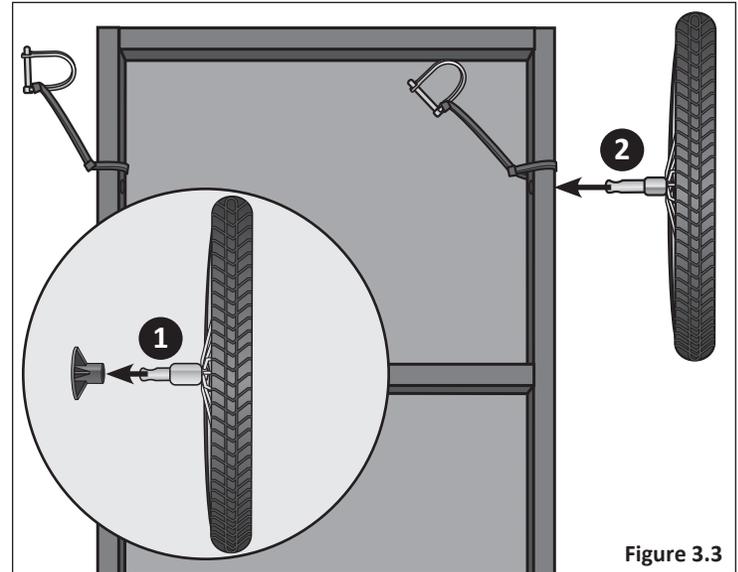


Figure 3.3

- 3** Insert the locking pin into the hole on the end of the axle and slide the end of the safety loop over the end of the locking pin. Check that the locking pin is securely in place. **Figure 3.4**

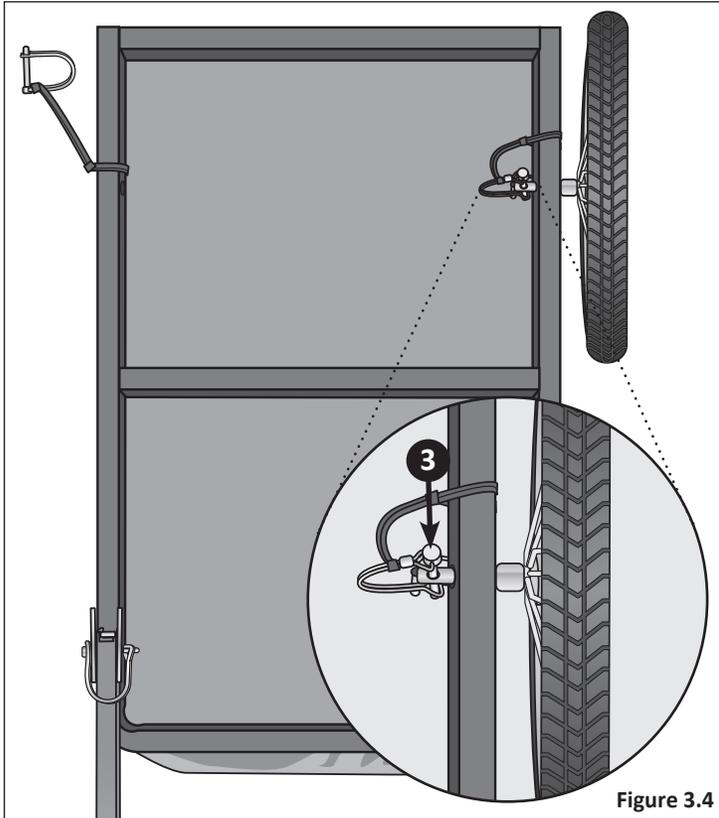


Figure 3.4

- 4** Repeat steps 2 and 3 for the remaining wheel. **Figure 3.5**

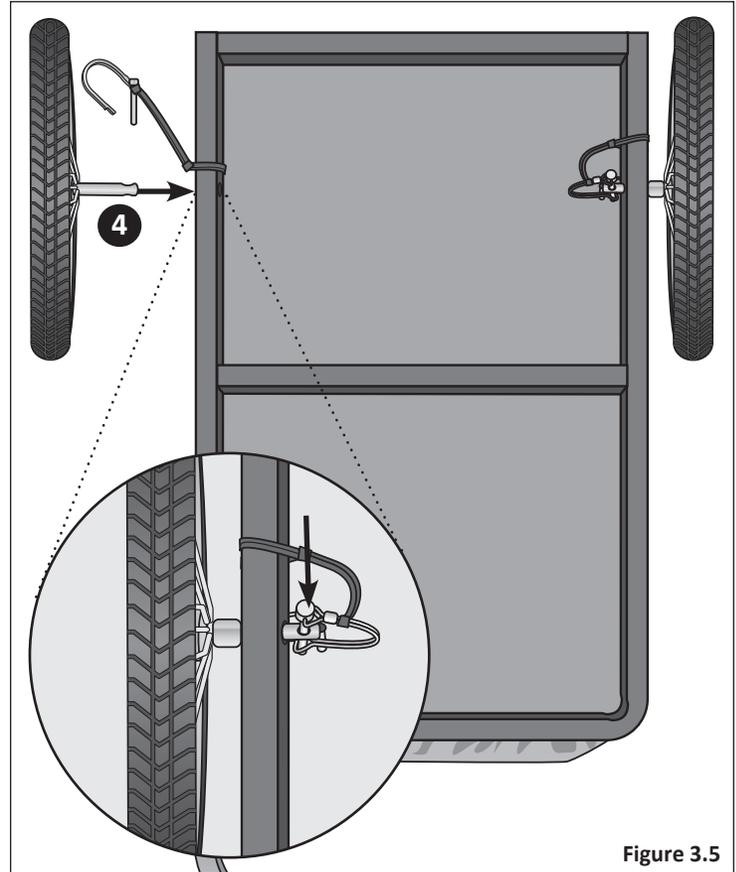


Figure 3.5

UNFOLD THE FRAME

⚠ WARNING!

- There are pinch points between the sidewalls and the frame of the trailer that may cause injury. Fold or unfold the trailer slowly using caution.
- Keep children clear when folding or unfolding the trailer.
- Ensure that all locking devices are engaged before use.

- 1 Holding the end of the tow bar, lift the tow bar and rotate the bar up and around until the trailer is right side up. **Figure 3.6**


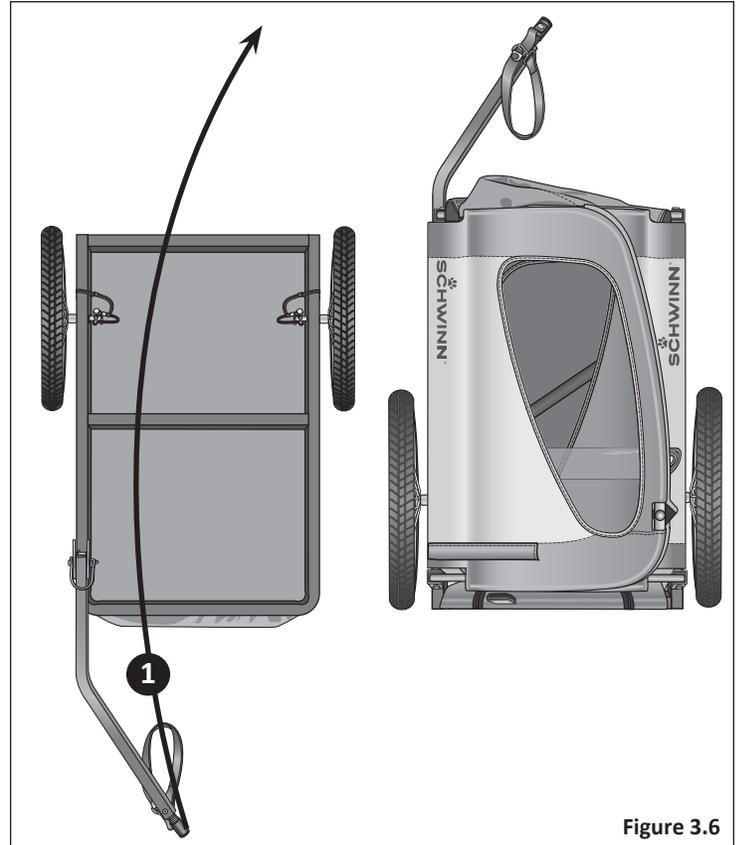


Figure 3.6


2 Lift the *left* side wall up into a vertical position. **Figure 3.7**



3 Lift the *right* side wall up into a vertical position. **Figure 3.8**

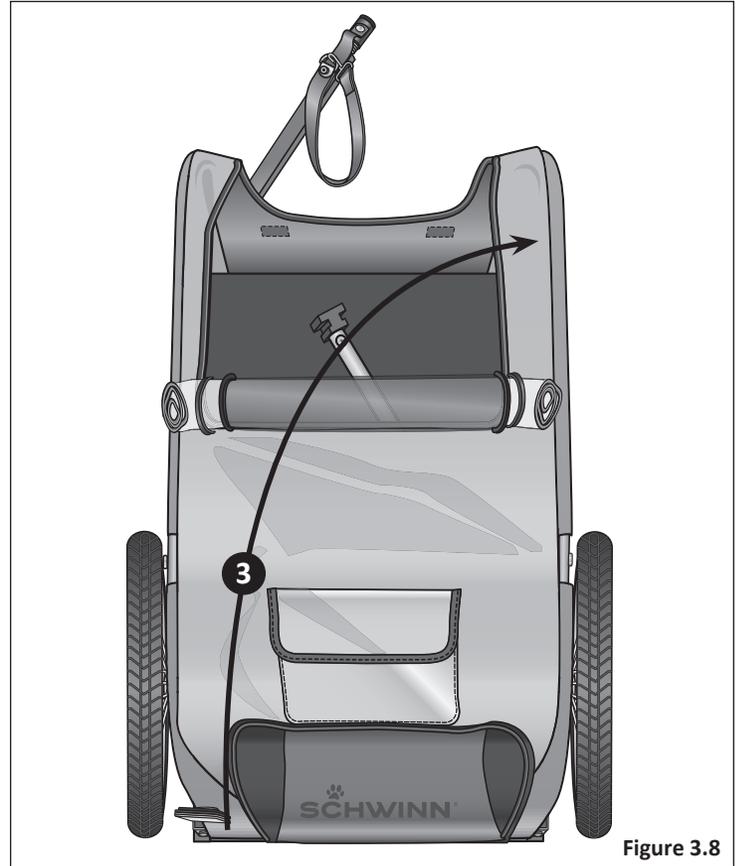


- 4 Rotate the crossbar until it locks into the crossbar latch. Be sure the cross bar is not caught by the fabric.
TIP! To perform this step it may be easier to place the trailer on its end with the tow bar facing up. Figure 3.9

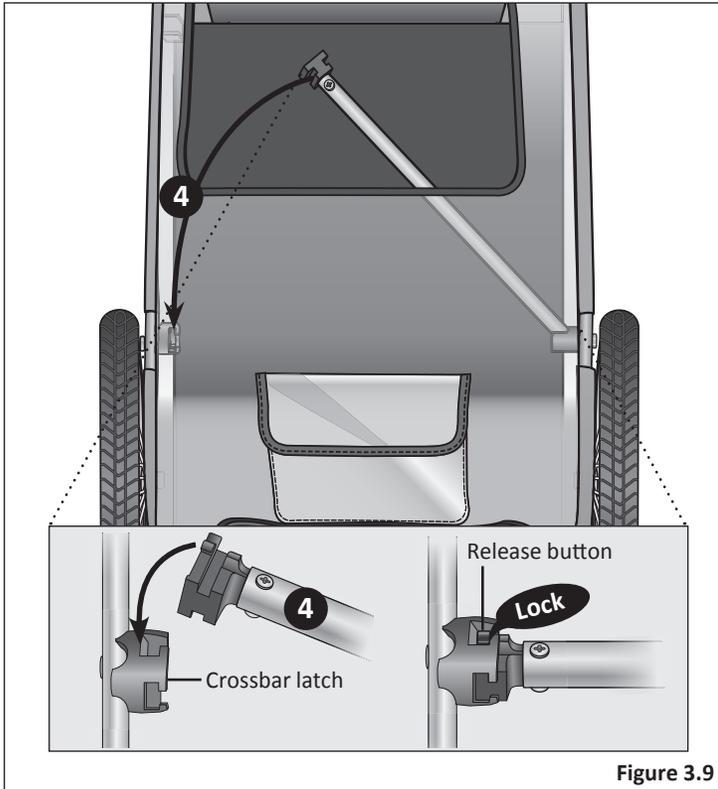

INSERT THE SAFETY FLAG

Important! The safety flag is an important safety feature that warns others that a trailer is present and on the bicycle. Always have the safety flag on the trailer when in use.

- 1 Insert the top half of the pole into the opening of the bottom half of the pole.
- 2 Insert the flag pole into the flag pole sleeve. Figure 3.12

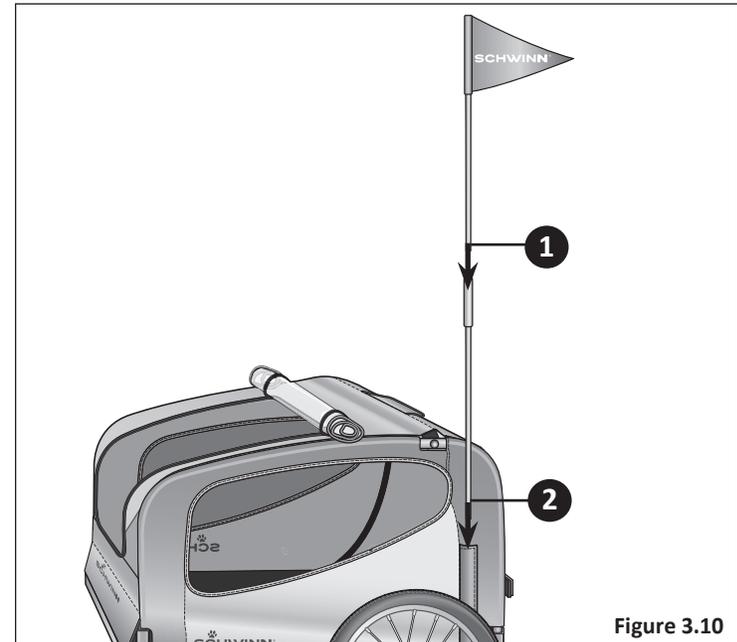




4 Trailer Attachment

⚠ WARNING!


Use of the trailer without the safety strap attached to the bicycle may result in serious injury or death. Always attach the safety strap to the bicycle when using the trailer.

Important! This section provides instructions for attaching the trailer coupler to the bicycle's REAR WHEEL with a hub nut or quick release lever. The coupler attaches to *most* bicycles.


- 1 To ensure secure attachment of the coupler to the bicycle, be sure the thread of the *rear axle* extends at least 2 mm's from the hub nut *before* proceeding to the next step. **Figure 4.1**
- 2 Using a wrench, remove the hub nut and washer from the bicycle's back wheel. **Figure 4.2**
- 3 Place the tab washer on the axle. Fit the tab into the slot on the bicycle frame dropout. Note: If your bicycle frame doesn't have a slot in the drop out, rotate the tab to fit into the axle slot. **Figure 4.3**

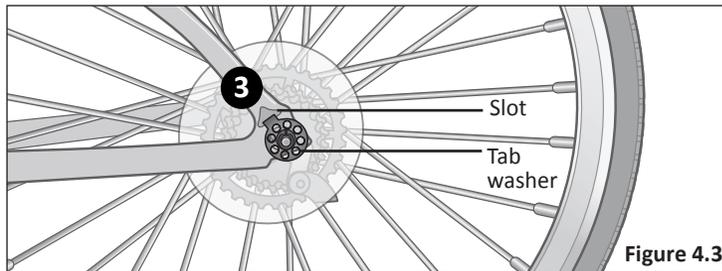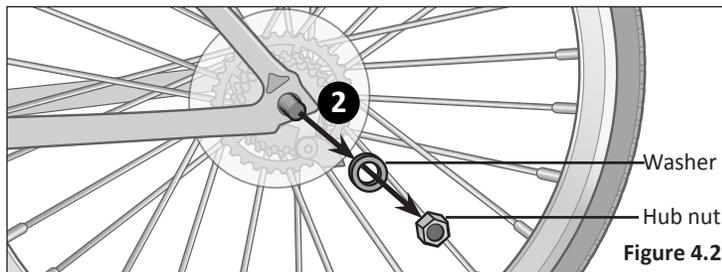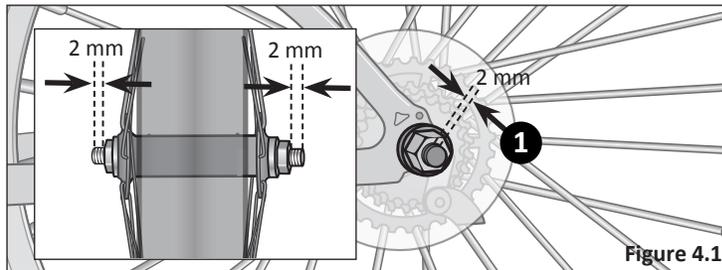

- 3 Remove the safety loop from the end of the locking pin on the end of the coupler. **Figure 4.4**
- 4 Remove the locking pin from the coupler and slide the coupler off the end of the tow bar.

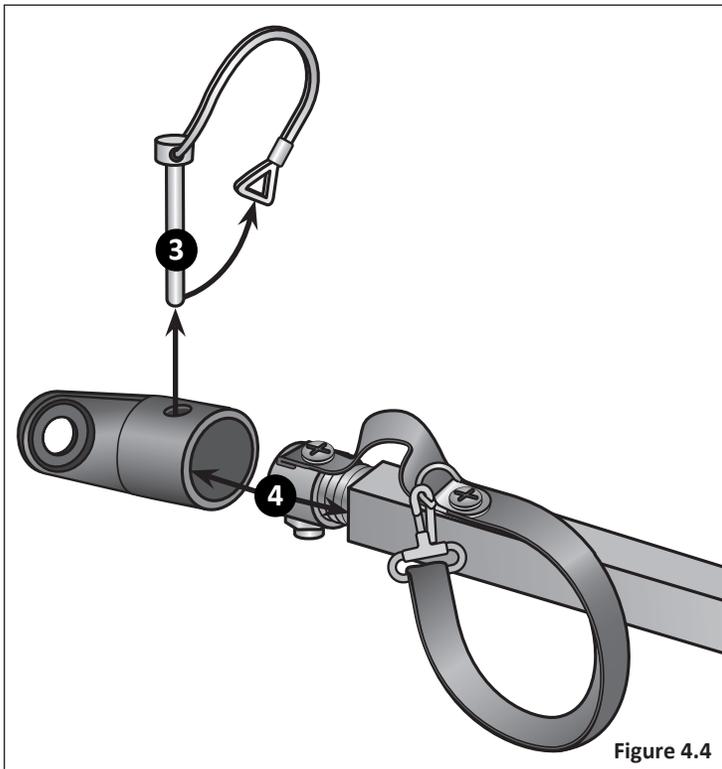

- 5 Insert the coupler plate onto the wheel axle. Place the coupler in a horizontal position so that it is in line with the tow bar.
- 6 Place the hub nut and washer back onto the axle and tighten. **Figure 4.5**

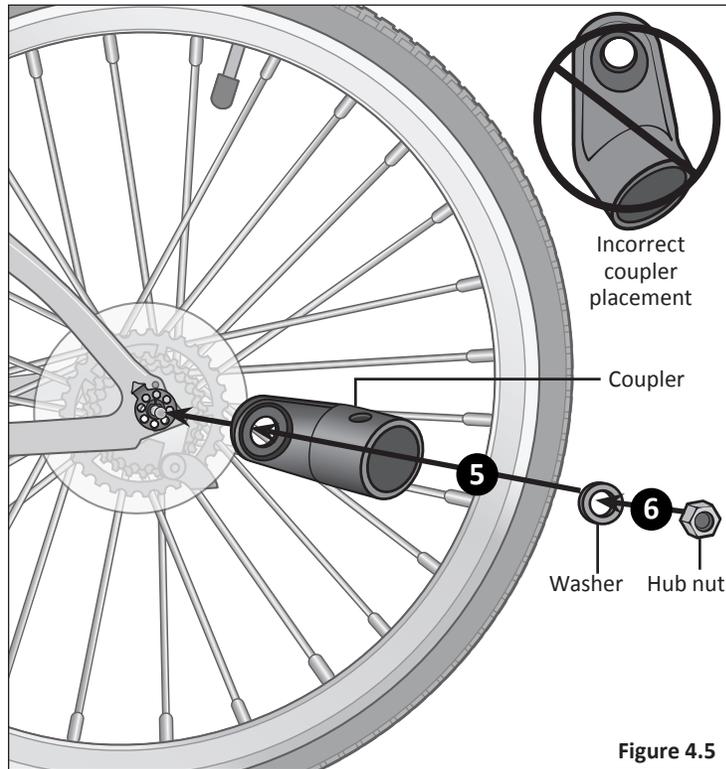


- 7 Slide the tow bar into the open end of the coupler.

Important! Ensure the coupler is completely in line with the tow bar. This reduces stress on the tow bar.


- 8 Insert the locking pin into the hole on the top of the coupler. Slide the safety loop over the end of the lock pin.

Important! Ensure the loop of the safety pin is facing away from the wheel to prevent possible friction against the wheel and spokes of the bicycle. **Figure 4.6**

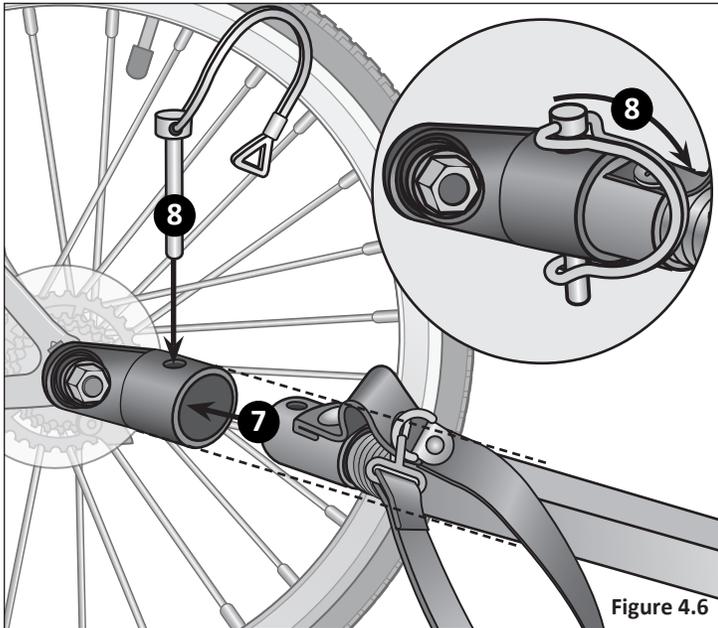


ATTACHMENT WITH QUICK RELEASE


- 1 Release the quick release lever, skewer and remove the nut and spring from the opposite side of the wheel.
- 2 Remove the axle skewer and spring. Leave the wheel in place. **Figure 4.7**

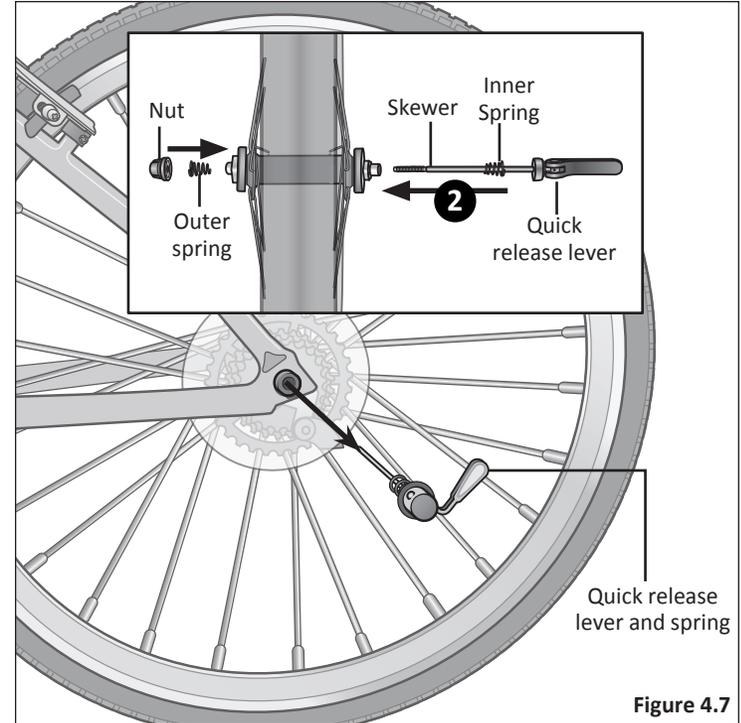

- 3 Place the tab washer on the axle. Fit the tab into the slot on the bicycle frame dropout. **Note:** If your bicycle frame doesn't have a slot in the drop out, rotate the tab to fit into the axle slot. **Figure 4.8**

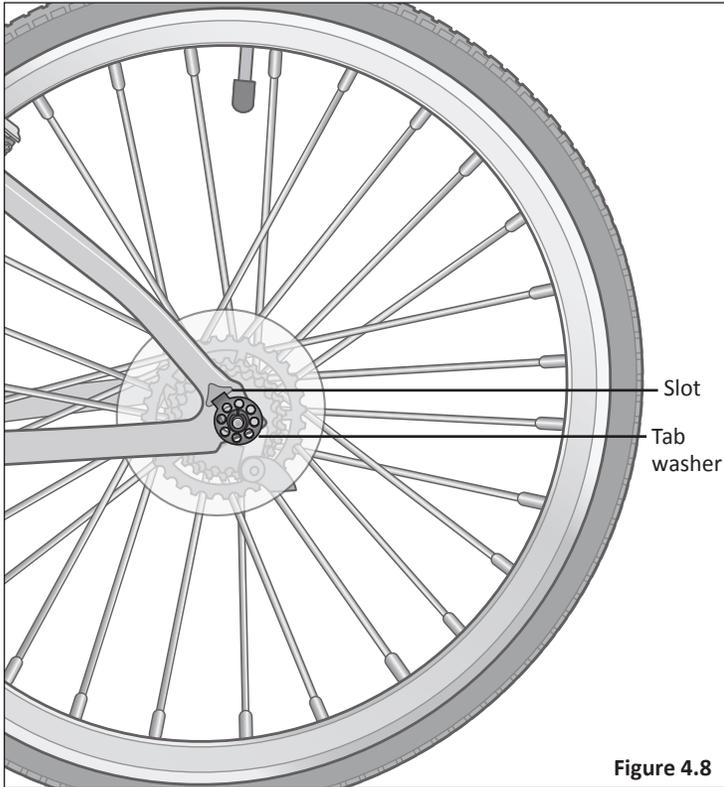


- 4 Insert the coupler plate onto the wheel axle. **Figure 4.9**
- 5 Insert the quick release lever, spring and nut that were removed in step 1 through the wheel.
- 6 Rotate the quick release lever up and tighten. When properly tightened, the quick release lever should leave an imprint in your hand. The pressure should be firm but not excessive.

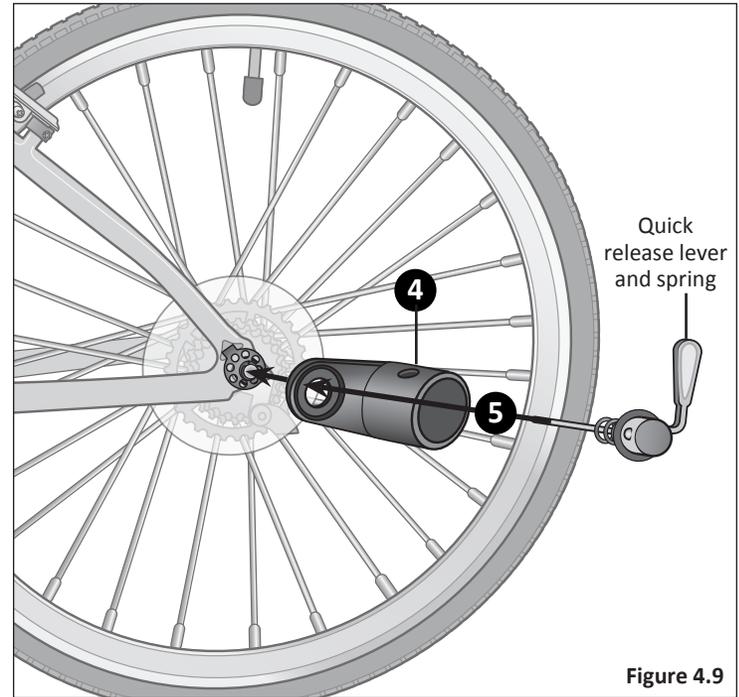

- 7 Slide the tow bar into the open end of the coupler.


Important! Ensure the coupler is completely in line with the tow bar. This reduces stress on the tow bar. **Figure 4.10**

- 8 Insert the locking pin into the hole on the top of the coupler.

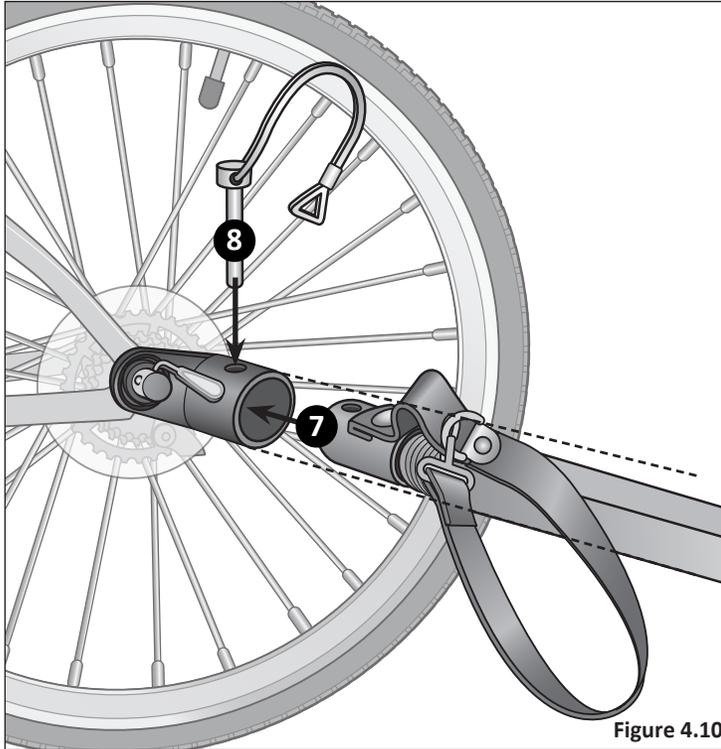

- 9 Slide the safety loop over the end of the lock pin. **Figure 4.11**

Important! Ensure the loop of the safety pin is facing away from the wheel to prevent possible friction against the wheel and spokes of the bicycle.

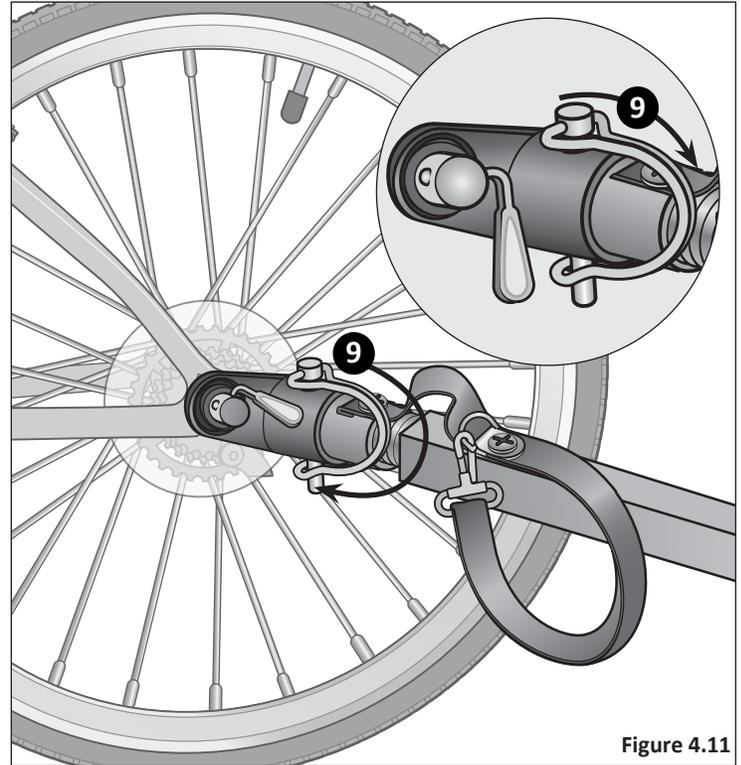


ATTACH THE SAFETY STRAP


⚠ WARNING!

Use of the trailer without the safety strap attached to the bicycle may result in serious injury or death. Always attach the tow bar safety strap to the bicycle when using the trailer.

- 1** Wrap the tow bar safety strap around the bicycle frame.
Figure 4.12

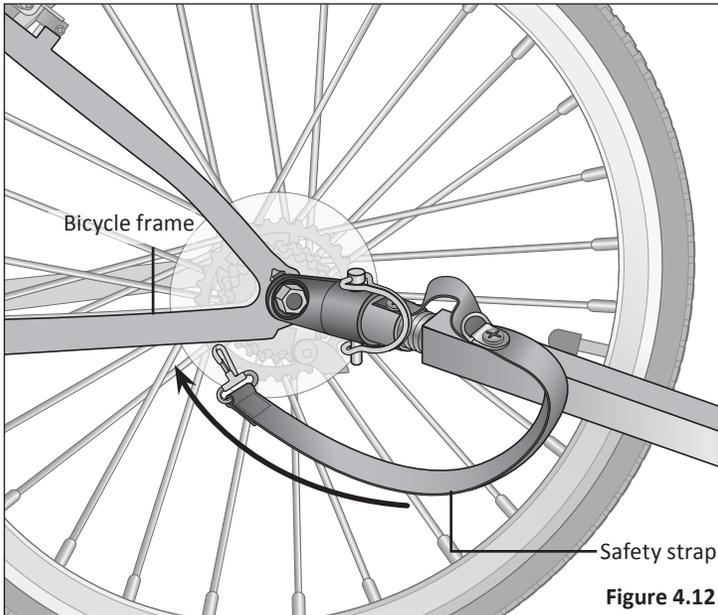

- 2** Clip the safety strap to the tow bar ring on the end of the tow bar. Be sure the tow bar safety strap is securely attached before using the trailer. **Figure 4.13**

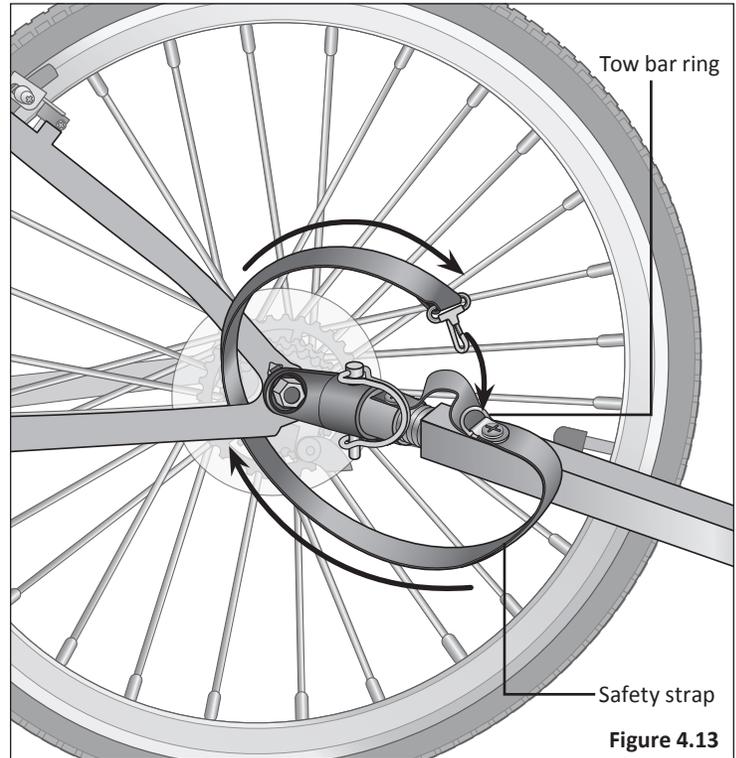

5 Using the Pet Trailer

⚠ WARNING!

- Avoid serious injury to your pet from falling or sliding out. Always properly secure the pet with the safety harness.
- Never leave your pet unattended in or near the bicycle trailer.

We recommend:

- That the pet safety strap is attached to the pet's harness *before* the pet enters the trailer
- Keep the bug screen zipped shut until the rider is confident the pet will not try to exit the trailer while in use
- Using a harness on the pet, rather than a collar, to reduce stress on the pet's neck
- If your pet seems uncomfortable, adding a blanket or pet bed to the base may help with pet's comfort level
- To get your pet used to the trailer, practice with frequent but shorter rides, in less trafficked areas to limit distraction for you and the pet

- 1 Pull the pet safety strap back through the pet door and clip it to the pet's harness. **Figure 5.1**

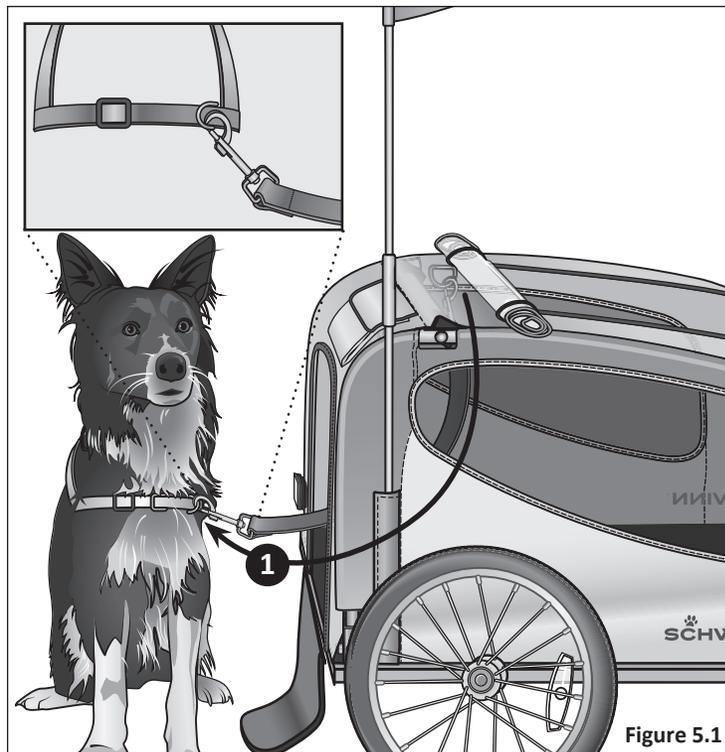


Figure 5.1

- 2** Guide the pet through the pet door.
Note: Removable/washable liner must be properly placed to assist in the pet's traction **Figure 5.2**

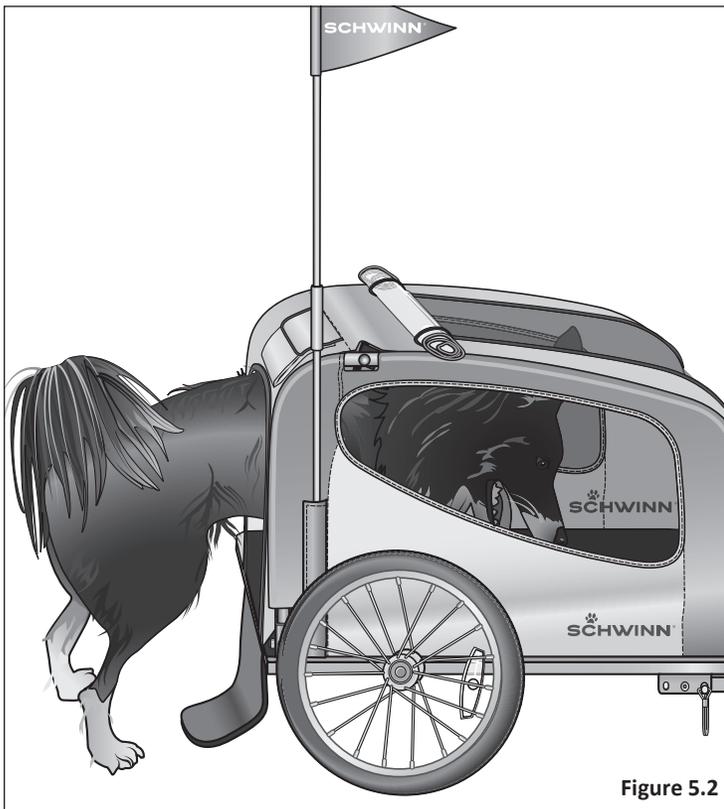


Figure 5.2

- 3** Zip the pet door completely closed. Once your pet is safely secured in the trailer, the rider can choose to keep the bug screen zipped shut, rolled back and secured with the elastic straps. This will depend on the dog's size and comfort.

Figure 5.3



Figure 5.3

6 Disassembly and Storage

⚠ WARNING!

- There are pinch points between the sidewalls and the frame of the trailer that may cause injury.
- Always fold or unfold the trailer slowly and with caution.
- Keep children clear when folding or unfolding the trailer.

- 1 Remove the flag pole and separate the flag pole sections. **Figure 6.1**

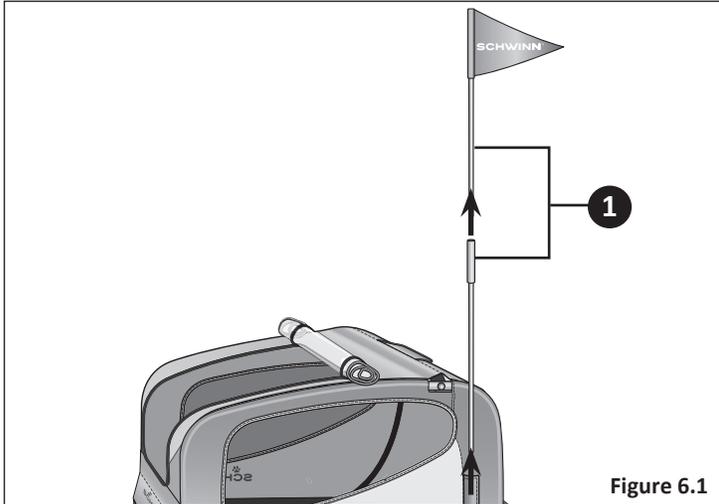


Figure 6.1

- 2 Release the crossbar by pressing the crossbar lock. **Figure 6.2**


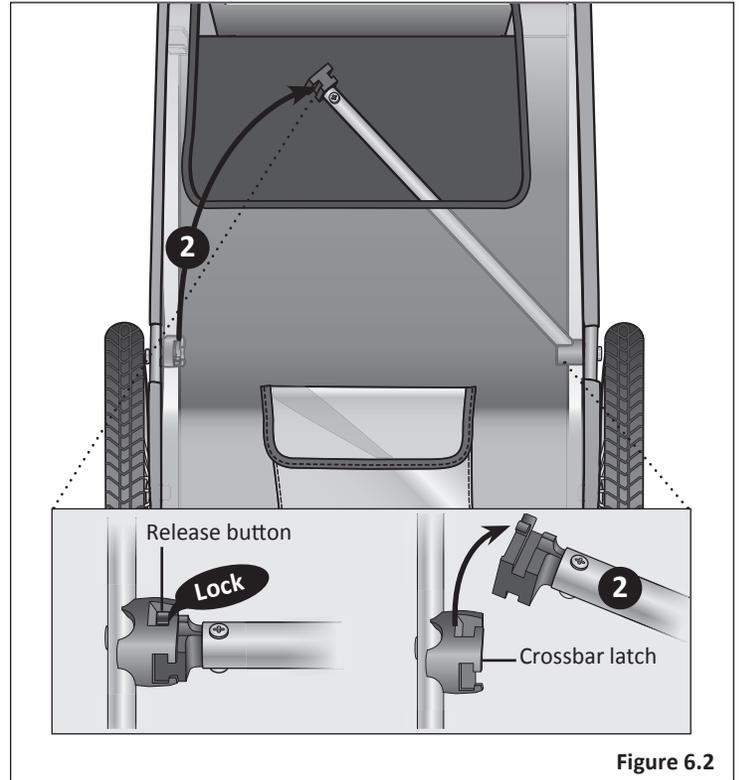


Figure 6.2


- 3 Fold the left and right walls down. **Figure 6.3**




- 4 Remove the locking pins from the wheels. Pull the wheels out of the trailer frame. **Figure 6.4**

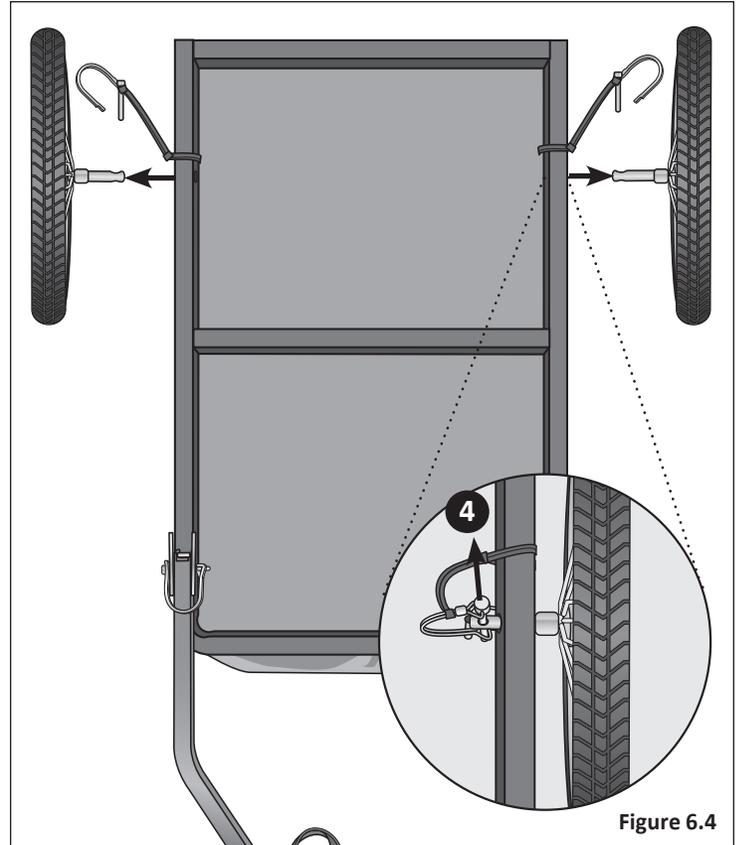

- 5 Remove the locking pin from the tow bracket. **Figure 6.5**

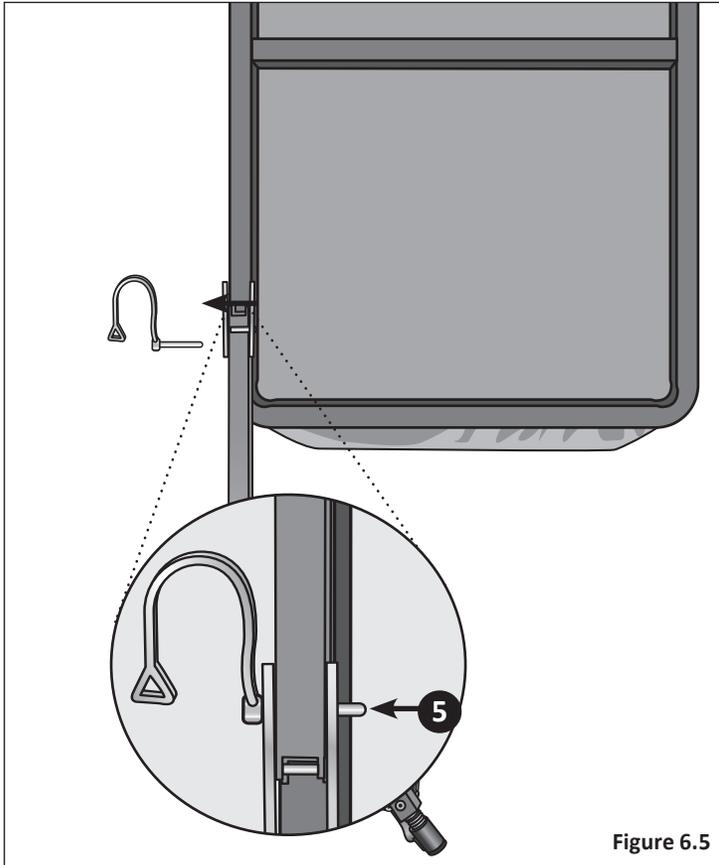

- 6 Rotate the tow bar back into the frame. Insert the locking pin through the tow bar and frame. Secure the safety loop over the end of the locking pin. **Figure 6.6**

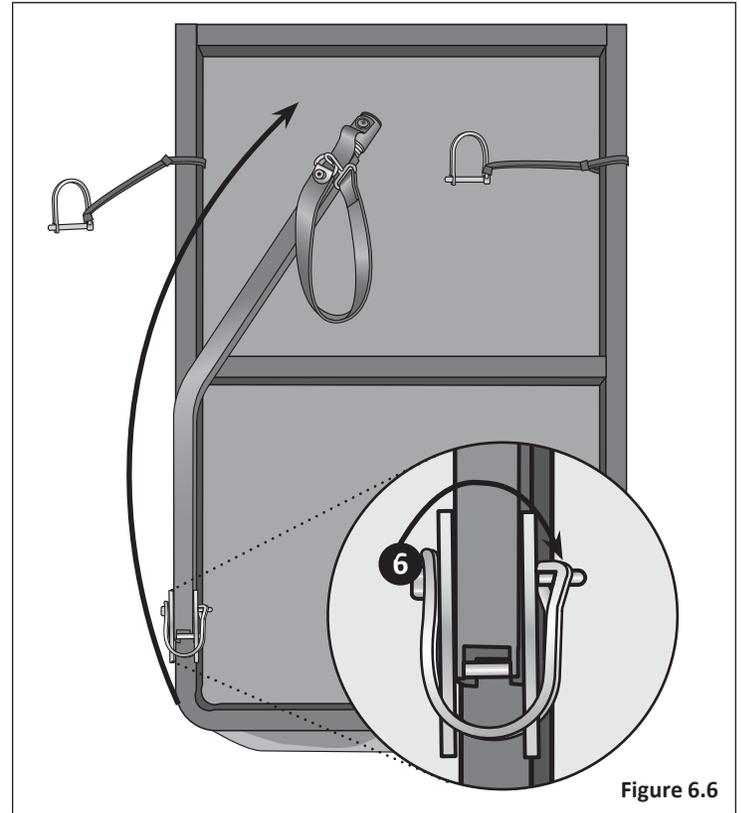

7 Maintenance and Parts

CARE

- **To clean the trailer:** use only mild soap and water. Do not use cleaning solvents.
- **Routinely check** that all fasteners and equipment (wheels, reflectors, flag, etc) are tight and properly assembled.
- **Check the tire pressure often.** The recommended tire pressure range is printed on the tire. Only use a foot or hand pump to inflate.
- **Have a qualified bicycle mechanic** perform routine safety checks on your bicycle before using with the trailer.
- **Routine bicycle maintenance** is recommended to be performed every year.

ACCESSORIES

- 1pc Trailer coupler
- 1pc Tab Washer
- 1pc Locking Pin

Please direct any accessory (small parts) and warranty inquiries to Pacific Cycle Customer Service at **1-800-242-6110**.

8 Warranty

Pacific Cycle warrants this product to be free of defective materials and workmanship for 1 year from the date of original purchase.

THIS LIMITED WARRANTY IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT, AND IS EXPRESSLY IN LIEU OF ANY OTHER WARRANTY. This limited warranty give you specific legal rights and you may also have other rights which may vary from state to state.

This warranty is extended only to the original consumer purchaser for non-commercial use and does not cover tires or tubes, or other wear parts, ordinary wear and tear, abuse, misuse, neglect, theft, or damage due to accident.

PACIFIC CYCLE IS NOT RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. THIS LIMITED WARRANTY DOES NOT COVER ANY PERSONAL INJURIES, DAMAGE TO, OR, FAILURE OF THE PRODUCT OR ANY OTHER LOSSES DUE TO ACCIDENT, ABUSE, MISUSE, ALTERATION, NEGLIGENCE, NORMAL WEAR AND TEAR, IMPROPER ASSEMBLY, IMPROPER FIT, IMPROPER MAINTENANCE OR USE OF UNAUTHORIZED REPLACEMENT PARTS NOT DESIGNED FOR THE PRODUCT.

To make a claim under warranty, notification of such defect must be given to Pacific Cycle, Inc. at 1-800-242-6110. You will be instructed on how the product or part needing replacement should be shipped, postpaid, to Pacific Cycle, Inc.

SCHWINN®

Manufactured for Pacific Cycle, Inc (A Division of Dorel Industries)

Pacific Cycle, Inc.
4902 Hammersley Road
Madison, WI 53711

©2016 Pacific Cycle, Inc.

Schwinn® is a registered trademark of Pacific Cycle, Inc.

Made in China · Printed 2016