


DAPPER

User Manual

**Dapper Commercial Carpet & Upholstery
Cleaning Machine**
Model: DP-UCE1226

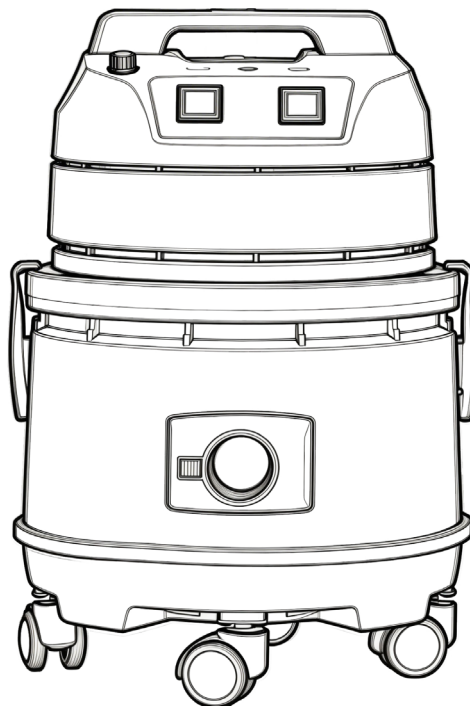

For any service-related issues,
Please contact us: Phone Number: 718-301-8243
Email address: support@dapper-supply.com

|CONTENTS

INTRODUCTION.....	4
SAFETY	5
TECHNICAL SPECIFICATIONS	6
OPERATION.....	7
PARTS LIST.....	8
WARRANTY	10

INTRODUCTION

The Sofa Maintainer is a professional multifunctional cleaning machine designed to clean and dry leather and fabric sofas, curtains, seats, mattresses, carpets, upholstered walls, staircases, and car interiors.

- The built-in foam motor generates dense, stable foam. The brush operates on a 24V system for safe use during operation.
- The machine's strong suction allows for fast drying and thorough cleaning.
- The large-capacity recovery tank makes it easy to manage water supply and wastewater disposal. The machine is portable, flexible, and simple to operate.
- With its full accessory set, the Sofa Maintainer is suitable for all work environments and can also be used as a standalone dry or wet vacuum.

SAFETY

Please read this manual carefully before use. Contact your local distributor with any questions.

1. Before use, confirm that your power supply voltage matches the rating on the nameplate.
2. Do not drag or pull the machine by the hand brush or suction hose. To reposition the machine, push it by the base or lift it by the handle.
3. When the recovery tank is full, the float valve will rise and cut off suction. Drain the recovery tank before continuing.
4. After each use, rinse the hand brush and suction hose with water to prevent bacteria growth and odor.
5. To use the machine as a small-area vacuum, remove the solution tank, install the dust bag and filter, and attach the vacuum nozzle.
6. Do not use this machine for extended large-area vacuuming.
7. Do not replace any parts yourself. Unauthorized repairs void all liability coverage.

TECHNICAL SPECIFICATIONS

Specification	Value
Voltage	110V / 60Hz
Vacuum Motor	1,000W
Spray Motor	25W
Bubble Power	40W, DC 24V
Air Pump	100W
Airflow	1.8 CFM (53 L/S)
Solution Tank	1.1 gal
Recovery Tank	4.8 gal
Suction Hose Length	13 ft
Power Cord Length	26 ft
Noise Level	<=65 dB(A)
Net / Gross Weight	39.7 / 46.3 lbs
Dimensions	20.9" x 14.6" x 25.6"
Safety Factor	II

OPERATION

OPERATION STEPS

1. Add an appropriate amount of defoamer to the recovery tank (A-10).
2. Using the funnel, add an appropriate amount of detergent to the solution tank (A-13).
3. Insert the infusion tube into the solution tank port and secure the barrel lock (A-8).
4. Connect the hand brush (B1-B7) to the foam copper connector (B-9) and the aviation plug (B-10).
5. Connect the buddy connector (C-1d) to the port (A-9).
6. Connect the plastic nozzle (C-3) to the hose connector (C-1a).
7. The machine includes multiple cleaning attachments — an upholstery nozzle and a curtain nozzle — to handle different surfaces and work environments.
8. Power on the machine. Press the Foam switch (A-3) to activate bubbling, and use the three-position switch on the hand brush to control the operating mode:

Mode	Function
FOAM	Brush rotation + bubbling active
OFF	All functions stopped
BRUSH	Brush rotation only, no bubbling

9. Use control switch (A-14) to adjust foam moisture level. Turn clockwise to increase moisture; turn counterclockwise to decrease moisture.
10. After washing, turn on the red vacuum switch (A-2) to suction up the dirty foam.
11. After foam cleaning, a small amount of detergent residue may remain on the surface. It is recommended to do a final pass with clean water to rinse and extract any remaining residue.
12. Foam washing, sewage recovery, and clean water filtration all operate simultaneously. For best results, two-person operation is recommended.
13. When finished, turn off all switches and disconnect power. Drain any remaining detergent and water from the tanks. Clean the recovery tank (A-10), solution tank (A-13), suction hose set (C-1), and hand brush (B1-B7) promptly after each use. Store the machine in a dry location.

PARTS LIST

PART A — Main Unit (Front View)

#	Component	#	Component
1	Handle	8	Barrel lock
2	Vacuum switch	9	Port
3	Foam switch	10	Recovery tank
4	Top cover	11	Rubber seal
5	Mid cover	12	Wheels
6	Binder plate	13	Solution tank
7	Base cover	14	Bubble adjustment

PART B1 — Hand Brush Assembly

#	Component
1	Brush cover
2	Three-way switch
3	Foam hose
4	Nylon brush
5	Foam connector
6	Brush connector
7	Handle


PART B2 — Main Unit (Side View)

#	Component
8	Cable bracket
9	Foam copper connector
10	Aviation plug
11	Power cord


PART C — Accessories & Attachments

1	Suction hose set
1a	Hose connector
1d	Buddy connector
3	Plastic upholstery nozzle
5	Plastic curtain nozzle


PART A — Main Unit (Front View)

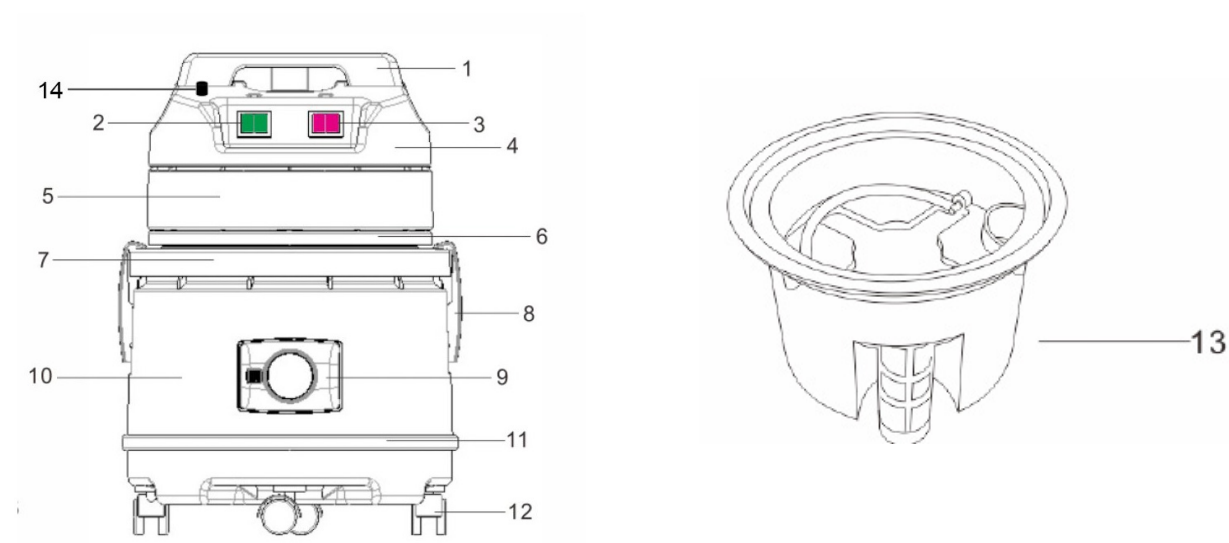



PART B — Hand Brush Assembly

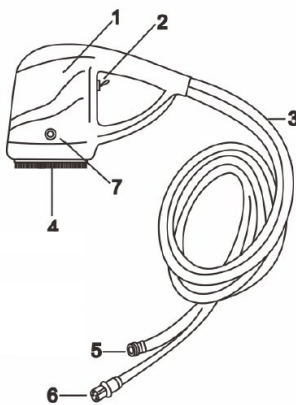

Main Unit (Side View)

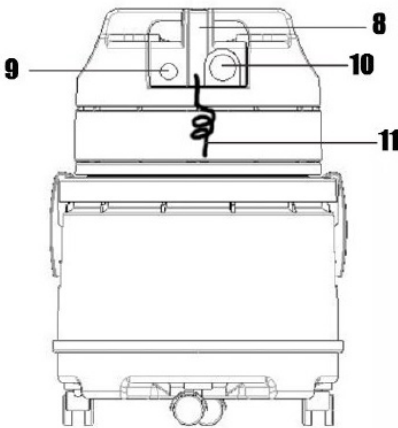

PART C — Accessories & Attachments

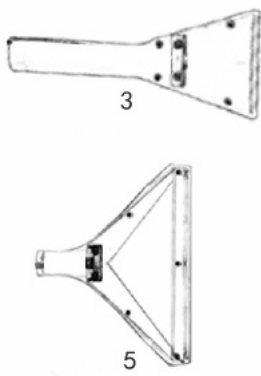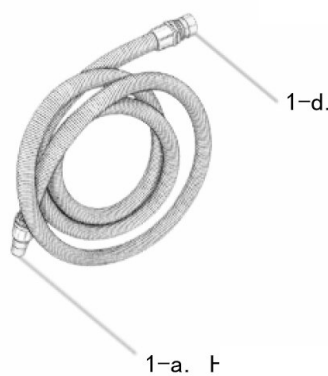

Warranty

Limited Warranty

Dapper Supply, Inc. extends a limited warranty to the original purchaser, guaranteeing that this Dapper Supply product is free from manufacturing defects in material or workmanship for one year from the date of purchase. If a defect is discovered within the warranty period, Dapper Supply, Inc. reserves the right to repair or replace the product at no cost to you, or to cover the cost of replacement parts and repair labor necessary to address defects present at the time of purchase or resulting from normal usage, provided the product has been installed, operated, and maintained according to the provided instructions. Any replacement parts requested within the first year are free of charge and fall under this warranty.

At its sole discretion, Dapper Supply, Inc. may choose to replace the product. In such cases, the replacement product will carry the warranty for the remainder of the original unit's warranty period. This warranty is valid exclusively for the original purchaser of the product and applies only within the United States. The warranty begins on the date of the original purchase. Proof of the purchase date is required to obtain service under this warranty.

Under this limited warranty, your sole and exclusive remedy is the repair of the product as described above. All warranty services must be performed by a Dapper Supply-authorized service provider.

To claim warranty or request repair service:

Email: support@dapper-supply.com

Include your name, address, phone number, details of the warranty repair request, and a copy of your proof of purchase receipt. Alternatively, visit dapper-supply.com and use the "Contact Us" page. A Dapper Supply customer service representative will assist in arranging service for your product.

Thank you for choosing Dapper Supply.

WARRANTY EXCLUSIONS

This limited warranty does not cover:

- 1.Product failure due to power outages, interruptions, or inadequate electrical service.
- 2.Damage incurred during transportation or handling.
- 3.Damage caused by accidents, pests, lightning, wind, fire, floods, or other acts of God.
- 4.Damage resulting from accidents, misuse, abuse, improper installation, repair, or maintenance, including the use of devices that alter or convert the voltage or frequency of electricity.
- 5.Unauthorized product modifications, repairs performed by unauthorized providers, or use of non-approved replacement parts.
- 6.Cleaning and maintenance not performed according to the user manual.
- 7.Use of incompatible accessories or components.
- 8.Any costs associated with repairs or replacements under these excluded circumstances will be the responsibility of the consumer.

DAPPER