


TOMAHAWK

5 GALLON BATTERY SPRAYER

MODEL NUMBER: eTPS25

Operation Manual

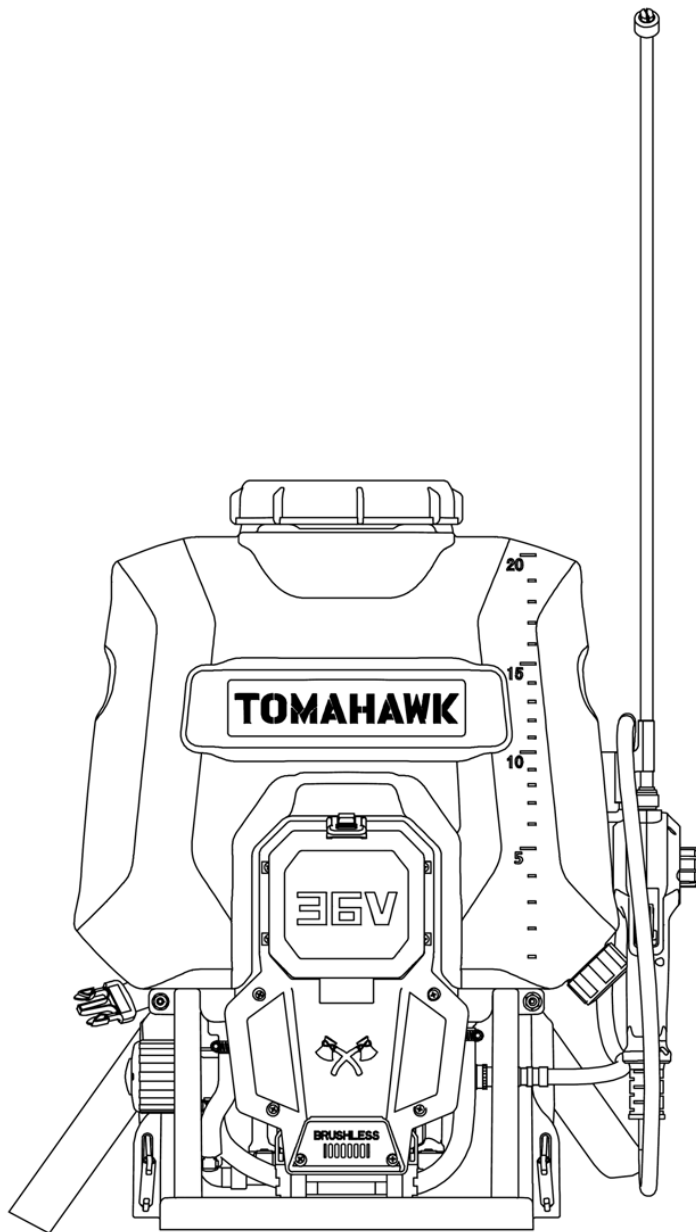

To reduce the risk of injury, the user must read and understand the Operator's Manual before using this product. Save these instructions for future reference.

TABLE OF CONTENTS

1. SAFETY INFORMATION	4
2. OPERATING SAFETY	5
2.1 General Notes	5
2.2 Usage Safety	5
2.3 Chemical Handling	6
2.4 Battery Safety	6
2.5 Service Safety	6
3. EQUIPMENT PERFORMANCE	7
3.1 Backpack Fogger Design	7
3.2 TOMAHAWK® Battery	7
3.3 Specifications	7
3.4 Battery Sprayer Parts	8
3.5 Unpacking the Unit	8
4. EQUIPMENT ASSEMBLY	9
4.1 Warnings	9
4.2 Wand Assembly	9
5. CHARGING THE BATTERY	9
5.1 Warnings	10
5.2 How to Charge	10
5.3 While Charging	10
5.4 Installing the Battery	10
6. BACKPACK STRAPS ADJUSTMENT	11
7. OPERATION	12
7.1 Filling Tank	12
7.2 Spraying Operation	12
7.3 Spraying Tips	12
7.4 Stopping the Machine	13
7.5 Adjusting the Discharge Rate	13
7.6 When Spraying is Complete	14
8. STORAGE	14
9. REPLACEMENT PARTS	15
10. TROUBLESHOOTING	15
11. MAINTENANCE RECORD	16
12. EQUIPMENT WARRANTY	17
12.1 Warranty Claims	17
13. SERVICE CENTER	17

Register Your Equipment


Thank you for purchasing TOMAHAWK® equipment! Your product is covered by the TOMAHAWK® Warranty Policy, but in order to activate your warranty, we need you to register your product. In addition to activating your equipment warranty, product registration will grant you access to important product updates, streamlined customer service, and more.

INCLUDED WITH YOUR REGISTRATION

- ✓ Equipment Warranty Activation
- ✓ Product Updates
- ✓ Streamlined Customer Service
- ✓ Exclusive Discounts and Sales

STEPS TO REGISTER YOUR EQUIPMENT

1. Visit www.tomahawk-power.com
2. Choose “Product Registration” at the bottom of the page
3. Enter your equipment’s serial number to get started
4. Provide all required information
5. Submit Registration

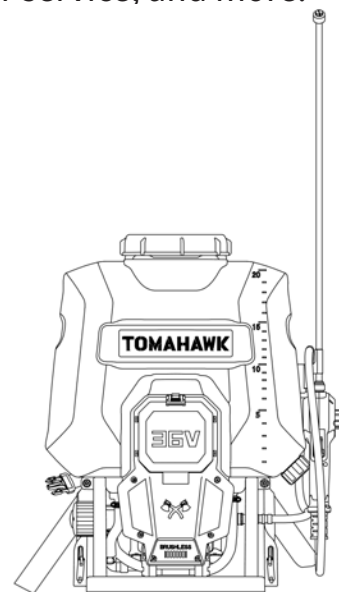

Equipment Resources

TOMAHAWK® Customer Service doesn’t stop at checkout. We understand to keep a job-site running smoothly - the proper equipment, spare parts, instruction manuals, and more are needed at the drop of a hat. Visit www.tomahawk-power.com to gain access to the incredible resources below.

How To Video Library

More of a visual person? Visit our Video Library for equipment assembly instructions, troubleshooting tips, and more!

Found on each product listing or the Service Videos Page

Manual and Assembly Guide Library

Visit our Manual Library if you are looking for a lost operations manual or a particular spare part?

Found on each product listing or the Tomahawk Manuals Page

Service Requests

In need of a quick fix or a service center referral? Submit a Service Request and a Tomahawk Technician will respond shortly to get you the help you need.

Choose “Service Request” at the bottom of www.tomahawk-power.com



This manual provides information and procedures to safely operate and maintain this equipment. For your own safety and protection from injury, carefully read, understand, and observe the safety instructions described in this manual.

Keep this manual or a copy of it with the equipment. If you lose this manual or need an additional copy, please contact Tomahawk Power, LLC or visit www.tomahawk-power.com. This equipment is built with user safety in mind; however, it can present hazards if improperly operated or serviced. Follow operating instructions carefully. If you have questions about operating or servicing this equipment, contact TOMAHAWK®.

The information contained in this manual is based on equipment's production at the time of publication. TOMAHAWK® reserves the right to change any portion of this information without notice.

No part of this publication may be reproduced in any form or by any means, electronic or mechanical, including photocopying, without express written permission from TOMAHAWK®.

Any type of reproduction or distribution not authorized by TOMAHAWK® represents an infringement of valid copyrights and will be prosecuted. We expressly reserve the right to make technical modifications, even without due notice, which aim at improving our machines or their safety standards.

1. SAFETY INFORMATION

This manual contains DANGER, WARNING, CAUTION, and NOTE callouts which must be followed to reduce the possibility of personal injury, damage to the equipment, or improper service.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.



DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.



Indicates a possibly dangerous situation. Where there is a risk of damaging the machine or its individual components.



Indicates to read the Operation Manual. It is important that you read the operation manual before first use and keep it in a safe place for future reference.

2. OPERATING SAFETY



WARNING

Familiarity and proper training are required for the safe operation of equipment! Equipment operated improperly or by untrained personnel can be dangerous! Read the operating instructions contained in both this manual and the engine manual and familiarize yourself with the location and proper use of all controls. Inexperienced operators should receive instruction from someone familiar with the equipment before being allowed to operate the machine.

2.1 General Notes

2.1.1 Individuals who operate this machine must be informed about the dangers related to use of the machine.

2.1.2 Keep bystanders, especially children and animals, away from the work area.

2.1.3 The user is responsible for avoiding injury to third parties or damage to their property.

2.1.4 If you have any condition that might be aggravated by strenuous work, check with your doctor before operating this power tool.

2.1.5 Minors should never be allowed to use this product.

2.2 Usage Safety

2.2.1 NEVER lend or rent your power tool without the instruction manual. Be sure that anyone using it understands the information contained in this manual.

2.2.2 NEVER operate the machine if you are under the influence of any substance (drugs, alcohol) which might impair vision, dexterity, or judgment.

2.2.3 NEVER operate the machine near open flame or explosive areas.

2.2.4 NEVER expose machine to wet conditions.

2.2.5 NEVER handle machine with wet hands.

2.2.6 ALWAYS wear ear protection.

2.2.7 OBSERVE all applicable local safety regulations, standards, and ordinances.

2.2.8 DO NOT operate in strong wind or rain and confirm wind direction before spraying.

2.3 Chemical Handling

2.3.1 ALWAYS wear eye protection when handling chemicals.

2.3.2 ALWAYS wear the proper protective equipment/clothing when handling chemicals. Proper protective equipment includes safety goggles or glasses, mask/respirator, and a long-sleeved shirt and long pants.

2.3.3 ALWAYS use mask to protect mouth and face from dust and/or pesticide when handling chemicals.

2.3.4 ALWAYS after spraying, wash hands and clothing immediately.

2.4 Battery Safety

2.4.1 NEVER store or charge battery in wet conditions.

2.4.2 NEVER make any adjustments to the tool if battery is connected.

2.4.3 NEVER interfere with the batteries integrity as this can cause injury and void warranty.

2.4.4 NEVER use or dispose battery in fire as this can cause it to explode. Check local codes for more information on proper battery disposal.

2.4.5 NEVER use equipment if it has been damaged or modified as this can cause injury.

2.4.6 When not in use, ensure battery is stored in a dry place away from any flammable objects.

2.4.7 Allow battery to cool down after each use to avoid burn injuries.

2.4.8 Only use the manufacturer's designated battery with this machine. Use of any other battery can damage unit and will void warranty.

2.4.9 Battery leakage may occur when operated in extreme temperature conditions. If battery liquid contacts skin, wash immediately with water and soap, following with white distilled vinegar or lemon juice to neutralize. If the liquid comes in contact with eyes, flush out eyes with water for 10 minutes and seek medical attention immediately.

2.4.10 Have all servicing done by an approved TOMAHAWK® Technician or Service Center with original replacement parts.

2.5 Service Safety



WARNING Poorly maintained equipment can become a safety hazard! In order for the equipment to operate safely and properly over a long period of time, periodic maintenance and occasional repairs are necessary.



WARNING Always follow the chemical manufacturer's instructions, safety guidelines, and recommendations when using any chemicals/solutions with this machine.

3. EQUIPMENT PERFORMANCE

3.1 Backpack Sprayer Design

TOMAHAWK® Sprayer is perfect for pest control professionals treating residential and commercial areas! Larger for extended use, fill the sprayer's 5 gallon chemical tank with your ideal liquid pesticide, herbicide, or fertilizer.

3.2 TOMAHAWK® Battery


TOMAHAWK® 36V Lithium-Ion 7.5Ah batteries charge faster and work longer than standard batteries, giving you superior performance. With a fast charge time, spend more time working on the things that matter and less time waiting for a charge.

3.3 Specifications

eTPS25 BATTERY POWERED SPRAYER	
Tank Size	5 Gallon
Power	0.5 kW, 7.5 Ah
Voltage	36V
Spray Reach	25 - 30ft
Spray Volume	1.32 GPM
Motor	Brushless Motor
Runtime (min)	40 Minutes
Fan Speed	5500 RPM
Sprayer Weight	20 lbs
Dimensions	17" x 13.7" x 22.8"
Input Voltage	AC110V
Pressure	50 - 290 PSI

3.4 Battery Sprayer Parts

- | | | |
|----------------------------|--|---------------------------------|
| 1. 36V Lithium-Ion Battery | 11. Battery Connection Plate & Harness | 14. Motor |
| 2. Battery Charger | 12. Controller | 15. Supporting Plate |
| 3. Chemical Tank | 13. Battery Compartment Cover | 16. Vibration Dampening Pillars |
| 4. Battery Latch | | |
| 5. Battery Compartment | | |
| 6. Front Cover | | |
| 7. Frame | | |
| 8. Plunger Pump | | |
| 9. Control Box | | |
| 10. Spray Wand Assembly | | |

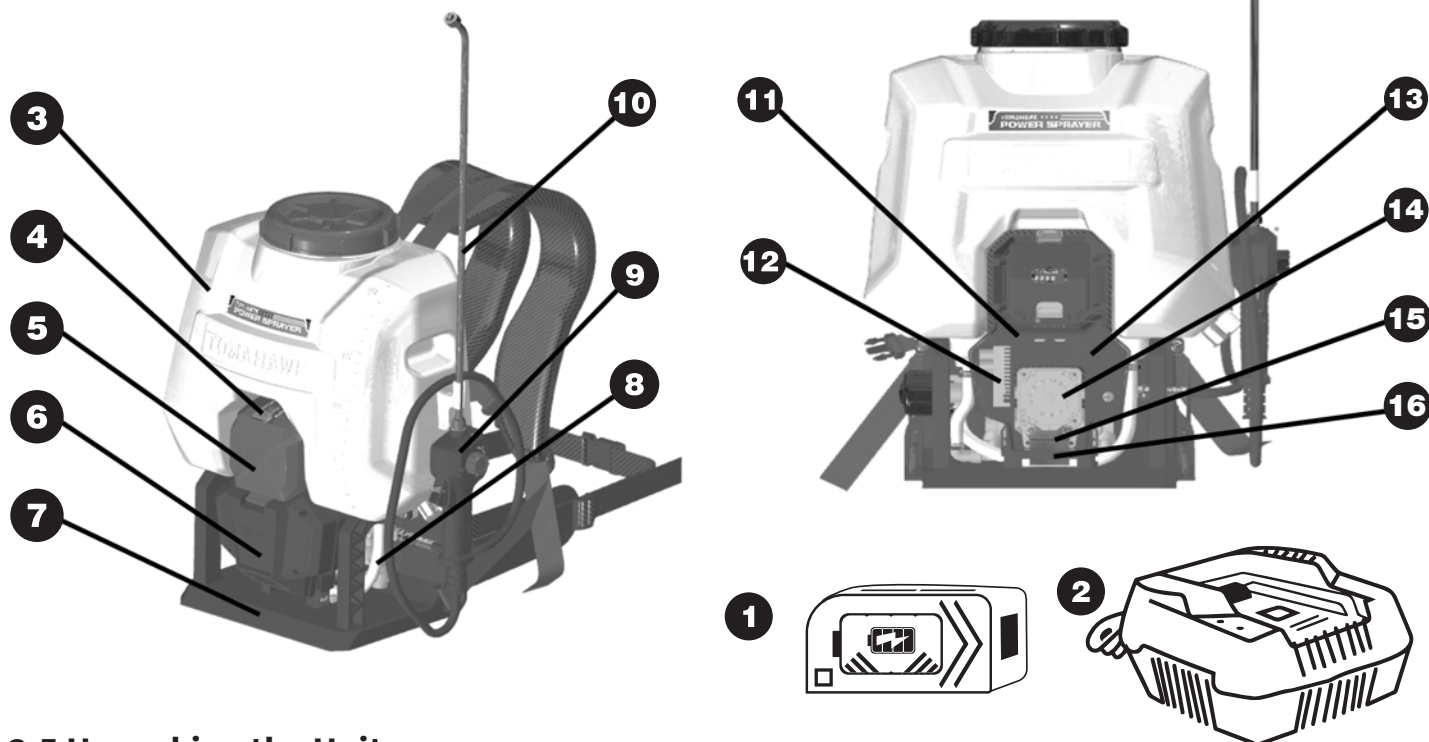

3.5 Unpacking the Unit

Make sure to carefully remove all parts and accessories from the box. Ensure all parts listed in the manual are in the box. Do not throw away the packaging or packing material until you have inspected all parts and successfully operated the machine. Do not discard this operations manual.

If any parts are missing or damaged, please contact TOMAHAWK® customer support by email at support@tomahawk-power.com or call (866) 577-4476.

3.6 Spraying Accessories

Visit www.tomahawk-power.com for a wide assortment of accessories, attachments, and spraying nozzles.

4. EQUIPMENT ASSEMBLY

4.1 Warnings



WARNING If any parts are missing or damaged, do not operate this backpack sprayer. Failure to do so may result in personal injury or damage to this machine.



WARNING Never make modifications or fabricate accessories to be used with this machine. Modifications or alterations may result in personal injury or damage to this machine.



WARNING Do not connect the battery before the machine is fully assembled. Failure to comply may cause accidental starting and may result in personal injury or damage to this machine.



WARNING To prevent personal injury or damage to this machine, ensure the machine is OFF, the battery is removed, and the impellers have stopped before removing any parts.

4.2 Wand Assembly

4.2.1 Grab spray wand and place a gasket at the end of the wand.

4.2.2 Screw the spray wand into the control handle. **FIGURE 1.**

4.2.3 After connecting the spray wand, adjust the direction of the nozzle so that it points downward.

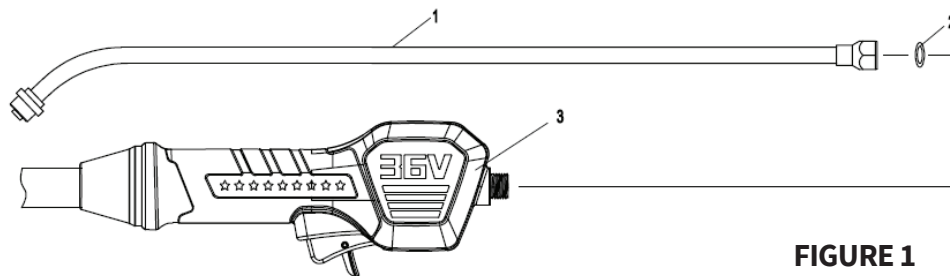


FIGURE 1

5. CHARGING THE BATTERY

5.1 Warnings



WARNING Do not insert any electrically conductive objects in the charging socket or the battery may be damaged by a short circuit.



WARNING - DANGER OF FIRE - A short circuit in the charging socket can lead to a cable fire in the battery.



The charger has a fully electronic voltage and current limitation function. This ensures that a connected battery is always kept at the optimum state of charge. This prevents overcharging of the battery. The battery is not fully charged on delivery. It is recommended to fully charge the battery before operating the machine for the first time.

5.2 How to Charge

5.2.1 Remove the battery from the machine.

5.2.2 Plug the charger into a power outlet in a dry location. **FIGURE 2A.**

5.2.3 Align the tongue of the battery (**A**) with the guides in the charging dock (**B**).

5.2.4 Slide the battery into the charger docking station using the guides on the battery and charger docking station.

FIGURE 2A.

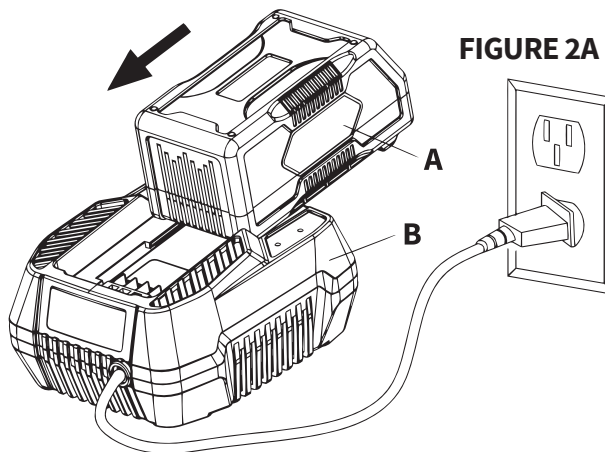


FIGURE 2A

5.3 While Charging

5.3.1 The LED indicator on the charger lights up RED during charging.

5.3.2 The charging of the battery takes approximately 2 hours.

5.3.3 The LED indicator on the charger lights up green when finished charging.

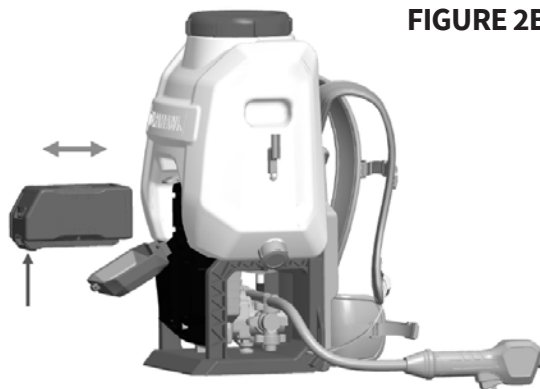


FIGURE 2B

5.4 Installing the Battery

5.4.1 Open the door of the machine's battery compartment. **FIGURE 2B.**

5.4.2 Align the tongue of the battery with the guides in the battery compartment.

5.4.3 Grasp the machine firmly and slide the battery into the compartment until the battery release button locks into place. Close the compartment door.

NOTE: Never force the battery pack. It should slide and click into place.

6. BACKPACK STRAPS ADJUSTMENT

Make sure your backpack straps and harness are well adjusted for proper operation. Adjust the straps for comfortable machine placement. Adjust the cross-body harness so the machine weight is equally distributed across the operator's shoulders.



6.1 Once the machine is comfortable on your back, connect the top horizontal chest buckle **FIGURE 3** and then tighten by pulling on the end of the strap. **FIGURE 4.**

6.2 Pull the ends of the backpack straps downward to tighten. **FIGURE 5.**

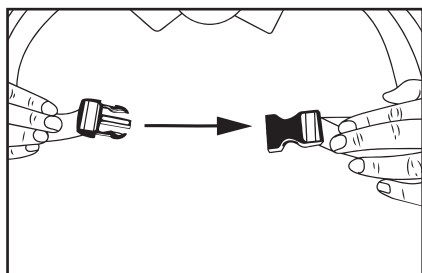


FIGURE 3

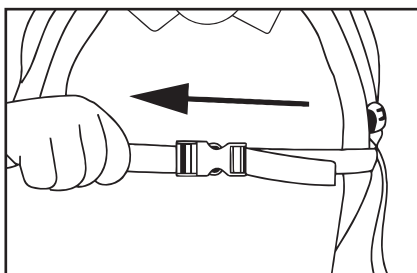


FIGURE 4

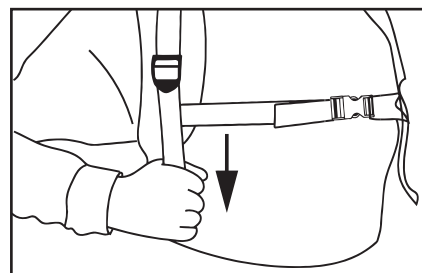


FIGURE 5

6.3 Lift the back tabs of the buckles to loosen the backpack straps. **FIGURE 6. FIGURE 7.**

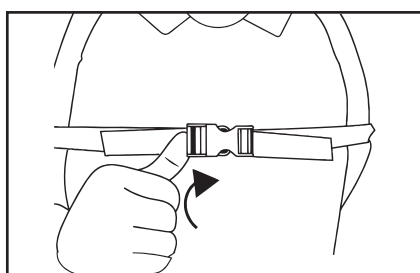


FIGURE 6

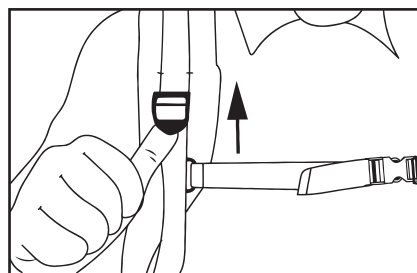


FIGURE 7



WARNING In the event of imminent danger, the machine must be removed quickly. The horizontal chest strap must be released first before setting the machine on the ground.

7. OPERATION

The operator should always wear the personal protective equipment/clothing (PPE) when handling this tool. PPE includes mask/respirator, safety goggles, ear protection, boots, gloves, and a long-sleeved shirt and long pants to cover as much exposed skin as possible.

7.1 Filling the Tank

NOTE: Before adding chemicals, perform a test spray with clean water to check for leaks. Do not overfill or pour too quickly. The solution must be clean to avoid wand clogging.

7.1.1 Make sure the rubber gasket within the lid is clean and in good condition.

7.1.2 Place the machine on an even, level surface.

7.1.3 Close the water valve at the base of the throttle control.

7.1.4 Replace the lid and tighten it firmly.

7.2 Spraying Operation

7.2.1 Install the battery (refer to Figure 2), ensuring it is properly seated.

7.2.2 Check the battery level and recharge if low.

7.2.3 Put on the sprayer, adjust the harness for comfort.

7.2.4 Then press and hold the limit trigger, and quickly press the power switch twice within 3 seconds, then release.

7.2.5 Next, turn on the speed control switch (Figure 8) and adjust the spray flow as needed to begin spraying.

7.2.6 To stop spraying, simply turn off the speed control switch.


7.3 Spraying Tips

7.3.1 After turning on the switch, immediately move the spray wand by hand. Do not spray in one spot continuously to avoid harming plants.

7.3.2 During spraying, swing the wand left and right to widen the spray range.

7.3.3 Coordinate your forward walking pace with the wand's swinging speed to ensure even coverage and prevent missed areas.

FIGURE 8

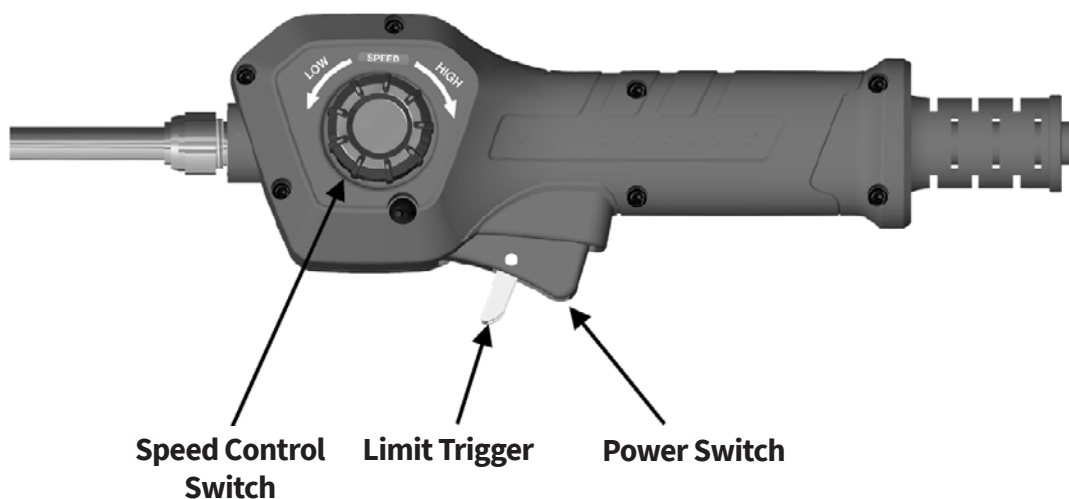

7.4 Stopping the Machine

7.4.1 Turn off the speed control switch to stop the machine. If you need to resume spraying later, you must again quickly press the power switch twice.

7.4.2 After completing the operation, remove the battery (refer to Figure 2). If the machine will not be used for an extended period, always remove the battery from the compartment.

7.4.3 Charge the battery promptly after use.

7.4.4 After finishing the work, rinse the tank with clean water, then run the sprayer at low speed to flush the internal parts that were in contact with the chemicals.



WARNING Always follow the chemical manufacturer's instructions, safety guidelines, and recommendations when using any chemicals/solutions with this machine.



WARNING Always spray solutions downwind and be mindful of your surroundings. Failure to do so may result in death or serious injury to yourself or others.

7.5 Adjusting the Discharge Rate

7.5.1 Rotate the knob on top of the speed control switch to adjust the fluid discharge rate.

7.5.2 The numbers on the speed control switch must be aligned with the marker pointing toward the clear wand.

Position 1 = Minimum Flow Rate

Position 4 = Maximum Flow Rate

7.6 When Spraying is Complete

7.6.1 Close the water valve completely to prevent leakage.

7.6.2 Shut off the machine. See **“Starting and Stopping the Machine”**

7.6.3 Turn the speed control switch rate to **Position 1** and collect any remaining chemical/solution in a proper container.

7.6.4 Drain the tank in a well ventilated area. Clean and rinse the tank, pipes with clean water.

NOTE: Safely dispose of any remaining chemical/spray solution by following the the chemical manufacturer’s instructions, safety guidelines, recommendations, and local environmental requirements.

7.6.5 With the lid removed, allow the machine to dry completely.

7.6.6 If the strainer is dirty, pull it upward and out of the tank and clean completely.

7.6.7 Place the machine in a dry area - out of reach of children, pets, and unauthorized persons.

8. STORAGE

8.1 For periods of non-use longer than 2 months this machine must be prepared for proper storage.

8.2 Drain and clean the tank in a well ventilated area.

8.3 Ensure the tank, pipes are empty and flushed out with clean water to prevent chemical corrosion.

8.4 Wipe down the machine and make sure all parts are clean.

8.5 Remove the battery pack and store it in a safe dry place, out of reach of children, pets, unauthorized persons, and away from any sunlight. If you do not plan to use the charger for any other TOMAHAWK® equipment, place it with the battery pack as well.

8.6 Store it separately and fully charged. Check the battery every 3 months and recharge if the level falls below 50%.

8.7 Place the machine in a dry well ventilated area on an even, level surface - away from any sunlight. Secure the machine to prevent it from tipping over or being damaged.

9. REPLACEMENT PARTS

9.1 For replacement parts and technical questions visit www.tomahawk-power.com or scan the QR code on the front of this manual.

9.2 Not all equipment components are available for replacement. The illustrations within this manual are a convenient reference to the location and position of parts in the assembly sequence.

9.3 When ordering parts, the following may be required: equipment model number, serial number/lot, date code, and description. The manufacturer reserves the right to make design changes and/or improvements to equipment, parts, accessories, and manuals without notice.

10. TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSES	SOLUTION
Low spray volume	Nozzle clogged	Clean nozzle
	Plunger stuck or worn	Check/replace
	Issue with power switch	Replace/clear
	Motor slow/damaged	Check/replace
	Loose seals	Check/replace
Leaking joints	Hose aging	Replace hose
Tank cap leaking	Cap not tightened	Tighten cap
	Seal misaligned/aged	Adjust/replace
Switch assembly leaks	Internal hose damaged	Replace

11. MAINTENANCE RECORD

TOMAHAWK® tools are assembled with care and will provide years of service when properly maintained. Preventative maintenance and routine service are essential to the long life of your welding generator. Adhere to reading through this manual thoroughly. You will find that you can do some of the regular maintenance yourself. However, when in need of parts or major service, be sure to contact a TOMAHAWK® Technician. For your convenience we have provided this space to record relevant data about your TOMAHAWK® equipment.

Invoice Number:		Type of Machine:	
Date Purchased:		Dealer Name:	
Serial Number:		Dealer Phone:	

REPLACEMENT PARTS USED					MAINTENANCE LOG	
PART NO.	DESCRIPTION	QTY	COST	DATE	DATE	OPERATION

12. EQUIPMENT WARRANTY

Your new TOMAHAWK® equipment is warranted to the original purchaser for a period of one-year (12 months) from the original date of purchase. The TOMAHAWK® warranty is against defects in design, materials and workmanship.

The following are not covered under the warranty:

12.1 Damage caused by abuse, misuse, dropping or other similar damage caused by or as a result of failure to follow assembly, operation or user maintenance instructions.

12.2 Alterations, additions or repairs carried out by persons other than TOMAHAWK® or their recognized agents.

12.3 Transportation or shipment costs to and from TOMAHAWK® or their recognized agents, for repair or assessment against a warranty claim, on any machine.

12.4 Materials and/or labor costs to renew, repair or replace components due to fair wear and tear.

12.5 TOMAHAWK® and/or their recognized agents, directors, employees or insurers will not be held liable for consequential or other damages, losses or expenses in connection with or by reason of or the inability to use the machine for any purpose.

12.1 Warranty Claims

Before submitting any warranty claim, you will need to register your new TOMAHAWK® equipment through www.tomahawk-power.com or email support@tomahawk-power.com.

Follow the steps on page 3 or scan this QR codes to complete the equipment registration. After registration is complete, all warranty claims should firstly be directed to TOMAHAWK® through the online Service Request form found at www.tomahawk-power.com/pages/service-request.

13. SERVICES CENTERS

Our service centers are equipped to handle your equipment maintenance and repair needs efficiently. With a network of authorized local service locations , you can find expert support and genuine parts needed to keep your equipment running smoothly. All locations are listed on the webpage <https://tomahawk-power.com/pages/find-a-service-center>.

For Service Call (866) 577- 4476



CHARGE AHEAD

Battery-Powered Foggers

TOMAHAWK® Battery Powered Mosquito Foggers are your best solution for fighting annoying mosquitoes. Powered by a 36V/7.5Ah Lithium-Ion battery, spray 1 acre of land in less than 30 minutes to stop pests fast!

Item #: eTMD14

**4 GALLON BATTERY
BACKPACK FOGGER**

www.tomahawk-power.com





TOMAHAWK

5 GALLON BATTERY SPRAYER

MODEL NUMBER: eTPS25

Parts Manual

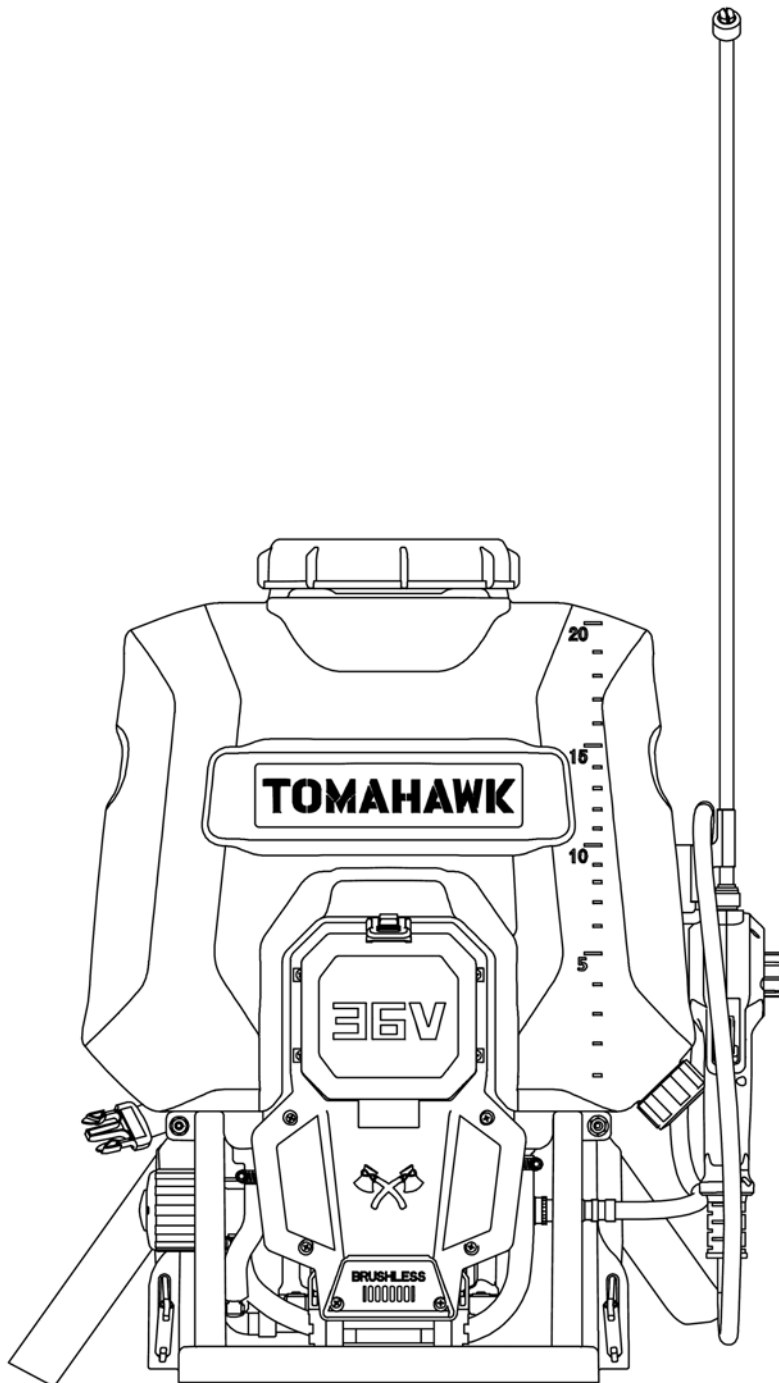

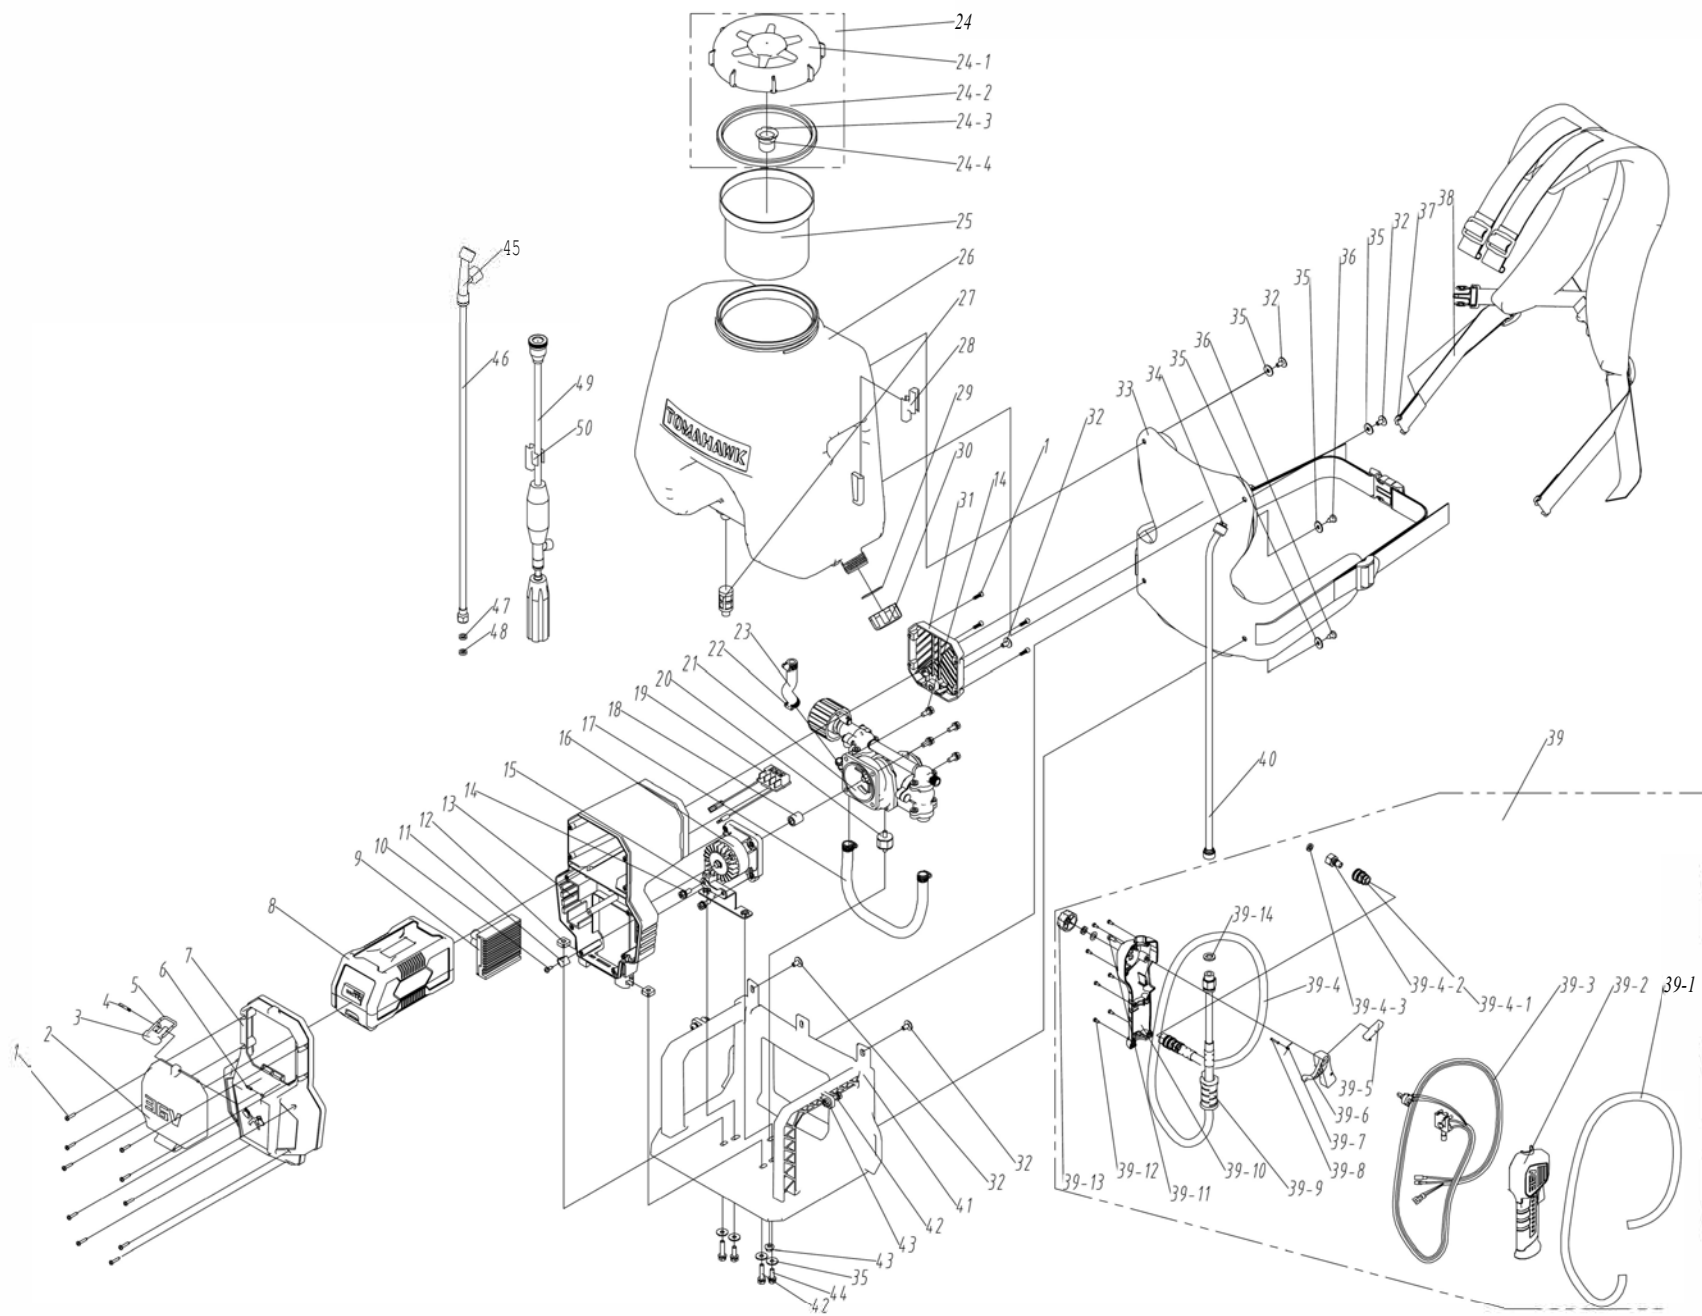

13. PART LIST

#	Part Number	Part Name	Qty.	#	Part Number	Part Name	Qty.
1	GB/T845/ST3.5X19	SCREW	14	33	6MF-18-44.9	BACK MAT	1
2	3WZD-5-4	BATTERY COVER	1	34	TP11005	NOZZLE	1
3	3WBD-8.3.1	BUCKLE (PA6-GF30)	1	35	GB96.1 Φ 6	SHIM	6
4	3WBD-8.3-2	PIN	1	36	GB/T845/ST6. 3X13	SCREW	2
5	3WBD-8.3-1	BUCKLES (STEEL)	1	37	EB-650-10	SHAFT	2
6	3WZD-5-10	PIN	2	38	3WZD-5.7	BAND	1
7	3WZD-5-5	FRONT COVER	1	39	3WZD-5.2	HANDLE COMBINATION	1
8	ZB-200-D.2(36V/7.5Ah-5C)	BATTERY PACK	1	39-1	3WZD-5.2-5	PROTECTIVE CASING	1
9	3WZD-5.9	CONTROLLER ASSEM.	1	39-2	3WZD-5.2-1	LEFT HAND HANDLE	1
10	GB845 ST4.2X9.5	SCREW	1	39-3	3WZD-5.2.2	WIRING HARNESS	1
11	3WZD-5-12	CLAMP	1	39-4	3WZD-5.2.1	HOSE ASSEM.	1
12	3WF-3-2/M6X16X16	SQUARE NUT	2	39-4-1	6MSW-4-3.4.1.1	FEMALE QUICK CONNECTOR	1
13	3WZD-5-3	BATTERY COMPARTMENT	1	39-4-2	6MSW-4-3.4.1.2	PUBLIC QUICK CONNECTOR	1
14	GB9074.13/M6X16	SCREW	6	39-4-3	3WZD-5.2.1-1	GASKET	1
15	3WZD-5.10	SUPPORT PLATE	1	39-5	3WGZ-26A-45383	SAFETY HANDLE	1
16	3WZD-5.3	MOTOR	1	39-6	3WGZ-26A-45382	JOYSTICK	1
17	GB13527.1 LS-10X2.5X340	SOFT PVC PIPE	1	39-7	3WGZ-26A-45386	TORSIONAL SPRING	1
18	3WZD-5-8	SHAFT SLEEVE	1	39-8	GB873 2X16	RIVET	1
19	3WZD-5.5	BATTERY WIRING SOCKET	1	39-9	3WZD-5.2-3	RUBBER HOSE SHEATH	1
20	3WZD.5.8	RUBBER PILLAR	1	39-10	3WZD-5.2-2	RIGHT HAND	1
21	3WZD-5.4	PISTON PUMP	1	39-11	GB845 ST4.2X13	SCREW	1
22	Φ13-Φ19	HOSE CLAMP	4	39-12	GB845 ST2.9X9.5	SCREW	7
23	18X2.5X135±3	WIRED HOSE (PVC)	1	39-13	3WZD-5.2-4	KNOB	1
24	3WZ-6.5.2	MEDICINE BOX COVER ASSEM.	1	39-14	3WZD-5.2.1-6	SEAL PAD	1
24-1	3WZ-6.5.2-1	MEDICINE BOX COVER	1	40	3WZ-9.3. 1-LA	SPRAY LANCE	1
24-2	3WF-8.1-1	SEALING RING	1	41	3WZD-5-1	RACK	1
24-3	3WZ-4.7.1-4	INNER COVER	1	42	GB9074.13/M6X30	SCREW	4
24-4	3WZ-4.7.1-3	COVER INSIDE THE MEDICINE BOX	1	43	GB6177.1 M6	NUT	3
25	3WZ-7.2.2	FILTER NET ASSEM.	1	44	GB9074.13/M6X20	SCREW	2
26	3WZD-5.1.1.1	CHEMICAL TANK	1	45	3WZ-6B-HYUNDAI-8	DUAL NOZZLE	1
27	3WZD-5.1.1-1	BOTTOM FILTER	1	46	3WZ-4.13	DIRECT SPRAY ROD	1
28	3WZ-6G-3	SPRAY BAR HANGER	1	47	3WZD-5-16	SEAL PAD	1
29	3WF-3A.1-2	SEAL PAD	1	48	3WZA-5.2.1-1	SEAL PAD	1
30	3WZ-6.5-1	LOWER COVER	1	49	3WZ-4.17	ADJUSTABLE SPRAY GUN	1
31	3WZD-5-2	BOTTOM COVER	1	50	3WZD-5-15	SPRAY BAR HANGER	1
32	WF-16/M6X12	SCREW	5				

20
24

TOMAHAWK

Equipment Guide

PEST CONTROL



Backpack Fogger

Part#: TMD14 2-in-One Spreader / Blower
Gas-Powered, 3HP, 2-Stroke, 40ft Reach,
490 CFM/220 MPH, 25-100 Microns,
4 Gallon Tank, Spray 1 Acre in 30 Minutes



Battery Backpack Fogger

Part#: eTMD14 2-in-One Spreader / Blower
Gas-Powered, 3HP, 2-Stroke, 40ft Reach,
490 CFM/220 MPH, 25-100 Microns,
4 Gallon Tank, Spray 1 Acre in 30 Minutes



Assorted Wand Choices

Backpack Sprayer

Part#: TPS25 50-450 Adjustable PSI
30ft Reach, Gas-Powered, 1.8HP, 2-Stroke,
Cover 1 Acre of Land in 15 Minutes
Flow Rate: 1-2.5 GPM, 5 Gallon Tank

LANDSCAPING



Assorted Nozzle Choices

Battery Sprayer

Part#: eTPS18 5-70 Adjustable PSI,
25ft Reach, Battery-Powered, 12V/7ah
Cover 1 Acre of Land in 15 Minutes
Run Time @ 45 PSI: > 11 Hours (400cc/min)



Fertilizer Spreader

Part#: TGS30 2-in-One Spreader / Blower
Gas-Powered, 3HP, 2-Stroke, 30ft Reach,
4 Gallon Tank, Cover 1 Acre in 30 Minutes
Lawn, Seed Feed, Ice Melt



Battery Fertilizer Spreader

Part#: eTGS30 2-in-One Spreader / Blower
Battery-Powered, 36V/7.5ah, 25ft Reach
5 Gallon Tank, Cover 1 Acre in 30 Minutes
Lawn, Seed Feed, Ice Melt

LANDSCAPING



Skid Sprayer

Part#: TBS500 50-500 Adjustable PSI,
30ft Reach Honda, Gas-Powered, 1.8HP,
4-Stroke Cover 1 Acre of Land in 15 Minutes,
Includes 100ft Hose and Nozzle



Trash Water Pumps

Part#:
TW2H 2" Pump, Honda GX170, 164 GPM, Elevation: 105ft,
Suction: 26ft
TW3H 3" Pump, Honda GX270, 375 GPM, Elevation: 89ft,
Suction: 25ft
TW4H 4" Pump, Honda GX390, 581 GPM, Elevation: 92ft,
Suction: 26ft



Power Buggy

Part#: TBUGGY300e 48V-20Ah Battery
Handles up to 8 cu ft or 660 lbs. Bucket Capacity
Hydraulic Bucket with 92° Tilt, 8 Hour Run Time
Snow Plow Attachment & Bucket Extender Available

HAVE QUESTIONS?

Contact us. *We're here to help!*

(866) 577-4476

Email us at sales@tomahawk-power.com

2024

TOMAHAWK

Equipment Guide

GENERATORS

QUIET INVERTER SERIES



58 db

2,000 - 3,300 Watt Series

TG2000i	2,200w Max / 2,000w Rated
TG3000i	3,300w Max / 3,000w Rated, 120/220V, 30 AMP Twist Lock Run Time 8 Hrs @ 50% Load CARB Compliant, GFCI 120v

QUIET INVERTER SERIES



62 db

4,500 - 5,500 Watt Series

TG4500i	4,500w Max / 3,800w Rated
TG5500i	5,500w Max / 5,000w Rated, 120/220V Run Time 8 Hrs @ 50% Load CARB Compliant, GFCI

QUIET INVERTER SERIES



62 db

10,500 Watt Series

TG9000i	10,500w Max / 8,500w Rated Voltage Selector, 120/220V Run Time 14.5hrs @ 25% Load CARB Compliant, GFCI, CO Detector
----------------	--

CONCRETE



Wheel Kit Available



Rammers

Part#:	*Battery Powered Option Available
TR68H	3,550 lbs/sq ft, Honda GX120
JX60H	3,350 lbs/sq ft, Honda GX100
eJX60H	3,350 lbs/sq ft, Honda GXE2.0S



Assorted Brush Choices



Floor Sweepers

Part#:	*Battery Powered Option Available
TOS38	38" Working Width, Triple Broom System, 14.5 Gallon
eTOS30	30" Working Width, Battery Powered Triple Broom System, 13.5 Gallon



Welder Generators

Part#:	6010-7024 Rods Compatible
TWG120A	120 Amp Welder, 60% Duty Cycle, 2000w, Includes Wheel Kit
TWG210A	210 Amp Welder, 60% Duty Cycle, 2000w, Includes Wheel Kit

& MORE



Power Screeds

Part#:	*Battery Powered Option Available
TVSA-H	Honda, Gas-Powered, 6-16 ft Magnesium Blades
eTVSA	Battery-Powered, 6-16 ft Magnesium Blades
TVSA-T	Gas-Powered, 6-14 ft Aluminum Blades



Walk Behind Trowels

Part#:	Items Listed Includes Combo Blades
TPT24H	2 ft Edger, Honda GX160, 0-28° Blade Pitch
TPT36H	3 ft, Honda GX160/GX270, 0-28° Blade Pitch
TPT46H	4 ft, Honda GX270/GX390, 0-28° Blade Pitch



Early Entry Saws

Part#:	
TFS6H	6" Blade Diameter, Blade Compatibility, Honda GX120
TFS10H	10" Blade Diameter, Self Propelled, Blade Compatibility, Honda GX270/GX390



(866) 577-4476

www.tomahawk-power.com



Power Your World

Tomahawk understands to keep a job-site running smoothly the proper equipment and spare parts are needed at the drop of a hat. With same day shipping and faster delivery times, count on Tomahawk to keep you powered throughout the day! With long lasting parts and engines, Tomahawk equipment will be the star of your fleet for years to come. Visit www.tomahawk-power.com to get started today!

TOMAHAWK

TOMAHAWK®, LLC
San Diego, CA

Sales Support
(866) 577-4476
sales@tomahawk-power.com

Equipment Support
(866) 577-4476
support@tomahawk-power.com

www.tomahawk-power.com



FACEBOOK
facebook.com/TomahawkPowerUSA

YOUTUBE
youtube.com/TomahawkPower

INSTAGRAM
[@tomahawkpower](https://instagram.com/tomahawkpower)

