



**HANDS-FREE SHOWER HEAD
INSTRUCTIONS**

RSI MARTCA

WHAT'S INCLUDED



WARNING: PLEASE READ BEFORE OPERATING

1. When you're done using system always remove the head from the flexible hose. If the hose were to fall, you don't want to damage the head.
2. When removing the head, please make sure to not lose the rubber washer.
3. Potable water only.
4. Do not over-tighten fittings.

Step 1: The flexible hose has two sides, the shower head side and the supply side. The shower head side has a metal connector while the supply side is large and plastic. Insert a rubber washer in the supply side of the flexible hose. When storing the flexible hose back in its case, make sure to not lose the washer when you remove the quick connect.



Step 2: Connect the quick connect adapter over the top of the washer.



Step 3: Insert the provided clear washer and hand tighten until washer is engaged. Be sure to not overtighten as it is not needed.



Step 4: Select either the shower head or the hands-free head and thread that on to the other side of the flexible hose. Make sure it's finger tight, but don't over tighten it. Hands-free head shown.



Step 5: Hold the suction cup up to whatever flat surface on which you want to attach it. **Make sure that the surface is clean, and that the surface of the cup is also clean (you can use alcohol wipes for this).**



Step 6: Rotate the outer collar clockwise to activate the suction cup. While rotating press into the mounting surface to ensure a tight suction.



Step 7: Squeeze the flexible hose into the holder on the suction cup. Work the metal collar down and use that to wedge the hose in place.

Please note you can mount the hose with the head pointing up or down depending on what you need.



Step 8: Connect your water tank to the quick connect on the flexible hose. Make sure you hear a click when connecting. Turn on the valve of the water tank and activate the head that you have connected.




TWO DIFFERENT SHOWER HEADS

Your Hands-free Shower kit comes with two different shower head options. Use the one that is best suited for your task. The hands-free head is great for hand washing stations and light usage. The shower head is perfect for washing dishes or showering up.

THE SHOWER HEAD

The shower head is very simple to use. Once installed, simply select the On setting or Pulse. Turning the head "On" will create a steady stream of water that will continue until turned "Off", or water runs out. Pressing the "Pulse" button will turn on the water while button is depressed. Releasing the button will stop the flow of water.

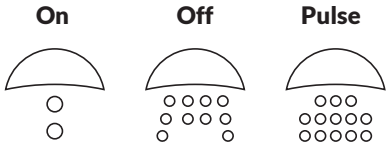

THE HANDS-FREE HEAD

With the hands-free head attached, simply run your hands underneath the fixture and it'll turn on. Move your hands away and it'll shut off.



There's also a glossy plastic part of the nozzle. Tap that with a finger and it'll turn the spray on until you tap it again.



Tap once to turn on.

Tap again to shut off.

Charge the hands-free head with the included USB cable. Make sure to dry the head off first, then pull up the rubber cover and plug in to any device that supports USB.



ADDITIONAL INFORMATION

WARRANTY

COVERED PRODUCT:

WaterPORT™ Portable Pressurized Water System and accessories.

LIMITATION OF DAMAGES:

In no event shall the manufacturer WaterPORT™, LLC, a California limited liability company be liable for consequential damages for breach of this warranty. Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to the buyer.

WARRANTY COVERAGE:

WaterPORT™, LLC warrants the Covered Product to be free of all defects in material and workmanship for 90 days from the date of original purchase. This warranty extends to the original buyer only.

Within the period of this warranty, WaterPORT™, LLC will repair or replace, free of charge, any part proving defective in material or workmanship. All warranty repairs and service must be performed by an authorized WaterPORT™, LLC technician.

All expenses related to replacing or repairing a defective part under this warranty shall be assumed by WaterPORT™, LLC except for the following expenses, which shall be assumed by the buyer: The cost of transporting the product to the WaterPORT™ Returns Department at the address listed below.

WARRANTY EXCLUSIONS:

This warranty does not apply to any costs, repairs, or services for the following:

- Repairs necessitated by use other than normal personal, family, or household use.
- Damage resulting from misuse, abuse, accidents, alterations, or improper installation.
- Damage arising from either road hazards or driving off road.
- Cosmetic damages including, but not limited to, scratches or discoloration.
- Damage arising from liquids other than water.
- Damage arising from high temperatures.

Corrective work necessitated by repairs made by anyone other than a WaterPORT™, LLC authorized service technician.

ADDITIONAL INFORMATION

WARRANTY

HOW TO OBTAIN WARRANTY SERVICE:

If the Covered Product needs to be returned, please email sales@thewaterport.com to request an RMA number.

The buyer should then carefully pack the Covered Product, preferably in the original packing materials, and deliver it, together with a copy of the original purchase receipt and a description of the problem, to the following:

WaterPORT
457 Deseret Dr. Suite 1
Kaysville, UT 84037
Attn: WaterPORT Returns Department RMAXXXXXX

IMPORTANT: Please include a return address

SHIPPING METHODS:

For your records, please select a tracked shipping method such as UPS, FedEx, or USPS to monitor the shipment of the Covered Product to the WaterPORT™ Returns Department. We recommend that the buyer insure the product being shipped. We accept no liability for Covered Products lost or misplaced in shipment.

30 DAY MONEY BACK GUARANTEE:

This warranty is in addition to the 30 day money back guarantee.

NOTICE TO BUYER:

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. You have the right to bring any action at law or equity to resolve disputes concerning or to enforce the provisions of this warranty.



WaterPORT

Copyright © 2023 WaterPORT. All Rights Reserved.

www.theWaterPORT.com



@TheWaterPORT