



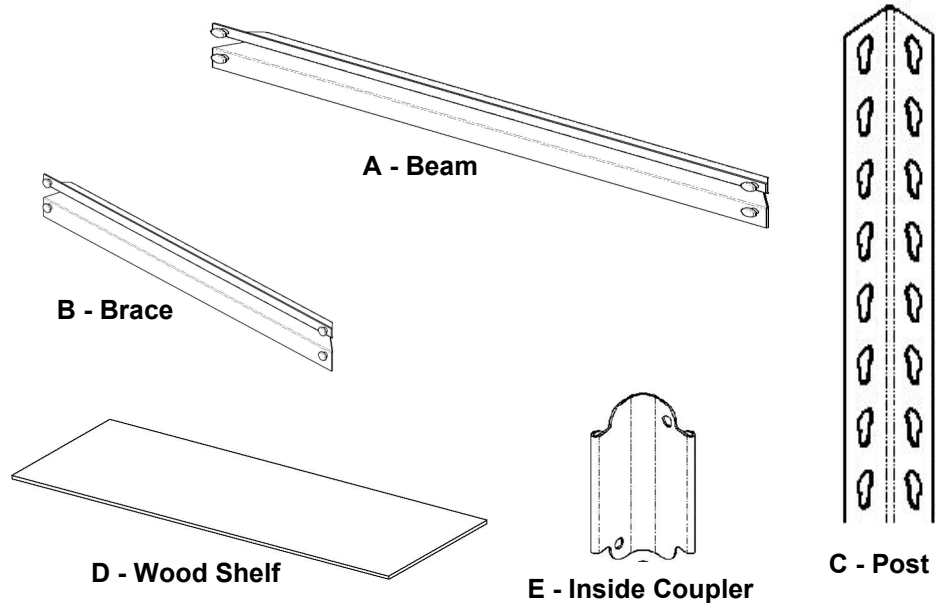

Steel Storage Rack

MODEL NUMBERS
UR-364
UR364-BLK
UR364P-BLK

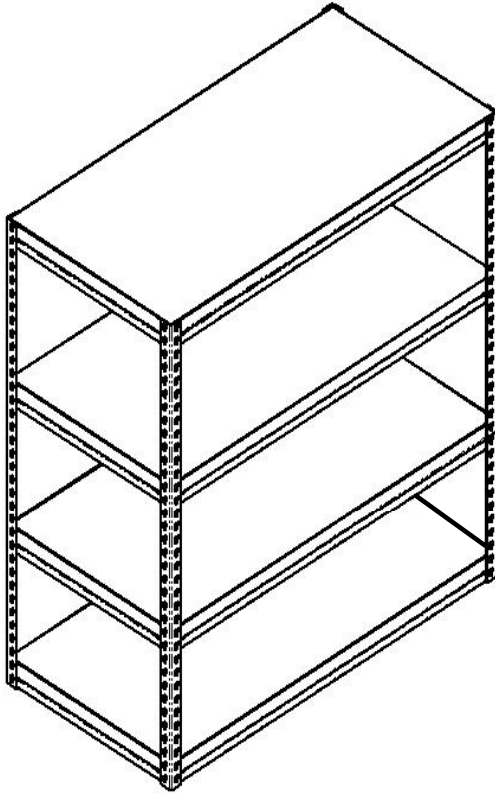

UR-364 4 Shelf 60"h x 18"d x 36"w		
Description	Qty	Part Number
A beam	8	UBE3502GY
B brace	8	UBE1702GY
C post	8	UPT3002GY
D shelf	4	RPB21836
E coupler	4	MPCIN-GY

UR364-BLK; UR364P-BLK 4 Shelf 60"h x 18"d x 36"w		
Description	Qty	Part Number
A beam	8	UBE3502BK
B brace	8	UBE1702BK
C post	8	UPT3002BK
D shelf	4	RPB21836
E coupler	4	MPCIN-BK

Safety Instructions

These units should be placed on a level surface. Failure to do so can result in poor product performance or create a possible safety hazard. This unit should be securely anchored to a wall or floor with suitable fasteners, which are not included. Do not use this unit for anything other than the manufactures intended purpose. **DO NOT STAND ON ANY PART OF THE UNIT, OR USE IT AS A LADDER.** Do not store aquariums on this unit. Evenly distribute the weight on each level and always keep the heavier loads on the bottom. Use care when working with metal parts, wear gloves for protection.

General Instructions

Assembly is done with the rivets of the beams and braces fitting into the slots of the post. A rubber mallet may be used on the beams and braces to seat the rivets properly. A hammer can also be used, providing one uses a cloth or a block of wood between the hammer head and the parts to prevent damage. Tap gently and be sure the rivets are straight and fully engaged.

Should you have any comments, damage, missing parts, or problems with assembly of this unit contact us:

Chat: www.edsal.com/chat or www.edsal.com/contact

Email: support@edsal.com

Phone: 773-475-3131

To obtain replacement parts please provide: Model Number, Part Number & Description, Location Purchased, and Date Purchased

Edsal Manufacturing Co. LLC
 1555 W. 44th Street
 Chicago, IL 60609
www.edsal.com

US Patents & Patents Pending

Assembly Instructions

Step

1

Figure B

Note:
Post are directional.
The slot must point down.


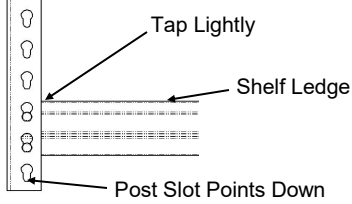



Figure A

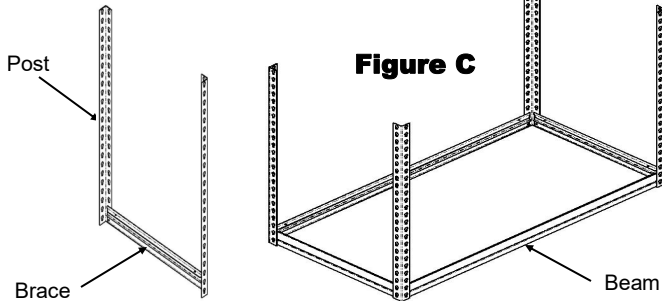

Assemble two (2) post with one (1) brace. Skipping one slot from the bottom of the post (see figure A), place the rivets into post with the slot pointing down, and with the shelf ledge of the brace facing up (see figure B). Tap lightly to seat rivets. Repeat with two (2) post and one (1) brace. Assemble the two (2) post units with two (2) beams (see figure C). Skip one hole from the bottom of post, tap lightly to seat rivets.

Step

2

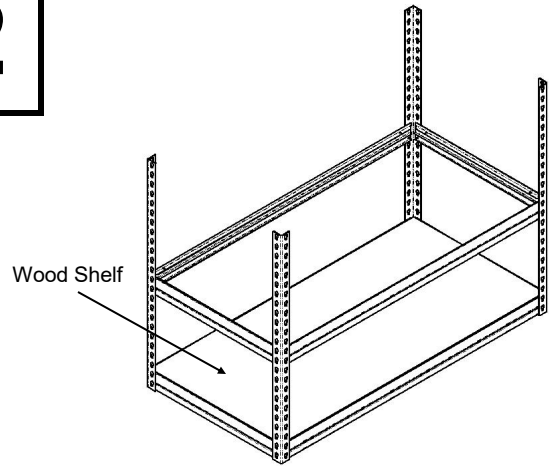

Start by adding a wood shelf to the level previously built, then continue working by adding the second level using two (2) beams and two (2) braces in the post slots of your desired location. Again place the rivets of the beams and braces into the post slots with the shelf ledge facing up and tap lightly to seat the rivets.


IMPORTANT NOTE : Make sure all rivets are fully seated into the post

Step

3

Note:
Post are directional. The slot must point down.

Figure D

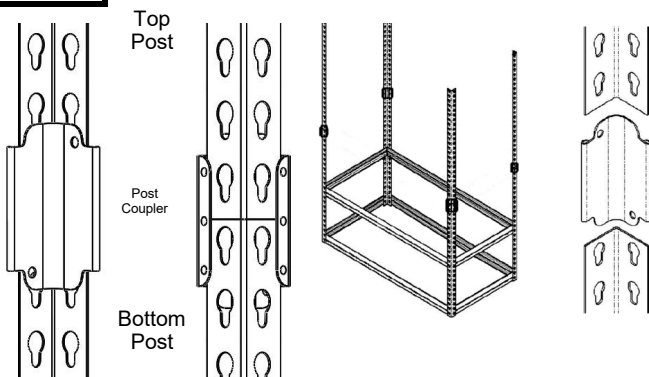


Add a wood shelf to the previously built level, then assemble the top post to the bottom post by using four (4) of the post couplers. Place the couplers into the top of the bottom post, and the bottom of the top post and tap down to properly seat (see figure D). Continue by adding the third level using two (2) beams and two (2) braces just above the post couplers. Again tap lightly to seat the rivets.

Step

4

Figure E

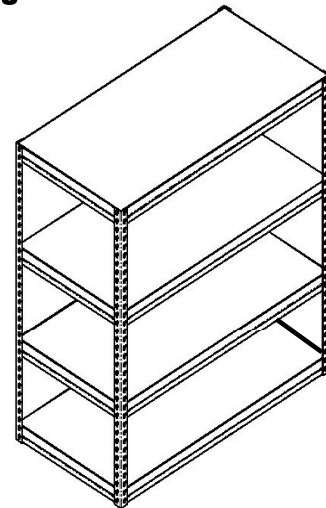

Add a wood shelf to the previously built level, then continue by adding the fourth level to the unit using two (2) beams and two (2) braces per level. Tap lightly to properly seat the rivets and add the final wood shelves to the unit (see figure E).