吊卡刀版图

Ø6mm [Ø0.2"]

139mm [5.5"]

109mm [4.3"]

OPERATING INSTRUCTIONS







DOUBLE LINE CABLE HOIST/PULLER

Model Number:10810002

- 3,000 LB. Lift Capacity
- 6,000 LB. Pull Capacity
- . 6 ft Double Line



TO RELEASE TENSION, disengage the drive lever by pushing the shift lever forward until the spring is seated in the front detent. Pivot the handle forward until the drive & stop levers are in contact. Continue to apply pressure against the stop lever until it releases and then allow the handle to pivot back. Repeat this procedure to safely release the load a notch-at-a-time.

TO APPLY TENSION, engage the drive lever by pushing the shift lever (located above the drive


lever) rearward until the spring is seated in the alt detent. Pivot handle assm back & forth to

rotate ratchet wheel and take-up line tension.



TO FREEWHEEL SPOOL, release all of the line tension, manually disengaged the stop lever by pulling back on the exposed wire loop and unreel the desired length of cable.

For replacement parts and technical questions, please contact Customer Service at 1-888-380-7428

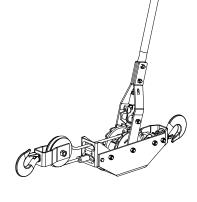

吊卡刀版图

Ø6mm [Ø0.2"]

139mm [5.5"]

109mm [4.3"]

USE CONSIDERATIONS WITH AIRCRAFT CABLE HOIST/PULLERS

- Do not pull cable over sharp corner
- . Do not link hook back onto cable
- . Do not lift people or loads over people

CAUTIONS

· Read and understand all instructions before using.

- Inspect mechanism and cable/ webbing for proper operation and condition before each use.
- . Know your loadings; do not exceed rated capabilities.
- This product is intended for straight-in-line lifting and pulling do not side load mechanism or cable/webbing.
- or cable / webbing.
- · Always keep a minimum of two kinked cable/webbing. wraps of cable or one wrap of • Do not pull cable/webbing over webbing on the hub while mechanism is under load.
- · Always use puller under manual Power: do not use in place of tow line.

- · This product is not recommended for use a load binder or tie-down.
- . Handle is designed to bend if overloaded: do not use an extension bar on the handle.
- . Never stand in from of, or in line with a pretensioned mechanism.
- . Do not use to lift people or loads overhead.
- Do not shock load mechanism Do not operate hoist/puller with twisted, frayed, damaged or
 - sharp corners or secure hook back onto cable

WARRANTY

"Limited 90 Day Warranty to Original Using Buyer"

All X-POWER Hoist Pullers are warranted for 90 days against defects when or erated under normal conditions, within their rated capacities and in accordance with the operating instructions and use considerations.

This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities. criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special, or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you, THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS