

SnapSafe[®]

A Hornady[®] Company



Owner's Manual Premium Vault Door

36" Vault Door (dark gray)Item No. 75421

36" Vault Door (off-white)Item No. 75420

Take the security, utility and appearance of your safe room up a notch with a SnapSafe® Premium Vault Door. Get all the advantages of a standard Vault Door, like 12-gauge construction and nine 1-inch live locking bolts, plus additional fire protection, organization and your choice of premium colors.

- Available in Matte Dark Gray and Matte Off-White
- Ceramic fiber insulation for fire protection
- Square-Lok™ interior panel
- 5-spoke handle
- Black chrome keypad and handle

36" IN-SWING DOOR

For standard 36" door opening

Door height: 81"

Inside clearance width: 31.4"

Outside width: 36.8"

TOOLS/MATERIAL INCLUDED

- Premium Vault Door
- 5/16" x 3" Lag Screws (12 included)
- 1/2" Drive Socket
- Socket Wrench

TOOLS/MATERIAL NEEDED

- Plastic Shims
- 4' or longer level
- Square
- Drill
- 1/4" Drill Bit
- Pry Bar (optional)
- Two 2x4 boards 6" wider than door (optional)
- 9-volt Battery



WARNING

The Premium Vault Door is very heavy and could severely injure individuals if dropped prior to installation. Blocks, clamps, or helping hands may be needed to hold the door in position until the door is securely fastened to the wall.

VAULT DOOR INSTALLATION



1. Open packaging and inspect contents
2. Check Rough Opening (RO)
 - Measure width and height of RO - should be approximately 1" wider and 3/4" taller than the door.
 - Check level, plumb, and square of RO - measure the diagonal opening of the door, the A and B measurement should be within 1/4".
3. Using a level, verify the sides of the RO are plumb.
4. Using a level or square, verify the bottom and top of the RO are level.

NOTE: *If the Rough Opening is not the correct size or out of plumb, a competent contractor may be needed to correct it.*


Review the supplemental instructions to become familiar with the lock operation prior to installing the door. The digital lock will need a 9V battery installed before continuing to the next step.

- Place two 2x4 boards in front of the doorway.
- Place door, trim side down, onto the boards in front of the doorway. Place the bottom of the door approximately one inch from the bottom of the doorway. The door should be centered in the doorway.

NOTE: *It is helpful to have all tools and hardware (lag screws, drill with 1/4" drill bit, and socket) ready for installation. Having a few helpers on the outside and inside of doorway can also help position the heavy door safely.*

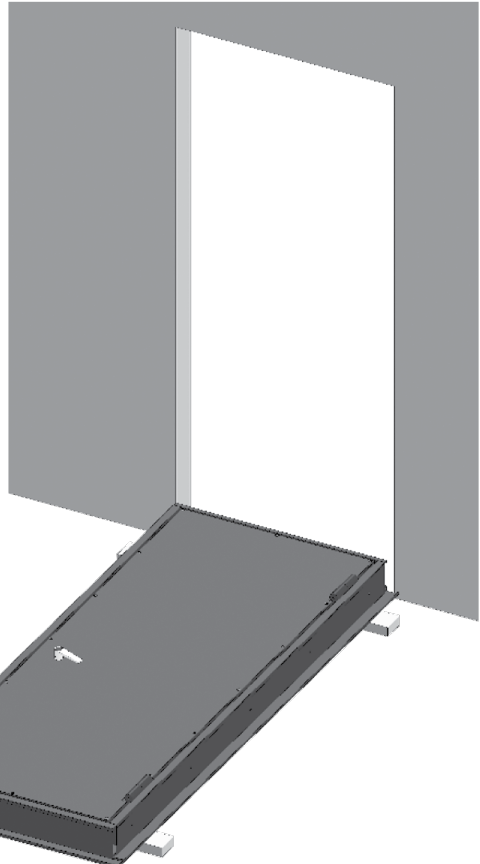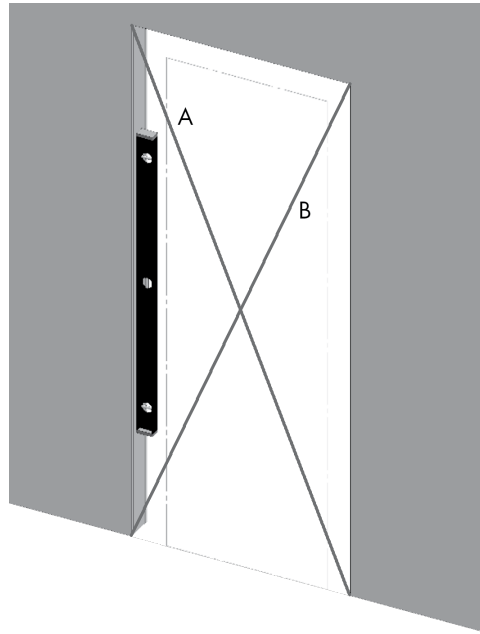

- With assistance, lift the top of the door and place the door into RO. Slide the door up against the wall.
- Verify the door is centered into the RO and the bottom of the door is level. Shims may be needed to level the door.

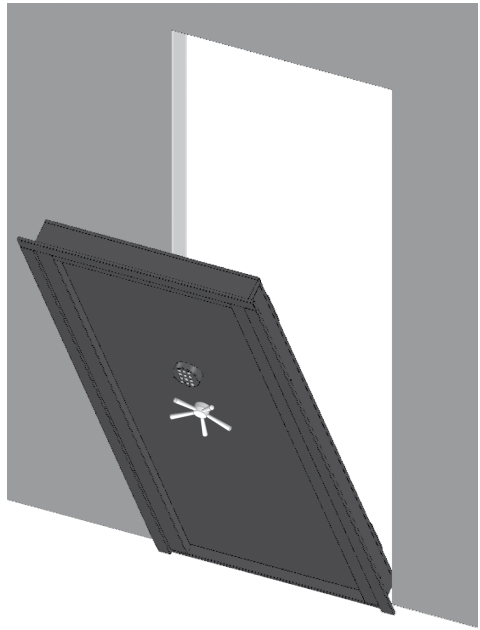

- Using the default code, open the door approximately 45 degrees.
- Using a level, check that the interior door opening is level and plumb. Locate the ten mounting holes in the side of the frame.
- Place shims between the door frame and RO near a mounting hole.
- Pre-drill a 1/4" pilot hole in the center of a mounting hole in the frame.
- Install the 5/16" lag screw.
- Repeat for the remaining mounting holes, verify often that the door opening remains level and plumb.
- Apply interior trim to cover the gap between the frame and Rough Opening (*not included*).



YOUR COMBINATION CODE

Your factory preset combination code is 1-2-3-4-5-6.

Store this combination in a location other than your safe.

OPENING AND CLOSING YOUR SAFE

OPENING:

1. Enter the 6-digit combination code.
2. Rotate 5-spoke handle clockwise into the open position and pull door open.
3. The Entry Keypad relocks in 4 seconds after a valid code has been entered.
4. The Entry Keypad will return to "standby" status with a long beep sound if there is no operation in 10seconds after the system has been activated.
5. If you enter an incorrect combination 4-times in a row, the lock will shut down for 5-minutes.

CLOSING:

1. Close safe door.
2. Rotate 5-spoke handle counter-clock wise to the closed position until you hear bolts engage.

CHANGING YOUR COMBINATION CODE

Write down and store a new 6-digit code. Do not store in safe.

You cannot set the combination code to six (6) zeros (0).

1. Open safe door and lock it in open position.
2. Enter zero (0) six (6) times. One beep sounds indicating the entry is valid and the system is awaiting a code change.
3. Enter the **existing** 6-digit code. One beep sounds, indicating the entry is valid.
4. Enter a **new** 6-digit code. One beep sounds, indicating the entry is valid.
5. **Re-enter** the **new** 6-digit code. One beep sounds, indicating that the code in steps 4 and 5 are the same and the code change is successful.
6. If three beeps sound, the code change was unsuccessful, and the existing code is still valid. Repeat steps 2 – 5.
7. Enter and check new code three times before closing door.

Note: Each step in the code change process must be completed in 10 seconds or the system reverts back to "standby" status.

LOW BATTERY ALERT

Your lock has a “Low Battery Alert.” If the Entry Keypad beeps repeatedly during an unlocking, the battery is low and needs immediate replacement.

INSTALLING AND REPLACING ENTRY KEYPAD BATTERY

Your safe is equipped with an electronic lock made with non-volatile memory, meaning your combination code is retained even if the batteries are no longer powering the lock. If this happens, simply replace the batteries.

Install only a high-quality alkaline battery in the compartment in the back of the Entry Keypad following these steps.

Install only a high-quality alkaline battery in to keypad. The battery compartment is located on the bottom of the keypad.

1. Lift small locking tab on the batter compartment, then gentle pull the battery tray downward.
2. Insert battery into tray so larger terminal on the battery aligns with the larger slot in the tray.
3. Reinstall battery tray into keypad and slid upward until battery is fully seated.
4. Gently rotate locking tab to secure the battery tray into the keypad.

BACKUP MECHANICAL KEY OVERRIDE

WARNING: Store keys in a secure location away from the safe.

To access key override slot, gently slide digital keypad up and away from door to remove keypad.



NOTE: *When digital keypad is removed, handle keypad and cable carefully to prevent damage to cable.*

UNLOCK

Place key into slot as shown and rotate clockwise. With key rotated, rotate door handle clockwise to retract locking lugs and open door.


LOCK

Fully close door. Then rotate door handle counterclockwise to extend locking lugs. Rotate key counterclockwise to lock extended lugs and safe. Remove key and carefully tuck cable back into hole in door while replacing digital keypad. Make sure safe is locked.

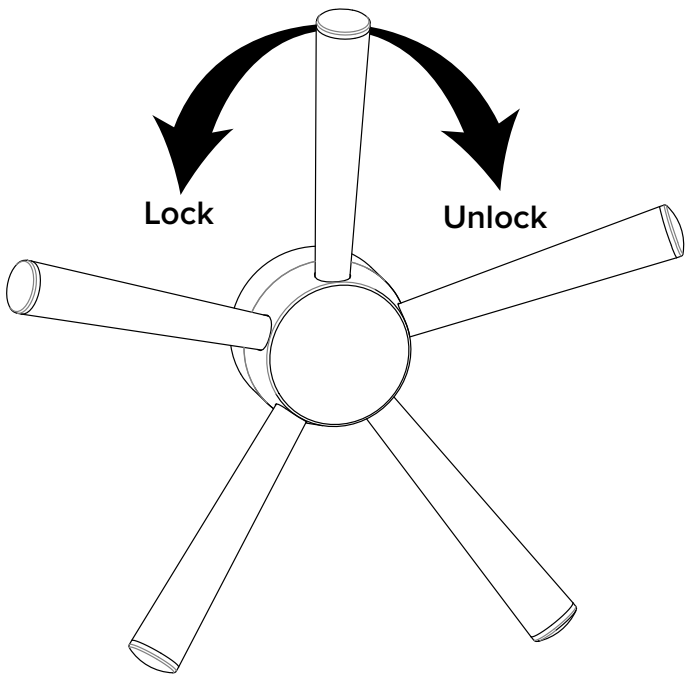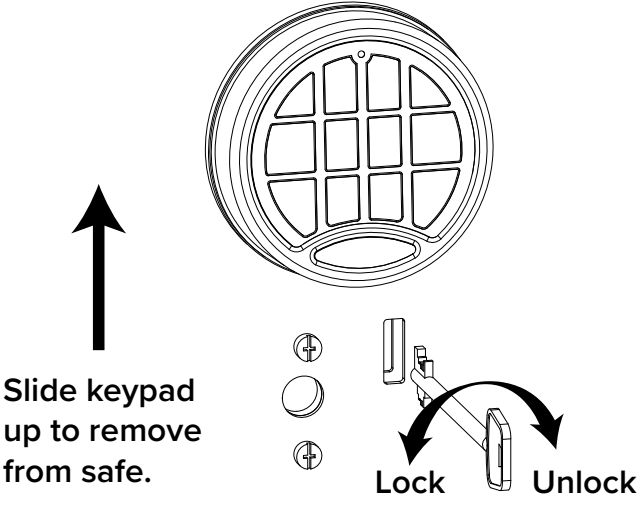

NOW FEATURING **SQUARE-LOK™** Organizing System

Maximize your storage and organization by adding Square-Lok™ accessories to the interior door panel.

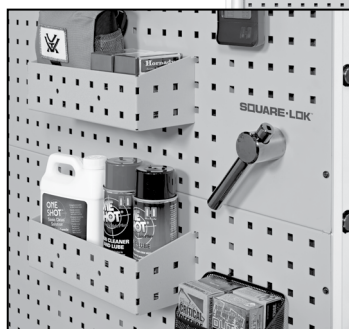

Learn more at snapsafe.com/square-lok ▶

CARE AND MAINTENANCE

With a little care and maintenance your SnapSafe® Vault Door will last a lifetime. Keep the door hinge pins lightly greased so that the door opens smoothly. Never use harsh solvents or abrasives on any surfaces, as they may damage the exterior finish or interior materials.

SNAPSAFE LIFETIME WARRANTY

If you ever experience a fire or attempted break-in we'll repair or replace your safe at no charge. *All you have to do is to forward the report from the proper investigative agency.*

Instructional videos for SnapSafe® products are available at snapsafe.com.



Customer Service: PO Box 1848, Grand Island, NE 68802-1848
1-877-214-4470 | Email: info@snapsafe.com | snapsafe.com