


WE ARE HUNTERS

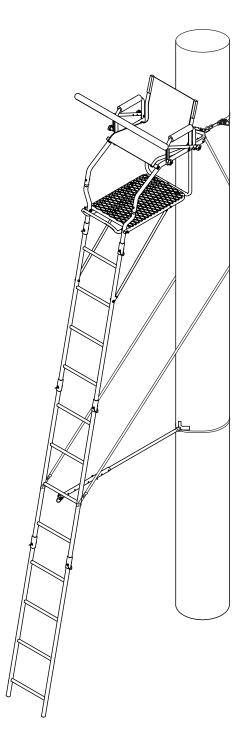

Operator's Manual

RETREAT 1-MAN Ladder Stand

MODEL RE656

Maximum Height 17' 11" to shooting rail

Maximum Field Rating 300 lbs

Tree Diameter Range 12" to 20"

Wear Your Harness!







PRODUCT MEETS INDUSTRY STANDARDS RECOGNIZED BY





INTRODUCTION

Rivers Edge® Treestands are engineered with you the hunter in mind. We appreciate your purchase of one of our world class treestands. Follow these few simple instructions and your stand will provide you many years of trouble-free pleasure. Instructions should be kept in a safe place and reviewed at least annually.

If for any reason you have a problem with your product or are missing any parts, **DO NOT return to the retailer**, contact Rivers Edge® Customer Service Department at 800-450-EDGE (3343) for assistance.

CONTENTS

Introduction/Warranty	2
Warnings	
Inspection and Maintenance	4
Hardware Identification Chart	5
Assembly Instructions	7-12
Warnings	13
Setup and Use Instructions	14-15
Finished Ladder	16
Illustrated Parts Breakdown	17-18

WARRANTY

RETI offers a **one-year warranty** for all components of the treestand. These warranties apply to the original owner with a proof of purchase. These warranties begin on the date of purchase by the first retail consumer and continue for the period specified above. These warranties apply to products that are not modified, abused or used in a manner that deviates from the product's intended usage. Minor fading in color is normal and is not covered by warranty. Any corrosion of painted surfaces that occurs as a result of paint being removed or damaged is also not covered by warranty. RETI offers no other warranty expressed or implied. Products for which warranty work has been approved must be sent directly to RETI and performed by RETI. **To obtain warranty service and/or replacement instructions, you must obtain prior approval from RETI before shipping your package to us by calling our customer service department at 800-450-3343 or by writing to: RETI, P.O. Box 755, 1160 Eighth Avenue, Cumberland, WI 54829 for a return material authorization number (RMA#).** All items must be shipped prepaid. RETI will, at no charge, repair or replace, in RETI's sole discretion, any product that satisfies the conditions stated above. RETI retains the right to change models, specifications and price without notice.

This equipment has been manufactured under strict quality and safety guidelines. As with any equipment of this type, full understanding of the instructions and its use is mandatory and imperative for the safety of its user. RETI is not responsible for any damages or injuries sustained due to improper use or modification of any of its products, or resulting from any use which deviates from the product's intended usage. RETI is not responsible for any injuries sustained due to failure to read and adhere to the instructions for use. Any misunderstanding or questions regarding the products of their use should be directed to RETI prior to any use. All RETI treestands are sold with a full body harness ("Fall Arrest System") that meets standards recognized by the Treestand Manufacturer's Association ("TMA"). It is the owner's sole responsibility to inspect the product regularly for damage, improper installation, or conditions that could jeopardize the ultimate safety of the product. Failure to use or improper use of the provided Fall Arrest System may result in serious injury or death. ALWAYS wear the provided Fall Arrest System while using this product. Owner is responsible to understand and follow product field weight rating and must never exceed maximum weight rating. RETI is not responsible for any malfunction or injury resulting from normal wear and tear, damage caused by improper use, improper maintenance, negligence or accidents. This product, if used safely as intended, will provide trouble free service for the useful life of the product. We hope you will enjoy the quality of our products for years to come, and have a safe hunt.





READ AND UNDERSTAND THE FOLLOWING WARNINGS BEFORE ASSEMBLY

MODEL RE656

MAXIMUM USE HEIGHT - 17' 11"TO SHOOTING RAIL
MAXIMUM OCCUPANCY - ONE (1)
TOTAL WEIGHT LIMIT - 300 LB
TREE DIAMETER RANGE - 12" TO 20"



WARNING

▲ This product carries strict height and weight restrictions. **Do Not** use this product if you exceed the total weight limit. Please note that the total weight limit includes the user(s) and their equipment.



WARNING

- ▲ When hunting from a treestand falls can occur any time after leaving the ground causing injury or death.
- ▲ Always wear a Fall Arrest System (FAS) comprising a full body harness at all times after leaving the ground. You must stay connected at all times after leaving the ground while using climbing and hang-on treestands. Single safety belts and chest harnesses are no longer allowed and shall never be used. If you are not wearing a full body harness properly attached to the tree that is protecting you from a fall, do not leave the ground.
- ▲ Read and understand all of the manufacturer's Warnings and Instructions and use all safety devices provided by the manufacturer. Contact the manufacturer for any questions. Failure to do so could result in injury or death.
- ▲ **Never** exceed the total weight limit of the treestand.
- ▲ Never use a treestand during inclement weather such as rain, lightning, windstorms or icy conditions and end your hunt and return to the ground if inclement conditions arise.
- ▲ Never use a treestand while using drugs (even prescription drugs) or alcohol.
- ▲ Never use a treestand while feeling ill, nauseous or dizzy, or if you have a prior medical condition that could cause a problem, that is, heart condition, joints that lock-up, spinal fusions, etc., or if you are not well rested. Never sleep in stand.
- ▲ Never use a treestand on a dead, leaning, diseased or loose barked tree, or a utility pole. Always avoid electrical power lines.
- **A Never** rely on a tree branch for support.

A

WARNING

- **A** Never jump or bounce on a treestand to seat it to the tree.
- ▲ Pull up a bow, backpack, or firearm or other equipment only after being secure in the treestand and a firearm must be pulled up with it unloaded, chamber open, and muzzle down.
- ▲ Always inform someone of the hunting location, where the treestand will be located and the expected duration of the hunt.
- ▲ A signal device such as a mobile phone, radio, whistle, signal flare or personal locator device (PLD) must be on your person and readily available at all times.
- ▲ Inspect the treestand and all safety devices each time before use and **Do Not** store a treestand outdoors when not in use.
- ▲ **Never** modify your treestand in any way by making repairs, replacing parts, or altering it except if explicitly authorized in writing by the manufacturer.
- ▲ Practice installing, adjusting and using your treestand at ground level prior to using it at elevated positions. Study your new stand to become familiar with all of its features and design. Doing so will confirm that the product is manufactured, assembled and installed correctly.
- ▲ Instructions (written and video) shall be kept in a safe place and reviewed at least annually. It is the responsibility of the treestand owner to furnish the complete instructions to any person who borrows or purchases the treestand.
- ▲ Use at least three (3) people to install or take down a ladder treestand.
- ▲ The criss-cross straps/ropes and stabilization devices must be attached before climbing to the platform.
- ▲ When installing a ladder stand, always bounce on the first rung to set the ladder into the ground according to manufacturer's instructions before proceeding to climb any higher.
- ▲ Check every ladder section connection every time you use the stand before you leave the ground. If ladder sections are separating, do not use the stand.
- ▲ Check the ground under the stand to make sure it is firm and level. Sloping ground or uneven surface (one side on a rock) can cause your ladder to tilt or shift off the tree as you climb.
- ▲ Always maintain three (3) points of contact when climbing a ladder treestand. Proper three-point contact means having either two feet with one hand or one foot with two hands on the step portion of the ladder or climbing aid at all times.



A

WARNING

- ▲ Always lean forward as you climb and attach your harness to the tree before securing the platform to the tree and stepping onto the platform.
- **A Never** exceed the stated maximum use height.
- ▲ Do Not use this product until you have watched the included treestand safety DVD, understand it, and practiced the techniques for safe hunting discussed in this DVD.
- ▲ Read and perform all inspection and maintenance tasks before each and every use. Replace any questionable components immediately with RETI original replacement parts.
- ▲ Do Not crush tubing when tightening bolt assemblies! Identify and familiarize yourself with all parts before you start. Bolt identification chart can be found in the back.
- ▲ Double check assembly steps to be certain you have correctly assembled this product.
- ▲ **Never** use any product that has not been maintained or inspected properly Your life depends on it!
- ▲ Replace any and all treestand straps every two years or when any signs of damage or wear exist before.
- ▲ Always wear the appropriate footwear when using a ladder treestand. A good non-slip safety boot is important to your personal safety. Be especially careful that boot laces do not get hooked on the stand or any of its components (tuck shoelaces into boots before climbing).



WARNING

▲ Only use approved RETI parts. Failure to do so may result in serious injury or death!

INSPECTION AND MAINTENANCE


BEFORE EACH USE PERFORM THE FOLLOWING:

- Inspect all webbing, rope, cord, and strap assemblies for wear or damage.
- Inspect cables and/or cable ends for damage or kinking.
- Inspect all hardware and chain components for damage or wear.
- Inspect for any structural damage to product. (If any exists stop use immediately and call RETI Customer Service.)
- Inspect all nut and bolt assemblies to be certain none are loose.
- · Inspect for any missing parts.
- Lubricate all pivot and slide together points with powder graphite, petroleum jelly or silicone spray to prevent noise, wear and rust.
- Inspect entire product for any rust, corrosion, cracks, freezing, excessive heat or rotting damage that may effect the safety of your product. Discard any questionable product.
- Inspect entire product for any structural damage pay close attention to all weld locations. (Discard product if any damage is found.)
- Using correct wrenches inspect all nut & bolt assembly locations and snug up any that may be loose. Be careful not to crush tubing when tightening!
- Inspect and check operation of all cables, cable ends, cord, rope, webbing, and strap or chain assemblies. Replace with RETI original replacement parts any item or assembly that shows signs of wear, damage, kinking, or functions incorrectly.
- Inspect seat for damage or wear. Replace any seat with factory new that shows signs of structural damage or wear.
- Never modify your stand in any way by making repairs, replacing parts, or altering by adding or attaching anything to it except if explicitly authorized in writing by the manufacturer.

Qty 2

HARDWARE IDENTIFICATION CHART

Quick Tip: Cut page out to use as a reference tool while following assembly instructions

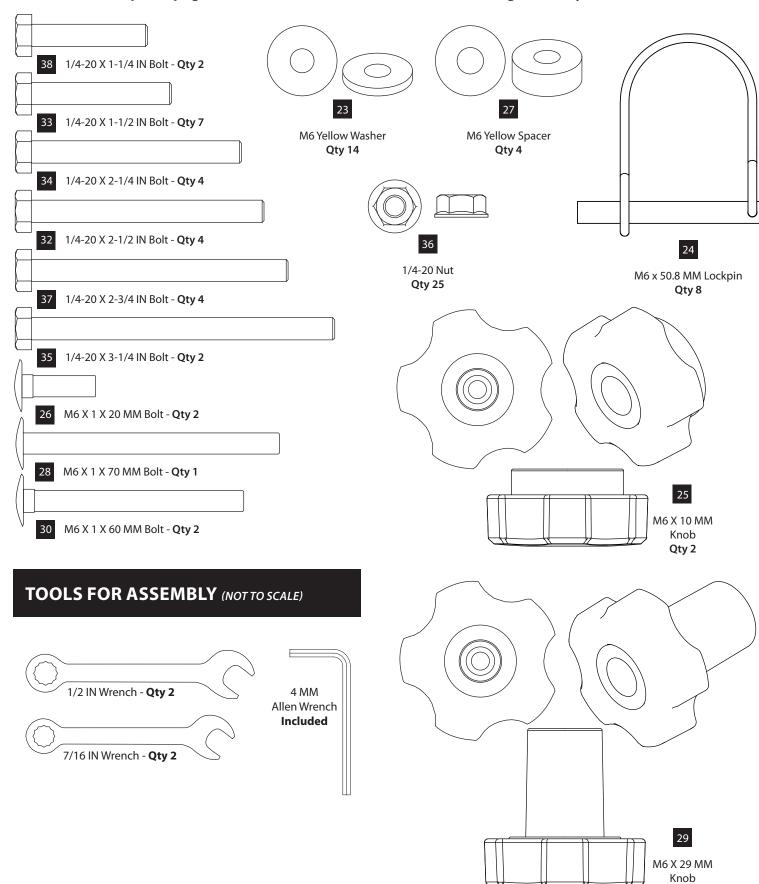



ASSEMBLY INSTRUCTIONS


IMPORTANT ASSEMBLY TIP:

Do not tighten any nut and bolt combinations completely until all parts are assembled together! Finger tighten plus one turn of a wrench only! This will temporarily hold the lock- nut on the bolt while helping alignment of all parts! After all parts are assembled together, all nut and bolt combinations must be completely tightened.

All assembly must be done in this order at ground level before uprighting.

Do not remove labels/warnings from product, they are there for your safety.


Recommended for adult use only.

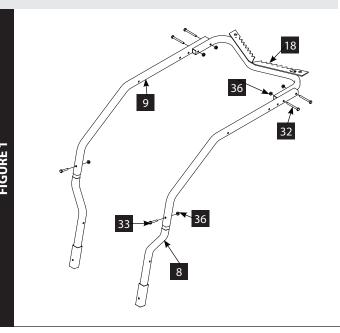


NOTE: When selecting a tree to install the treestand in, never use a treestand on a dead leaning, diseased or loose barked tree, or a utility pole. Always avoid electrical power lines.

- 1. Join the two seat side rails (9) and two flared platform rails (8) as shown in **FIGURE 1**. Secure parts together with two 1/4-20 X 1-1/2 IN bolts (33) and two 1/4-20 nuts (36).
- 2. Assemble the tree blade (18) using four 1/4 -20 X 2-1/2 IN bolts (32) and four 1/4-20 nuts (36) as shown in **FIGURE 1**.


- 3. Attach the front of the armrests: left (11) and right (12) to the outer edge of the seat side rails (9), using two 1/4 -20 X 2-1/4 IN bolts (34), two yellow washers (23) and two 1/4-20 nuts (36). Be sure the armrest orientation is correct. SEE FIGURE 2.
- 4. Connect the rear of the armrests (11 & 12) to the seat side rails (9) and rear seat supports: left (19) and right (14) using two 1/4-20 X 3-1/4 IN bolts (35), two yellow washers (23) and two 1/4-20 nuts (36). During this step the two M6 x 60 MM carriage bolts (30) must be inserted into the holes in the armrests (11 & 12) or they will not be able to be installed after the armrests have been assembled. SEE FIGURE 2.

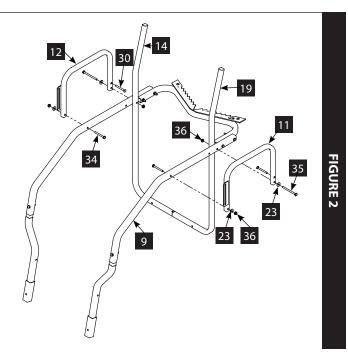




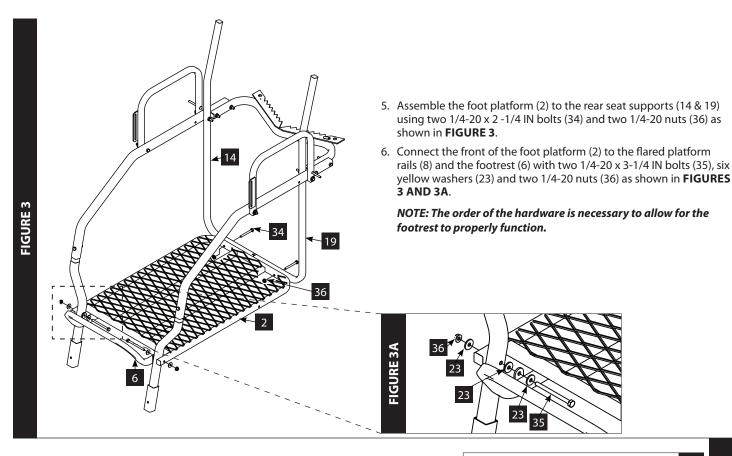


- Screw the M6 x 70 MM bolt (28) into the end of the front seat tensioner (15) until snug. SEE FIGURE 4A
- 8. Slide the front seat tensioner assembly from FIGURE 4A through the open tube mount on the lower front edge of the seat assembly (13) such that the bolt end of the front seat tensioner assembly bumps up against the end of the closed tube mount. Make sure the bolt holes line up in the open tube mount located on seat assembly (13) and front seat tensioner assembly. SEE FIGURE 4.
- 9. Secure the front seat tensioner assembly to the open tube mount of the seat assembly (13) using a 1/4-20 x 1-1/2 IN bolt (33) and a 1/4-20 nut (36). Push a 22 MM square end plug (31) into the outside of the open tube mount. **SEE FIGURE 4.**
- 10. Using the provided 4 MM allen wrench, rotate the M6 x 70 MM bolt (28) counter-clockwise, through hole in the tube mount, to create tension in the TearTuff seat (13). Do not over tension the seat because it could cause the seat tensioner (15) to bow and the M6 X 70 MM bolt (28) to strip. SEE FIGURE 4.

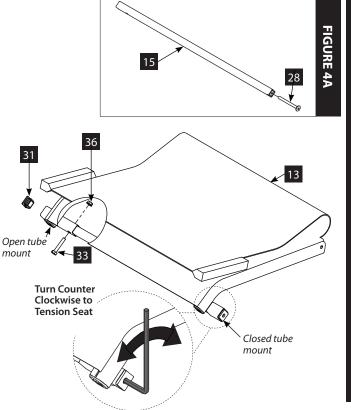




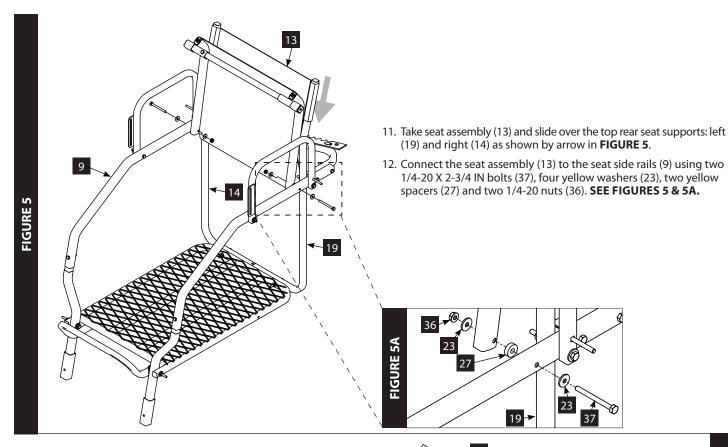

- 13. Connect the two shooting rail braces (20) to the shooting rail (10) using two 1/4-20 X 1-1/4 IN bolts (38) and two 1/4-20 nuts (36). **SEE FIGURE 6.**
- 14. Install two M6 X 29 MM knobs (29) on armrests (11 & 12) with M6 X 20 MM carriage bolts (26) as shown in **FIGURE 6**.

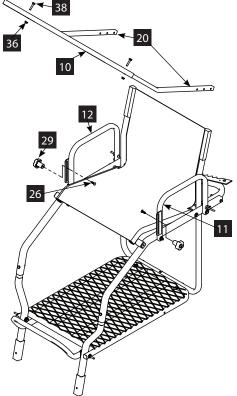




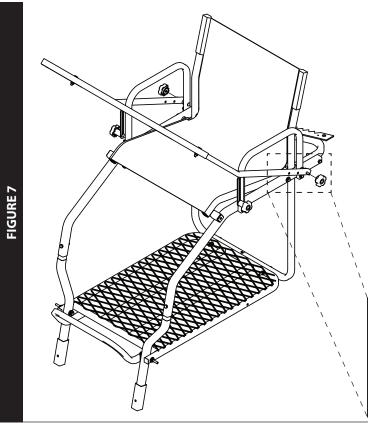


15. Connect the shooting rail assembly from step 14 to the earlier installed M6 X 60 MM carriage bolts (30) from step 4 along with two yellow spacers (27) and two M6 X 10 MM knobs (25). **SEE FIGURES 7 AND 7A**.

NOTE: Reference FIGURE 7A for proper hardware orientation. Failure to follow the correct sequence may cause the armrest to not function properly.

NOTE: The shooting rail is designed to have multiple configurations. To move the shooting rail closer to you or further away, use the three holes drilled into the end of the shooting rail and place the rail and knob at the desired setting. Adjustments can be made to the height by loosening the knob in the slotted-plate on the armrests, and moving it either upward or downward until desired height is achieved. Once location has been reached retighten the knob to create a firm seat of the shooting rail to rest on

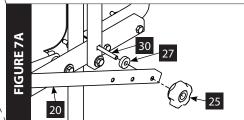


- 16. Take top ladder section (3) and connect the top of it with the pockets on the bottom of the flared platform rails (8). Secure in place with two lockpins (24) as shown in **FIGURE 8**.
- 17. Secure the two brace supports (16) to the *inside* of the foot platform (2) and the *outside* of the top ladder section (3), using four 1/4-20 X 1-1/2 IN bolts (33) and four 1/4-20 nuts (36) as shown in **FIGURE 8**.

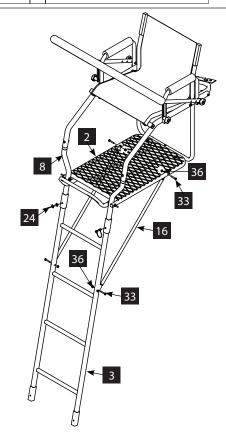




18. Ladder sections are assembled on the ground in the following order: bottom ladder section (5), middle ladder section with stabilizer slot (4) and the top ladder section (3) with the treestand top assembly. Connect all sections together using four lockpins (24). **SEE FIGURE 9.**

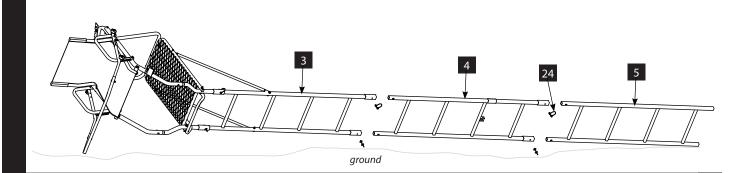


19. Slide the stabilizer bar (1) into the stabilizer support bar (21) and secure using a lockpin (24). Make sure the lockpin passes through the support bar (21) and the stabilizer bar (1) at the appropriate hole to achieve the desired distance from the tree. Adjustment in length may be needed when ladder is uprighted later in the Setup and Use Instructions. Connect the stabilizer bar assembly through the middle ladder section with stabilizer slot (4). These components will be connected using a lockpin (24). **SEE FIGURE 10.**

NOTE: Treestand should ALWAYS be fully assembled on the ground prior to mounting it in the tree.

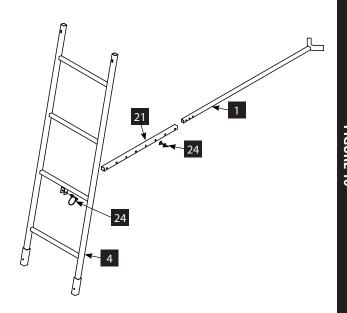



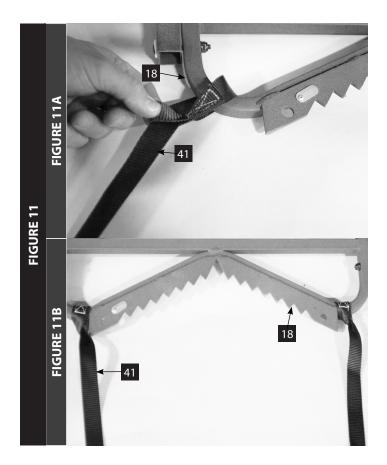

- 20. Attach the two provided 9 IN foam pads (7) to the armrests (11 & 12) by wrapping around tubing and attaching hook and loop together.
- 21. Attach the 66 IN foam pad (17) to the shooting rail assembly by wrapping the sleeve around the tubing and attaching the hook and loop together.
- 22. Attach the two long ends of the 16' criss-cross straps (41) to the tree blade (18). These long stabilizer straps should be attached by pulling the free end of the strap through the loop end of the strap to create a cinch knot around the frame tube. **SEE FIGURES 11A AND 11B.**





READ AND UNDERSTAND THE FOLLOWING WARNINGS BEFORE SETUP AND USE



WARNING

- ▲ Double check assembly steps to be certain you have correctly assembled this product.
- ▲ Study your new stand to become familiar with all of its features and design. At ground level, following provided use instructions, practice attaching stand to tree and removing stand from tree. Practice sitting, standing, and using this product before attaching overhead. Save these instructions for future reference. You must always use the provided Fall Arrest System (FAS) while using this product.
- ▲ Always use at least three (3) people to install or take down a ladder treestand. Always have two people stabilize the ladder before climbing to the platform the first time after every set-up.
- ▲ Be absolutely sure the tree blade(s) on stand and the stabilizer bar are contacting tree before climbing ladder.
- ▲ Stabilizer bar must always be correctly and securely attached to ladder and tree before climbing ladder.
- ▲ Make sure ladder bottom is firmly seated on dry, level ground. Attach your harness tether to the tree before securing the platform to the tree and stepping onto platform. Refer to the Full Body Harness instructions.
- ▲ Never ascend or descend ladder without criss-cross straps/ropes securely holding ladder to tree and stabilizer bar securely attached. Failure to correctly perform these steps can cause the ladder to collapse/buckle-over backwards during the initial ascent to attach ratchet strap resulting in serious injury or death.
- ▲ Always lean forward as you climb and attach your harness to the tree before securing the platform to the tree and stepping onto the platform.



WARNING

▲ Bring ratchet strap(s) up with you in a pocket - **Do Not** carry in your hands!



WARNING

- ▲ Always maintain three (3) points of contact when climbing a ladder treestand. Proper three-point contact means having either two feet with one hand or one foot with two hands on the step portion of the ladder or climbing aid at all times.
- ▲ Always wear the appropriate footwear when using a ladder treestand. A good non-slip safety boot is important to your personal safety. Be especially careful that boot laces do not get hooked on the stand or any of its components (tuck shoelaces into boots before climbing).
- ▲ **Never** stand on seat, it is designed for sitting only.
- ▲ **Do Not** allow excessive strap buildup in ratchet as this will prevent the ratchet teeth from engaging causing slippage.
- ▲ Always attach ratchet straps securely while using this product!
- ▲ If seat is removable, be certain it is securely attached when in use.
- ▲ Some models include a shooting rail. **Never** lean against, lean over, or sit on shooting rail. It is designed as a shooting rest only. **Always** be aware that the shooting rail can swing to one side or pivot up and down.
- ▲ Some models include a footrest, which is designed as a footrest only. **Never** stand on footrest! **Always** be fully aware of foot placement.
- ▲ Some models include a multi-piece stabilizer bar system. Be sure attachment hardware goes through both the extension tube and the stabilizer bar.



SET UP AND USE INSTRUCTIONS





WARNING

- ▲ Never use a treestand on a dead, leaning, diseased or loose barked tree, or a utility pole. Always avoid electrical power lines.
- ▲ Bring ratchet strap(s) up with you in a pocket **Do Not** carry in your hands!


During installation and removal of ladder treestands, you must always and properly use the included Full Body Harness (Fall Arrest System). Refer to the Full Body Harness instructions included with this product for proper use.

- 1. Select a straight, healthy tree. Do Not attempt to install on a tree that is not healthy.
- With assembled product lying on the ground, <u>position one person</u> at bottom end of ladder lying on the ground. This person has to prevent the ladder end from tilting up when platform end is lifted and prevent the ladder from skidding across ground.
- a. Position two people at the platform end of the ladder, lift the
 platform end and continue uprighting by walking toward bottom
 end of ladder and moving hands along ladder legs. Stand ladder
 up against chosen straight tree on dry, level ground. Use
 caution when ladder comes over center against the tree. SEE
 FIGURE 12(A).
 - b. Step back and look at the ladder top to see that it is level. Adjust as needed to achieve a level platform top. Make sure tree blade is contacting tree. **SEE FIGURE 12(B).**
 - c. Step down hard on bottom step to push ladder legs into the ground. **SEE FIGURE 12(C).**
- 4. While two people hold the stand in place, the third person should connect the horizontal stabilizer bar to the tree. Adjust the length of the stabilizer bar as need so it contacts the tree and is level to the ground. Then secure it to the tree with the 6' cam strap (42) by forming a cinch knot with both ends of the strap and running the long end of the strap through the cam buckle. SEE FIGURES 13 AND 14.

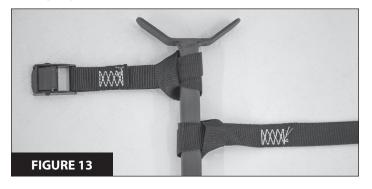

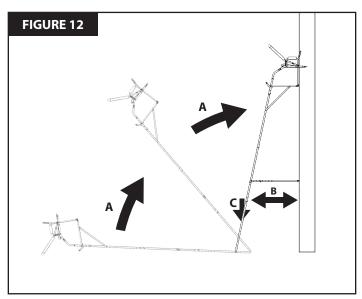



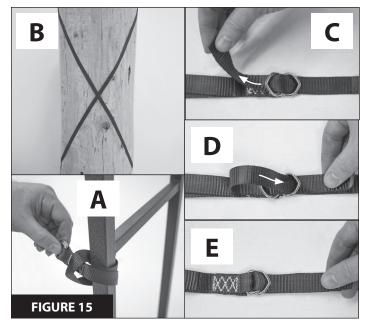



- a. Loop the D-loop end of the two 16' criss cross straps (41) through the loop end to form a cinch knot around the ladder rail tube. Secure beneath a step rung, at the stabilizer bar height location. SEE FIGURE 15A.
 - b. With the stand level and being held in place by two people, the third person must cross one of the 16' criss cross straps (41) behind the tree and feed the free end through the opposite D-loop. **SEE FIGURES 15B-E.**
 - c. Criss cross the other 16' stabilizer strap (41), forming an "X" pattern on the of the tree and feed the free end through the opposite D-loop. **SEE FIGURES 15B-E.**
- 6. Make sure the criss cross straps and stabilizer bar strap are snug and the tree blade is still contacting the tree.
 - NOTE: This ground level ladder-to-tree attachment will prevent the ladder from pulling away from the tree while ascending to the top for final 6' ratchet strap (40) attachment. The same holds true when the ladder is removed.
- 7. With two people securely holding the ladder, use the three point contact climbing method to slowly climb the ladder and carefully keep a constant hand grip on the ladder at all times. Always lean forward, toward tree, to keep top section tree blades against the tree. Be certain ladder bottom is firmly seated on dry, level ground. Attach your harness tether to the tree before securing the platform to the tree and stepping onto platform. Refer to the Full Body Harness instructions included with this product.

NOTE: Bring ratchet strap up with you in a pocket. DO NOT carry in your hand!

 a. Standing on ladder step, lean toward tree with ratchet strap now in hand, Hook "S" hook with long strap through hole provided on tree blade. Feed the long strap through the center (slot) of ratcheting mechanism and back around through tightening lever. SEE FIGURES 16A, 16B AND 17.


 ${\it NOTE:}$ Be sure you feed the long strap correctly so there are no twists in the strap.


b. Wrap entire ratchet assembly around tree and hook other "S" hook through opposite upper tree blade hole. Pull tail of long strap until most of the slack is taken out. Be sure entire strap is even and at the same level all around tree. "Ratchet" tight to tree, this will securely attach ladder to tree and prevent movement. **SEE FIGURES 16B AND 16C.**

NOTE: Make sure there is at least two full revolutions of strap on the ratchet spool before the strap tightens. Proper tension will ensure the stand is secured to the tree. Do not allow excessive strap to build up in the ratchet as this will prevent the ratchet teeth from engaging and can cause slippage.

To release ratchet, simply pull the release lever and open tightening lever wide open (flat). SEE FIGURE 16D.

- If necessary, re-check and adjust the 6' ratchet strap (40), 16' criss cross straps (41) and horizontal stabilizer bar assembly to securely attach the treestand to the tree. The tree blade must be touching the tree. SEE FIGURE 17.
- 10. You are now ready to use your ladder stand.

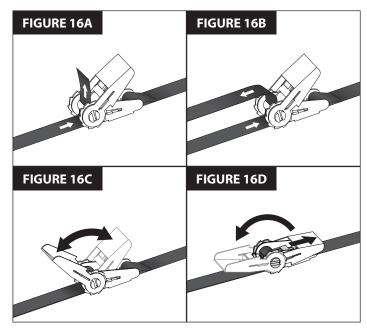

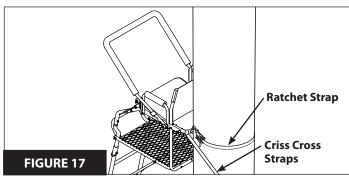




IMPORTANT

▲ Reverse the Set-Up and Use Instructions to take the ladder stand down.




FINISHED LADDER

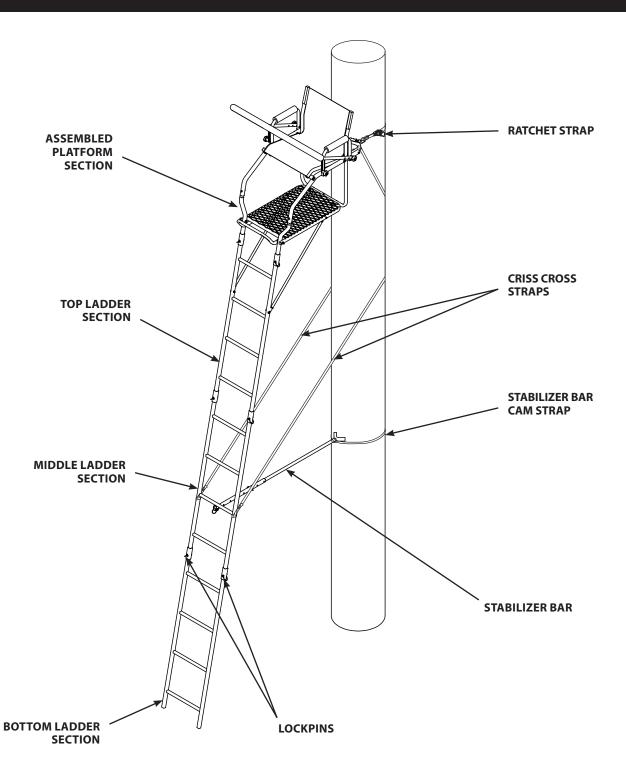



ILLUSTRATED PARTS BREAKDOWN

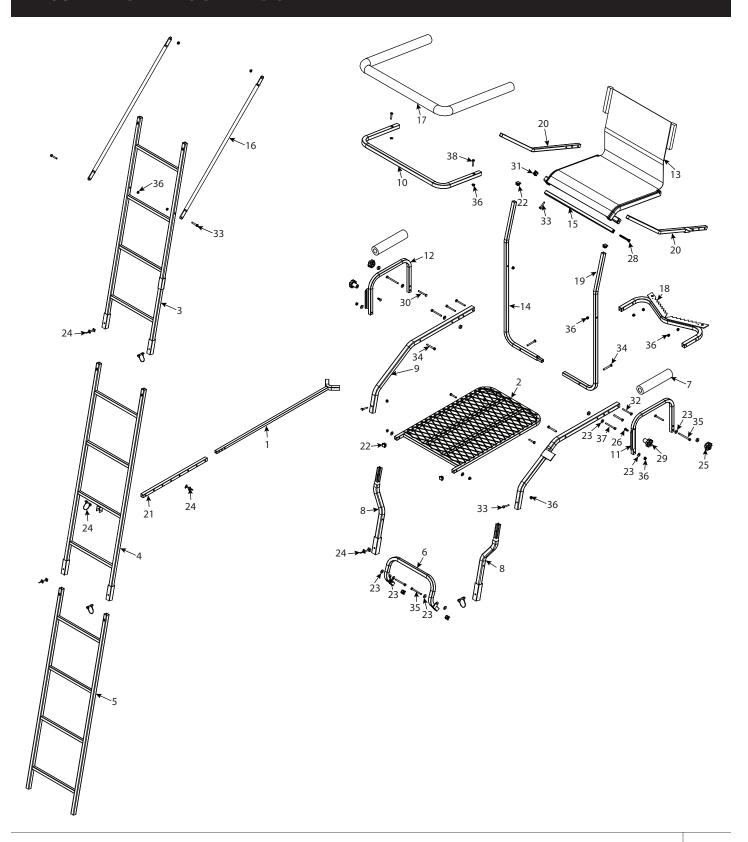



PARTS LIST

ITEM#	PART #	DESCRIPTION	QTY.
1	27397	STABILIZER BAR 39 IN	1
2	28672	FOOT PLATFORM	1
3	28708	TOP LADDER SECTION	1
4	28710	MIDDLE LADDER SECTION	1
5	28712	BOTTOM LADDER SECTION	1
6	30512	FOOTREST	1
7	48736	ARMREST COVER	2
8	28676	PLATFORM RAIL	2
9	28677	SEAT SIDE RAIL	2
10	28679	SHOOTING RAIL	1
11	28680	ARMREST LEFT	1
12	28681	ARMREST RIGHT	1
13	28685	TEAR TUFF SEAT	1
14	28690	REAR SEAT SUPPORT RIGHT	1
15	28691	FRONT SEAT TENSIONER	1
16	410024	PLATFORM BRACE SUPPORT	2
17	48874	SHOOTING RAIL COVER	1
18	410056	TREE BLADE	1
19	28689	REAR SEAT SUPPORT LEFT	1
20	28678	SHOOTING RAIL BRACE	2
21	1ML23	STABILIZER SUPPORT BAR	1
22	19175	PLUG SQ END 19 MM	6
23	23572	YELLOW WASHER M6	14
24	19847	LOCKPIN M6 X 50.8 MM	8
25	23604	KNOB M6 X 10 MM	2
26	26813	BOLT CARRIAGE M6 X 1 X 20 MM	2
27	26913	YELLOW SPACER M6	4

ITEM#	PART #	DESCRIPTION	QTY.	
28	26959	BOLT M6 X 1 X 70 MM	1	
29	28839	KNOB M6 X 29 MM	2	
30	29729	BOLT CARRIAGE M6 X 1 X 60 MM	2	
31	23439	PLUG SQ END 22 MM	1	
32	48270B	BOLT 1/4-20 X 2-1/2 IN	4	
33	48240B	BOLT 1/4-20 X 1-1/2 IN	7	
34	48271B	BOLT 1/4-20 X 2-1/4 IN	4	
35	48273B	BOLT 1/4-20 X 3-1/4 IN	2	
36	48752B	NUT 1/4-20	25	
37	67540B	BOLT 1/4-20 X 2-3/4 IN	4	
38	8909B	BOLT 1/4-20 X 1-1/4 IN	2	
ITEMS BELOW ARE NOT SHOWN				
39	10531	SAFETY HARNESS / FALL ARREST SYSTEM	1	
40	48415	STRAP W/ RATCHET & S HOOKS	1	
41	MK021-1401	STRAP CAM W/LOOPS 6 FT	1	
42	MK034-4511	STRAP STABILIZER BAR	2	
43	48800	TREE STAND SAFETY DVD	1	
44	29074	HARDWARE BAG - BOLTS	1	
45	29740	HARDWARE BAG - NUTS AND WASHERS	1	
46	27477	ALLEN WRENCH	1	
47	28770	SEAT STOP SQ 22 MM	2	

NO EXTENSIONS AVAILABLE FOR THIS MODEL.
NEVER MODIFY OR EXCEED ORIGINAL STATED USE HEIGHT!



OTHER GREAT PRODUCTS BY RIVERS EDGE TREESTANDS





Portable ground blinds take a beating from the sun, wind, rain and snow. Colors fade, materials rot, poles break and fabric tears. The Landmark Permanent Blind was designed and constructed to resist the elements year after year. The durable steel frame is covered in marine-grade reinforced synthetic tarpaulin, made from the same rugged materials used in pick-up truck tonneau covers. The window configuration allows you to precisely control gap vertically, horizontally or both. If you're looking for an affordable year-round hunting blind with enough room for group hunts and archers, the Landmark Permanent Blind is for you.

Big Foot CLIMBING SYSTEMS



BIGFOOT LEVER-ACTION HANG-ONS



All climbing aids are not created equal. For starters, Bigfoot Climbing Aids feature extra-large rungs that a hunter can place two feet on the same level. Next we use a permanent anti-slip coating called Tractionite. Our assortment of climbing aids securely attach to the tree using a cam straps or ratchet straps. We take immense pride and satisfaction in knowing that our designs consistently gain praise from hunters and outfitters who recognize the little differences. A big hunt should never be ruined over a little climb!

Nothing attaches to a tree tighter than a Big Foot™ Treestand! Our line of lever-action hang-on stands bite into the tree eliminating the need for a second strap. Other treestands use small ratchet straps that are not as secure once installed. Perfect for sitting on a tree at ground level or higher up when paired with our climbing aids. Feel the stability of a Big Foot™ Treestand for yourself!



WE ARE HUNTERS

Rivers Edge® Treestands, Inc.

1160 Eighth Avenue, PO Box 755 Cumberland, WI 54829 Phone: 800-450-EDGE (3343)

Fax: 715-822-2124

www.huntriversedge.com

^{*}All weights, specifications and features are approximate and are subject to change without notice. Due to continuous product improvements, product images may not be exact. Warning labels in some product images may have been removed for photography purposes only. Props shown in photos not included. Some assembly may be required.