



**ULTRA QUIET & OIL FREE
AIR COMPRESSOR
OWNER'S MANUAL**

**CALIFORNIA AIR TOOLS
2010A**

1.0 HP

3.10 CFM @ 40 PSI

2.20 CFM @ 90 PSI

2.0 GALLON ALUMINUM TANK



TABLE OF CONTENTS

INTRODUCTION	2
IMPORTANT SAFETY INSTRUCTIONS	3
LOCATIONS OF IMPORTANT LABELS	6
AIR COMPRESSOR COMPONENTS	7
PRE-OPERATION CHECKLIST	8
Package Contents & Assembly	8
Inspect for Damage	9
Save Packaging	9
Compressor Location	9
Electrical Power	10
OPERATING THE AIR COMPRESSOR	10
Introduction	10
Assembly	10
Test Run	11
Daily Operation	11
MAINTENANCE	12
Draining the Air Tank	12
Changing the Air Filter	12
Testing for Leaks	12
Pressure Switch	12
Cleaning	12
STORAGE	12
TROUBLESHOOTING	13
SPECIFICATIONS	14
Electrical Circuit	14
Air Passage Drawing	14
WARRANTY	15
PRODUCT REGISTRATION	17

INTRODUCTION

WARNING

This manual contains important instructions for operating this product. For your safety, and the safety of others, be sure to read this manual thoroughly before operating the product.

Failure to properly follow all the instructions and precautions can cause you and others to be seriously hurt or killed.

Thank you for purchasing a California Air Tools, Inc. Air Compressor.

Please contact us if you have any questions.

Record the model and serial numbers indicated on your air compressor's nameplate:

Model No. _____

Serial No. _____

Date of Purchase: _____

Store/Dealer: _____

How to find a local service center:

Even quality built equipment might need service or repair parts. Contact the California Air Tools Customer Service Department:

Phone: 1-866-409-4581

Online: WWW.CALIFORNIAAIRTOOLS.COM

Please provide the information below:

Model number and Serial number and specifications shown on the Model number/Serial number plate.

Part number or numbers shown in the parts list section of the owner's manual for your air compressor model.

A brief description of the trouble with the air compressor.

Do not return your air compressor for service or parts to the store/dealer where purchased.

IMPORTANT SAFETY INSTRUCTIONS

Safety Messages & Signal Words:

⚠ DANGER

Indicates an immediate hazardous situation which, if not avoided, will result in death or serious injury to the operator or to bystanders.

⚠ WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury to the operator or to bystanders.

⚠ CAUTION

Indicates a potentially hazardous situation which, if not avoided, may result in moderate or minor injury to the operator or to bystanders.

NOTICE

Indicates a situation which, if not avoided, may result in damage to product components or other property.

⚠ DANGER



RISK OF CUTTING

Moving parts can cause severe trauma.

Keep hands and feet away from rotating parts, tie up long hair, remove jewelry, and DO NOT wear loose clothing.

⚠ DANGER



SHOCK

There is a danger of electric shock.

Use only undamaged electrical cords.

DO NOT touch bare wires or receptacles.

DO NOT operate air compressor in wet weather or in wet conditions.

DO NOT touch air compressor or cords if hands or feet are wet.

Ensure that all cords are free of damage before connecting to the power supply.

Ensure that you have a sufficient electrical supply for supporting the requirements of the motor.

Improper installation of the grounding plug is able to result in a risk of electric shock. When repair or replacement of the cord or plug is required, do not connect the grounding wire to either flat terminal. The wire with insulation having an outer surface that is green with or without yellow stripes is the grounding wire.

This product must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electrical shock by providing an escape wire for the electric current.

This product is equipped with a cord having a grounding wire with an appropriate grounding plug. The plug must be plugged into an outlet that is properly installed and grounded in accordance with the local codes and ordinances.

This product is for use on a nominal 120-V circuit and has a grounding plug similar to the plug illustrated in sketch A. Only connect the product to an outlet having the same configuration as the plug.

Do not use an adapter with this product.

⚠ WARNING



RISK TO BREATHING

Dust or dust-like particulates caused by power-sanding, sawing, grinding, drilling or any other construction-like activities can contain contaminants that are harmful to breathe.

Always use your air compressor in a well-ventilated and clean area.

Never breathe the air that comes directly out of the air compressor or air hose. This air is not suitable for breathing.

Always wear approved safety equipment. When performing dust-creating activities, securely wear properly-fit face masks or respirators.

If you feel ill from breathing while operating your air compressor, stop and seek medical attention immediately.

⚠ WARNING



FLYING OBJECTS

Flying objects can cause injury to the eyes, head and other parts of the body.

Air-powered equipment and power tools are capable of propelling items (metal chips, fasteners and particulates) at high speed into the air and could result in injury.

Always wear approved head and eye protection.

Never point the air stream at any part of your body, or at another person or animal.

When operating the air compressor, make sure all other people and animals maintain a safe distance.

Do not move the air compressor when the air tank is under pressure.

Never use the air hoses to pull or move the air compressor.

Keep the air compressor on a flat surface.

⚠ WARNING



HOT SURFACE



FIRE

Air compressor surfaces become hot during operation.

DO NOT touch hot surfaces, because they can cause severe burns.

Do not touch the air compressor's cylinder head. During operation, the cooling fins of the cylinder head and delivery pipe become hot.

Allow the air compressor to cool before touching it.

DO NOT place a storage cover on the unit during operation. Only place a cover on the air compressor after it has thoroughly cooled down.

⚠ WARNING



EXPLOSION

Exercise caution when using pressurized air.

To prevent injury and for your general safety, only use high-pressure hoses, fittings and couplings designed for use with air compressors.

Inspect all hoses, fittings and couplings for leaks and wear. When leaks and wear are detected, stop use and replace those items immediately. Do not repair.

Never leave pressurized air in the air tank when performing maintenance.

Never leave the air compressor unattended with the power supply in use and the air hose connected.

⚠ WARNING



EXPLOSION

Improper care could lead to the air tank bursting or exploding.

Drain air tank daily or after each use to prevent moisture buildup in the air tank.

Rust can weaken the air tank and cause leaks or bursting. If rust is detected, replace tank immediately. Do not try to repair the air tank by welding, drilling or modifying it in any other way. These modifications can weaken the air tank and cause a hazardous condition.

If air tank develops a leak, replace the air tank immediately. Never repair, weld or make modifications to the air tank or its attachments.

Never make adjustments to the factory-set pressures.

Never exceed manufacturer's maximum-allowable pressure rating attachments.

Because of extreme heat, do not use plastic pipe or lead tin solder joints for a discharge line.

⚠ WARNING



EXPLOSION



FIRE

Use caution to minimize risk of fire or explosion.

It is normal for the air compressor motor and pressure switch to produce sparks while operating. If sparks come in contact with vapors from gasoline or solvents, they may ignite and cause a fire or explosion.

Abrasive tools such as grinders, drills and other tools are capable of making sparks that can ignite flammable materials.

Always operate the air compressor a safe distance away from flammable items. Use in well-ventilated areas.

Never exceed the maximum rated pressure.

⚠ CAUTION

Use caution when using extension cords.

Use an extension cord which is no more than 25' (7.6 m) long and at least 14 gauge.

Using an excessively long or thin-wired extension cord will cause severe damage to the motor.


Use only a 3-wire extension cord that has a 3-blade grounding plug.

As undersized cord results in a drop in the line voltage and loss of power and overheating.

When in doubt, use a heavier gauge. The smaller the gauge the more current the cord can carry.

⚠ CAUTION


THIS EQUIPMENT INCORPORATES PARTS, SUCH AS SNAP SWITCHES, RECEPTACLES AND THE LIKE THAT TEND TO PRODUCE ARCS OR SPARKS, THERE, WHEN LOCATED IN A GARAGE, IT SHOULD BE IN A ROOM OR ENCLOSURE PROVIDED FOR THE PURPOSE, OR SHOULD BE 18 IN (45.7 CM) OR MORE ABOVE THE FLOOR.

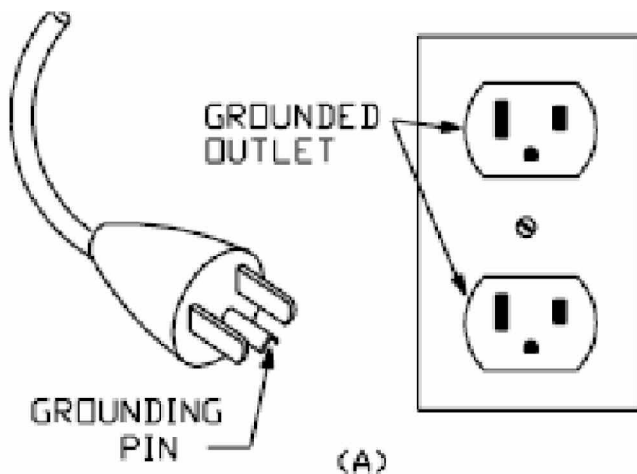

LOCATIONS OF IMPORTANT LABELS


Read these important labels before operating.

These labels provide important safety and maintenance information. These labels should be considered as permanent parts of the air compressor. Should any of these labels become illegible, damaged or removed, please contact California Air Tools Customer Service department at 1-866-409-4581 for replacements.

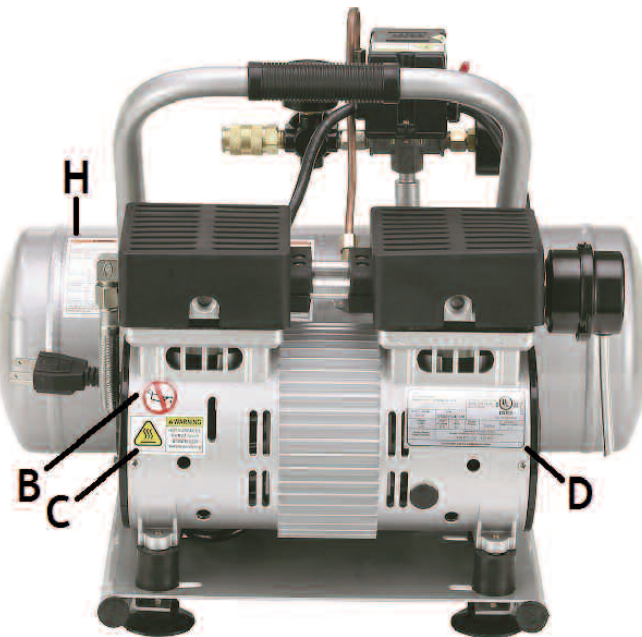

PRODUCT LABEL																													
A																													
B																													
C																													
D																													
E																													
F																													
G																													
H	<table border="1"> <thead> <tr> <th>▲ WARNING</th> <th>▲ ADVERTENCIA</th> <th>▲ AVERTISSEMENT</th> </tr> </thead> <tbody> <tr> <td>READ MANUAL TO REDUCE THE RISK OF INJURY. USER MUST READ AND UNDERSTAND THE OPERATOR MANUAL BEFORE OPERATING THIS AIR COMPRESSOR.</td> <td>LEER EL MANUAL PARA REDUCIR EL RIESGO DE DAÑOS. EL USUARIO DEBE LEER Y ENTENDER EL MANUAL DEL OPERADOR ANTES DE UTILIZAR EL COMPRESOR DE AIRE.</td> <td>LEER LE MANUEL, OPÉREZ-LE À BON SCIENTIFIQUE. L'UTILISATEUR DOIT LIRE ET COMPRENDRE LE MANUEL DE L'UTILISATEUR AVANT D'UTILISER LE COMPRESOR D'AIR.</td> </tr> <tr> <td>WEAR EYE PROTECTION MARKED TO COMPLY WITH ANSI Z87.1</td> <td>USAR PROTECCIÓN PARA LOS OJOS QUE CUMPLAN CON EL ESTÁNDAR ANSI Z87.1</td> <td>PORTER DES LUNETTES DE PROTECTION QUI RÉSISTENT À LA NORME ANSI Z87.1</td> </tr> <tr> <td>RISK OF FLAMMABLE VAPORS: DO NOT DIRECTLY INJECT AIR STREAM AT BODY. DO NOT USE COMPRESSED AIR FOR BREATHING.</td> <td>RIESGO DE DAÑOS: NO CREAR CORRIENTES DE AIRE HACIA EL CUERPO. NO USAR EL AIRE COMPRESO PARA RESPIRAR.</td> <td>RISQUE DE BLESSURE: NE PAS DIRIGER LE FLUX D'AIR VERS LE CORPS. NE PAS RESPIRER AIR COMPRIMÉ.</td> </tr> <tr> <td>RISK OF FIRE OR EXPLOSION: DO NOT SMOKE OR USE OPEN FLAMES OR SPARKS NEAR THE AIR COMPRESSOR. DO NOT USE COMPRESSED AIR TO CLEAN YOUR FACE OR BODY. DO NOT USE COMPRESSED AIR TO CLEAN YOUR CLOTHING. DO NOT USE COMPRESSED AIR TO CLEAN YOUR SKIN. DO NOT USE COMPRESSED AIR TO CLEAN YOUR HAIR. DO NOT USE COMPRESSED AIR TO CLEAN YOUR EYES. DO NOT USE COMPRESSED AIR TO CLEAN YOUR EARS. DO NOT USE COMPRESSED AIR TO CLEAN YOUR NOSE. DO NOT USE COMPRESSED AIR TO CLEAN YOUR THROAT. DO NOT USE COMPRESSED AIR TO CLEAN YOUR MOUTH. DO NOT USE COMPRESSED AIR TO CLEAN YOUR LUNGS. DO NOT USE COMPRESSED AIR TO CLEAN YOUR STOMACH. DO NOT USE COMPRESSED AIR TO CLEAN YOUR INTESTINES. DO NOT USE COMPRESSED AIR TO CLEAN YOUR BLADDER. DO NOT USE COMPRESSED AIR TO CLEAN YOUR RECTUM. DO NOT USE COMPRESSED AIR TO CLEAN YOUR VAGINA. DO NOT USE COMPRESSED AIR TO CLEAN YOUR PENIS. DO NOT USE COMPRESSED AIR TO CLEAN YOUR TESTICLES. DO NOT USE COMPRESSED AIR TO CLEAN YOUR PROSTATE. DO NOT USE COMPRESSED AIR TO CLEAN YOUR UTERUS. DO NOT USE COMPRESSED AIR TO CLEAN YOUR OVARIES. DO NOT USE COMPRESSED AIR TO CLEAN YOUR CERVIX. DO NOT USE COMPRESSED AIR TO CLEAN YOUR VAGINA. DO NOT USE COMPRESSED AIR TO CLEAN YOUR PENIS. DO NOT USE COMPRESSED AIR TO CLEAN YOUR TESTICLES. DO NOT USE COMPRESSED AIR TO CLEAN YOUR PROSTATE. DO NOT USE COMPRESSED AIR TO CLEAN YOUR UTERUS. DO NOT USE COMPRESSED AIR TO CLEAN YOUR OVARIES. DO NOT USE COMPRESSED AIR TO CLEAN YOUR CERVIX.</td> <td>RIESGO DE INCENDIO O EXPLOSIÓN: NO FUMAR NI USAR FUEGOS ABIERTOS NI CHISPAS CERCA DEL COMPRESOR DE AIRE. NO USAR EL AIRE COMPRESO PARA LIMPIAR EL ROSTRO O EL CUERPO. NO USAR EL AIRE COMPRESO PARA LIMPIAR LA ROPA. NO USAR EL AIRE COMPRESO PARA LIMPIAR LA PIEL. NO USAR EL AIRE COMPRESO PARA LIMPIAR EL CABELLO. NO USAR EL AIRE COMPRESO PARA LIMPIAR LOS OJOS. NO USAR EL AIRE COMPRESO PARA LIMPIAR LOS OÍDOS. NO USAR EL AIRE COMPRESO PARA LIMPIAR LA NARIZ. NO USAR EL AIRE COMPRESO PARA LIMPIAR LA GARGANTA. NO USAR EL AIRE COMPRESO PARA LIMPIAR LA BOCA. NO USAR EL AIRE COMPRESO PARA LIMPIAR LOS PULMONES. NO USAR EL AIRE COMPRESO PARA LIMPIAR EL ESTÓMAGO. NO USAR EL AIRE COMPRESO PARA LIMPIAR EL INTestino. NO USAR EL AIRE COMPRESO PARA LIMPIAR LA VESIGULA. NO USAR EL AIRE COMPRESO PARA LIMPIAR EL RECTO. NO USAR EL AIRE COMPRESO PARA LIMPIAR EL VAGINA. NO USAR EL AIRE COMPRESO PARA LIMPIAR EL PENIS. NO USAR EL AIRE COMPRESO PARA LIMPIAR LOS TESTÍCULOS. NO USAR EL AIRE COMPRESO PARA LIMPIAR LA PROSTATA. NO USAR EL AIRE COMPRESO PARA LIMPIAR EL ÚTERO. NO USAR EL AIRE COMPRESO PARA LIMPIAR LOS OVARIOS. NO USAR EL AIRE COMPRESO PARA LIMPIAR EL CERVIX.</td> <td>RISQUE DE INCENDIE OU D'EXPLOSION: NE PAS FUMER NI PORTER DES FLAMMES NI CRÉER DE CHISSES À PROXIMITÉ DU COMPRESOR D'AIR. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LE VISAGE OU LE CORPS. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LES VÊTEMENTS. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LA PEAU. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LES CHEVEUX. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LES YEUX. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LES OREILLES. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LE NEZ. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LA GORGE. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LA BOUCHE. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LES POUMONS. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER L'ESTOMAC. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER L'INTESTIN. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LA VESICULE. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LE RECTUM. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LE VAGIN. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LE PENIS. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LES TESTICULES. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LA PROSTATE. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER L'UTÉRUS. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LES OVAIRES. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LE CERVIX.</td> </tr> <tr> <td>RISK OF SHOOTING: DO NOT ADJUST REGULATOR TO RESULT IN THE OUTPUT PRESSURE EXCEEDING THE MAXIMUM MANUFACTURER'S PRESSURE OF 120 PSI (8.3 BAR).</td> <td>RIESGO DE LESIONES: NO AJUSTAR EL REGULADOR PARA QUE LA PRESIÓN DE SALIDA SUPERE LA PRESIÓN MÁXIMA MANUFACTURERA DE 120 PSI (8.3 BAR).</td> <td>RISQUE D'ÉCLAITEMENT: NE PAS AJUSTER LE RÉGULATEUR POUR QUE LA PRESION DE SORTIE DÉPASSE LA PRESION MAXIMALE MANUFACTURIÈRE DE 120 PSI (8.3 BAR).</td> </tr> <tr> <td>TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT EXPOSE TO RAIN, STORE MOISTURE.</td> <td>PARA REDUCIR EL RIESGO DE CHOQUE ELÉCTRICO NO EXPOSER AL LUGAR ALUMBRADO EN UN LUGAR HÚMEDO.</td> <td>POUR RÉDUIRE LE RISQUE DE DÉCHARGE ÉLECTRIQUE, NE PAS EXPOSER L'APPAREIL À LA PLUIE, DÉTÉRIORER L'APPAREIL À L'INTÉRIEUR.</td> </tr> <tr> <td>RISK OF ELECTRICAL SHOCK: HAZARD OF VOLTAGE EXCESSIVE. CONTACT WITH POWER SOURCE BEFORE SERVICING. COMPRESSOR MUST BE DE-ENERGIZED.</td> <td>RIESGO DE CHOQUE ELÉCTRICO: PELIGRO DE VOLTAJE EXCESIVO. CONTACTAR CON FUENTE DE ALIMENTACIÓN ANTES DE SERVICIO. EL COMPRESOR DEBE DESCONECTARSE POR COMPLETO.</td> <td>RISQUE D'ÉLECTROCUTION: DANGER DE TENSION EXCESSIVE. CONTACTER LA SOURCE D'ALIMENTATION ÉLECTRIQUE AVANT TOUT TRAVAIL DE RÉPARATION. LE COMPRESOR DOIT ÊTRE DÉCONNECTÉ PAR COMPLÈT.</td> </tr> <tr> <td>THIS EQUIPMENT INCORPORATES PARTS, SUCH AS SNAP SWITCHES, RECEPTACLES AND THE LIKE THAT TEND TO PRODUCE ARCS OR SPARKS. THEREFORE, WHEN OPERATED IN A FLAMMABLE OR EXPLOSIVE ATMOSPHERE, THIS EQUIPMENT IS NOT TO BE USED UNLESS THE USER HAS TAKEN THE NECESSARY PRECAUTIONS PROVIDED FOR THE PURPOSE. OR SHOULD BE IN A WELL-VENTILATED AREA ABOVE THE FLOOR.</td> <td>EL PRESENTE EQUIPO INCORPORA PARTES COMO INTERRUPTORES AUTOMÁTICOS, RECEPTACLOS Y SIMILARES QUE TIENDEN A PRODUCIR ARCOS ELÉCTRICOS O CHISPAS. POR LO TANTO, CUANDO SE OPERA EN UN AMBIENTE COMBUSTIBLE O EXPLOSIVO, ESTE EQUIPO NO DEBE USARSE A MENOS QUE EL USUARIO HAYA TOMADO LAS PRECAUCIONES NECESARIAS PARA EL PROPÓSITO. O DEBE USARSE EN UN LUGAR BIEN VENTILADO POR ENCIMA DEL SUELO.</td> <td>CET ÉQUIPEMENT COMPREND DES PIÈCES QUI PEUENT PRODUIRE DES ARCUS ÉLECTRIQUES, DES CHISSES ET D'AUTRES PHÉNOMÈNES SIMILAIRES QUI PEUENT PRODUIRE DES ARCS ÉLECTRIQUES, DES CHISSES ET D'AUTRES PHÉNOMÈNES SIMILAIRES. PAR conséquent, QUAND ON L'UTILISE DANS UN AMBIENT COMBUSTIBLE OU EXPLOSIF, CE DÉTÉRIEUR NE DOIT ÊTRE UTILISÉ QUE SI L'UTILISATEUR A PRIS LES PRÉCAUTIONS NECESSAIRES À CETTE FIN. OU S'IL EST UTILISÉ DANS UN LIEU BIEN VENTILÉ, AU-DESSUS DU SOL.</td> </tr> </tbody> </table>	▲ WARNING	▲ ADVERTENCIA	▲ AVERTISSEMENT	READ MANUAL TO REDUCE THE RISK OF INJURY. USER MUST READ AND UNDERSTAND THE OPERATOR MANUAL BEFORE OPERATING THIS AIR COMPRESSOR.	LEER EL MANUAL PARA REDUCIR EL RIESGO DE DAÑOS. EL USUARIO DEBE LEER Y ENTENDER EL MANUAL DEL OPERADOR ANTES DE UTILIZAR EL COMPRESOR DE AIRE.	LEER LE MANUEL, OPÉREZ-LE À BON SCIENTIFIQUE. L'UTILISATEUR DOIT LIRE ET COMPRENDRE LE MANUEL DE L'UTILISATEUR AVANT D'UTILISER LE COMPRESOR D'AIR.	WEAR EYE PROTECTION MARKED TO COMPLY WITH ANSI Z87.1	USAR PROTECCIÓN PARA LOS OJOS QUE CUMPLAN CON EL ESTÁNDAR ANSI Z87.1	PORTER DES LUNETTES DE PROTECTION QUI RÉSISTENT À LA NORME ANSI Z87.1	RISK OF FLAMMABLE VAPORS: DO NOT DIRECTLY INJECT AIR STREAM AT BODY. DO NOT USE COMPRESSED AIR FOR BREATHING.	RIESGO DE DAÑOS: NO CREAR CORRIENTES DE AIRE HACIA EL CUERPO. NO USAR EL AIRE COMPRESO PARA RESPIRAR.	RISQUE DE BLESSURE: NE PAS DIRIGER LE FLUX D'AIR VERS LE CORPS. NE PAS RESPIRER AIR COMPRIMÉ.	RISK OF FIRE OR EXPLOSION: DO NOT SMOKE OR USE OPEN FLAMES OR SPARKS NEAR THE AIR COMPRESSOR. DO NOT USE COMPRESSED AIR TO CLEAN YOUR FACE OR BODY. DO NOT USE COMPRESSED AIR TO CLEAN YOUR CLOTHING. DO NOT USE COMPRESSED AIR TO CLEAN YOUR SKIN. DO NOT USE COMPRESSED AIR TO CLEAN YOUR HAIR. DO NOT USE COMPRESSED AIR TO CLEAN YOUR EYES. DO NOT USE COMPRESSED AIR TO CLEAN YOUR EARS. DO NOT USE COMPRESSED AIR TO CLEAN YOUR NOSE. DO NOT USE COMPRESSED AIR TO CLEAN YOUR THROAT. DO NOT USE COMPRESSED AIR TO CLEAN YOUR MOUTH. DO NOT USE COMPRESSED AIR TO CLEAN YOUR LUNGS. DO NOT USE COMPRESSED AIR TO CLEAN YOUR STOMACH. DO NOT USE COMPRESSED AIR TO CLEAN YOUR INTESTINES. DO NOT USE COMPRESSED AIR TO CLEAN YOUR BLADDER. DO NOT USE COMPRESSED AIR TO CLEAN YOUR RECTUM. DO NOT USE COMPRESSED AIR TO CLEAN YOUR VAGINA. DO NOT USE COMPRESSED AIR TO CLEAN YOUR PENIS. DO NOT USE COMPRESSED AIR TO CLEAN YOUR TESTICLES. DO NOT USE COMPRESSED AIR TO CLEAN YOUR PROSTATE. DO NOT USE COMPRESSED AIR TO CLEAN YOUR UTERUS. DO NOT USE COMPRESSED AIR TO CLEAN YOUR OVARIES. DO NOT USE COMPRESSED AIR TO CLEAN YOUR CERVIX. DO NOT USE COMPRESSED AIR TO CLEAN YOUR VAGINA. DO NOT USE COMPRESSED AIR TO CLEAN YOUR PENIS. DO NOT USE COMPRESSED AIR TO CLEAN YOUR TESTICLES. DO NOT USE COMPRESSED AIR TO CLEAN YOUR PROSTATE. DO NOT USE COMPRESSED AIR TO CLEAN YOUR UTERUS. DO NOT USE COMPRESSED AIR TO CLEAN YOUR OVARIES. DO NOT USE COMPRESSED AIR TO CLEAN YOUR CERVIX.	RIESGO DE INCENDIO O EXPLOSIÓN: NO FUMAR NI USAR FUEGOS ABIERTOS NI CHISPAS CERCA DEL COMPRESOR DE AIRE. NO USAR EL AIRE COMPRESO PARA LIMPIAR EL ROSTRO O EL CUERPO. NO USAR EL AIRE COMPRESO PARA LIMPIAR LA ROPA. NO USAR EL AIRE COMPRESO PARA LIMPIAR LA PIEL. NO USAR EL AIRE COMPRESO PARA LIMPIAR EL CABELLO. NO USAR EL AIRE COMPRESO PARA LIMPIAR LOS OJOS. NO USAR EL AIRE COMPRESO PARA LIMPIAR LOS OÍDOS. NO USAR EL AIRE COMPRESO PARA LIMPIAR LA NARIZ. NO USAR EL AIRE COMPRESO PARA LIMPIAR LA GARGANTA. NO USAR EL AIRE COMPRESO PARA LIMPIAR LA BOCA. NO USAR EL AIRE COMPRESO PARA LIMPIAR LOS PULMONES. NO USAR EL AIRE COMPRESO PARA LIMPIAR EL ESTÓMAGO. NO USAR EL AIRE COMPRESO PARA LIMPIAR EL INTestino. NO USAR EL AIRE COMPRESO PARA LIMPIAR LA VESIGULA. NO USAR EL AIRE COMPRESO PARA LIMPIAR EL RECTO. NO USAR EL AIRE COMPRESO PARA LIMPIAR EL VAGINA. NO USAR EL AIRE COMPRESO PARA LIMPIAR EL PENIS. NO USAR EL AIRE COMPRESO PARA LIMPIAR LOS TESTÍCULOS. NO USAR EL AIRE COMPRESO PARA LIMPIAR LA PROSTATA. NO USAR EL AIRE COMPRESO PARA LIMPIAR EL ÚTERO. NO USAR EL AIRE COMPRESO PARA LIMPIAR LOS OVARIOS. NO USAR EL AIRE COMPRESO PARA LIMPIAR EL CERVIX.	RISQUE DE INCENDIE OU D'EXPLOSION: NE PAS FUMER NI PORTER DES FLAMMES NI CRÉER DE CHISSES À PROXIMITÉ DU COMPRESOR D'AIR. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LE VISAGE OU LE CORPS. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LES VÊTEMENTS. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LA PEAU. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LES CHEVEUX. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LES YEUX. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LES OREILLES. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LE NEZ. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LA GORGE. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LA BOUCHE. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LES POUMONS. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER L'ESTOMAC. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER L'INTESTIN. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LA VESICULE. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LE RECTUM. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LE VAGIN. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LE PENIS. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LES TESTICULES. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LA PROSTATE. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER L'UTÉRUS. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LES OVAIRES. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LE CERVIX.	RISK OF SHOOTING: DO NOT ADJUST REGULATOR TO RESULT IN THE OUTPUT PRESSURE EXCEEDING THE MAXIMUM MANUFACTURER'S PRESSURE OF 120 PSI (8.3 BAR).	RIESGO DE LESIONES: NO AJUSTAR EL REGULADOR PARA QUE LA PRESIÓN DE SALIDA SUPERE LA PRESIÓN MÁXIMA MANUFACTURERA DE 120 PSI (8.3 BAR).	RISQUE D'ÉCLAITEMENT: NE PAS AJUSTER LE RÉGULATEUR POUR QUE LA PRESION DE SORTIE DÉPASSE LA PRESION MAXIMALE MANUFACTURIÈRE DE 120 PSI (8.3 BAR).	TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT EXPOSE TO RAIN, STORE MOISTURE.	PARA REDUCIR EL RIESGO DE CHOQUE ELÉCTRICO NO EXPOSER AL LUGAR ALUMBRADO EN UN LUGAR HÚMEDO.	POUR RÉDUIRE LE RISQUE DE DÉCHARGE ÉLECTRIQUE, NE PAS EXPOSER L'APPAREIL À LA PLUIE, DÉTÉRIORER L'APPAREIL À L'INTÉRIEUR.	RISK OF ELECTRICAL SHOCK: HAZARD OF VOLTAGE EXCESSIVE. CONTACT WITH POWER SOURCE BEFORE SERVICING. COMPRESSOR MUST BE DE-ENERGIZED.	RIESGO DE CHOQUE ELÉCTRICO: PELIGRO DE VOLTAJE EXCESIVO. CONTACTAR CON FUENTE DE ALIMENTACIÓN ANTES DE SERVICIO. EL COMPRESOR DEBE DESCONECTARSE POR COMPLETO.	RISQUE D'ÉLECTROCUTION: DANGER DE TENSION EXCESSIVE. CONTACTER LA SOURCE D'ALIMENTATION ÉLECTRIQUE AVANT TOUT TRAVAIL DE RÉPARATION. LE COMPRESOR DOIT ÊTRE DÉCONNECTÉ PAR COMPLÈT.	THIS EQUIPMENT INCORPORATES PARTS, SUCH AS SNAP SWITCHES, RECEPTACLES AND THE LIKE THAT TEND TO PRODUCE ARCS OR SPARKS. THEREFORE, WHEN OPERATED IN A FLAMMABLE OR EXPLOSIVE ATMOSPHERE, THIS EQUIPMENT IS NOT TO BE USED UNLESS THE USER HAS TAKEN THE NECESSARY PRECAUTIONS PROVIDED FOR THE PURPOSE. OR SHOULD BE IN A WELL-VENTILATED AREA ABOVE THE FLOOR.	EL PRESENTE EQUIPO INCORPORA PARTES COMO INTERRUPTORES AUTOMÁTICOS, RECEPTACLOS Y SIMILARES QUE TIENDEN A PRODUCIR ARCOS ELÉCTRICOS O CHISPAS. POR LO TANTO, CUANDO SE OPERA EN UN AMBIENTE COMBUSTIBLE O EXPLOSIVO, ESTE EQUIPO NO DEBE USARSE A MENOS QUE EL USUARIO HAYA TOMADO LAS PRECAUCIONES NECESARIAS PARA EL PROPÓSITO. O DEBE USARSE EN UN LUGAR BIEN VENTILADO POR ENCIMA DEL SUELO.	CET ÉQUIPEMENT COMPREND DES PIÈCES QUI PEUENT PRODUIRE DES ARCUS ÉLECTRIQUES, DES CHISSES ET D'AUTRES PHÉNOMÈNES SIMILAIRES QUI PEUENT PRODUIRE DES ARCS ÉLECTRIQUES, DES CHISSES ET D'AUTRES PHÉNOMÈNES SIMILAIRES. PAR conséquent, QUAND ON L'UTILISE DANS UN AMBIENT COMBUSTIBLE OU EXPLOSIF, CE DÉTÉRIEUR NE DOIT ÊTRE UTILISÉ QUE SI L'UTILISATEUR A PRIS LES PRÉCAUTIONS NECESSAIRES À CETTE FIN. OU S'IL EST UTILISÉ DANS UN LIEU BIEN VENTILÉ, AU-DESSUS DU SOL.	
▲ WARNING	▲ ADVERTENCIA	▲ AVERTISSEMENT																											
READ MANUAL TO REDUCE THE RISK OF INJURY. USER MUST READ AND UNDERSTAND THE OPERATOR MANUAL BEFORE OPERATING THIS AIR COMPRESSOR.	LEER EL MANUAL PARA REDUCIR EL RIESGO DE DAÑOS. EL USUARIO DEBE LEER Y ENTENDER EL MANUAL DEL OPERADOR ANTES DE UTILIZAR EL COMPRESOR DE AIRE.	LEER LE MANUEL, OPÉREZ-LE À BON SCIENTIFIQUE. L'UTILISATEUR DOIT LIRE ET COMPRENDRE LE MANUEL DE L'UTILISATEUR AVANT D'UTILISER LE COMPRESOR D'AIR.																											
WEAR EYE PROTECTION MARKED TO COMPLY WITH ANSI Z87.1	USAR PROTECCIÓN PARA LOS OJOS QUE CUMPLAN CON EL ESTÁNDAR ANSI Z87.1	PORTER DES LUNETTES DE PROTECTION QUI RÉSISTENT À LA NORME ANSI Z87.1																											
RISK OF FLAMMABLE VAPORS: DO NOT DIRECTLY INJECT AIR STREAM AT BODY. DO NOT USE COMPRESSED AIR FOR BREATHING.	RIESGO DE DAÑOS: NO CREAR CORRIENTES DE AIRE HACIA EL CUERPO. NO USAR EL AIRE COMPRESO PARA RESPIRAR.	RISQUE DE BLESSURE: NE PAS DIRIGER LE FLUX D'AIR VERS LE CORPS. NE PAS RESPIRER AIR COMPRIMÉ.																											
RISK OF FIRE OR EXPLOSION: DO NOT SMOKE OR USE OPEN FLAMES OR SPARKS NEAR THE AIR COMPRESSOR. DO NOT USE COMPRESSED AIR TO CLEAN YOUR FACE OR BODY. DO NOT USE COMPRESSED AIR TO CLEAN YOUR CLOTHING. DO NOT USE COMPRESSED AIR TO CLEAN YOUR SKIN. DO NOT USE COMPRESSED AIR TO CLEAN YOUR HAIR. DO NOT USE COMPRESSED AIR TO CLEAN YOUR EYES. DO NOT USE COMPRESSED AIR TO CLEAN YOUR EARS. DO NOT USE COMPRESSED AIR TO CLEAN YOUR NOSE. DO NOT USE COMPRESSED AIR TO CLEAN YOUR THROAT. DO NOT USE COMPRESSED AIR TO CLEAN YOUR MOUTH. DO NOT USE COMPRESSED AIR TO CLEAN YOUR LUNGS. DO NOT USE COMPRESSED AIR TO CLEAN YOUR STOMACH. DO NOT USE COMPRESSED AIR TO CLEAN YOUR INTESTINES. DO NOT USE COMPRESSED AIR TO CLEAN YOUR BLADDER. DO NOT USE COMPRESSED AIR TO CLEAN YOUR RECTUM. DO NOT USE COMPRESSED AIR TO CLEAN YOUR VAGINA. DO NOT USE COMPRESSED AIR TO CLEAN YOUR PENIS. DO NOT USE COMPRESSED AIR TO CLEAN YOUR TESTICLES. DO NOT USE COMPRESSED AIR TO CLEAN YOUR PROSTATE. DO NOT USE COMPRESSED AIR TO CLEAN YOUR UTERUS. DO NOT USE COMPRESSED AIR TO CLEAN YOUR OVARIES. DO NOT USE COMPRESSED AIR TO CLEAN YOUR CERVIX. DO NOT USE COMPRESSED AIR TO CLEAN YOUR VAGINA. DO NOT USE COMPRESSED AIR TO CLEAN YOUR PENIS. DO NOT USE COMPRESSED AIR TO CLEAN YOUR TESTICLES. DO NOT USE COMPRESSED AIR TO CLEAN YOUR PROSTATE. DO NOT USE COMPRESSED AIR TO CLEAN YOUR UTERUS. DO NOT USE COMPRESSED AIR TO CLEAN YOUR OVARIES. DO NOT USE COMPRESSED AIR TO CLEAN YOUR CERVIX.	RIESGO DE INCENDIO O EXPLOSIÓN: NO FUMAR NI USAR FUEGOS ABIERTOS NI CHISPAS CERCA DEL COMPRESOR DE AIRE. NO USAR EL AIRE COMPRESO PARA LIMPIAR EL ROSTRO O EL CUERPO. NO USAR EL AIRE COMPRESO PARA LIMPIAR LA ROPA. NO USAR EL AIRE COMPRESO PARA LIMPIAR LA PIEL. NO USAR EL AIRE COMPRESO PARA LIMPIAR EL CABELLO. NO USAR EL AIRE COMPRESO PARA LIMPIAR LOS OJOS. NO USAR EL AIRE COMPRESO PARA LIMPIAR LOS OÍDOS. NO USAR EL AIRE COMPRESO PARA LIMPIAR LA NARIZ. NO USAR EL AIRE COMPRESO PARA LIMPIAR LA GARGANTA. NO USAR EL AIRE COMPRESO PARA LIMPIAR LA BOCA. NO USAR EL AIRE COMPRESO PARA LIMPIAR LOS PULMONES. NO USAR EL AIRE COMPRESO PARA LIMPIAR EL ESTÓMAGO. NO USAR EL AIRE COMPRESO PARA LIMPIAR EL INTestino. NO USAR EL AIRE COMPRESO PARA LIMPIAR LA VESIGULA. NO USAR EL AIRE COMPRESO PARA LIMPIAR EL RECTO. NO USAR EL AIRE COMPRESO PARA LIMPIAR EL VAGINA. NO USAR EL AIRE COMPRESO PARA LIMPIAR EL PENIS. NO USAR EL AIRE COMPRESO PARA LIMPIAR LOS TESTÍCULOS. NO USAR EL AIRE COMPRESO PARA LIMPIAR LA PROSTATA. NO USAR EL AIRE COMPRESO PARA LIMPIAR EL ÚTERO. NO USAR EL AIRE COMPRESO PARA LIMPIAR LOS OVARIOS. NO USAR EL AIRE COMPRESO PARA LIMPIAR EL CERVIX.	RISQUE DE INCENDIE OU D'EXPLOSION: NE PAS FUMER NI PORTER DES FLAMMES NI CRÉER DE CHISSES À PROXIMITÉ DU COMPRESOR D'AIR. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LE VISAGE OU LE CORPS. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LES VÊTEMENTS. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LA PEAU. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LES CHEVEUX. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LES YEUX. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LES OREILLES. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LE NEZ. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LA GORGE. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LA BOUCHE. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LES POUMONS. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER L'ESTOMAC. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER L'INTESTIN. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LA VESICULE. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LE RECTUM. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LE VAGIN. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LE PENIS. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LES TESTICULES. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LA PROSTATE. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER L'UTÉRUS. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LES OVAIRES. NE PAS UTILISER L'AIR COMPRIMÉ POUR NETTOYER LE CERVIX.																											
RISK OF SHOOTING: DO NOT ADJUST REGULATOR TO RESULT IN THE OUTPUT PRESSURE EXCEEDING THE MAXIMUM MANUFACTURER'S PRESSURE OF 120 PSI (8.3 BAR).	RIESGO DE LESIONES: NO AJUSTAR EL REGULADOR PARA QUE LA PRESIÓN DE SALIDA SUPERE LA PRESIÓN MÁXIMA MANUFACTURERA DE 120 PSI (8.3 BAR).	RISQUE D'ÉCLAITEMENT: NE PAS AJUSTER LE RÉGULATEUR POUR QUE LA PRESION DE SORTIE DÉPASSE LA PRESION MAXIMALE MANUFACTURIÈRE DE 120 PSI (8.3 BAR).																											
TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT EXPOSE TO RAIN, STORE MOISTURE.	PARA REDUCIR EL RIESGO DE CHOQUE ELÉCTRICO NO EXPOSER AL LUGAR ALUMBRADO EN UN LUGAR HÚMEDO.	POUR RÉDUIRE LE RISQUE DE DÉCHARGE ÉLECTRIQUE, NE PAS EXPOSER L'APPAREIL À LA PLUIE, DÉTÉRIORER L'APPAREIL À L'INTÉRIEUR.																											
RISK OF ELECTRICAL SHOCK: HAZARD OF VOLTAGE EXCESSIVE. CONTACT WITH POWER SOURCE BEFORE SERVICING. COMPRESSOR MUST BE DE-ENERGIZED.	RIESGO DE CHOQUE ELÉCTRICO: PELIGRO DE VOLTAJE EXCESIVO. CONTACTAR CON FUENTE DE ALIMENTACIÓN ANTES DE SERVICIO. EL COMPRESOR DEBE DESCONECTARSE POR COMPLETO.	RISQUE D'ÉLECTROCUTION: DANGER DE TENSION EXCESSIVE. CONTACTER LA SOURCE D'ALIMENTATION ÉLECTRIQUE AVANT TOUT TRAVAIL DE RÉPARATION. LE COMPRESOR DOIT ÊTRE DÉCONNECTÉ PAR COMPLÈT.																											
THIS EQUIPMENT INCORPORATES PARTS, SUCH AS SNAP SWITCHES, RECEPTACLES AND THE LIKE THAT TEND TO PRODUCE ARCS OR SPARKS. THEREFORE, WHEN OPERATED IN A FLAMMABLE OR EXPLOSIVE ATMOSPHERE, THIS EQUIPMENT IS NOT TO BE USED UNLESS THE USER HAS TAKEN THE NECESSARY PRECAUTIONS PROVIDED FOR THE PURPOSE. OR SHOULD BE IN A WELL-VENTILATED AREA ABOVE THE FLOOR.	EL PRESENTE EQUIPO INCORPORA PARTES COMO INTERRUPTORES AUTOMÁTICOS, RECEPTACLOS Y SIMILARES QUE TIENDEN A PRODUCIR ARCOS ELÉCTRICOS O CHISPAS. POR LO TANTO, CUANDO SE OPERA EN UN AMBIENTE COMBUSTIBLE O EXPLOSIVO, ESTE EQUIPO NO DEBE USARSE A MENOS QUE EL USUARIO HAYA TOMADO LAS PRECAUCIONES NECESARIAS PARA EL PROPÓSITO. O DEBE USARSE EN UN LUGAR BIEN VENTILADO POR ENCIMA DEL SUELO.	CET ÉQUIPEMENT COMPREND DES PIÈCES QUI PEUENT PRODUIRE DES ARCUS ÉLECTRIQUES, DES CHISSES ET D'AUTRES PHÉNOMÈNES SIMILAIRES QUI PEUENT PRODUIRE DES ARCS ÉLECTRIQUES, DES CHISSES ET D'AUTRES PHÉNOMÈNES SIMILAIRES. PAR conséquent, QUAND ON L'UTILISE DANS UN AMBIENT COMBUSTIBLE OU EXPLOSIF, CE DÉTÉRIEUR NE DOIT ÊTRE UTILISÉ QUE SI L'UTILISATEUR A PRIS LES PRÉCAUTIONS NECESSAIRES À CETTE FIN. OU S'IL EST UTILISÉ DANS UN LIEU BIEN VENTILÉ, AU-DESSUS DU SOL.																											

AIR COMPRESSOR

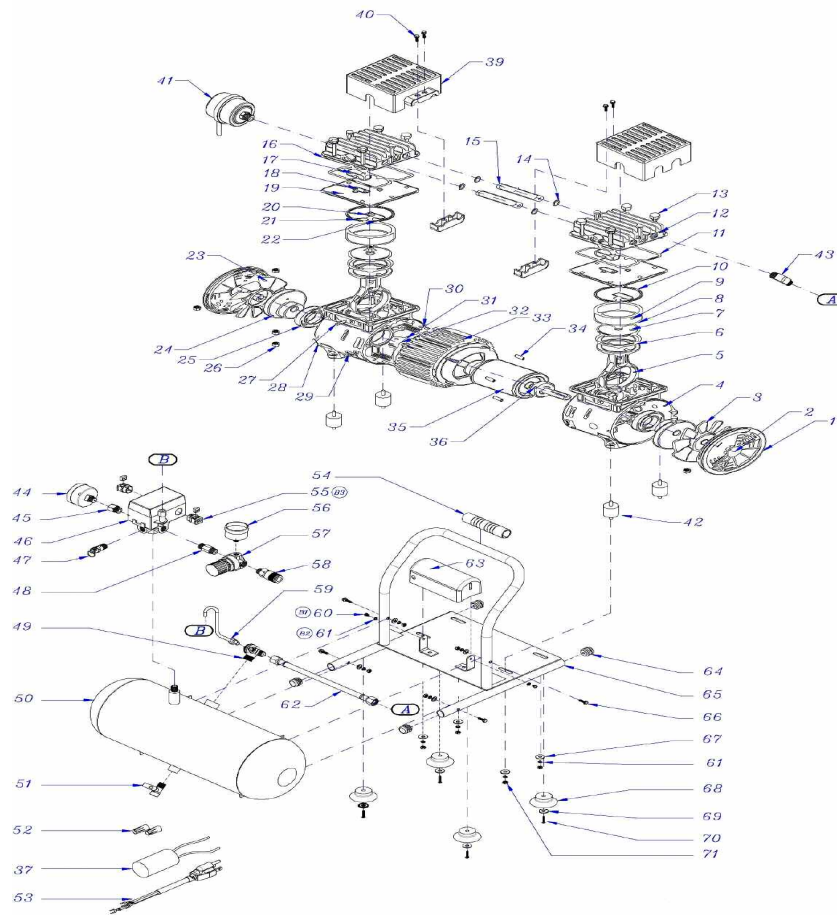

NO.	Description	NO.	Description	NO.	Description	NO.	Description
1	Fan Screw	21	Metal Strengthen Sheet	41	Air Filter	61	Washer
2	Fan Cover	22	Screw	42	Shock Strut	62	Exhaust Pipe
3	Left Fan	23	Right Fan	43	Elbow	63	Capacitor Cover
4	Left Crank Case	24	Crank	44	2.5 Pressure Gauge	64	Cap
5	Connecting Rod	25	Bearing	45	Gauge Connector	65	2000 Frame
6	Piston Ring	26	Holding Screw	46	Pressure Switch	66	Bolt
7	Pressure Plate	27	Cheese Head Screw	47	Safety Valve	67	Washer
8	Pressure Plate Screw	28	Right Crank Case	48	Connecting Bar	68	Cushion Foot
9	Cylinder	29	Leading-out Line Guard Circle	49	Check Valve	69	Washer
10	Cylinder Obturating Ring	30	Motor Screw	50	2.0 Gal. Aluminum Tank	70	Bolt
11	Cylinder Head Obturating Ring	31	Screw	51	Drain Valve	71	Nut
12	Cylinder Head	32	Gasket	52	Wire Connectors	72	
13	Cylinder Head Screw	33	Stator	53	Power Cord with Plug	73	
14	Connecting Hose Obturating	34	Bolt	54	Handle Cover	74	
15	Connecting Hose	35	Rotor	55	Strain Relief	75	
16	Pan Head Screw	36	Bearing	56	2.0 Pressure Gauge	76	
17	Limited Block	37	Capacitor	57	Regulator	77	
18	Gassing Valve Plate	38	N/A	58	1/4 Quick Connect	78	
19	Valve Plate	39	Plastic Head Cover	59	Uploading Pipe	79	
20	Air Inflow Valve Plate	40	Head Cover Screw	60	Bolt	80	


PRE-OPERATION CHECKLIST

Package Contents & Assembly

Model: 2010A

Package contents:


- Air Compressor
- Owner's Manual
- Air Filter

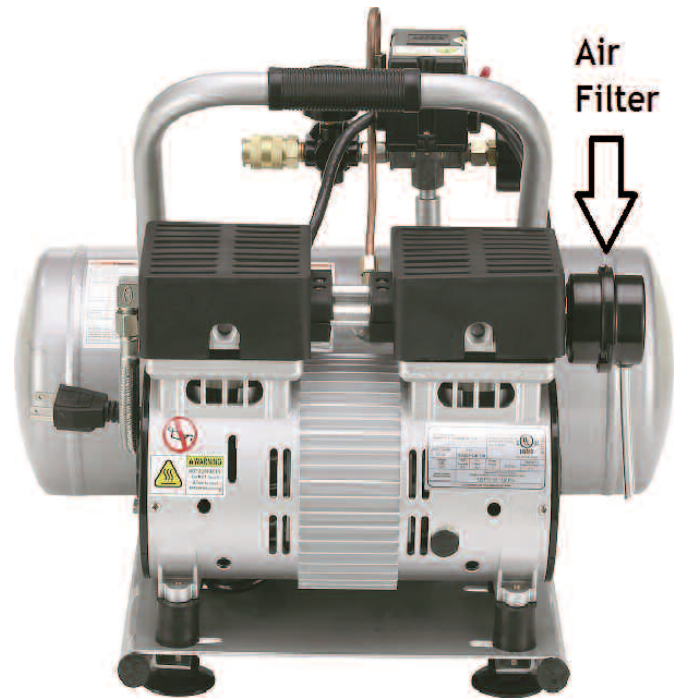

Assembly:

Install the air filter

1. Attach the air filter to the top left side of motor head.
(looking from the front to the back of the air compressor)
Screw the air filter into motor head port that is located under the Plastic Head Cover

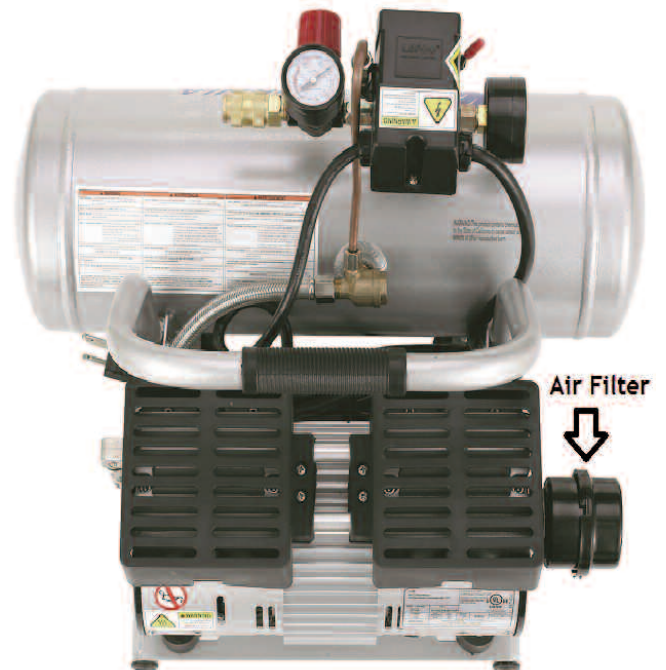

Inspect for Damage

Before using the air compressor, make sure the air tank is not damaged, inspect all parts for damage, and check that all pipes are firmly connected.

Do not use the air compressor if any damage is found. If damaged, have an authorized service center inspect and test the air compressor to ensure that is working properly.

Save Packaging

IMPORTANT: Save all outside packaging in case you ever need to return the product for service or repair.

Compressor Location


Use on Flat Surface


For proper operation, the air compressor must be placed on a flat surface with an incline no greater than 15 degrees.

Maintain a Clear Area

It is very important that the air compressor is positioned so that there is adequate airflow around the machine. There must be at least 2 feet of obstacle-free space surrounding and above the air compressor.

⚠ WARNING





EXPLOSION**FIRE**


Use caution to minimize risk of fire or explosion.
It is normal for the air compressor motor and pressure switch to produce sparks while operating. If sparks come in contact with vapors from gasoline or solvents, they may ignite and cause a fire or explosion.

Abrasive tools such as grinders, drills and other tools are capable of making sparks that can ignite flammable materials.

Always operate the air compressor a safe distance away from flammable items. Use in well-ventilated areas.

Never exceed the maximum rated pressure.

⚠ WARNING



RISK TO BREATHING

Dust or dust-like particulates caused by power-sanding, sawing, grinding, drilling or any other construction-like activities can contain contaminants that are harmful to breathe.

Always use your air compressor in a well-ventilated and clean area.

Never breathe the air that comes directly out of the air compressor or air hose. This air is not suitable for breathing.

Always wear approved safety equipment. When performing dust-creating activities, securely wear properly-fit face masks or respirators.

If you feel ill from breathing while operating your air compressor, stop and seek medical attention immediately.

Use in Areas with Clean Air

For proper operation and to maximize the longevity of the air compressor, it is very important that the air drawn into the air compressor is clean. The air compressor should not be used in areas where dust or particulates are in the air. This will damage the motor and impair proper operation.

IMPORTANT: Always use the air filter, properly installed.

Electrical Power

Electrical Power Requirements

⚠ DANGER



SHOCK

There is a danger of electric shock.

Use only undamaged electrical cords.

DO NOT touch bare wires or receptacles.

DO NOT operate air compressor in wet weather or in wet conditions.

DO NOT touch air compressor or cords if hands or feet are wet.

Ensure that all cords are free of damage before connecting to the power supply.

Ensure that you have a sufficient electrical supply for supporting the requirements of the motor.

Improper installation of the grounding plug is able to result in a risk of electric shock. When repair or replacement of the cord or plug is required, do not connect the grounding wire to either flat terminal. The wire with insulation having an outer surface that is green with or without yellow stripes is the grounding wire.

This product must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electrical shock by providing an escape wire for the electric current.

This product is equipped with a cord having a grounding wire with an appropriate grounding plug. The plug must be plugged into an outlet that is properly installed and grounded in accordance with the local codes and ordinances.

This product is for use on a nominal 120-V circuit and has a grounding plug similar to the plug illustrated in sketch A. Only connect the product to an outlet having the same configuration as the plug.

Do not use an adapter with this product.

Before using the air compressor, refer to the serial label for voltage and amperage requirements. Make sure you have a sufficient electrical supply for supporting the motor's requirements.

Use a dedicated circuit for the best results.

Low voltage and/or an overload circuit can cause the motor's overload protection system circuit breaker to trip.

Electrical Extension Cords

⚠ CAUTION

Use caution when using extension cords.

Use an extension cord which is no more than 25' (7.6 m) long and at least 14 gauge.

Using an excessively long or thin-wired extension cord will cause severe damage to the motor.

Use only a 3-wire extension cord that has a 3-blade grounding plug.

As undersized cord results in a drop in the line voltage and loss of power and overheating.

When in doubt, use a heavier gauge. The smaller the gauge the more current the cord can carry.

Inspect all electrical extension cords to ensure that they are free of damage.

When using an extension cord, use a heavy-duty cord that is no more than 25 feet long and at least 14 gauge. Use only a 3-wire extension cord that has a 3-blade grounding plug.

OPERATING THE AIR COMPRESSOR

⚠ WARNING

This manual contains important instructions for operating this product. For your safety, and the safety of others, be sure to read this manual thoroughly before operating the product.

Failure to properly follow all the instructions and precautions can cause you and others to be seriously hurt or killed.

Save this manual for future reference.

Introduction

This air compressor features a compact structure, stable performance, a high airflow rate, easy operation and maintenance. Because the air compressor produces no oil in the airflow, it can be used as an independent air supply machine for situations in which oil in the airflow is an issue. The motor directly drives the pistons and is able to function without lubrication for a long period of time.

Assembly

1. Connect your air supply hose to a 1/4" male universal or industrial quick connect coupler. Connect the male quick connect coupler to the female quick connect coupler located on the air compressor
2. Make sure the drainage valve is off and that the pressure switch is in the OFF position.
3. Ensure that the power supply you are going to use is operating normally.
4. Insert the power supply cord into the power supply socket.

Test Run

Before using the air compressor for the first time, complete a test run as follows:

1. Turn the power switch to the OFF position. Plug the power supply cord into a power supply socket. Start the air compressor by turning the power switch to the ON position. The pressure gauge reading will slowly rise as pressure increases inside the air tank. When the gauge reading reaches 115 PSI - 120 PSI, the pressure switch will automatically turn the power off. This indicates the compressor is working normally.
2. Turn the power switch to the Off position, unplug the power supply cord and release the air in the tank by pulling on the safety valve. At this point proceed to the next step (daily operations).

Note: If the Air Compressor is not working properly, the pressure gauge will indicate that there is a decrease in pressure in the air tank. If there is an air leak from the compressor the pressure in the air tank decreases, the pressure switch resets and the motor automatically turns back on.

If you detect an air leakage, turn the power switch to the Off position, release the air from the tank by pulling on the safety valve. Unplug the power supply cord and contact Customer Support for Assistance.

! WARNING



FLYING OBJECTS

Flying objects can cause injury to the eyes, head and other parts of the body.

Air-powered equipment and power tools are capable of propelling items (metal chips, fasteners and particulates) at high speed into the air and could result in injury.

Always wear approved head and eye protection.

Never point the air stream at any part of your body, or at another person or animal.

When operating the air compressor, make sure all other people and animals maintain a safe distance.

Do not move the air compressor when the air tank is under pressure.

Never use the air hoses to pull or move the air compressor.

Keep the air compressor on a flat surface.

! WARNING



HOT SURFACE



FIRE

Air compressor surfaces become hot during operation.

DO NOT touch hot surfaces, because they can cause severe burns.

Do not touch the air compressor's cylinder head. During operation, the cooling fins of the cylinder head and delivery pipe become hot.

Allow the air compressor to cool before touching it.

DO NOT place a storage cover on the unit during operation. Only place a cover on the air compressor after it has thoroughly cooled down.

Daily Operation

Starting the compressor:

1. Turn the power switch to the OFF position.
2. Attach the air hose to the 1/4" quick connect coupler
3. Close the drain valve.
4. Have air filter attached
5. Plug the power supply cord into a power supply socket.
6. Turn the power switch to the ON position.
7. Let the motor run and tank fill until motor turns off.
8. To regulate the air flow.
While the air compressor is running, turn "On" your tool and turn the regulator knob to the right increasing the pressure.
Turn the pressure up until the desired pressure is reached.
9. Operate air tool normally.

Shutting down the compressor:

1. Turn the power switch to the OFF position.
2. Unplug the power supply cord.
3. Reduce the pressure in the air tank through the air supply hose.

MAINTENANCE

Draining the Air Tank

The frequency at which you should drain the air tank depends on the environmental conditions and the amount of operating time logged. The average draining frequency is every 2 to 3 days.

1. Place the air compressor above a container capable of holding water.
2. With compressed air in the air tank, slowly turn the drain valve knob to the forward (open) or straight position. The water in the air tank will drain out.
3. After all of the accumulated water has drained out, turn the drain valve knob to the closed or left position in order to avoid leakage.
4. Draining the air tank protects parts from rust and corrosion.

Cleaning or Changing the Air Filter

The air filter is designed to reduce noise and help prevent particulates in the air from entering and damaging the air compressor.

After being used for a period of time, the air filter will become clogged. This will reduce the air intake capabilities of the air compressor, reducing performance. Therefore, the air filter must be cleaned or replaced regularly.

1. Open the lid on the air filter, then remove the air filter element.
2. To clean the element blow off or brush off the dirt and dust.
3. If clogged, replace with a new air filter.

Testing for Leaks

Make sure all connections are tight. Do not overtighten.

A small leak in any hose or pipe connection will reduce the air compressor's performance.

To test for small leaks, spray a small amount of soapy water on the area suspected of leaking. If the soap bubbles, replace the broken part.

Cleaning

Clean items with a soft brush, or wipe with a moistened cloth using a biodegradable solvent.

Do not use flammable liquids such as gasoline or alcohol. Always keep parts clean from dirt and dust for better performance.

Pressure Switch

The pressure switch is factory pre-set to shut off at between 115 - 120 PSI and to re-start at between 85 -90 PSI

STORAGE

Before storing for a prolonged period of time:

1. Turn off the power supply.
2. Disconnect the power cord from the power supply and wrap the power cord around the air compressor handle to reduce the risk of damage.
3. Pull the relief valve and release all the pressure from the air tank.
4. Clean the air compressor to remove all dirt and dust.
5. Cover the air compressor with a cover to protect the unit from dust and moisture.
6. Do not stack or store any items on top of or around the air compressor. Damage could occur.

CAUTION

**TO REDUCE THE RISK OF ELECTRIC SHOCK,
DO NOT EXPOSE TO RAIN.**


STORE INDOORS.

TROUBLESHOOTING


PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTIONS
Pressure drop in the tank.	Air leaks at connections.	Let the compressor build pressure in the tank, to the maximum pressure if possible. Brush soapy water on air connections and look carefully for air bubbles. Tighten leaky connections. If the problem persists, contact the seller for further advice.
The unloader valve leaks when the compressor is idle.	Unloader valve seal is defective.	Let the air in the air tank flow out until all the pressure is released. Then remove the unloader valve plug and clean the valve seal. If necessary, replace the seal and then reinstall all components.
The compressor stopped and does not start.	The thermal protector turned on because the motor is overheating.	Check that the main voltage corresponds to the air compressor specifications. An extension cord that is too thin or too long can cause a voltage drop and cause the motor to overheat. Excessive use (over 1 hour continuous use) can cause the motor to overheat Allow the motor to cool down.
	Motor windings are burned out.	Contact Customer Support.
The motor does not start and makes a humming noise.	Capacitor is burned out.	Contact Customer Support
The motor does not start or starts slowly.	Low voltage supply to the motor.	Check that the main voltage corresponds to the air compressor specifications. An extension cord that is too thin or too long can cause a voltage drop.. Use heavy duty extension cords. Ensure that the air compressor is plugged into a fully functional power outlet
The compressor is noisy with metallic clangs.	Compressor head gasket or reed valve is damaged	Stop the compressor and contact the dealer.
The compressor does not reach the maximum pressure.	Compressor head gasket or reed valve is faulty.	Stop the compressor and contact the dealer.
The compressor doesn't seem to provide as much air as it did when new and/or the compressor cuts off within a much shorter time period.	The pressure switch needs adjusting.	Stop the compressor and contact the dealer.
	The tank is full of water due to condensation.	Open the drain valve and release the water from the tank.
The motor pump unit does not stop when the tank pressure reaches its maximum working pressure (75 PSI).	Pressure switch defective or needs adjusting.	Stop the compressor immediately and contact Customer Support.

SPECIFICATIONS

Electrical Circuit

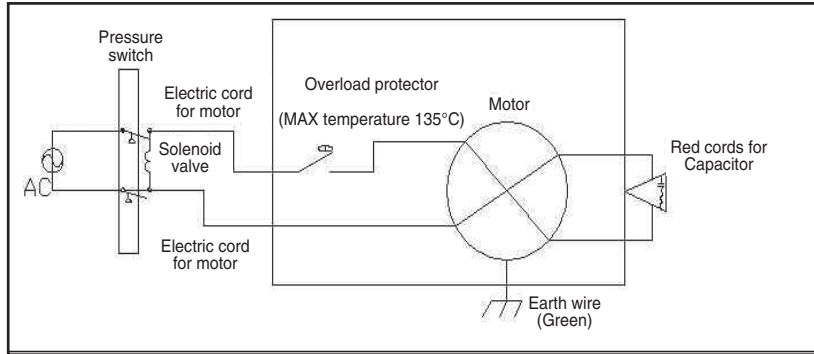

Air Passage Drawing

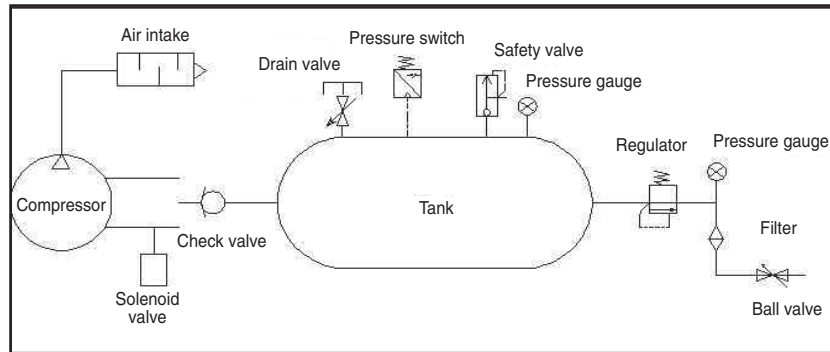

CALIFORNIA AIR TOOLS INC. LIMITED WARRANTY

This warranty is limited to Air Compressors distributed by:

California Air Tools, Inc.
8560 Siempre Viva Road, Unit 3
San Diego, CA 92154

Limited Warranty

California Air Tools Inc. will repair or replace, free of charge, to the original retail customer who purchased a California Air Tools, Inc. Air Compressor from an authorized dealer, distributor or distributor's dealer in North America.

This warranty does not transfer to subsequent owners.

California Air Tools Inc. will repair or replace, at its option, any parts of the portable air compressor that are proven by an authorized service center to be defective in material or workmanship under normal use during the applicable warranty time period as stated below. This limited warranty covers the cost of the replacement parts and labor for all defects when installed by an authorized service center. Transportation charges are the responsibility of the customer. Any part replaced under warranty becomes the property of California Air Tools Inc.

All parts replaced under warranty will be considered as part of original product, and any warranty on those parts will expire coincident with the original product warranty.

Limited Warranty Periods

Non-commercial / Non-rental (personal use by a retail customer):	1 year parts and labor
Commercial / Rental (usage for income, business use):	1 year parts and labor

The limited warranty period begins on the date of retail purchase by the original purchaser.

Disclaimers, Limitations of Remedies & Exclusions

This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

Disclaimer of Other Warranties

To the fullest extent permitted by applicable law, this limited warranty is exclusive and expressly in lieu of any and all other warranties, including, without limitation, any implied warranties of merchantability or fitness for a particular purpose or any other implied warranties that may arise from the course of dealing or usage of the trade. California Air Tools Inc. hereby disclaims and excludes all other warranties. To the extent that California Air Tools Inc. products are consumer products under applicable federal and state law with respect to any customer, the duration of any implied warranties (including but not limited to implied warranties of merchantability or fitness for a particular purpose) are limited to the shortest duration permitted by applicable law or the Limited Warranty period provided herein, whichever is longer.

Limitations of Remedies

California Air Tools Inc. shall not be liable to customer, or anyone claiming under customer, for any other obligations or liabilities, including but not limited to, obligations or liabilities arising out of breach of contract or warranty, negligence or other tort or any theory of strict liability, with respect to the air compressor or California Air Tools Inc. acts or omissions or otherwise. To the fullest extent permitted by applicable law, California Air Tools Inc. shall not in any event be liable for incidental, compensatory, punitive, consequential, indirect, special or other damages, including but not limited to loss of use, loss of income, loss of time, loss of sales, injury to personal property, or liability customer incurs with respect to any other person, or any other type or form of consequential damage or economic loss.

Exclusions

In addition to the foregoing disclaimers, limitations and terms, this limited warranty shall not apply to and does not cover accessories, nor does it cover products that are in any way subject to any of the following:

1. Improper setup, installation or storage.
2. Lack of proper maintenance and service.
3. Accident, damage, abuse or misuse.
4. Abnormal operating conditions or applications.
5. Repair or modification by customer or any third party without written consent of California Air Tools Inc.
6. Use under operating conditions or in applications not recommended by California Air Tools Inc.
7. Normal wear.
8. The use of accessories or attachments not recommended by California Air Tools Inc.
9. Acts of God.

The application of these exclusions will be determined at the sole discretion of California Air Tools Inc.

Registration

Warranty registration with California Air Tools Inc. is required on all products.

You can mail the enclosed registration form or register on-line.

How to Videos

California Air Tools provides "HOW TO VIDEOS" on our website WWW.CALIFORNIAAIRTOOLS.COM.

The "How to Videos" provide valuable information regarding set-up, operation and maintenance.

Please visit our website and view these videos for beneficial information.

Service or Parts

Warranty is also available by keeping and showing your original receipt from the date of purchase to an Authorized California Air Tools Service Center.

For all customer service inquiries call 1-866-409-4581 or visit

WWW.CALIFORNIAAIRTOOLS.COM

Go to the "Customer Service" Tab

Click on "Service & Parts" Button for the Fastest Service.

PRODUCT REGISTRATION

To register your product, please complete the information below and mail to the mailing address at the end of this page.

1. Personal Information:

Full Name (Include Middle Initial): _____

Mailing Address: _____

City: _____ State: _____ Zip Code: _____

Phone Number: _____

E-mail Address: _____

(Check here to receive product information and offers via e-mail)

(Check here to receive product information from other companies via e-mail)

2. Product Information:

Date of Purchase: _____ (MM / DD / YYYY)

Model Number: _____

Serial Number: _____ (Found on name plate)

Purchased Location: _____

Purchase Price: _____

Type of Primary Use for this Product: Home Recreation Emergency Rental Commercial

Other _____

Features Influencing Product Purchase: Brand Portability Power Rating Price Warranty

Other Features (describe) _____

What other Power Equipment are you interested in purchasing in the future? _____

Thank you for registering your product.

Mail to:
California Air Tools
8560 Siempre Viva Road, Unit 3
San Diego, CA 92154