

LIMITED WARRANTY

The manufacturer's warranty to the original consumer purchaser is: This product is free from defects in materials and workmanship for a period of one (1) year from the date of purchase by the original consumer purchaser. We will repair or replace, at our discretion, parts found to be defective due to materials or workmanship. This warranty is subject to the following limitations and exclusions:

1)	Limitation	This warranty applies only to products which have been properly
		assembled, adjusted, and operated in accordance with the instructions
		contained within this manual. This warranty does not apply to any
		product of Swisher that has been subject to alteration, misuse, abuse,
		improper assembly or installation, shipping damage, or to normal
		wear of product.
2)	Exclusions	Excluded from this warranty are normal wear, normal adjustments, and
		normal maintenance.

All transportation charges, damage, or loss incurred during transportation of parts submitted for replacement or repair under this warranty shall be borne by the purchaser. Should you have any questions concerning this warranty, please contact us toll-free at 1-800-222-8183. The model number, serial number, date of purchase, and the name of the authorized Swisher dealer from whom you purchased the product will be needed before any warranty claim can be processed.

THIS WARRANTY DOES NOT APPLY TO ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES AND ANY IMPLIED WARRANTIES ARE LIMITED TO THE SAME TIME PERIODS STATED HEREIN FOR ALL EXPRESSED WARRANTIES. Some states do not allow the limitation of consequential damages or limitations on how long an implied warranty may last, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may have other rights, which vary from state-to-state. This is a limited warranty as defined by the Magnuson-Moss Act of 1975.

Safety Precautions

- NEVER allow children to play in or around the Safety Shelter.
- NEVER store flammable materials or fuel in your Safety Shelter.
- Keep a flashlight(s) or other battery operated lights inside the Safety Shelter. Check or replace the batteries in these lights twice per year.
- Do not store any items in a manner that would block any of the Safety Shelter vents.
- We suggest stocking your Safety Shelter with provisions and supplies so that it is ready when needed.
- During a high wind event occupants <u>MUST</u> stay at least 3" away from the walls and door and remove all loose items from shelves and walls by placing them on the floor to avoid potential injury from debris impact.
- Do not stand on the shelf or use it as a step.
- Do not use the shelf as a seat.
- Recommended weight capacity 50 lbs.

Recommended Tools For Assembly:

- Leather Gloves
- Safety Glasses
- Flashlight
- (1) Torque Wrench Capable of 31 Ft-lbs
- (1) 9/16" Socket
- (1) 1/2" Open End Wrench or Socket Wrench

Tip: If you're adding this Accessory to an existing Safety Shelter, remove the appropriate original nuts and bolts from the Wall Panels and replace them with the hardware provided with the Accessory.

This Shelf is designed to be installed on one wall panel of ESP Safety Shelters.

Item #

1 2

3

4

Part #

19799

19828

20225*

20224*

Parts List

Side - Shelf, Left


Side - Shelf, Right

Description

Nut - Serr Flange, Hex 3/8-16

Bolt - Carriage 3/8-16 X 1

Shelf Base 20222 can be installed with the flange facing downward as shown or it can be installed facing upward.

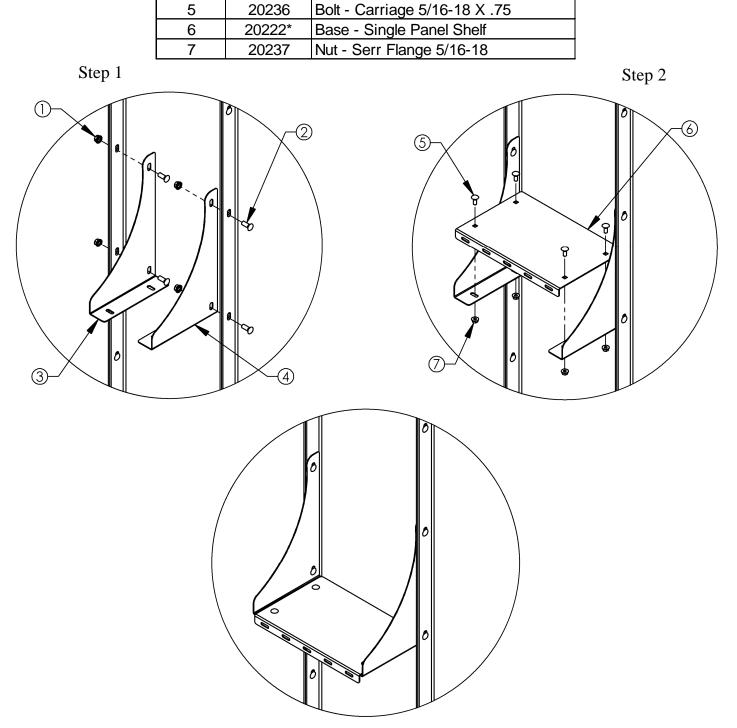


INSTALLATION INSTRUCTIONS:

- 1. Attach Left Side Panel 20225 and Right Side Panel 20224 to the flanges of one of the wall panels using 3/8-16 Nut 19799 and 3/8-16 X 1 Bolt 19828. Make sure to tighten this hardware to 31 Ft-lbs.
- 2. Next, assemble Shelf Base 20222 to the Side Panels using 5/16-18 Nut 20237 and 5/16-18 X .75 Bolt 20236.

ALSO AVAILABLE

Visit www.ESP.swisherinc.com for details.

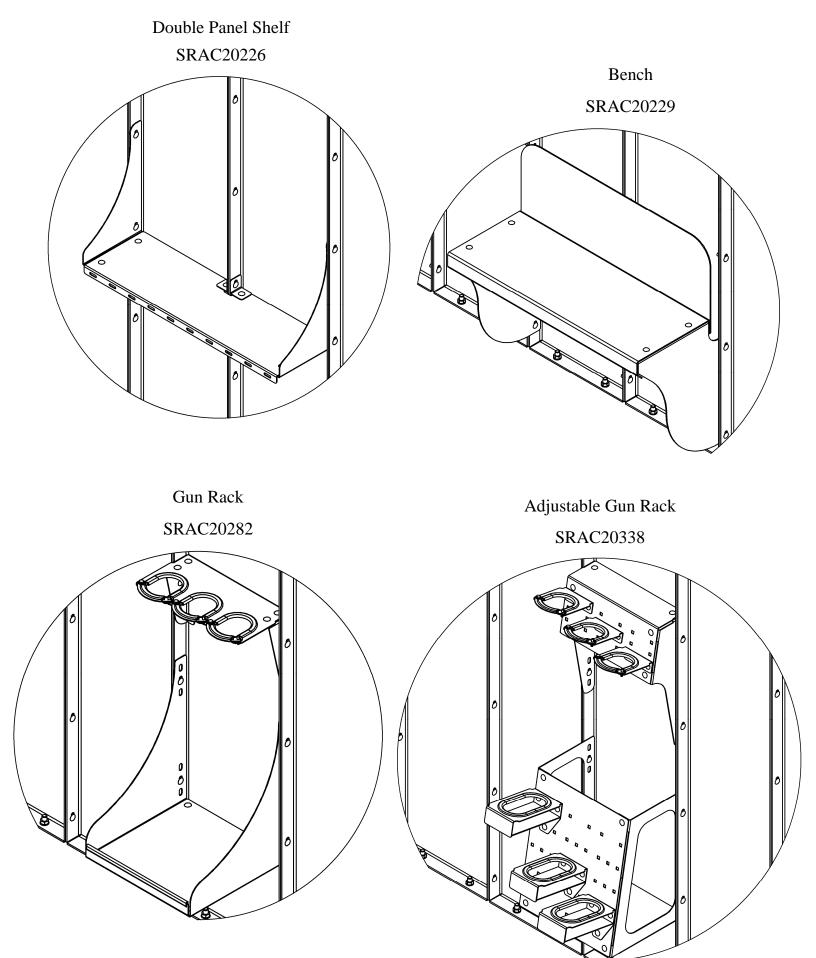

ALSO AVAILABLE

Visit www.ESP.swisherinc.com for details.

Dorcy Motion Sensor Light

SRAC20389





Kaito Emergency Radio

SRAC20390



Eva-Dry Dehumidifier, up to 500 cu-ft

SRAC19840



NOTES:

