

HUMANE CONTAIN

Model X-10 Rechargeable, Multi-Function Electronic Dog Fence Ultra-System



INSTALLATION, OPERATING AND TRAINING MANUAL

Please read this entire manual and study all illustrations before you begin installing your system

Your new Humane Contain TM, model X-10 Professional Series Electronic Dog Fence, represents the most advanced state of pet containment technology available today. This all new product features a super advanced transmitter, ultra-slim, rechargeable, multi-function collar and our proprietary Pulsed Proportional Stimulus TM System, a unique combination of progressively increasing sound and shock stimuli to train your pet quickly and safely. The X-10 is designed to be EFFECTIVE, RELIABLE and most of all, HUMANE.

Effective: Because IT WORKS!

Reliable: Because it is manufactured to the highest quality

standards.

Humane: Because it uses a completely new type of stimulus that

focuses on teaching rather than punishing your pet.

Please read this manual thoroughly to learn how to most effectively, and safely use this advanced system to create a safer, more secure environment for you, your family and your cherished pet.

Table of Contents

PART 1 – INTRODUCTION
SYSTEM COMPONENTS:
KEY FEATURES:
PART 2 - DETAILED SYSTEM DESCRIPTION
TX-1 BASE STATION TRANSMITTER7
RX-10 ULTRA-SLIM RECEIVER COLLAR
BOUNDARY WIRE
PART 3 - STEP BY STEP INSTALLATION
Planning Your System Layout
Assembling the Required Tools
Setting Up the Base Station Transmitter
Testing the Receiver Collar Radio Function
Preparing Twisted Wire Lengths
Laying Out the Boundary Wire
Testing Your System
Burying the Boundary Wire
Placing the Boundary Flags
Fitting the Receiver Collar to Your Dog
PART 4 - TRAINING YOUR DOG
PART 5 – IMPORTANT CAUTION NOTICES
PART 6 – WARRANTY & CUSTOMER SUPPORT
PART 7 – TROUBLESHOOTING PROCEDURES
Testing Base Station Transmitter
Testing Humane Contain Collars
Testing the Containment Loop
Repairing a Broken or Intermittent Containment Loop 30
ACCESSORIES

PART 1 – INTRODUCTION

SYSTEM COMPONENTS:

Your X-10 System includes the following items.

- A. (1) Model TX-1 Transmitter Base Station
- B. (1) AC Adapter for Transmitter (16 VDC)
- C. (1) Model RX-10 Receiver Collar
- D. (1) Collar Charger
- E. (1) AC Adapter for Collar Charger (9 VDC)
- F. (500 feet) High Quality Boundary Wire
- G. (50) Boundary Flags
- H. (3) Improved Waterproof Wire Splices
- I. Hardware Kit (for mounting your transmitter)



KEY FEATURES:

Pulsed Proportional Stimulus TM: Our unique Pulsed Proportional Stimulus TM System is what makes the Humane Contain TM Brand stand apart from all other electronic dog fence systems made. A computer chip inside the RX-10 receiver collar actually detects the distance of your pet from the boundary wire by measuring the relative radio signal strength. It then applies a combination of sound and shock stimuli in inverse proportion to the distance from the boundary wire. In other words, the closer your pet is to the boundary wire, the more sound and shock stimulus is applied.

How Pulsed Proportional Stimulus Works:

Stimulus Pulse Rate

(Increases as dog approaches the boundary wire)

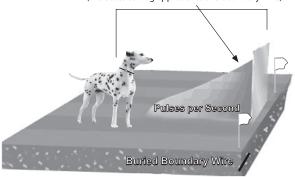


Figure 2

The unique shock stimulus used by your X-10 system is delivered in short, intense pulses, not a continuous shock. The pulsed stimulus gives your dog a chance to think and avoids sending the animal into panic.

As your dog first comes within the outermost boundary area, a slow beeping tone is sounded and a short duration shock pulse is applied at a slow pulse rate. This first pulse is a FULL VOLTAGE stimulus but, it is of very SHORT DURATION. It will immediately get your dog's attention but, it is so short that your dog will probably not perceive it as painful.

If, instead of retreating, your dog continues to travel closer to the boundary, the shock pulse RATE continues to increase along with an increasing rate of sound pulses, until they are delivered in such rapid succession as to be unbearable to your pet, encouraging retreat from the boundary into the "safe haven" of your yard. The use of progressively increasing shock pulse rate is a very humane technique because it allows your pet to decide for itself how much stimulus is required to initiate the retreat behavior.

(Note that some competing systems use a "tone only" warning zone before applying shock. This sounds like a good idea, but we have found it to be ineffective. Often the dog will stand in the warning zone waiting for the tone to stop. The tone will drain the battery and stop when the battery runs down, letting the animal know it is now safe to escape!) The HC-8000 Plus is not a zone type system. We apply a short shock stimulus at the very first correction along with the sound stimulus. This will discourage your dog from standing in the boundary field waiting for the tone to stop. However, because we use pulsed stimulus, the initial shock will not be traumatic to your pet. If your dog tries to move forward, pulse rate is immediately increased to encourage retreat behavior.

Progressive Training Tones: The use of progressively increasing sound pulses along with the shock pulses tends to psychologically intensify the perceived stimulus, more quickly teaching your dog that the irritating

sensation increases as he (or she) gets closer to the boundary. That is why you will find that the tone generated by our RX-10 collar is louder than the non-progressive tones used on competing systems and that the sonic pulse rate increases just as the shock pulse rate does as your dog moves closer to the boundary wire.

Digital Signal: The X-10 sends a digital code embedded in the radio signal that is picked up and digitally decoded by a computer processor in the receiver collar. This reduces the possibility of false shocks caused by interfering radio signals.

Visual and Audible Cable Break Indicators: You are always assured that your boundary wire is intact because the Base Station Transmitter is equipped with both visual and audible cable status indicators to alert you in the case of a cable break.

Optional Battery Back Up: AAn optional, rechargeable transmitter battery may be purchased as an accessory from **www.HighTechPet.com**. With this option, if there is ever an electrical power failure, your TX-1 transmitter will automatically switch over to battery power. This maintains the boundary field and keeps your pet contained throughout the power outage. When power is restored, the battery will automatically recharge.

50 Acre Range: TThe powerful transmitter delivers enough energy to activate a boundary wire more than ONE MILE long. Allowing you to surround up to 50 acres of property. Note that your system includes 500 feet of wire, enough to encircle approximately 0.4 acres. 50 acre coverage is based on wire length of 6,000 linear feet and will require the purchase of additional boundary wire from **www.hitecpet.com**.

Water Resistant Transmitter & Collar: Both the TX-1 Base Station Transmitter and the RX-10 Radio Collar are internally sealed to resist moisture. While we do not recommend full immersion for either of these components, they are suitable for outdoor use in all weather conditions.

For Dogs 10 lbs. to 200 lbs. TThe X-10 system is suitable for nearly all dog breeds. A common misconception is that larger dogs are more resistant to shock stimulus than smaller dogs. In reality, the size of your dog has little to do with the way the animal reacts to the stimulus. Reaction depends mainly upon your dog's temperament. The type of shock employed by the X-10 is quite localized and affects only the nerve receptors within about a ½ inch radius of the stimulus probes. Your dog's mass is not a significant factor. It is also important to note that the shock is high voltage but, very low current. It does not produce enough energy to cause damage to skin or muscle tissue. The stimulus affects nerve receptors only. We do however, recommend that you check your dog's neck periodically to make sure that your pet does not develop an irritation to the metal probes that in very rare instances causes skin redness or mild infection. See the **Skin Conditions**: section of this manual

PART 2 - DETAILED SYSTEM DESCRIPTION

TX-1 BASE STATION TRANSMITTER



Figure 3

General Description

The Model TX-1 Base Station Transmitter contains numerious advanced features not found on competing systems. The TX-1 emits a radio signal that contains a special, digital code. This code must be received and recognized by the receiver collar before the collar will administer any stimulus to your pet. The TX-1 weather sealed and is designed for indoor or OUTDOOR use. The many super advanced features of your TX-1 Transmitter are as follows.

System Status Display

The fully illuminated display panel gives you the complete status of your Base Station. On the display, the left column tells you the function being monitored. The middle and right columns tell you the status of that function.

DISPLAY FUNCTIONS:

SYSTEM: This is the overall status of your base station. If everything is functioning normally the "OK" lamp to the right of the "SYSTEM" lamp will illuminate. If there is any malfunction, the "FAIL" lamp will illuminate.

BATT: Back-up battery charge indicator. This indicator is only functional if there is an optional, rechargeable back-up battery installed. When the base station is in battery mode and the battery has a full charge, the "OK" lamp will illuminate. If the charge is low the "LOW" lamp will illuminate indicating that the battery is charging.

LOOP: Continuity of your boundary wire loop. The "OK" lamp indicates that there is no break and your boundary wire is conducting current in a continuous loop. If there is a break in your boundary wire, the "LOOP" and "BREAK" lamps will flash and the audible alarm will sound indicating that the boundary field is not functioning and needs repair.

POWER: This indicates the power mode, either AC or Back-up Battery. The TX-1 Base Station uses a "smart" power system. If you have the optional Back-up Battery installed and there is a power failure, the system automatically switches to battery mode to keep the boundary field energized and your dog contained. In this mode all indicator lamps flash to conserve battery power. When power is restored, the system automatically switches back to AC mode and begins recharging the Back-up Battery. The operating time of the Back-up Battery depends upon your field strength setting and the length of your boundary wire. Typical installations will operate for a full day in Battery Back-up mode.

Field Strength Control

You can control the distatnce from the boundary wire at which the receiver collar will begin to activate by use of the "FIELD STRENGTH CONTROL" dial. Turning the dial clockwise increases transmitter output power and therefore, increases field width. The maximum field width possible will depend upon your particular installation. It is affected by the depth at which you bury the wire and the total length of wire used. The greater the wire depth and length, the less maximum field will be available. Generally, we recommend that you bury your boundary wire no more than 4 inches deep and use no more than 6,000 feet of total boundary wire. Typical installations yield a maximum possible field width of approximately 15 feet. We recommend that you set the Field Width for at least 8 feet. The wider your boundary field, the more time

and distance your dog has to properly react to the system. However, if yard space is limited, the field width can be reduced to just a few feet by turning the Field Width dial counter-clockwise. When you vary the effective field width of your system, the X-10's unique Pulsed Proportional Stimulus System will automatically adjust to the new field strength setting.

Power Boost Switch

This feature boosts the available output power of your transmitter for very large areas or to overcome special environmental conditions. We recommend that you use the TX-1 in "NOR" (normal) mode for wire lengths less than 2,000 feet. If you are using more than 2,000 feet of wire you may find the "MAX" mode useful in increasing the maximum possible field width.

In some cases, rare environmental conditions such as a high content of iron in your soil may reduce your field width. If you find your system does not achieve acceptable field width in your particular installation, using the "MAX" setting, even for smaller areas, may overcome the problem.


Quick Connect Wire Terminals

At the bottom of the Base Station Transmitter you will find a hinged door which gives you access to two quick connect wire terminals. The boundary wire easily plugs into these terminals by simply depressing the tab and inserting the wire end. The wire should be stripped by ¼ inch at the end before insertion. No other preparation is required.

Optional Rechargeable Back-up Battery

One of the unique features of your TX-1 is the optional, rechargeable Back-up battery. The rechargeable battery unit is sold separately. Use of the back-up Battery will insure that your X-10 system continues to contain your dog during a power outage. When power is restored, the system will automatically recharge the battery so, you never have to worry about changing batteries. The back-up battery option is available from the retailer from whom you purchased your X-10 system and is also available online at **www.hitecpet.com**. If you choose not to purchase the Back-up Battery option your system will work perfectly with the AC adapter as long as you have uninterrupted household wall current available.

RX-10 MULTI-FUNCTION RECEIVER COLLAR

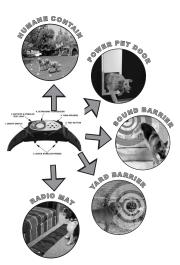

The heart of our Humane Contain electronic fence technology lies here in the super advanced, Model RX-10 Radio Receiver Collar. The miniaturized, microprocessor driven circuitry is protected by a rugged, water resistant casing. The multi-function feature of this collar allows it to operate the containment system as well as several other High Tech Pet products including our Power Pet™ fully automatic dog and cat doors, Sound Barrier™ and Yard Barrier™ sonic fences and Radio Mat™ electronic scat pad. You may add any of these compatible items now or in the future. Look for them at the retail store where you purchased your X-10 system or purchase them online at www.hitecpet.com.

COLLAR FUNCTIONS

The RX10 collar is a new design that incorporates years of engineering and development. It may be a little different that what you have seen in the past. First lets look at the figure below.



Figure 4

- ON/OFF SWITCH: During normal operation this switch remains ON.
 Turn OFF only when the collar is being stored and will not be used for days.
- TEST BUTTON: Pressing this button tests the battery for charge status and verifies operation of the shock circuit.

NOTE: THE TEST BUTTON TRIGGERS ACTUAL STIMULUS OUTPUT. DO NOT USE WHEN THE COLLAR IS ON THE ANIMAL. Do not touch the probes when depressing the Test Button.

- 3. **TEST LIGHT:** When the collar is in normal mode this light blinks with every shock pulse generated. When the collar is in test node, illumination indicates good battery condition.
- 4. **TONE SPEAKER:** Emits an audible training tone whenever a shock pulse is being generated.
- 5 **SHOCK STIMULUS PROBES:** Contact the skin of the pet's neck to administer the shock training stimulus.
- ULTRASONIC TRANSDUCER: Built-in ultrasonic generator emits a continuous ultrasonic signal to control optional, compatible petoperated accessories including Power Pet door™, Sound Barrier TM and Yard Barrier™.

TESTING YOUR RX-10 COLLAR

Before using the collar for the first time, please charge the battery for 4 hours or more. Consult the Charging section below for instructions.

Caution: This test generates actual shock pulses so make sure you remove the collar from your pet and do not unintentionally touch the shock probes!

Periodically, remove the collar from your pet and perform the following Self Test with the power switch ON. Hold the collar by the case without touching the shock probes, and press the TEST button. This initiates a self-test of the battery and shock circuitry, with the following indications.

TEST LIGHT:

- If the test light is SOLID Red the battery is OK.
- If the test light is BLINKING Red the battery is LOW. Replace the battery soon. There may be less than 24 hours of battery left.
- If the test light is NOT ILLUMINATED the battery is completely
- depleted or the collar has failed. Immediately recharge the collar for 5 hours. When fully charged, repeat the test again. If the test light is still not illuminated the collar has failed.

Note: Completely depleting the battery is undesirable and should be avoided.

TONE SPEAKER:

- If the speaker produces an audible tone or beep, the shocking circuit is functioning properly.
- If there is no tone or no beep, the shocking circuit is not working and the unit should be repaired.

The water resistant casing is moisture sealed for safe operation in all weather conditions. If the TONE SPEAKER gets wet, you will notice that the tone output becomes muffled or stops altogether. This is due to water on the outside of the speaker face. It does not mean that the inner works have gotten wet. Once the unit dries, the sound will return to normal.



CHARGING THE BATTERY:

Set up the charger by attaching the 9 Volt DC adapter to the charger as shown. Plug the power pack into a wall outlet (115 VAC). A red light on the charger indicates it is powered. Thereafter, you can leave the power pack connected full time.

Figure 5

It is not necessary to turn the collar ON/

OFF switch to the OFF position while charging. Orient collar and charger as shown, with the charger RELEASE button facing you and the collar TEST BUTTON facing you. Then press the collar onto the top of the charger until it latches in place. The charger light will turn green and the collar will automatically begin charging. When the collar is fully charged and the light turns red, press the RELEASE button on the front face of the charger.

CHARGER INDICATION

Green - Charging Red - Completed

Charging time is nominally 3 to 5 hours, however you may leave the collar in the charger indefinitely. When the battery is 100% recharged the light on the charger will turn red again. It is recommended but not critical that you recharge the battery to 100% each time. If you stop charging early, just be sure to test the collar once a day to determine when the battery is low again.

During initial training when the pet is learning where the boundaries lie, the collar battery will discharge more quickly due to the large number of shock pulses. This is because the collar draws more current when shocking than when idle, so expect only about a week of use

per charge in the initial stages of use. Once the pet has learned the boundary, a battery charge should last two to three weeks or more on average. Battery life between charges is highly dependent on your pet's behavior. Some pets will always require shocks to remind them where the boundaries lie. Others will avoid the boundary completely. When your pet is past the training phase we suggest you recharge on a fixed schedule. Choose an interval that is about half the time it takes for the battery to discharge to it's LOW indication. It is better to recharge before the battery discharges to the LOW condition.

FITTING THE COLLAR TO YOUR DOG'S NECK

With the ON/OFF switch in the ON position, attach the collar around the pet's neck. Face the collar down and adjust the belt size to securely press the SHOCK PROBES against the skin of the pet's neck. Do not over tighten or choke the dog, but make sure the probes are in constant contact with the skin. Otherwise the shock may become intermittent and confuse your dog. Good training requires consistent stimulus. Once the strap is adjusted to a good fit, you may cut off the excess strap length.

BOUNDARY WIRE

Even the boundary wire used on your X-10 system is unique. The copper alloy wire and insulating coating are all made specially to our custom specifications. We have designed it to be an efficient radio frequency broadcast conductor, with a mechanically strong core and an extra thick, extra tough, outdoor grade insulation that resists sunlight and moisture. If you need to expand your boundary field, it is acceptable to purchase standard 18 or 20 gauge "hardware store" quality wire. However, we recommend that you use our custom wire to insure the best quality and performance at the best value pricing. Boundary extension kits are available from www.hitecpet.com and contain a 500 foot spool of wire, 50 extra boundary flags and 2 improved waterproof wire splices. To locate the item go to www.hitecpet.com and search on "Wire Flag Kit".

PART 3 - STEP BY STEP INSTALLATION

STEP 1: Plan Your System Layout

This is the most important step. Be sure to take the time to plan carefully. This will avoid time consuming corrections to your installation. Before beginning installation of your system we recommend you make an aerial sketch of your yard such as the one shown in Figure 6. Your sketch should include all buildings, large plants, trees, walks, driveway, pool and other important details. Then sketch in where you plan to place the boundary wire. Make sure the wire makes a continuous loop.

SAFETY TIP:

Since you will only be burying the cable 4 inches deep at maximum, it is unlikely that you will disturb power or phone lines. Still, we recommend that you contact your utility companies to find out the location of all buried wires, mark them on your sketch and avoid running the boundary cable in these areas.

TYPICAL LAYOUT FOR BOUNDARIES WITHIN BOUNDARY

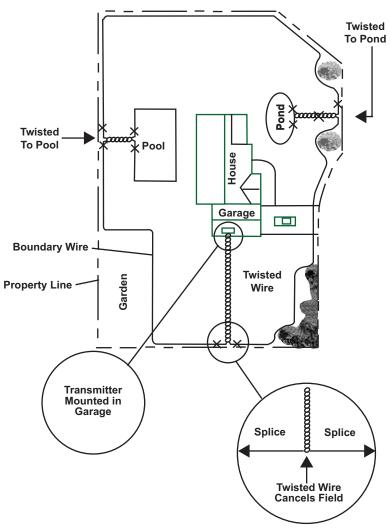


Figure 6

Calculate the total length of wire required to ensure that you have enough to complete the installation. Remember that twisted wire counts as twice its length since there are two strands. Figure 7 shows a basic wire length calculation.

In preparing your layout, note that you will need to allow for a field width of at least 3 feet (preferably 6-10 ft.) on each side of the boundary wire. Your dog will need at least another 5 to 10 ft. for a safe roaming area. Avoid making passageways too narrow or your dog may be hesitant to use them.

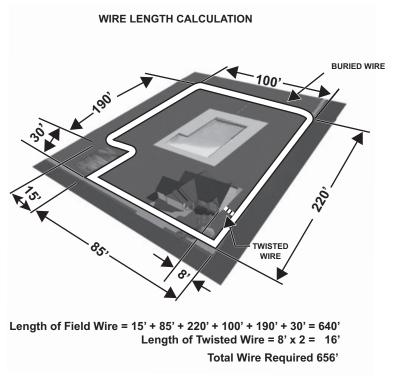


Figure 7

For the system to work properly, the wire must make a continuous loop. The signal is transmitted from one terminal of the transmitter through the wire and back to the other terminal. Twisting two adjacent sections of the wire loop cancels the signal along the twisted length. So use the twisted wire from the transmitter out to the exterior loop as shown in Figure 8. This allows the dog to cross the area without receiving a correction. Use other lengths of twisted wire to connect smaller boundaries around plants, pools and other pet restricted areas.

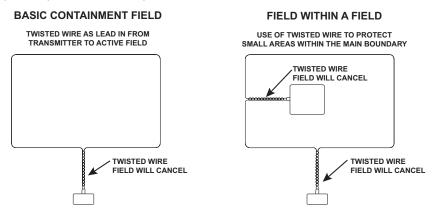


Figure 8

Single Loop Limitations

Note however that the basic single loop containment layouts shown in Figure 8, cannot have a gate or opening in the fence where the dog can walk or be transported out of the loop. To let the dog out of the basic containment field, you must turn off the base transmitter, or interrupt the electrical signal flowing through the wire by inserting a switch in the loop. Using a switch in the loop creates a break in the wire which will be detected by the base transmitter and will result in an audible alarm as long as the switch is open. However it does work and the dog will learn that the sound of the alarm means the containment field is off.

Adding a GATE

If you want a permanent opening or gate in the containment field, you must use what is commonly called a double loop, as shown in Figure 9. Carefully follow the current around the wiring and you will realize that this layout is actually still a single loop of wire that is folded back upon itself. If the gate is narrow, you may have to reduce the boundary field next to the gate. This can be done by triangulating or folding the wire back on itself for a short distance as shown inside Figure 9. Do not bury the wire near the gate until after the entire system is working and adjusted for the proper field strength in all areas of the installation. In double loop installations, it is very important to have the inside and outside wires separated

MAKING A CONTAINMENT FIELD WITH MULTIPLE GATES

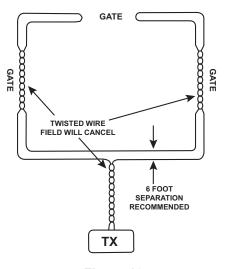


Figure 10

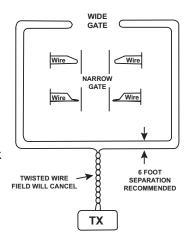


Figure 9

by at least 6 feet all around the containment area if you want a normal containment field width of 3 to 10 feet. Use 12 feet of wire separation if you desire a wider containment field width - up to 20 feet. Using less wire separation reduces the field strength and requires the dog to be closer to the wire before receiving a correction. Whatever wire separation you choose, maintain a consistent separation between the inside and outside wires if vou want a consistent correction distance. Remember the double loop requires almost twice as much wire, and burying of that wire, as a single loop, so plan accordingly.

Once you have chosen to use the "double loop" layout, you can

place as many other openings/gates in the boundary field as you wish by twisting the inner and outer wires together, or simply bringing the two wires together tightly. This concept, shown in Figure 10.

TIP: The amount of twist and the direction of the twist is of little importance, as long as the wires are touching each other along the entire "gate" section.

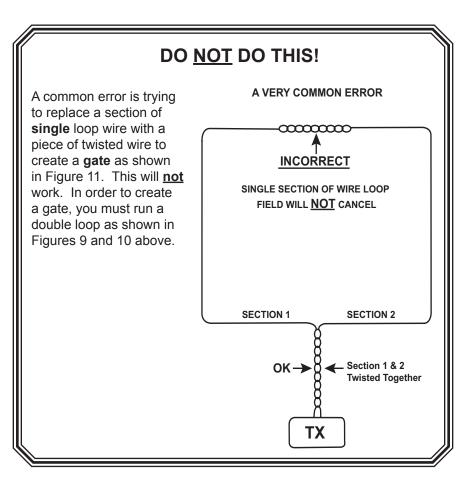


Figure 11

STEP 2: Assemble the Required Tools

Here is the list of tools you will need.

- 1. Straight edge spade or power edger
- 2. Wire cutter/stripper
- 3. Power drill with 1/8" drill bit
- 4. Phillips screwdriver or Phillips driver bit for your drill

STEP 3: Set Up the Base Station Transmitter Mounting:



A. Separate Mounting Base From Electronics Console.



B: Mount the Mounting Base to Your Wall.



C: Install Optional Rechargeable Battery if Desired.



D. Reassemble Mounting Base and Electronics Console by Pushing the Two Pieces Together Firmly.

FIGURE 12

Indoor mounting of the TX-1 Base Station Transmitter is preferred. However, if your layout prohibits indoor mounting, it is acceptable to mount the TX-1 outdoors. Although the casing is water-sealed, you should still choose a location that is not directly exposed to rain, wind and other adverse weather.

The TX-1 casing is assembled in two parts, the mounting base and the electronics console. In the package, they are assembled together. You must first separate the mounting base from the console. This is easily done by simply pulling them apart. Hold the mounting base in one hand and the console in the other and firmly pull apart. The snap closures will separate.

- A. Using the four mounting screws provided, mount the Mounting Base in its desired location.
- B. If you have purchased the optional back-up battery, install it in the back of the electronics console by plugging in the connector and snapping the battery into place. If you did not purchase the back-up battery it is easy to install it at a later date should you choose to do so.
- C. Line up the snap in mounting posts in the Mounting Base with the holes in the Electronics Console and push firmly until the two pieces snap together.

AC Adapter: Plug the 16 VDC adapter into a standard 115 Volt outlet and connect the DC plug into the receptacle on the lower right of the Base Station Transmitter.

STEP 4: Test The Receiver Collar Radio Function

You should test the receiver by installing a 24 inch long test loop of wire across the quick connect cable terminals. Set the Power Boost switch to normal (NOR) and switch on the Base Station Transmitter. Bring the receiver close to your test loop. A beeping sound emitted by the receiver collar indicates the system is working properly. Note that with such a short loop the range will only be a few inches.

STEP 5: Prepare Twisted Wire Lengths First

Prepare the twisted lengths of wire. From your system layout sketch, determine the length required for each twisted pair. Cut two equal lengths of wire for each required twisted pair. With the pair of wires side by side, put one end of each wire in a power drill and spin the wires until there is approximately one twist per inch of wire. Do not over-twist because this could damage the wire. Repeat for each required pair.

STEP 6: Layout the Boundary Wire Above Ground

Before burying your boundary wire, we recommend that you run the complete loop of wire, make all connections and use the receiver collar to fully test the system with the wire above ground. Referring to the sketch you made of your system layout, run and connect the wire loop above ground, connect it to the Transmitter Base Station.

Installation Tip: Leave a little (about 15 inches) slack in the wire periodically along the perimeter and at the corners of the layout so you have a little extra wire when needed to repair a break in the loop. Wind the 15 inch slack into a 5 inch diameter coil and bury it with the wire. Choose locations for the slack that are easily identified by a terrain feature and make a map of them.

Splicing the Boundary Wire: You may find the included improved waterproof wire splices useful in connecting individual lengths of wire or twisted wire. To use these connectors:

1. Push the two ends of the wires into the outer two holes in the splice. View from the bottom to make sure the wires are fully inserted.







2. Using pliers squeeze the top black button down solidly until it bottoms out.







Additional splices are available from www.hightechpet.com

STEP 7: Test Your System

Switch the Base Station Transmitter ON. Take your Receiver Collar and walk the entire boundary ensuring that the collar continues to beep along the entire perimeter. Also check the lengths of twisted wire to make sure that the field is inactive in the areas where they are used. If the collar picks up a signal from the twisted length, the basic layout is probably incorrect -- review the discussion of single and double loop layouts. If you are using a single loop layout, twisted wire can only be used at the base station, or at the feed from the primary loop to another primary loop (example: small loop within a large loop).

STEP 8: Bury the Boundary Wire

You do not have to bury the wire for the Humane Contain System to operate however, for protection of the wire, we recommend that you bury it at least 2 inches, and no more than 4 inches deep. Using a flat spade or rotary blade power lawn edger, make a narrow trough around the path of the loop. Using gradual turns at the corners will produce a more consistent signal field. Because of its advanced digital electronics, stray radio signals are unlikely to cause false activation of the collar. However, we recommend that you stay at least six feet away from electrical, telephone, cable TV and other buried wires. These can cause attenuation or dead spots in your field. Large metal objects may create reflected signals from the boundary wire itself. You should avoid running the wire near such structures. If your neighbor has an electronic dog fence you should bury the wire at least ten feet away.

Crossing a Driveway or Walk

When crossing a driveway or sidewalk, you may be able to find an expansion joint into which you can place the wire. Remove any calking material in the joint, place the wire and re-caulk. If an expansion joint is not available, you can make a ½ inch deep narrow slit across the drive or walk using a circular power saw and masonry blade. Place the wire in the slit and seal with outdoor silicone caulk of matching color. Use asphalt sealant for asphalt driveways. Another option is High Tech Pet's new optional Driveway Traverse Strip, which easily crosses driveways and walks with your electronic fence wire. This durable rubber slit attractively covers and protects the pet fence wire. You can drive over it, walk over it, even mow over it with no damage to the underlying boundary wire. Made of super durable elastomer, that will last years and years, it takes only minutes to install. To order, go to www.hightechpet.com and search "driveway traverse strip".

Crossing Gravel

When crossing gravel, run the wire through a hose or PVC pipe and then bury at least three inches deep.

Crossing Water

To cross a stream or body of water, run the wire through a hose or PVC pipe. Anchor each end using large rocks or other stationary objects.

STEP 9: Place the Boundary Flags

Boundary flags are provided so that your pet can easily see the boundary perimeter. This is especially important during training. Flags should be placed along the entire perimeter spaced no more than ten feet apart. Using a fully matching color. Use asphalt sealant for asphalt driveways.

STEP 10: Fit the Receiver Collar to Your Dog

- A. For the receiver collar to properly apply the corrective shock stimulus, it is very important that the electrodes make good contact with the animal's skin. Fur between the electrodes and skin can greatly reduce the amount of stimulus transmitted to your dog. For this reason, we recommend that you shave the fur under your dog's neck where the electrodes contact the skin.
- B. Place the collar around your dog's neck with the receiver housing at the bottom.
- C. Fit the strap as snugly as possible without restricting breathing.
- D. Make sure both electrodes are in good contact with your dog's skin. Use of a little skin lotion on your dog's neck will improve contact.
- E. Once you have determined the proper fit, mark the strap and cut off the excess length.

PART 4 - TRAINING YOUR DOG

Training your dog will require use of a separate restraining collar and short training lead. Do not use the RC-8 radio receiver collar as a restraining collar. Structure your training program to three, fifteen-minute sessions per day, EVERY DAY until your dog is fully trained. Stick to this program consistently but, do not train for more that fifteen minutes at a time or you risk losing your dog's attention and the training becoming counter productive. Remember that the most important elements in teaching a behavior are consistency and repetition.

STAGE 1 TRAINING

Stage 1 training takes place in the outer edge of the boundary field.

- A. Choose a Command: You should choose a specific verbal command to instruct your dog to retreat, such as "Retreat," "Back" or "Home." Use this command exclusively and consistently throughout the training.
- B. With boundary flags in place, field fully operational and a fully charged Receiver Collar on your dog, use the training lead to escort your dog into the outer edge of the boundary field. When you hear the beeping tone, utter the retreat command while firmly tugging on the lead and lead your dog into the safe zone. Use encouraging words such as, "Good Dog!" Praise and pet your dog. You may also wish to give your dog a food treat.
- C. Repeat this stage for fifteen minutes each session until your pet instinctively and immediately retreats the moment the training tone is heard.

STAGE 2 TRAINING

24

In Stage 2 training you will lead your pet right up to a boundary flag introducing the most rapid pulse rate stimulus. As unpleasant as this stage may seem, it is extremely important that you teach your pet how to react to the intense stimulus. Otherwise, your dog may become confused and cower in the correction field or instinctively run the wrong way through the field. Bear in mind that you do not want to let your dog in on the knowledge that the stimulus field is only a few feet wide. Let him think it continues forever.

- A. With the training lead tightly in hand, escort your dog right up to the boundary flag where the stimulus will be most intense.
- B. The instant your dog reacts, utter the retreat command and escort your dog into the safe zone. Use encouraging words, praise and pet your dog and give the animal a treat as before.

- C. Repeat this stage for fifteen minutes, three times per day until there is no doubt that your dog has "Got it," observing your dog's resistance to entering the boundary field or trying to retreat before the stimulus is received. These are good signs.
- D. Observe your pet: Once you are certain that your pet will INSTINCTIVELY retreat at the first training tone, allow the animal to roam freely and observe his behavior. Make sure that you see him stop at the boundary flags on his own. If your dog shows the slightest sign of confusion or stubborn behavior, continue the training program using the lead. It's okay to return to Stage 1 training if you think it is appropriate.

PART 5 - IMPORTANT CAUTION NOTICES

Dogs are Unpredictable: Because individual dogs have unique temperaments, there is no way of knowing how your dog will react to its introduction to the training program. For your safety and your dog's, initial training must take place using a training lead so that you keep complete control over the situation. Also realize that an aggressive animal could turn against the handler upon receiving the shock stimulus. Therefore, if you feel your dog has an aggressive behavior or has ever exhibited evidence of such behavior, we strongly suggest that you consult a certified animal behaviorist before using this product as a training aid.

Skin Conditions: A small percentage of dogs experience delicate skin conditions such as dermatitis, eczema and skin allergies. Prolonged contact with the probes may irritate these conditions leading to sores or skin infection. We recommend you check your dog's neck often to ensure that no such condition is evident. If your dog has a history of sensitive skin, eczema, skin allergies or rashes we recommend that you do not use an electronic fence collar to contain the animal. If you do observe a skin irritation, take your dog to a veterinarian who may prescribe a local ointment to clear up the condition. Bear in mind that it is not possible for the shock stimulus emitted by the RC-8 collar to directly damage your pet's skin. The electrical current output is simply too low to cause burning, or any other type of cellular, skin or organ damage. The stimulus excites nerve receptors only.

Neurological Conditions: In extremely rare cases, animals may have neurological disorders such as epilepsy. You should be certain that your dog does not suffer from such a disease before using any type of sonic, or shock stimulus training collar. Also, make sure that your dog does not suffer from heart disease or any other chronic condition and be assured that your pet is in generally good health before using this product.

PART 6 - WARRANTY & CUSTOMER SUPPORT

Your Humane Contain Model X-10 is the best made electronic fence you can buy and it's covered by the best warranty. If anything goes wrong with your product within one year of purchase, you may return it to us for a free replacement. For customer support, where you can get product information, warranty support, tech support and order accessories, visit:

www.hightechpet.com

PART 7 – TROUBLESHOOTING PROCEDURES

If any part of the system is not working use the following troubleshooting procedure to isolate the failed component. Then contact High Tech Pet Products Customer Support to get it repaired or replaced.

1) Test Base Station Transmitter

- a) First disconnect the boundary wire loop from the base station transmitter by lifting the small door on the bottom of the transmitter and pressing the two wire connection buttons (one is black the other is red) while pulling gently on the wires
- b) Apply power to the transmitter and verify that the BREAK DETECTION circuit indicates a break. There will be an audible alarm and a message on the transmitter face. If a break is NOT indicated, the base station transmitter has failed – repair or replace.
- c) Make a Test Loop Wire as follows: Strip 1/2 inch of insulation from the two ends of a 24 inch long piece of spare insulated wire. You can use any gauge wire.
- d) Attach the Test Loop Wire to the loop terminals (black and red) on the bottom of the transmitter. Apply power to the transmitter and verity the BREAK DETECTION circuit does NOT indicate a break. There should be no audible alarm and no Break message on the transmitter. If a break is detected the Base Station Transmitter has failed repair or replace.

2) Test all Humane Contain Collars

- e) With the TEST Loop Wire attached and the transmitter powered adjust the transmitter Boost Power switch to normal (NOR) and the Field Strength Control knob to maximum (fully clockwise). Now bring one collar at a time close to the Test Wire Loop and verify the collar is triggering. If you hear a beeping tone and see a flashing red light on the face of the collar the collar is working and the Base Station Transmitter is working, so go to step 3) to verify the loop.
- f) If you do not hear a beep and see a flashing light on the face of the collar then either the collar, or the transmitter, or both have failed. Let's try to isolate the problem down to a single component.
 - If you have another collar, repeat step g) on that collar. If that collar passes the test then that collar and the Base Station Transmitter are OK, and only the first collar is failed – repair or replace just the first collar.

- If you have a friend who also owns a High Tech Pet Humane Contain system that is working, test your collar(s) on their operating system by holding your collar next to their collar in the yard. As you move both collars toward the wire loop both collars should beep at about the same rate. If this is true your collar(s) is working and your Base Station Transmitter has failed – repair or replace.
- g) If you cannot determine which component has failed, return both the collar(s) and the Base Station Transmitter to High Tech Pet Products for analysis and repair.

3) Test the Containment Loop

- h) Once you have verified the components are working using steps 1) and 2) above, disconnect the Test Loop Wire and re-connect the containment wire loop to the Base Station Transmitter. Place the working collar on the ground about five feet from the wire, in a "clean" area of the yard. Clean means with the least amount of metal or concrete nearby (concrete may contain metal re-bar). This area should be free of underground pipes if possible.
- I) Face the collar toward the wire. This makes the face almost parallel to the wire at that point.
- j) Turn on the Base Station Transmitter, set the Boost Power switch to normal (NOR), and adjust the Field Strength Control Knob to maximum (fully clockwise). If the BREAK DETECTION indicates a break then the loop is broken and needs repair. Go to step 4).
- k) The collar should now be beeping and flashing a red light on the face of the collar. If not, the loop is intermittent and needs repair. Go to step 4).
- Slowly adjust the Field Strength Control Knob on the transmitter counter clockwise until the collar stops beeping. If the collar is still beeping when the Knob is fully counter clockwise, the Base Station transmitter is faulty – repair or replace.
- m) Slowly adjust the Knob clockwise and note the beeping starts at a rate of about one beep every half second. Continue slowly adjusting clockwise and note the beeping rate increases to two short beeps every half second. Continue slowly adjusting clockwise and note the collar beeping at an even higher rate that sounds like a string of beeps every half second. This means the loop and the entire system are working properly. If not the loop is intermittent. Go to step 4).

4) Repairing a Broken or Intermittent Containment Loop

There are many ways to approach repairing a faulty loop depending on the length of wire, the number of connections, the terrain, available equipment, etc. Please call technical support at High Tech Pet Products for a list of methods.

ACCESSORIES AVAILABLE AT WWW.HIGHTECHPET.COM



Extra Collar: Model RX-10, Extra Radio Collar. Got extra dogs? You may add an unlimited number of extra collars to your X-10 system.

Transmitter Back-up Battery: Model B12V-0.8 Keep your system working 24/7 even in a power outage with this autorecharging battery.





Boundary Extension Kit: Expand your boundary perimeter. Includes 500 feet of heavy duty wire, 50 flags and 2 improved waterproof wire connectors.

Radio Mat Scat Pad: This unique accessory has a built-in radio transmitter that activates your dog's RC-8 collar at the touch of a paw to keep Fido off the couch, away from the trash or out of any off limits area. Measures 12" X 60". Made of durable, washable nylon.



2476 Palma Drive, Suite A Ventura, CA 93003 info@hightechpet.com

See our complete line of ingenious pet products at www.hightechpet.com

Humane Contain is a trademark of High Tech Pet Products, Inc. Manufactured in China

Engineered in the USA!



High Tech Pet Products, Inc. 2476 Palma Drive, Suite A Ventura, CA 93003 www.hightechpet.com

Rev. I – 9/27/2011 HC-X-10-manual