



## **STA Series**

Beyond LED Technology is the leader in cutting-edge refrigerated display lighting technology! Our STA Series cooler light produces wider beam for more evenly dispersed lighting. Also, our LED Cooler lights have a built-in driver and a daisy-chain design that allows it to be installed in minutes. Our LED Cooler/Freezer lights qualify for rebate programs with most major power companies. Our STA Series Cooler light and Freezer Lamps deliver crisp, bright light that creates attractive food and product displays in freezers and walk-in refrigerator cases. They consume less energy and run longer and cooler than fluorescent freezer bulbs, lowering operating costs and reducing the risk of food spoilage.


- Up to 130 lumens per watt
- V Shape Design
- Wider beam angle
- Universal 100-277Vac 50-60Hz

- Built-in driver
- Daisy-chain (up to 10 lamps in a series)
- ETL Listed
- CRI >80

#### STA Series - V Shape

SKU #	Model #	Watts	Length	Qualified	Lumens	ССТ	Туре
100149	100149	22W	48"	ETL & DLC	2600Lm	5000K	V-Shape
101782	101782	25W	60"	ETL & DLC	3200Lm	5000K	V-Shape
101790	101790	28W	69"	ETL & DLC	3000Lm	5000K	V-Shape
102301	102301	30W	72"	ETL & DLC	4000Lm	5000K	V-Shape
101311	100149	22W	48"	ETL	2640Lm	6500K	V-Shape
101782-1	101782	25W	60"	ETL	3000Lm	6500K	V-Shape
101790-1	101790	28W	69"	ETL	3360Lm	6500K	V-Shape
101808	102301	30W	72"	ETL	3600Lm	6500K	V-Shape

## **Dimensions**

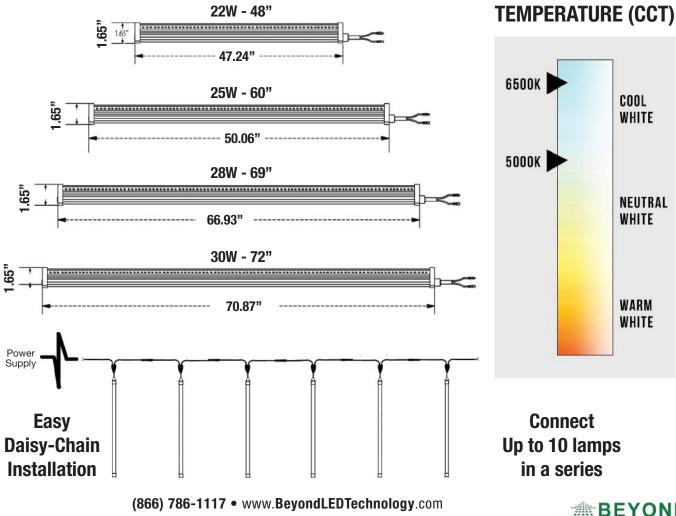

Due to continuous product improvement, information in this document is subject to change.



**CORRELATED COLOR** 



## **Specifications**

POWER:	22W	25W	28W	30W	
Weight:	1.4 Lbs	1.6 Lbs	1.8 Lbs	2.2 Lbs	
LED Quanlity:	168 pcs	192pcs	216pcs	216pcs	
Color Range:	5000K / 6500K	• •			
Housing:	AL and High stre	ngth PC			
Operation Temp.:	-4°F to 104°F				
Life Span:	50,000hours				
Voltage range:	AC100-277V				
Frequency:	50/60Hz				
Beam angle:	180°				
PC Lens:	Clear				
Color index (CRI):	>80				
Luminous efficacy:	>130lm/w				
PF:	≥0.92				
Power Efficiency:	≥0.88				

## Packing

Model	Size	Pcs/Box	Dimensions	Weight	Pallet Quantity	Pallet Weight	Pallet Dimensions
22W	48"	20	71" X 8" X 8"	45 Lbs			
25W	60"	20	71" X 8" X 8"	45 Lbs			
28W	69"	20	83" X 8" X 8"	49 Lbs			
30W	72"	20	83" X 8" X 8"	49 Lbs			
LED Tub	De	Into Inner	Box		[		Into Outer Box
	•		•		•		


Beyond LED Technology | 1939 Parker Ct, Stone Mountain, GA, 30087 Due to continuous product improvement, information in this document is subject to change.

Installation





Mounting hardware required for some cooler lights. Others have built-in brackets.

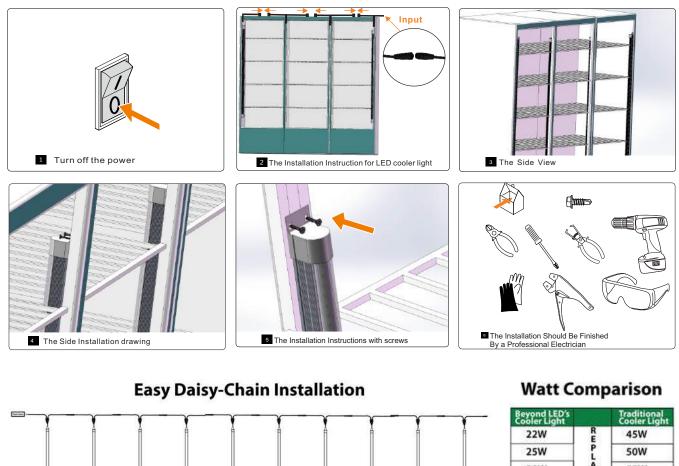

One power source can connect up to ten (10) lights. WARNING: Do not connect more than ten (10) lights per power source.

Beyond LED's Cooler Light	Traditional Cooler Ligh
22W	R 45W
25W	P 50W
28W	A 55W
30W	E 60W

(866) 786-1117 • www.BeyondLEDTechnology.com






### Installation

#### 1. Disconnect power from cooler system.

For safety, all power MUST be disconnected prior to removal of existing lamps and installation of T8 LED light tubes.


WARNING: Failure to disconnect power could result in serious injury or death. It is the end user's responsibility to consult a licensed electrician and check all local building codes before installation.

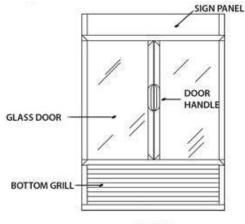




#### 2. Remove existing lamps.

Remove lamp covers if present and remove lamps. Your new T8 lights are shatter-proof; you will no longer require lamp covers.

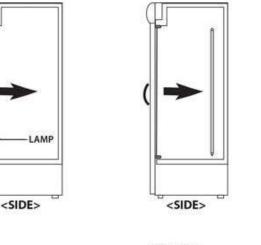


#### 3. Disconnect ballast.

Disconnect wiring from the power source. Ballast removal is optional. Disconnect wiring to original lamp sockets and tie off. None of the existing system will be used, so removal is optional.

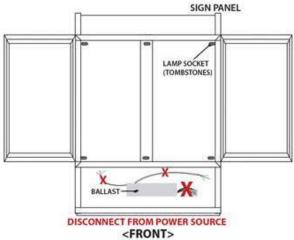

Beyond LED Technology | 1939 Parker Ct, Stone Mountain, GA, 30087 Due to continuous product improvement, information in this document is subject to change.


## Installation

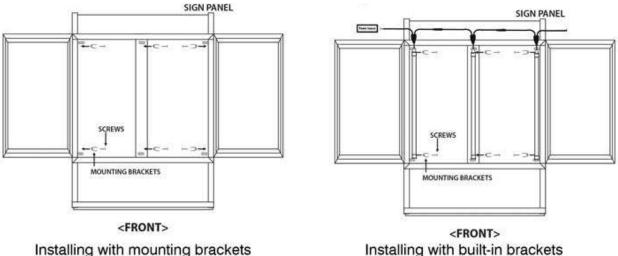

Installing with mounting brackets

#### 4. Install brackets.

Use self-tapping screws to mount the brackets. In some cases drilling a pilot hole will make the installation easier. Each mounting bracket can be placed inside of the existing sockets (tombstones).

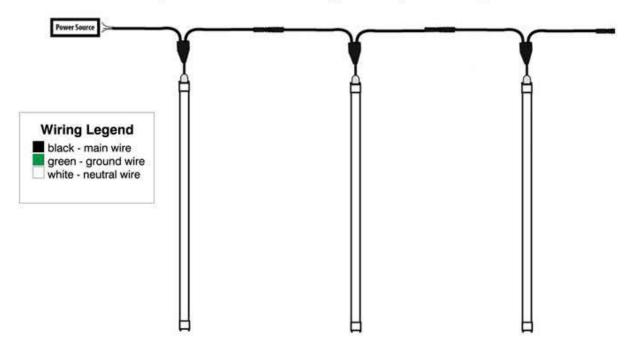

#### Connect to power source and connect lights in a series.

Connect first cable to the power source. Expose 3 wires to connect. See legend above for connection. Connect the male/female ends of each light. (Not to exceed 10 lights).







### **Distribution Diagram - 22W - 5000K**

Total operating time for luminous intensity distribution: 1.0 hours

Test orientation: Downward


#### **Electrical Measurement**

Input Voltage (V)	Frequency (Hz)	Input Current (A)	Power (W)	Power Factor
120.0	60.0	0.1765	20.93	0.9879

#### Photometric Measurement

Luminous Flux (Im)	Efficacy (Im/W)	CBCP (cd)	S/MH (C0/180)	S/MH (C90/270)
2526.18	120.70	463	1.25	1.49

#### Luminous Intensity Distribution

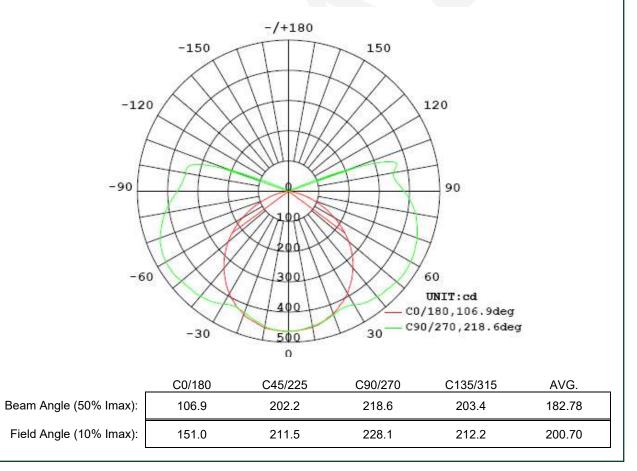


#### Beyond LED Technology | 1939 Parker Ct, Stone Mountain, GA, 30087

Due to continuous product improvement, information in this document is subject to change.

LED COOLER LIGHTS

## Distribution Diagram - 25W - 5000K

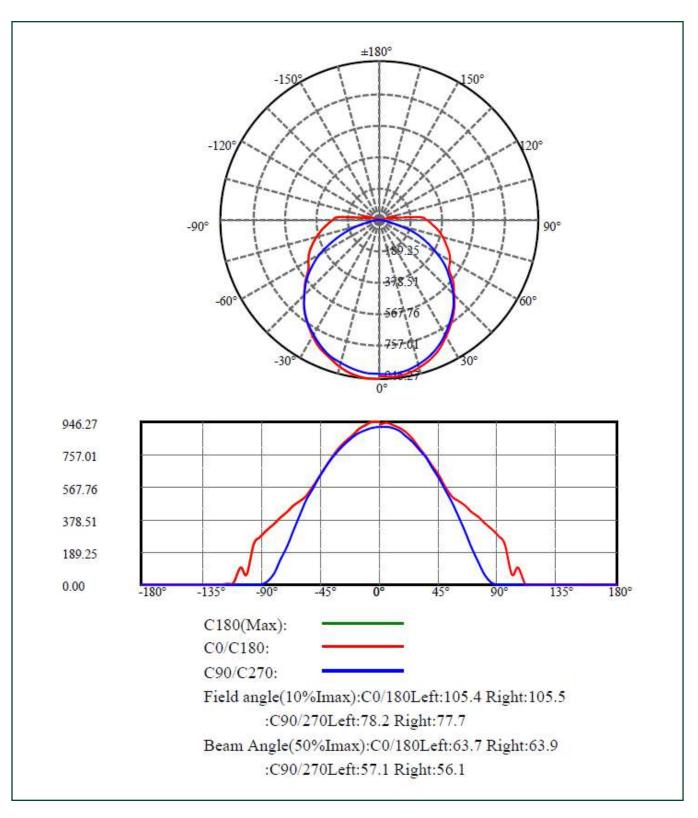

#### (866) 786-1117 • www.BeyondLEDTechnology.com

Due to continuous product improvement, information in this document is subject to change.



BEYOND



### **Distribution Diagram - 28W - 5000K**

Total operating time for luminous intensity distribution: 1.5 hours

Test orientation: Downward


#### **Electrical Measurement**

Input Voltage (V)	Frequency (Hz)	Input Current (A)	Power (W)	Power Factor
120.1	60.0	0.226	26.76	0.9863

#### Photometric Measurement

Luminous Flux (lm)	Efficacy (Im/W)	CBCP (cd)	S/MH (C0/180)	S/MH (C90/270)
2758.21	103.07	478	1.36	1.42

#### Luminous Intensity Distribution

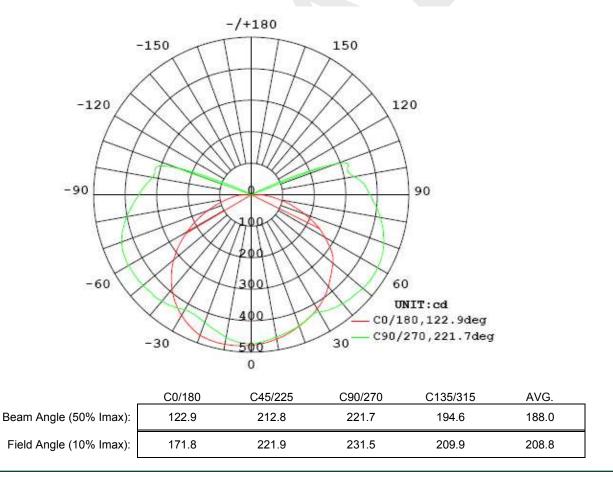


Beyond LED Technology | 1939 Parker Ct, Stone Mountain, GA, 30087

Due to continuous product improvement, information in this document is subject to change.

LED COOLER LIGHTS

## **Distribution Diagram - 30W - 5000K**

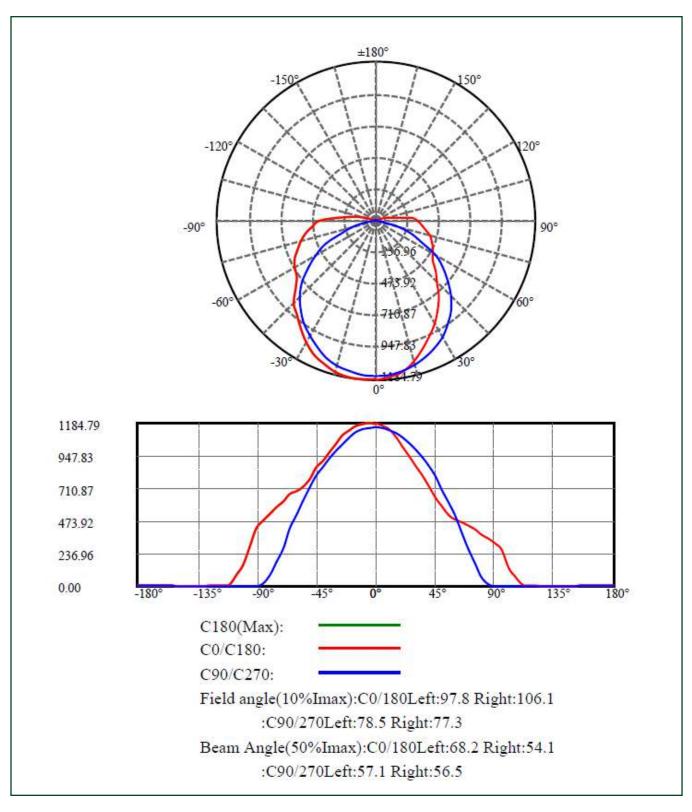


#### (866) 786-1117 • www.BeyondLEDTechnology.com






### **Distribution Diagram - 22W - 6500K**

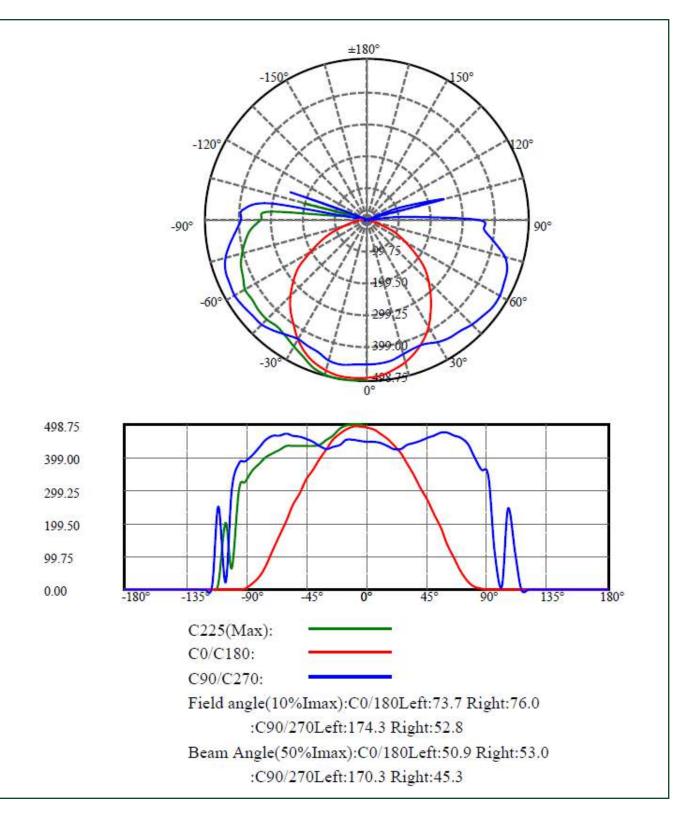

### Distribution Diagram - 25W - 6500K

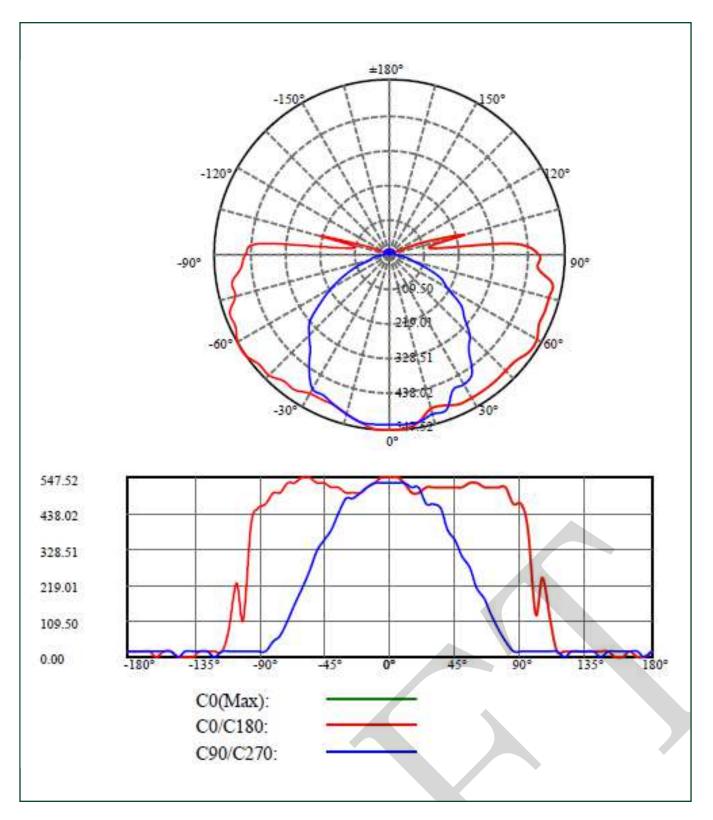


(866) 786-1117 • www.BeyondLEDTechnology.com




e. BEYC



## Distribution Diagram - 28W - 6500K

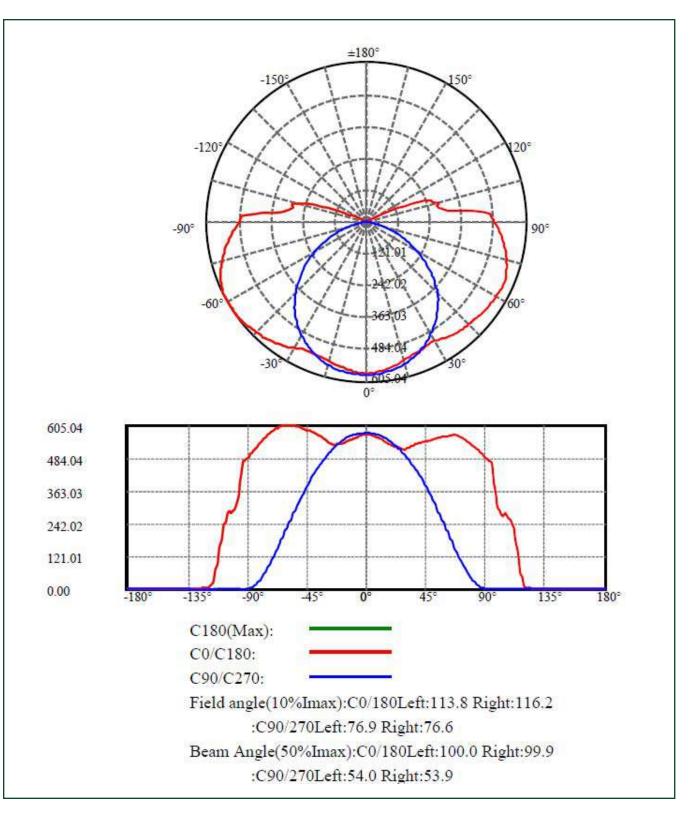

## **Distribution Diagram - 30W - 6500K**

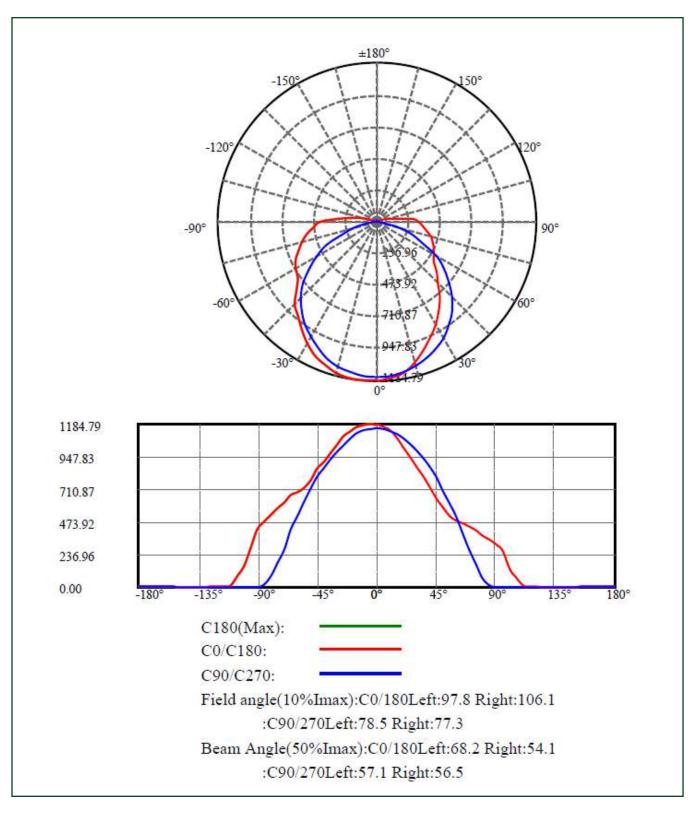

#### (866) 786-1117 • www.BeyondLEDTechnology.com





Apply to food plants, dairy plants, pharmaceutical plants, supermarkets, hospitals, various freezers, cold storage and other places for fixed lighting.





Beyond LED Technology | 1939 Parker Ct, Stone Mountain, GA, 30087 Due to continuous product improvement, information in this document is subject to change.



#### (866) 786-1117 • www.BeyondLEDTechnology.com





Beyond LED Technology | 1939 Parker Ct, Stone Mountain, GA, 30087 Due to continuous product improvement, information in this document is subject to change.



(866) 786-1117 • www.BeyondLEDTechnology.com Due to continuous product improvement, information in this document is subject to change.

