

pure
enrichment

5 YEAR
WARRANTY

PURERELIEF

PLUSH HEATED THROW BLANKET



USER MANUAL
MODEL: PEHTTHRO-G

IMPORTANT SAFETY INSTRUCTIONS DO NOT DESTROY

1. Be sure to read carefully the accompanying instruction booklet before using this bedding.
2. Do not use this bedding with an infant, an immobile person, or anyone insensitive to heat, such as a person with poor blood circulation.
3. Do not tuck in the wired area of this bedding.
4. Do not route electrical cords between the mattress and box spring. Do not allow the cords to be pinched.
5. Keep the control away from drafty areas that may become damp or wet such as an open window.
6. Do not use pins – They may damage the electric wiring.
7. Be sure that this bedding is used on an alternating-current supply circuit of the proper voltage.
8. Turn off or unplug when not in use.
9. Excessive heating may result from folding bedding, other than a mattress, when in actual use.
10. If improper operation of this bedding is observed, discontinue its use immediately and consult the manufacturer or the dealer regarding its repair.


11. Do not use with rocking chairs, recliners, chairs with casters or wheels, or other furniture subject to movement.
12. Do not tuck the blanket or supply cord in a sofa or other furniture. All portions of the blanket or controller should be visible at all times.
13. Wrapping of cord around the controller may damage the cord. Loop loosely when storing.
14. NOT FOR HOTEL, MOTEL OR OTHER INSTITUTIONAL USE.
15. This heating pad has a polarized plug (one blade is wider than the other) as a safety feature. This plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

INTRODUCTION

Thank you for purchasing the PureRelief Plush Heated Throw Blanket from Pure Enrichment. We designed this cozy throw to keep you warm while lounging in the comfort of your home. It's also great to take with you when traveling.

USING PURERELIEF

Attach the Blanket Connector to the Control Connector. Push both parts together securely to ensure a tight fit.

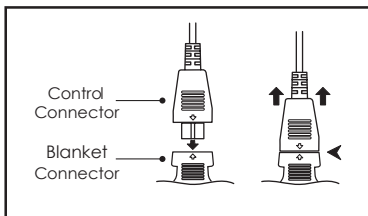

NOTE: The Control Connector must be connected to the Blanket Connector before plugging the unit into an electrical outlet.

After connecting the Blanket Connector to the Control Connector, plug the unit into a 120V AC electrical outlet.

To turn PureRelief on, press the power button. Select the desired heat setting by continuing to press the power button until the heat indicator light is the color of your desired heat setting:

Green=Warm

Orange=Medium

Yellow=Low

Red=High

To turn PureRelief off, press the power button one more time.

NOTE: The “high” indicator light will blink red when an error occurs. If this happens, unplug PureRelief from the electrical outlet. Check the physical condition of the cord, the wall outlet, and the connection between the Control Connector and the Blanket Connector. If blinking persists after you confirm a proper connection, email help@pureenrichment.com.

USING PURERELIEF (CONT'D)

NOTE: If the unit does not turn on when you press the power button, make sure the Control Connector is securely plugged into the Blanket Connector.

To turn PureRelief off, scroll through all the heat settings until the heat indicator light turns off.

AUTO-OFF FEATURE

To conserve energy and prevent skin burns caused by excessive use, PureRelief includes an auto-off feature. The unit will turn off automatically after two hours of continuous use. The red auto-off light will blink when this feature is activated.

NOTE: After a power outage, PureRelief automatically resets the timer on the auto-off feature.

WASHING INSTRUCTIONS

To prolong the life of your heated throw blanket, proper care and cleaning is essential. Follow these washing instructions to preserve the softness of the fabric and protect the electrical components:

1. Pre-soak for 15 minutes in mild soap and cold water.
2. Machine wash in mild soap and cold water on slow cycle for 2 minutes.
3. Rinse in fresh cold water.
4. Spin dry.
5. Stretch to original size.
6. Do not put through a wringer.

NOTE: Make sure the Blanket Connector is completely dry before plugging the heating pad into an electrical outlet.

PRODUCT SPECIFICATIONS

Pad Size:	50" x 60"
Power Supply:	AC: 120V, 60Hz, 100W
Pad Material:	Micromink (Top); Sherpa (Bottom)
Auto Shut-Off Timer:	120 minutes
4 Heat Settings:	Warm—temperature range (~90° F) Low—temperature range (~95° F) Medium—temperature range (~100° F) High—temperature range (~105° F)

WARRANTY

PureRelief comes with an industry-leading 5 Year Warranty that begins on the date of purchase.

The warranty applies to the heated throw blanket and necessary parts and labor relating thereto. The warranty does not apply to damage resulting from failure to follow the operating instructions, accidents, abuse, alterations, or disassembly by unauthorized individuals.

PRODUCT REGISTRATION

To ensure your full warranty and to receive product updates and streamlined customer support, remember to register your product at:

www.pureenrichment.com/productregistration

ARE YOU 100% SATISFIED?

If you have product questions or concerns don't hesitate to contact us directly at:

help@pureenrichment.com

Pure Enrichment has an award-winning warranty, exchange, and customer service program that guarantees hassle-free solutions to any issue you might have within 24 hours!

FCC NOTICE

Model: PureRelief Plush Heated Throw Blanket

(PEHTTHRO-G)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Pure Enrichment
100 S. Linwood Ave, #B
Santa Ana, CA 92705
www.pureenrichment.com

The product is protected against unauthorized use. DO NOT modify it without the authorization of the manufacturer, or the user's authority to operate could be voided.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Santa Ana, CA 92705
www.pureenrichment.com