



Item No.		Measurement in in./cm	Color
49892	Wall set 2, wall path, 7 elements	76.8 x 30.7 in. 195 x 78 cm	natural/white
49961			white/gray

Description	Measurement in in./mm	Quantity	Item No.	
			49892	49961
Wall mount, end piece	DIAM 5.9 x 6.3 in. ø 150 x 160 mm	2	49892-10	01-49940
Wall mount	DIAM 7.5 x 6.3 in. ø 190 x 160 mm	2	49892-11	01-49941
Post	DIAM 3.5 x 22.8 in. ø 90 x 580 mm	3	49892-20	01-44043
Hardware set		1	49892-60	

Pos. No.	Description	Measurement in in./mm	Quantity
Pos. a	Socket screw	DIAM 0.2 x 1.5 in. ø 5 x 40 mm	12
Pos. b	Wooden dowels	DIAM 0.2 x 1.0 in. ø 5 x 25 mm	16
Pos. c	Allen key		1
Pos. d	Wood screw (for wooden wall or wooden stud)	DIAM 0.2 x 1.9 in. ø 5 x 48 mm	4
Pos. e	Screw for stone wall	DIAM 0.25 x 2.2 in. ø 6,3 x 55 mm	4
Pos. f	Stone wall anchor, plastic	DIAM 0.25 x 2.2 in. ø 6,3 x 55 mm	4
Pos. g	Metal screw (for metal stud)	DIAM 0.15 x 1.5 in. ø 4 x 37 mm	4
Pos. h	Dry wall screw	DIAM 0.15 x 1.1 in. ø 4 x 28 mm	4
Pos. i	Dry wall anchor, metal	DIAM 0.5 x 1.3 in. ø 13 x 32 mm	4
Pos. j	Washer	DIAM 0.4 in. ø 10 mm	4
Pos. k	Screw caps	DIAM 0.4 in. ø 10 mm	4

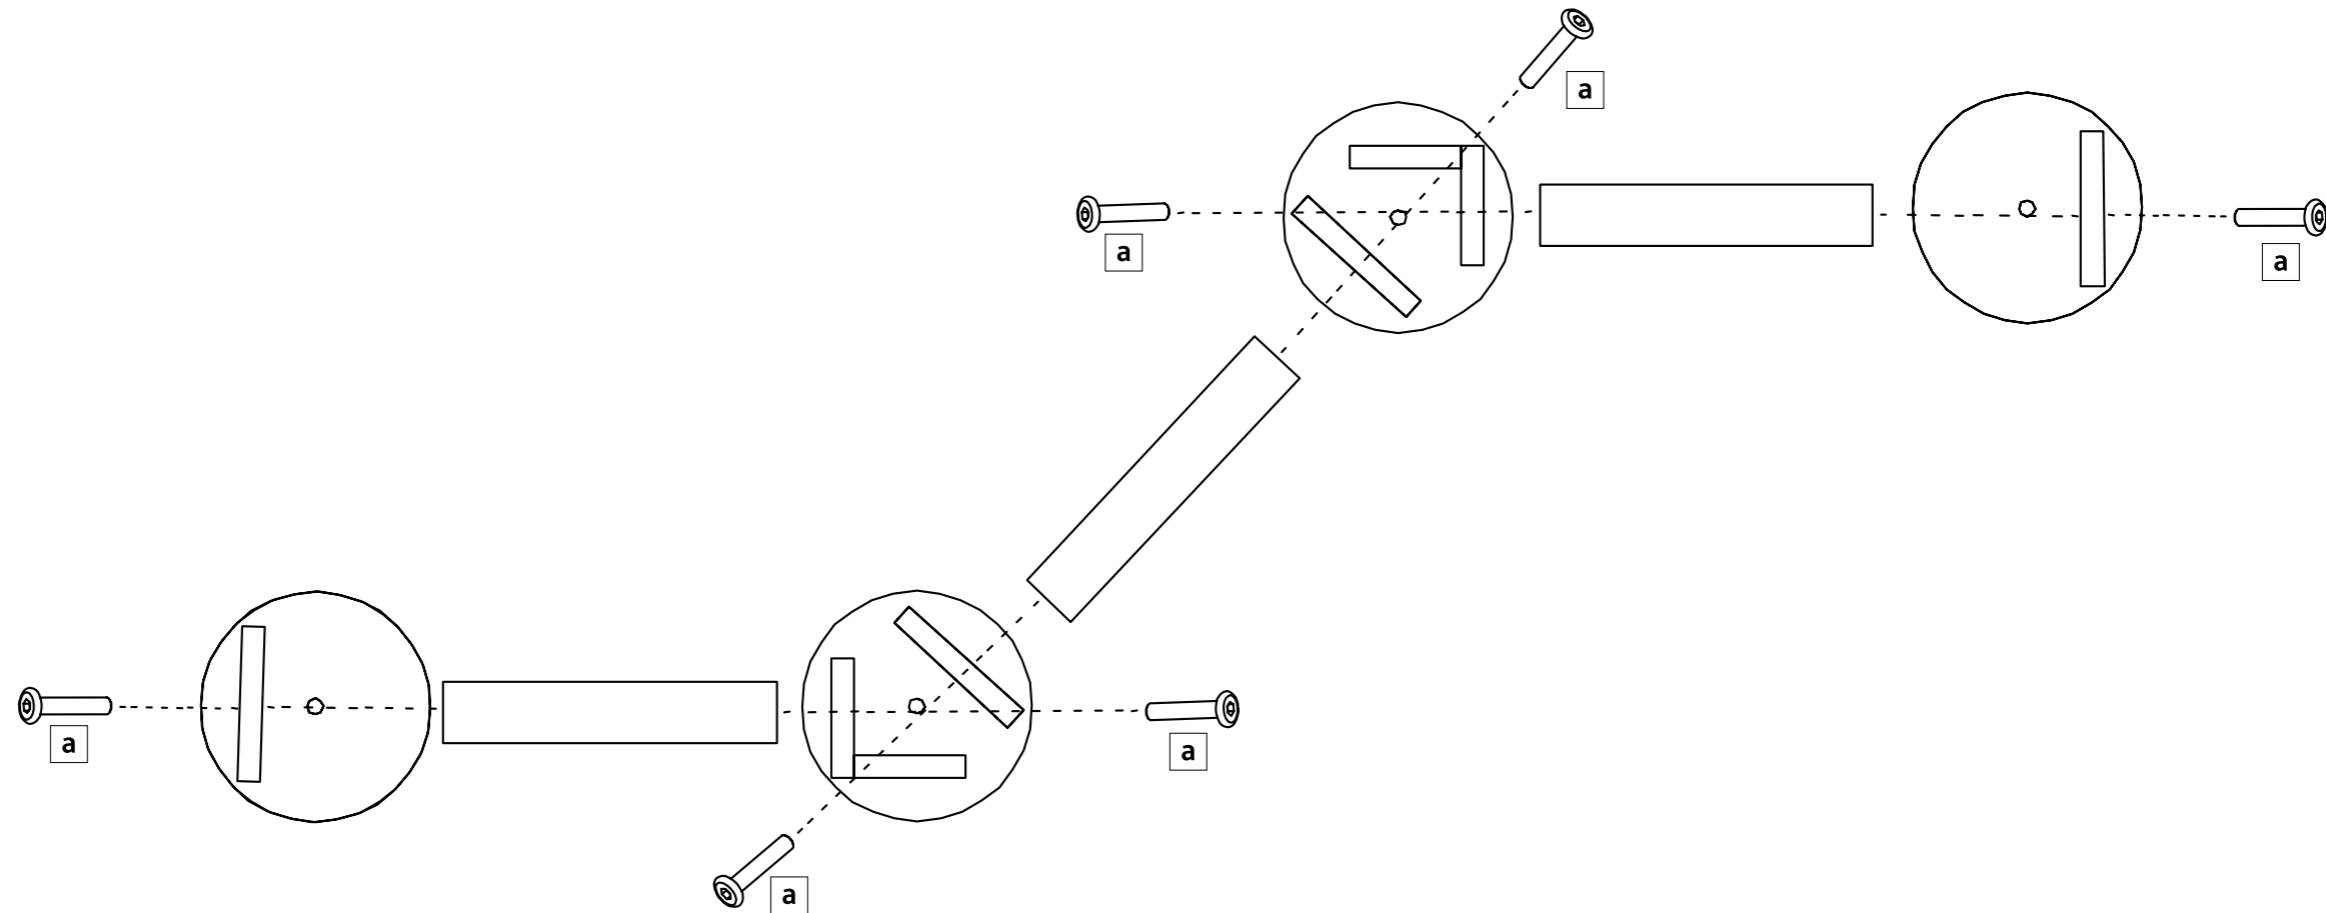

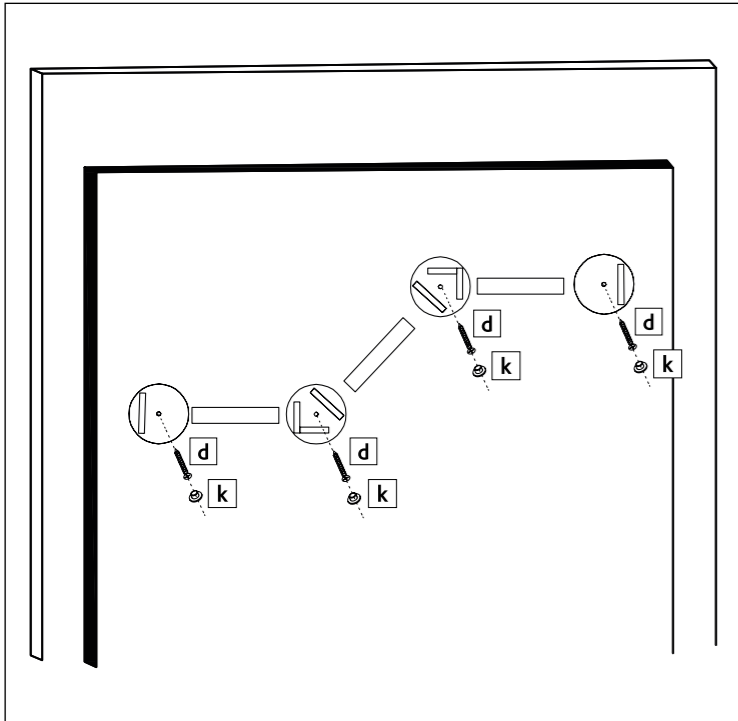

### EN Work steps for wooden wall

#### First Step

Assemble the mounts as shown in the manuals.

#### Second Step

Bring one of the wall mount end pieces in final position and mark the screw-points in desired location. Use a spirit level or have someone eyeball to make sure the holes are levelled.

Please mount the holder with attached screws to wooden wall at pilot marking. Cover the screw with a screw cap.

#### Third Step


Attach one post to the wall mount. Place the next wall mount in final position by mounting it to the previously attached post, as shown in the manual. Mark the screw-points in desired location. Use a spirit level or have someone eyeball to make sure the holes are levelled. Please mount the holder with attached screws to wooden wall at pilot marking. Cover the screws with the screw cap.

#### Final Step

Repeat step three for all parts of the climbing path.

#### Advice:

Please note the secure assembly and mounting requires two adult persons.

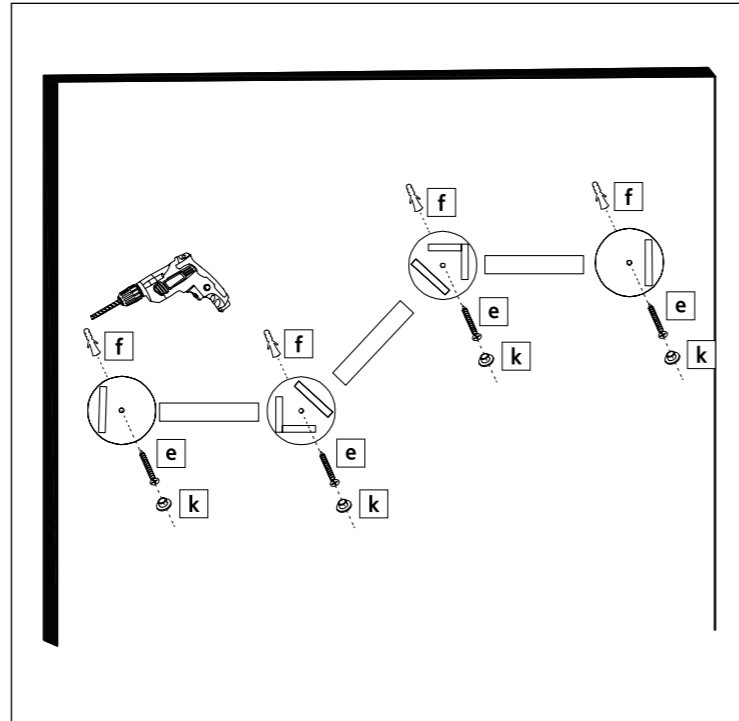

### EN Work steps for stone wall or plaster wall with anchors

#### First Step

Assemble the mounts as shown in the manuals.

#### Second Step

Bring one of the wall mount end pieces in final position and mark the screw-points in desired location. Use a spirit level or have someone eyeball to make sure the holes are levelled.

#### Third Step

Drill 1/4" holes at pilot marking, be sure to keep the drill level. Make sure hole depth matches wall anchor length. Insert 1/4" wall anchors into drilled holes (some anchors might require a hammer).

#### Fourth Step


Attach one post to the wall mount. Place the next wall mount in final position by mounting it to the previously attached post, as shown in the manual. Mark the screw-points in desired location. Use a spirit level or have someone eyeball to make sure the holes are levelled. For drilling and mounting please repeat step three.

#### Final step

Repeat step four for all parts of the climbing path.

#### Advice:

Please note the secure assembly and mounting requires two adult persons.

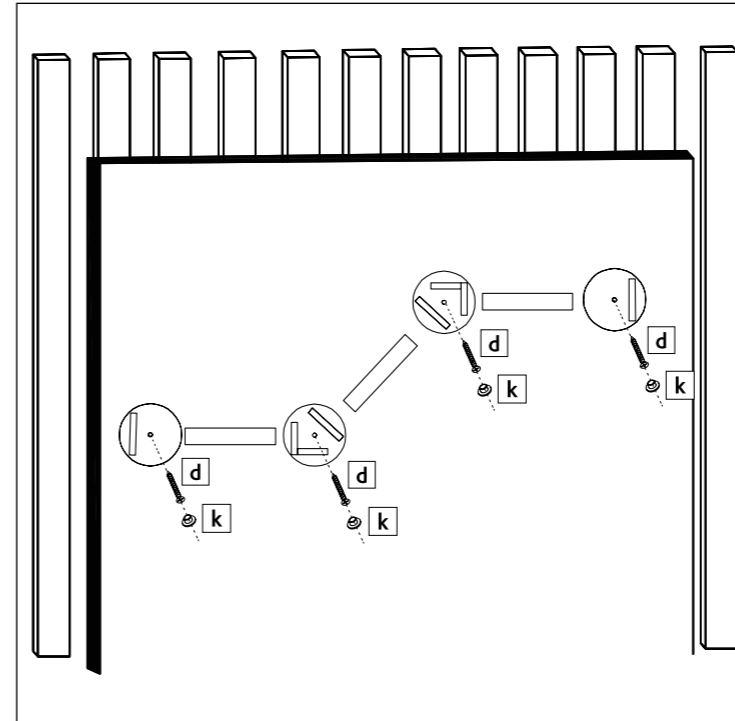

### EN Work steps for drywall with wooden drywall stud or metal stud

#### First Step

Assemble the mounts as shown in the manuals.

#### Second Step

Use a stud-finder or other technique to locate the studs. Please use a pencil. Bring one of the wall mount end pieces in final position and mark the screw-points in desired location. Use a spirit level or have someone eyeball to make sure the holes are levelled.

#### Third Step

Before you start, make sure to check whether you have wooden or metal studs to select the correct screws. For wooden stud: Mount the holder with attached screws to studs at pilot markings. For metal stud: Mount the holder with attached washers and screws to studs at pilot markings. Cover the screws with screw caps.

#### Fourth Step


Attach one post to the wall mount. Place the next wall mount in final position by mounting it to the previously attached post, as shown in the manual. Mark the screw-points in desired location. Use a spirit level or have someone eyeball to make sure the holes are levelled. Please repeat the mounting of the holder as described in step three for wooden or metal studs. If the final position of any holder is not at a stud, please use the attached drywall screws and drywall anchors for mounting. Please find the instructions for mounting under "Work steps for drywall - Drywall connection with drywall anchor"

#### Final step

Repeat step four for all parts of the climbing path.

#### Advice:

Please note the secure assembly and mounting requires two adult persons.

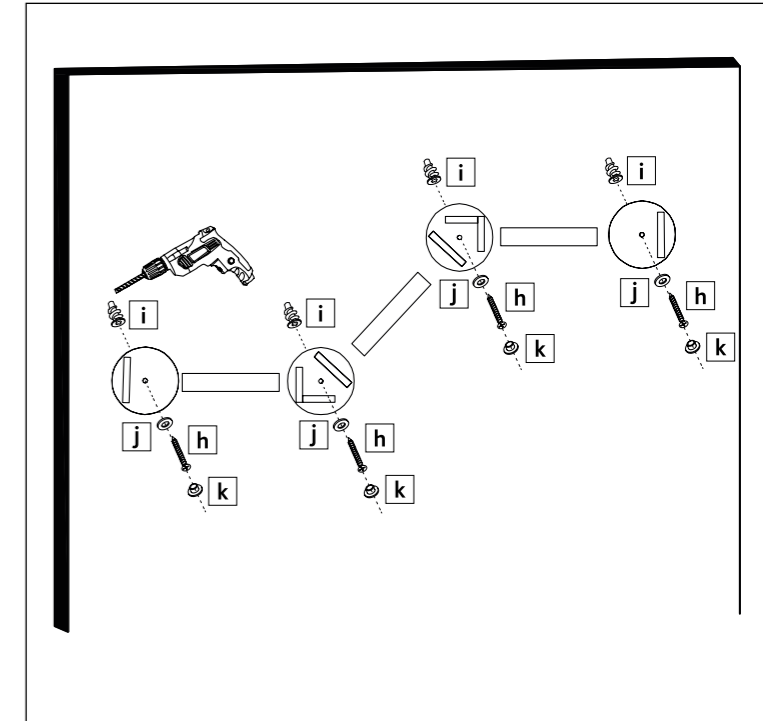

### EN Work steps for drywall - Drywall connection with drywall anchor

#### First Step

Assemble the mounts as shown in the manuals.

#### Second Step

Bring one of the wall mount end pieces in final position and mark the screw-points in desired location. Use a spirit level or have someone eyeball to make sure the holes are levelled.

#### Third Step

If you use self-drilling wall anchors a pilot hole is not needed. Use your drill and the 3/16" bit to make pilot holes for maximum 1 inch to markings. Insert wall anchors for dry walls. Be careful not to break the drywall panel. Mount the wall mount holder via attached screws to the anchor and cover the screw with a screw cap.

#### Fourth Step

Attach one post to the wall mount. Place the next wall mount in final position by mounting it to the previously attached post, as shown in the manual. Mark the screw-points in desired location. Use a spirit level or have someone eyeball to make sure the holes are levelled. For drilling and mounting please repeat step three.

#### Final step

Repeat step four for all parts of the climbing path.

#### Advice:

Please note the secure assembly and mounting requires two adult persons.