

# Pet Waste Station with Pedal Trash Can

# ASSEMBLY INSTRUCTIONS

### **Before You Begin:**

Please identify all component parts and hardware pieces required before you begin. Carefully remove all of the components from the packaging and set aside for assembly. Assemble on a soft surface to prevent scratching during assembly.

#### Caution:

Tighten all components securely before use. Failure to do so may result in personal injury. DO NOT use any sharp objects to open plastic wrapped components as damage to product or components may result.

### Warning:

CHOKING HAZARD - Small Parts. Adult Assembly Required.

#### DO NOT ALLOW CHILDREN TO CLIMB ON FURNITURE

Serious or fatal injuries can occur from furniture tipping over. You must install Tipping Restraint Hardware (where included) to help prevent the unit from tipping and causing accidental injury, instability, death or damage. The tipping restraint is intended only as a safety measure, it is not a substitute for proper adult supervision.

To help prevent furniture from tipping over it must be permanently attached to the wall. Anti-Tip Safety Wall Straps suitable for the unit weight and wall materials (if not included) should be purchased and installed.

Customer Service Email: CustomerExperience@theubiquegroup.com | Phone: 866-552-2810



# **Congratulations!**

You just purchased a piece of happiness. At Ubique Group, we believe you can transform your spaces into the most inspired places with furnishings that are the perfect combination of form, function and style. As original innovators of online furniture retail, we offer the best selection of popular, contemporary styles at cool, comfortable prices. And, with decades of proven shipping and packaging expertise, our Extended Quality Checklist ensures a rewarding, hassle-free experience time and time again. It's just what you need to bring your vision to life.

Thank you & Enjoy!!

your friends at Ubique Group



Share it on social & Tell a friend! #Spaces2Places



Write an online product review where purchased



Let us help! Contact our customer support.

Have a question, concern or simply need a hand? Your satisfaction is our top priority. Contact us at 866-552-2810 or customerexperience@theubiquegroup.com. We're here to help!

# **Browse Our Branded Collections**

There's something for everyone inside our family of brands.



MERRICK LANE

Taylor & Logan

Emma+Oliver.





BlackArc







We pride ourselves on providing an excellent customer experience starting right here with your package and instructions. Everything you need should be right where you need it, so you can get to enjoying your new item ASAP. But despite our best efforts, sometimes "slips happen." If you need any support, from replacement parts to recommendations, please reach out to our wonderful customer support team at 866-552-2810 or customerexperience@theubiquegroup.com. We're here to help!

# **EVERY UBIQUE GROUP PRODUCT**



Quality & Durability Tested



Packaged with Care



Shipped from our U.S. Facility




Designed for Easy Assembly



Please visit https://www.theubiquegroup.com/warranty for complete warranty information.

Read this manual before using this product. Failure to follow the instructions and safety precautions in this manual can result in serious injury or death.

Keep this manual in a safe location for future reference.

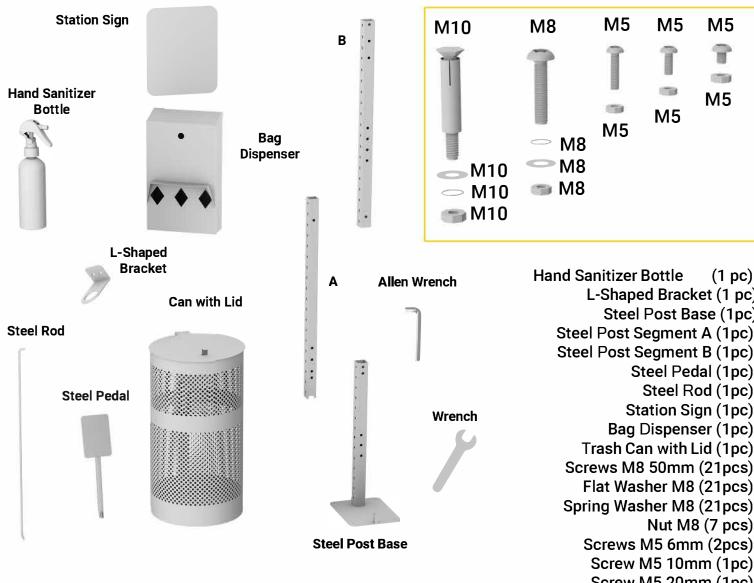

For more stability, it's best to anchor the dog waste station onto a cement pad on the ground using an air hammer and hammer (Not Included).

L-Shaped Bracket (1 pc) Steel Post Base (1pc) Steel Post Segment A (1pc) Steel Post Segment B (1pc) Steel Pedal (1pc) Steel Rod (1pc) Station Sign (1pc) Bag Dispenser (1pc) Trash Can with Lid (1pc) Screws M8 50mm (21pcs) Flat Washer M8 (21pcs) Spring Washer M8 (21pcs) Nut M8 (7 pcs) Screws M5 6mm (2pcs) Screw M5 10mm (1pc) Screw M5 20mm (1pc) Lock Nut M5 (4pcs) Lock Nut M6 (1pc) Common Nut M6 (1pc) Bag Dispenser Key (2pcs) Allen Wrench (1pc) Wrench (3pcs) Box of Waste Bags (3pcs) Box of Can Liners (1pc)

## For Mounting into Cement:

**Expansion Bolt M10** (4pcs) Flat Washer M10 (4pcs) Spring Washer M10 (4pcs) Nuts M10 (4pcs)

## STEP 1

Place the base in the desired location on the cement surface and mark the 4 holes. Using an Air Hammer (Not Included) make the holes in the cement.



## STEP 2

Insert the M10 Expansion Bolt into the hole using a Hammer (Not Included).

Align the expansion bolts with the holes on the base plate then set base into place.


Add the M10 Flat Washers, M10 Spring Washers and M10 Nuts then tighten using the Wrench.





# STEP 3


Insert Segment A (It should have 4 holes at the bottom & 1 hole at the top) into the Steel Post Base.


Align the last 3 side holes of the base with the first 3 side holes of segment A. Insert an M8 Screw through an M8 Spring Washer and M8 Flat Washer then through the Post Base. Attach the M8 Nut and tighten using the Hex Wrench and Wrench.

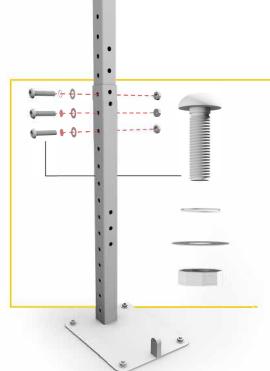


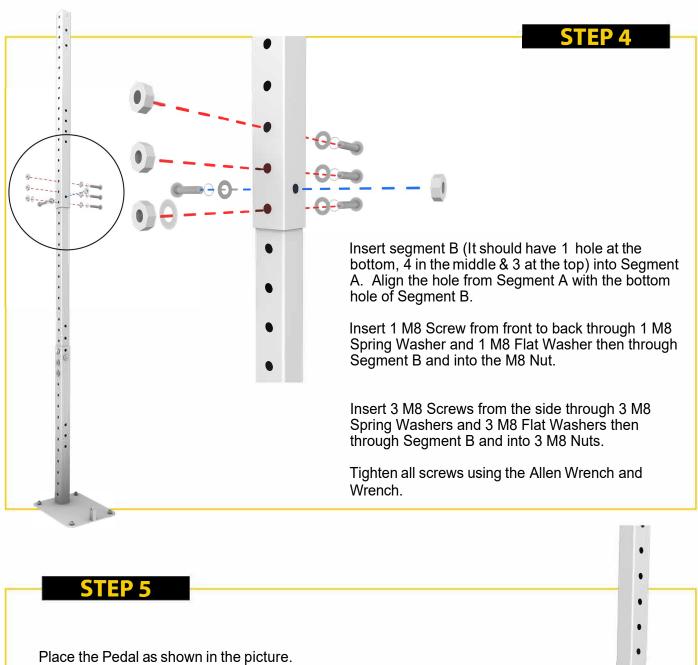

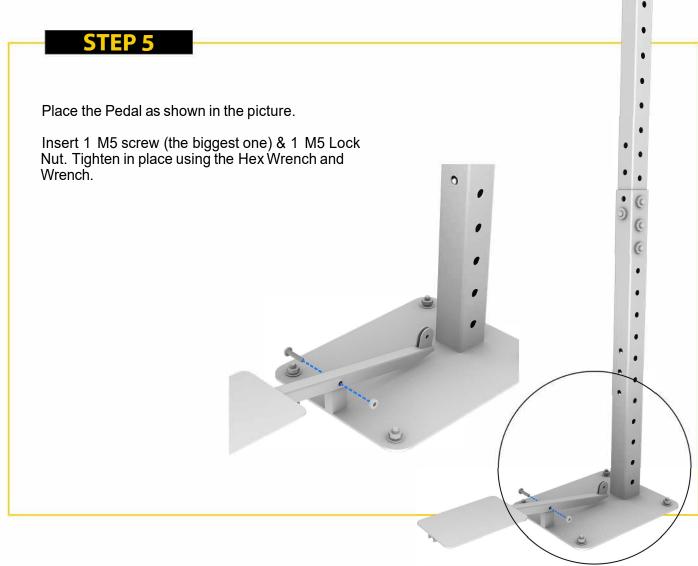

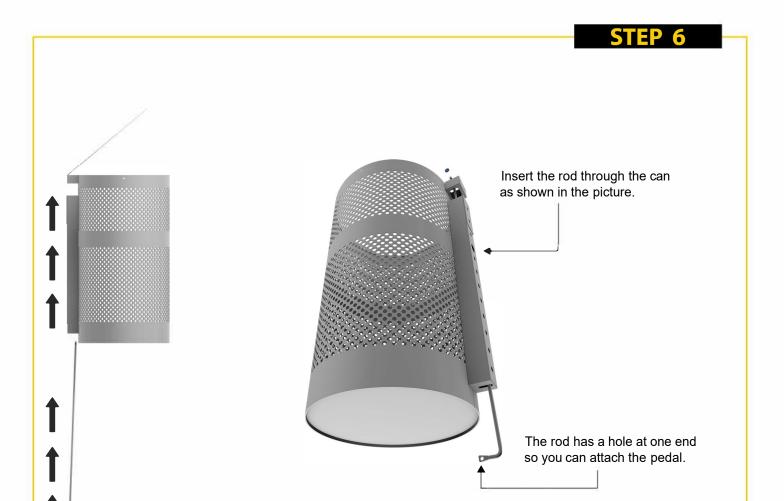

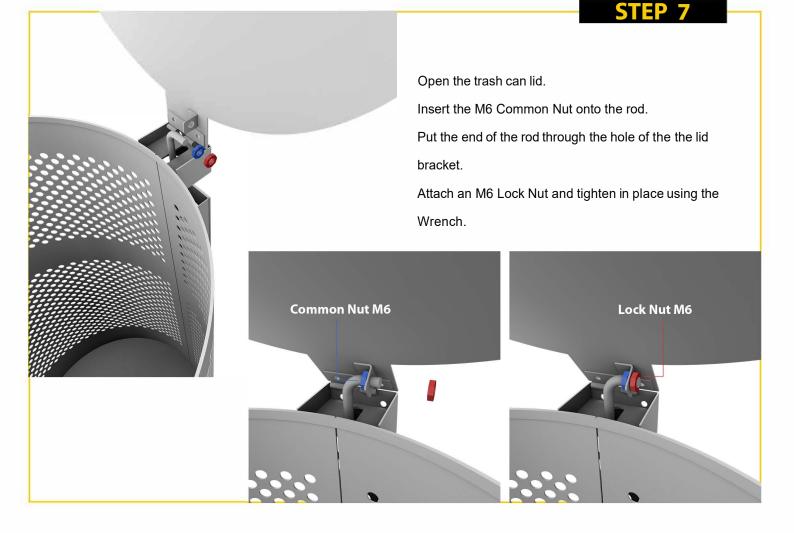

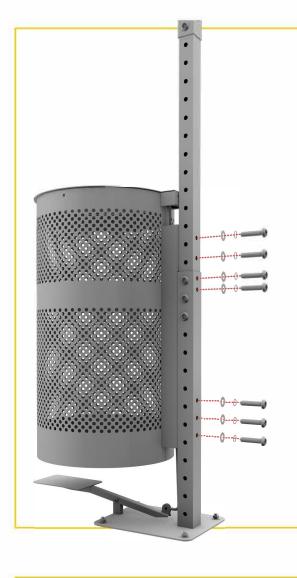



Align the holes on the back of the trash can with the holes on the steel post.


Insert an M8 Screw through an M8 Spring Washer and M8 Flat Washer then into the steel post from back to front. Repeat for the other 6 screws.

Tighten screws using the Allen Wrench.

## STEP 9

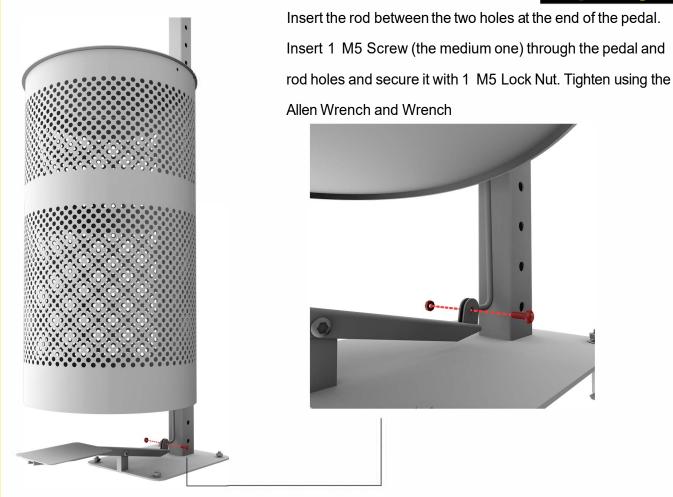

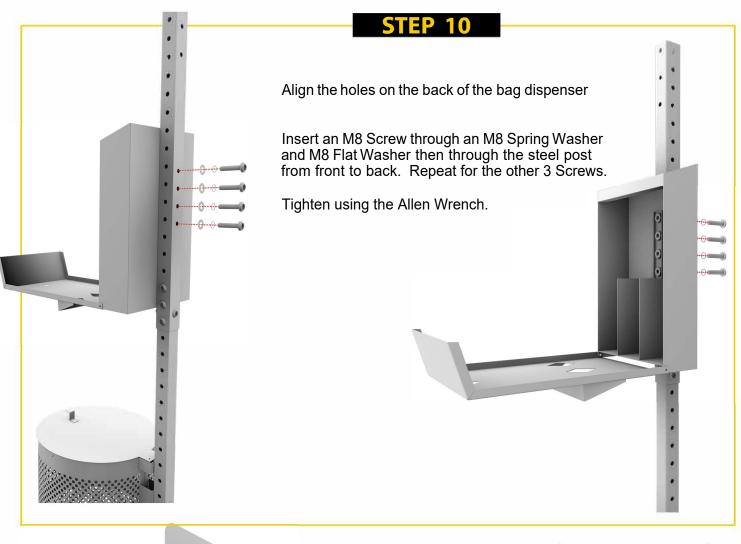

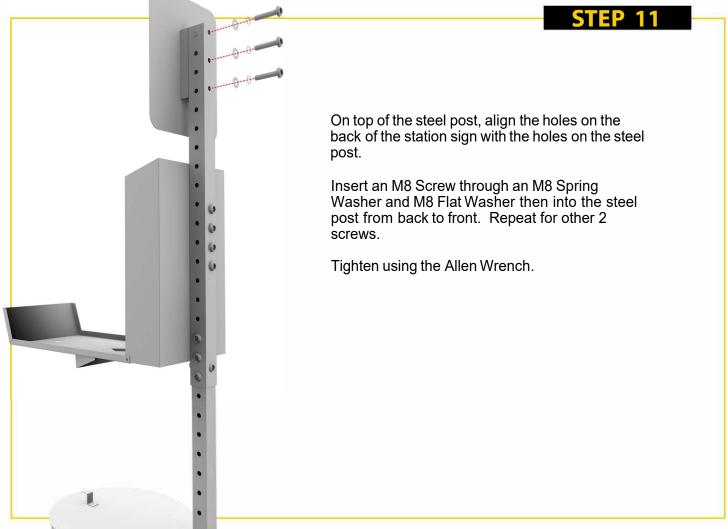

## **STEP 12**

To install the can liner open the lid & pull up on the bag clamps.

Place the bag between the clamps & push the bag to the bottom of the can.

Wrap the edges of the bag around the bag clamps.

Push down on the bag clamps to lock the bag in place.




# **STEP 13**

Find and remove the 2 rubber caps on the side of the dispenser.

Align the holes in the the L-Shaped Bracket with the holes in the dispenser.

Insert 2 M5 screws (the smallest ones) through the holes into 2 M5 Lock Nuts like shown in the picture.

Tighten screws using the Allen Wrench and Wrench.

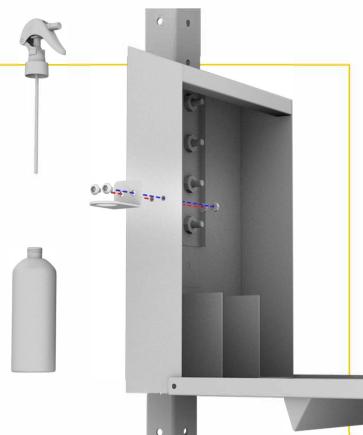



Fill the container with hand sanitizer.

Position the neck of the bottle in the hole.

Screw the pump onto the neck of the bottle.

