

1 Check your dog's bark history in Barkmeter

Barkmeter can be displayed from hourly to yearly time increments by distinguishing between bark and howl/whine. Check how your dog's barking count changes throughout the Barkmeter.



2 The new triple detection sequence system to most accurately detect the barking behavior.

1. First, detects the sound
2. Identifies the motion that indicates barking like behavior, like vibration or movement
3. Filters the sound through the algorithm to determine barking, whining, howling, or other ambient noises to confirm the behavior

“What makes the Dogtra Smart Nobark the most special bark collar?”



3 Notifications for your dog's safety and effective corrections

> Extended wear

When you activate the device, the app starts tracking time and alerts you if the dog has been wearing the collar for a prolonged period.

> Improper fit

When the collar's sensors cannot verify volume or vocal cord tremors more than 10 times, the app will send a notification to readjust and fit the collar.

> Level increase suggestion

After the correction level is set, the app will suggest increasing the correction level when the stimulation occurs more than 10 times in a session.



Like what you see?
Share your experience
by leaving us a review!

DOGTRA SMART NOBARK™



For more details & troubleshooting, check out the full online manual here!

DOGTRA SMART NOBARK app

* iPhone 8/Android version 8.0 or beyond required to operate



App Store



Google Play



Dogtra Smart Nobark app is a complimentary tool that works with the smartphone device for additional features, like remote control of the mode selection and more.

* App and its connection to the collar are not required to operate.



E-collar control is available within a 30 yard range



Conveniently set up general settings remotely from within a 30 yard range




Expandable 3-dog system

Dogtra Company

12322 Monarch Street, Garden Grove, CA 92841 Tel. 310.534.0101 Fax. 310.534.9111
Toll Free. 1.888.811.9111 www.dogtra.com Copyright © 2024 All rights reserved.

OVERVIEW

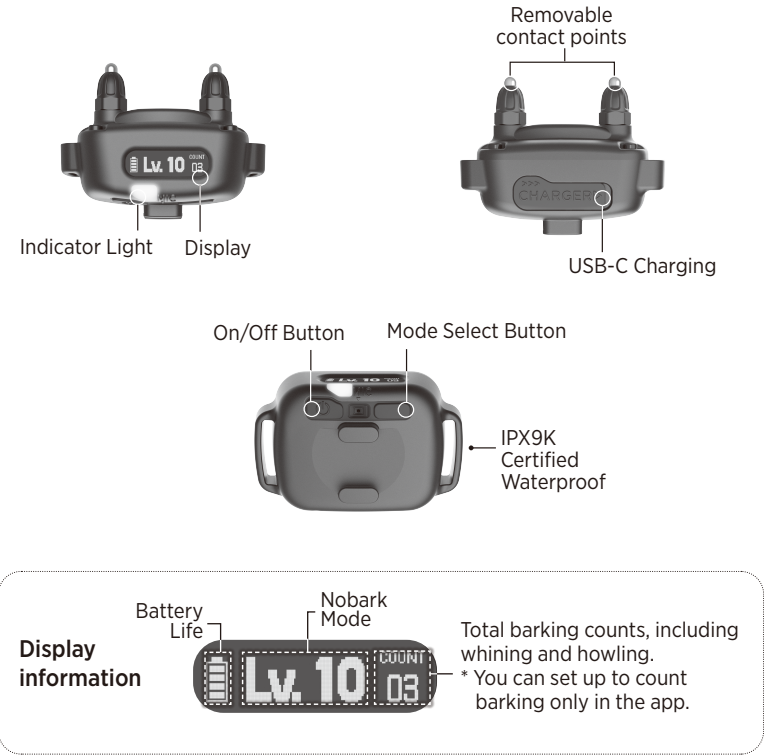

IMPORTANT SAFETY AND PRODUCT INFORMATION WARNING

Please read all safety and product information below before using your Dogtra product. Failure to follow these safety instructions could result in injury to you, your dog and others, or it could result in damage to your Dogtra product or other property.

PRODUCT SAFETY Training Methods

Dogtra products may be used with a variety of training methods. However, each dog may have a different reaction to training methods and to Dogtra products. Closely observe your dog when determining the right training method to use with your Dogtra product.

Aggressive Dogs

Do not use Dogtra products with aggressive dogs as such dogs may react adversely and cause injury to people

or other dogs. Seek the assistance of a dog-training specialist or veterinarian when dealing with aggressive dogs.

Children

Dogtra products are not toys. Adult supervision and close attention are necessary when Dogtra products are used by or near children.

PRODUCT DAMAGE Electrical Product

Your Dogtra product contains electrical components and batteries. Do not use or keep your product near heat or flammable sources. Such use or storage may damage your product and/or cause fire, explosion, injury, or property damage.

Medical Device Interference

Dogtra products contain electrical and magnetic components that emit low level electromagnetic waves

1 Turning on the Smart Nobark



Press and hold the on/off button until you feel a brief vibration indicating the collar turned on.

2 Selecting the Nobark mode



Press and hold (mode selection) **B** button



When entering mode selection screen, use **A** or **B** button to move and select the mode



Select the mode you want and wait for a while (5 seconds)

Nobark Mode Outline	
◀ COUNT ONLY ▶	Counting-only without stimulation
◀ PAGER ▶	Vibrate when your dog barks. (Disable stimulation)
◀ AUTO INCREASE ▶	The static level increases each time the dog barks, and if the dog does not bark for more than 30 seconds, the level is halved. You can set static min/ max levels in the app.
01...04 ◀ Lv.05 ▶ 06...10	Fixed output level at the selected stimulation level, which ranges from 1 to 10

and radio frequencies. These electromagnetic waves or radio frequencies may interfere with pacemakers, defibrillators, or other medical devices. Consult your physician or medical device maker before using your medical device around a Dogtra product. If you think that your Dogtra product is interfering with your pacemaker, defibrillator, or other medical device, stop using the Dogtra product.

Inadvertent Activation

The digital microprocessor offers thousands of unique codes to eliminate frequency match-up with other Dogtra e-collars. The Constant button will automatically shut down after being held down for 12 seconds or more as a safety feature.

UNAUTHORIZED USE

Your Dogtra product should be used only in a humane manner to train and educate your dog. Dogtra products

are not intended for use in any other manner nor are they intended for use with other animals or with humans.

BATTERY

Your Dogtra product contains batteries. Take care when removing and installing batteries as your fingers may get caught. Dispose of batteries as provided by your local regulations. Do not disassemble, crush, heat, or otherwise alter the battery as it may cause fire, injury or property damage.

FCC STATEMENT PART 15.19

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.