



WIRELESS INDOOR OUTDOOR THERMOMETER WITH CLOCK

Instruction Manual

SKU# 2577400


PARTS LIST:

No.	Description	Quantity	No.	Description	Quantity
1	Base Station Monitor	1	2	Remote Sensor	1

**Please read instructions carefully before use. Retain for future reference.
4 x AAA Batteries Required**


Front/Display

- A1- Outdoor Temperature
- A2- MIN Outdoor Temperature Icon
- A3- Indoor Temperature
- A4- MIN Indoor Temperature Icon
- A5- AM/PM Icon
- A6- Low Battery Icon (sensor)
- A7- Sensor Reception Icon
- A8- MAX Outdoor Temperature Icon
- A9- Low Battery Icon (station)
- A10- MAX Indoor Temperature Icon
- A11-Time

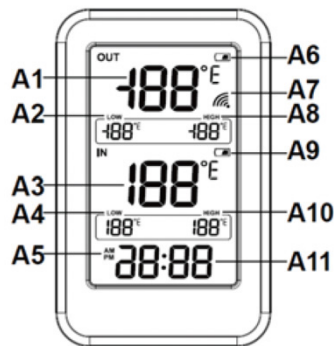

Back/Buttons & Case

- A12-Hanging Hole
- A13-Ventilation Holes
- A14-Max/Min/+ Button
- A15-°C/°F/SET Button
- A16-Battery Compartment

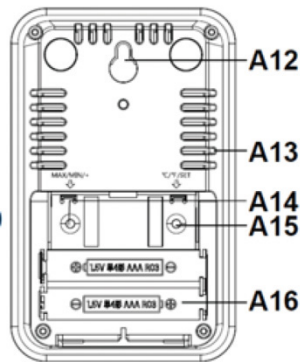

Functions

- Measures indoor and outdoor temperature (°C/°F).
- Displays the daily high and low temperatures, both indoor and outdoor.
- Features an easy-to-read clock display (12/24 hours).
- Automatically indicates when the battery is low.
- Wall mounting or tabletop

INSTRUCTIONS:

Initial Operation

1. Place the station and the sensor next to each other on a flat surface and then open the battery compartments of both the station and the sensor.
2. Insert 2 x AAA batteries, observing the correct polarity (+/- icons), into the outdoor sensor, and shortly after (within 30 seconds), insert 2 x AAA batteries, observing the correct polarity (+/- icons), into the base station. The LCD of the station will display all segments for 2 seconds and then begin operation.
3. Once the outdoor temperature is received, close the battery compartment cover.
4. Position the monitor and remote sensor within the effective transmission range, which is usually 65 to 100 feet in most circumstances. The range is affected by the building materials and the positioning of the monitor and remote sensor; try various locations for optimal results.
NOTE: The remote sensor should be placed in a shaded area for accurate readings.

Manual Time Setting

1. In normal display mode, press and hold the "°C/°F/SET" button for 2 seconds to enter the setting mode, and the 12/24 hour time display will start flashing.
2. Press the "MAX/MIN/+" button to select 12-hour or 24-hour time display and press the "°C/°F/SET" button to confirm. NOTE: In 12 12-hour time display, the time will be shown with either the PM (afternoon) or AM (before noon) icon, to indicate the correct time.
3. Next, the hour display will flash. Press the "MAX/MIN/+" button to set the hour. Press the "°C/°F/SET" button to save your changes and continue with the following setting option.
4. Next, the minute display will flash. Press the "MAX/MIN/." button to set the minute. Press the "°C/°F/SET" button to save your changes and exit the setting and return to normal display mode.

Temperature Unit

1. In normal display mode, press the "°C/°F/SET" button to switch between temperature display in °C or °F

MIN/MAX Value Display

1. In normal time mode, short press the MAX/MIN/+ button to view the MAX/MIN value, the corresponding value flashing display, selecting sequence: Indoor LOW→ Outdoor HIGH→Outdoor LOW→ Outdoor HIGH→ exit
2. While viewing the MAX/MIN value, long-press the MAX/MIN/+ button to clear the current value and re-record a new MAX/MIN value; the MAX/MIN value automatically clears and re-records at 0:00 each day.

Low Battery Indicator

1. If the "IN" row displays the low battery icon, you need to replace the batteries of the station as soon as possible.
2. If the "OUT" row displays the low battery icon, you need to replace the batteries of the outdoor sensor as soon as possible.

IMPORTANT SAFETY INSTRUCTIONS:

- The main unit is intended for indoor use only. The outdoor sensor is designed for use outside only.
- Do not subject either unit to excessive force or shock.
- Do not expose either unit to extreme temperatures, direct sunlight, dust or humidity.
- Do not immerse either unit in water.
- Avoid contact with any corrosive materials.
- Please do not dispose of either unit in a fire, as it may explode.
- Do not open the inner back case or tamper with any components of this unit.

Battery Safety Warnings:

- Use the correct size and type of battery as recommended.
- Insert batteries with the correct polarity (+/-).
- Do not mix old and new batteries, or different types (alkaline, carbon-zinc, rechargeable).
- Replace all batteries at the same time.
- Remove batteries during long periods of non-use or when exhausted.
- Do not attempt to recharge non-rechargeable batteries.
- Do not dispose of batteries in fire — they may leak or explode.
- Keep batteries away from metal objects to prevent short circuits.
- Store batteries in a cool, dry place. Avoid extreme heat, humidity, or sunlight.
- Keep out of reach of children — batteries may be a choking hazard.
- Leaking batteries can cause chemical burns or damage to the device. Handle with care.
- Dispose of batteries safely and in accordance with local regulations.

SPECIFICATIONS:

Indoor measurement range:	0°C (32°F) - 50°C (122°F)
When temperature is lower than 0°C (32°F):	The monitor will display 0°C (32°F).
When temperature is higher than 50°C (122°F):	The monitor will display 50°C (122°F)
Indoor Temperature accuracy:	±1°C (20°C-24°C/68°F-75°F), ±2°C rest
Outdoor measurement range:	-50°C (-58°F) - 70°C (158°F)
When temperature is lower than -50°C (-58°F):	The monitor will display -50°C (-58°F)
When temperature is higher than 70°C (158°F):	The monitor will display 70°C (158°F)
Outdoor Temperature accuracy:	±1°C (20°C to 24°C/68°F to 75°F) ±2°C (0°C to 20°C/32°F to 68°F & 24°C to 50°C/75°F to 122°F) ±3°C (-10°C to 0°C/-14°F to 32°F & 50°C to 60°C/122°F to 140°F) ±4°C (-50°C to -20°C/-58°F to -4°F & 60°C to 70°C/140°F to 158°F)
Temperature resolution:	1°C/1°F
Transmission frequency:	433.9 MHz
Transmission range:	100 m (open field)
Dimensions:	7x11x2.17cm/2.7"x4.3"x0.85" for base station 3.9x9.7x2.5cm/1.5"x3.8"x0.98" for outdoor sensor
Battery:	4 x AAA batteries required

FCC STATEMENT:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Distributed by TRACTOR SUPPLY COMPANY
5401 Virginia Way, Brentwood TN 37027
For customer support call 1-888-376-9601
www.TractorSupply.com
MADE IN VIETNAM