





User's Manual For Keypad Safe

Read all instructions before using this safe.

WARNING

- New safe is in factory default mode. Factory Pin Code is "159"
- Follow manual to set and test your personal pin code.
- Replace the cap on the Initialization Button after Pin Code Registration
- Avoid leaving safe door open and unattended; it will allow unauthorized individuals to reprogram the safe, gaining full access to the safe and its contents.
- Test Emergency Keys and store them in a secure place, NOT inside of the safe.
- To maximize security and performance of the safe, test pin code every 6 months.

PARTS OF THE SAFE

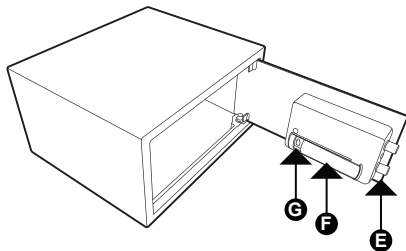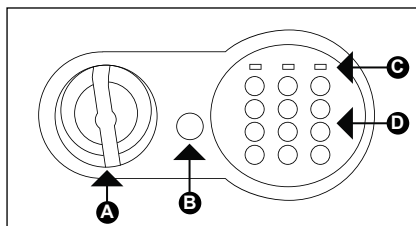

Inside of Safe Door
Actual model may vary

- A. Knob
- B. Emergency Key Access
- C. Indicator Lights
- D. Key Pad

- E. Bolts
- F. Battery Compartment
- G. Initialization Button

OPEN SAFE WITH EMERGENCY KEY

1. Remove round cap, and insert Emergency Key.
2. Turn Emergency Key counter clockwise and turn the Door Knob clockwise to open the safe.

INSTALL BATTERIES

1. Remove battery compartment cover.
2. Insert 4 AA batteries and restore battery cover.

Note: Do not mix old and new batteries

PIN CODE REGISTRATION

Safe retains 1 pin code
Factory default pin code is: "159"

1. Initialization Button is located inside of battery compartment. Please pull out the battery compartment cover until you see the button. Then press and release the initialization button. Indicator light under proceed should light up.
2. Enter desired 3-8 digit Pin Code and press "#" key. Indicator light under proceed should disappear. Replace cap on the initialization button.

TEST REGISTERED PIN CODE

1. With safe door open, extend the bolts by turning the door knob counterclockwise.
2. Enter Registered Pin Code and press "*" key. Turn door knob clockwise.

Successful Registration

If you were able to turn the door knob with your registered pin code then registration was successful.

Unsuccessful Registration

If you were NOT able to turn the door knob with your registered pin code then registration was unsuccessful. Please follow Pin Code Registration again to register your desired pin code.

OPEN / CLOSE DOOR

Open

Enter registered Pin Code and press "*" button. Turn handle clockwise and open the door.

Close

Door: Close the door and turn handle counterclockwise.

Note: If 3 wrong Pin Codes are entered safe will activate alarm for 20 seconds and safe will be inoperable. Another 3 continuous wrong entries and alarm will activate for 5 min and safe will be inoperable.

SOUND OPTION

Sound On

Press "*66#"

Sound Off

Press "*633#"

Note: Door alarm will Not sound in Silent Mode.

LOW BATTERY WARNING

When safe is low on battery, low battery indicator light will light up. Follow steps under Install Batteries to install batteries.

CARE AND MAINTENANCE

- Keep liquids away from the control panel. Spills on the control panel will cause damage and possibly electric shock.
- Secure safe in a proper area to prevent from falling and causing damage or injury.
- DO NOT disassemble the product. For all repairs, contact BARSKA Customer Service.
- DO NOT use chemicals or cleaning agents to clean the safe.

MOUNTING INSTRUCTIONS

The safe may be mounted to a wall or floor. Be aware of the load bearing. Failure to do so can result in personal injury and/or damage to property. Use appropriate tools when performing work and always use eye protection.

Wall Mounting

Do not mount the safe without anchoring to the wall

- Find the studs in the wall, at your desired location. Most studs are 16 inches or 24 inches apart
- Check the wall for concealed wires or pipes
- Measure the location of the pre-set drill holes; mark their exact position onto the wall ensuring that the studs or anything else behind will not interfere
- Drill the appropriate size holes for the anchors you are using
- Carefully press the anchor into the holes at this time
- Mount the safe by running screws from inside of the safe and securing to anchors; ensure the safe is mounted securely

Floor Mounting

- Use proper drill tools depending on the type of floor you are mounting the safe (wood, tile, or concrete).
- Measure the location of the pre-set drill holes; mark their exact position onto the floor.
- Drill the appropriate size holes for the anchors you are using.
- Carefully press the anchor into the holes at this time.
- Mount the safe by running screws from inside of the safe and securing to anchors; ensure the safe is mounted securely.



1 YEAR LIMITED WARRANTY

Safe

BARSKA warrants this new safe to be free of original defects in material and/or workmanship under normal use for a period of twelve (12) months from the date product is received by purchaser. This warranty does not include damage caused by improper installation or maintenance. Damage from misuse, abuse, accident (such as dropping), normal wear and tear, fire, flood, or acts of nature. Damage from service or repairs other than those performed by BARSKA. Labor, cost and shipping charges for the removal and replacement of defective parts beyond the initial twelve-month warranty period. All transportation and shipping charges. Removing or altering the seal under any circumstances will automatically void the warranty.

This warranty is limited to original purchaser and is not transferable. This warranty applies only to products purchased in the United States.

Please email info@barska.com or call 1.888.666.6769 for Return Merchandise Number (RMA#) before any returns. The RMA number must appear on the outside of the shipping package. Product must be packed carefully and sturdily in its original packaging to prevent damage in transit and returned freight pre-paid to:

BARSKA OPTICS
Repair Department
855 Towne Center Drive
Pomona, CA 91767

Please include all of the following when returning BARSKA products for service and/or replacement:

1. Please write your complete details (Name, Address, Telephone #, E-mail address, RMA#, etc.)
2. Purchase receipt or Proof of Purchase. (Original/Copy)
3. A brief explanation of the defect.
4. A Check/Money Order of \$30.00 to cover inspection, shipping and handling.
*Please allow 6-8 weeks for delivery.

BARSKA will examine and test returned product and repair or replace defective part(s) or units with new part(s) or a new unit if necessary within the warranty period. Purchaser is required to remit \$60.00 to BARSKA for return shipping and handling at time product is returned. If repair is required after warranty period expiration, purchaser will be charged for replacement parts and return shipping.

BARSKA® Optics shall not be liable for any consequential, incidental and/or contingent damages whatsoever. We will not pay shipping, insurance or transportation charges from you to us, or any import fees, duties and or taxes. This warranty supersedes all previous BARSKA® Optics warranties.